



## safety

### general

- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand blender shaft is thoroughly sterilised. Use a sterilising solution in accordance with the sterilising solution manufacturers instructions.
- Never touch the blades while the machine's plugged in.
- Keep fingers, hair, clothing and utensils away from moving parts.
- Unplug after use and before changing attachments.
- Never blend hot oil or fat.
- Don't let children or infirm people use the hand blender without supervision.
- Never use a damaged hand blender. Get it checked or repaired: see 'service'.
- Never put the power handle in water or let the cord or plug get wet - you could get an electric shock.
- Never let the cord touch hot surfaces or hang down where a child could grab it.
- Never use an unauthorised attachment.
- Young children should be supervised to ensure that they do not play with this appliance.

### chopper attachment

- Don't touch the sharp blades.
- Remove the chopper blade before emptying the bowl.
- Never remove the cover until the blade has completely stopped.

### important

- With heavy mixtures, don't use your hand blender for longer than 50 seconds in any four minute period - it'll overheat.
- Only use your hand blender for its intended domestic use.

### before plugging in

- Make sure your electricity supply is the same as the one shown on the power handle.

### Important - UK only

- The wires in the cord are coloured as follows: Blue = Neutral, Brown = Live.
- Your hand blender complies with European Economic Community Directive 89/336/EEC.

### before using for the first time

- 1 Remove all packaging and throw away the blade covers.
- 2 Wash the parts: see 'cleaning'.

### know your Kenwood hand blender

#### hand blender

- (a) speed buttons
- (b) power handle
- (c) blender shaft (removable)
- (d) beaker
- (e) beaker base/lid
- (f) cord clip

#### chopper (HB630/HB640/HB650/HB660 series)

- (g) chopper cover
- (h) chopper blade
- (j) bowl
- (k) bowl base/lid

#### whisk (HB650/HB660 series)

- (i) whisk collar
- (m) wire whisk
- (n) tool tidy (HB650/HB660 series)

### to use the hand blender

- You can blend baby food, soups, sauces, milk shakes and mayonnaise.

### for beaker blending

- Put the base/lid on the bottom of the beaker. (This stops the beaker sliding on the worktop.)
- Don't fill the beaker above 700ml (24fl oz).

### for saucepan blending

- Take the pan off the heat and let it cool slightly. Otherwise your hand blender could overheat.

- 1 Fit the power handle inside the blender shaft, turn and lock ①.
- 2 Plug in. To avoid splashing, place the blade in the food before switching on.
- 3 Hold the beaker steady. Then press either speed button (use speed 1 for slower blending and to reduce splashing).
- Don't let liquid get above the joint between the power handle and blender shaft.
- Move the blade through the food and use a stabbing action.
- If your blender gets blocked, unplug before clearing.
- 4 After use, unplug and dismantle.

### to use the chopper (if supplied)

- You can chop meat, cheese, vegetables, herbs, bread, biscuits and nuts.
  - Don't chop hard foods such as coffee beans, ice cubes, spices or chocolate - you'll damage the blade.
- 1 Remove any bones and cut food into 1-2cm (½-1") cubes.
  - 2 Put the base/lid on the bottom of the chopper bowl. (This stops the bowl sliding on the worktop.)
  - 3 Add your food.
  - 4 Fit the chopper blade over the pin in the bowl ④.
  - 5 Add your food.
  - 5 Fit the chopper cover, turn and lock ③.
  - 6 Fit the power handle, turn and lock ②.
  - 7 Plug in. Hold the bowl steady. Then press speed 2.
  - 8 After use, unplug and dismantle.

## processing guide

food	maximum amount	approx. time (in seconds)
Meat	300g (10½oz)	10-30
Herbs	20g (¾oz)	20
Nuts	200g (7oz)	30
Cheese	150g (5oz)	30
Bread	1 slice	20
Hardboiled eggs	2	5
Onions	100g (3½oz)	10

### to use the whisk (if supplied)

- You can whip light ingredients such as egg whites; cream; instant desserts; and eggs and sugar for whisked sponges.
  - Don't whisk heavier mixtures such as margarine and sugar - you'll damage the whisk.
- 1 Push the wire whisk into the whisk collar ⑤.
  - 2 Fit the power handle inside the whisk collar, turn and lock ⑥.
  - 3 Place your food in a bowl.
  - Don't whisk more than 4 egg whites or 400ml (¾pt) cream.
  - 4 Plug in. To avoid splashing, start on speed 1. Move the whisk clockwise.
  - Don't let liquid get above the whisk wires.
  - 5 After use, unplug and dismantle.

### storage

- 1 Wrap the cord around the power handle, then clip the end into the cord clip ⑦.
- 2 Fit the tool tidy onto the chopper cover (line up the tab first) ⑧.
- 3 Fit the power handle on top and turn. On each side store the attachments - simply lower, then turn ⑨.

## cleaning

- Always switch off and unplug before cleaning.
- Don't touch the sharp blades.
- Take special care when preparing food for babies, the elderly and infirm. Always ensure that the hand blender shaft is thoroughly sterilised. Use a sterilising solution in accordance with the sterilising solution manufacturers instructions.
- Some foods, eg carrot, may discolour the plastic. Rubbing with a cloth dipped in vegetable oil helps remove discolouring.

### **power handle, chopper cover, whisk collar**

- Wipe with a damp cloth, then dry.
- Never immerse in water or use abrasives.

### **blender shaft**

either

- Part-fill the beaker with warm, soapy water. Then insert the blender shaft and switch on.
- Unplug, then dry. or see below.

### **blender shaft, chopper blade, whisk, beaker, bowl, base/lids**

- Wash up, then dry. Or wash in your dishwasher.

## service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by Kenwood or an authorised Kenwood repairer.

### **UK**

If you need help with:

- using your hand blender or
  - servicing or repairs (in or out of guarantee)
- ☎ call Kenwood on **023 9239 2333** and ask for Customer Care. **Have your model number ready** - it's on the power handle. Alternatively, contact your authorised Kenwood repairer: look in **YELLOW PAGES** under 'Electrical appliance repairs'.

### **Eire**

- See our advertisement in Golden Pages.
- **other countries**
- Contact the shop where you bought your hand blender.

### **guarantee - UK only**

If your hand blender goes wrong within one year from the date you bought it, we will repair it (or replace it if necessary) free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

# KENWOOD



**HB600 HB630 HB650 series**  
**HB610 HB640 HB660 series**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>