

KENWOOD

AUDIO/VIDEO RECEIVER KR-V6070'

INSTRUCTION MANUAL

KENWOOD CORPORATION

For your records


Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on this product.
Model _____ Serial Number _____

Unpacking

Unpack the unit carefully and make sure that all accessories are put aside so they will not be lost. Examine the unit for any possibility of shipping damage. If your unit is damaged or fails to operate, notify your dealer immediately. If your unit was shipped to you directly, notify the shipping company without delay. Only the consignee (the person or company receiving the unit) can file a claim against the carrier for shipping damage.

We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in the future.

Accessories

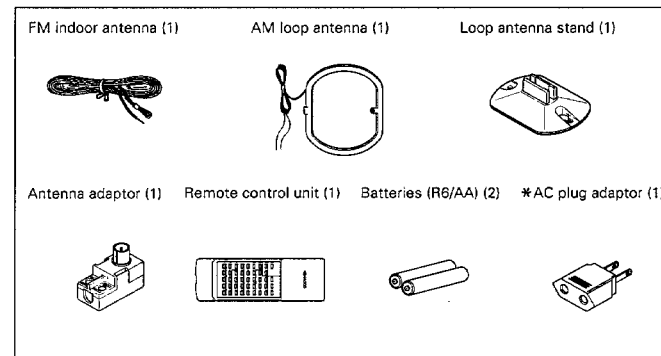

* Use to adapt the plug on the power cord to the shape of the wall outlet. (Accessory only for regions where use is necessary.)

Before applying power ⚠ Caution: Read this page carefully to ensure safe operation.

KR-V8070 (EN)

Units are designed for operation as follows.

U.S.A. and Canada AC 120 V only *Other countries AC 110-120 / 220-240 V switchable
 Australia AC 240 V only

For other countries


*AC voltage selection

This unit operates on 110 - 120 volts or 220 - 240 volts AC. The AC voltage selector switch on the rear panel is set to the voltage that prevails in the area to which the unit is shipped. Before connecting the power cord to your AC outlet, make sure that the setting position of this switch matches your line voltage. If not, it must be set to your voltage in accordance with the following direction.

Note:

Our warranty does not cover damage caused by excessive line voltage due to improper setting of the AC voltage selector switch.



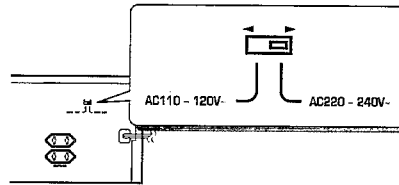

AC voltage Selector switch



Move switch lever to match your line voltage with a small screwdriver or other pointed tool.

Safety precautions

WARNING : TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

| | | | |
|--|---|---|---|
|  | CAUTION <small>RISK OF ELECTRIC SHOCK DO NOT OPEN</small> |  | CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. |
|  | THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS. | | |
|  | THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE. | | |

For the U.S.A.

FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

For the U.S.A.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Special features

DOLBY PRO LOGIC & DOLBY 3 STEREO

The surround system reproduces video software program carrying the **[X] DOLBY SURROUND** mark with similar acoustic effects to movie theaters.

The **DOLBY PRO LOGIC** mode controls the audio signals of the Front Left/Right, Center and Rear surround channels using the built-in directivity enhancer circuit to reproduce the feeling of sound motions realistically.

The **DOLBY 3 STEREO** mode can reproduce the motions of sound even when only the front and center speakers are used, by providing proper acoustic position using the directivity enhancer circuit.

THEATER LOGIC

This mode adds presence sound components to the signals output from the directivity enhancer (Left, Center, Right and Surround channels), allowing movie software programmes to be played with a similar feeling of presence to movie theaters in a listening room at home.

AUTOMATIC OPERATION

If you connect other **KENWOOD** components (i.e. a cassette deck or CD player) to this unit's **SYSTEM CONTROL**, this unit's input selector will automatically switch to that component when you start playback from it. This also works when you use the remote control. (Automatic operation is not possible with **TAPE DECK 2** or **VIDEO** machines.)

SYSTEM REMOTE CONTROL

This unit's remote control can operate **KENWOOD** cassette decks or CD players when they are connected by the **SYSTEM CONTROL**. For details regarding the component's functions, please refer to the operation manual for that unit.

Contents

Caution : Read the pages marked **△** carefully to ensure safe operation.

| | | |
|---|--|----|
| Before applying power | △ Before applying power | 2 |
| | △ Safety precautions | 2 |
| Special features | | 3 |
| System connection | | 4 |
| | FM DE-EMPHASIS/CHANNEL SPACE switch | 7 |
| Controls and indicators | | 8 |
| Operation of remote control unit | | 10 |
| Playing music | | 11 |
| Sound adjustment functions | | 12 |
| Recording | | 14 |
| | Recording | 14 |
| | Copying tape (Tape dubbing) | 14 |
| Broadcast reception | | 15 |
| | Receiving broadcast station | 15 |
| | Receiving radio station by specifying its frequency | 16 |
| | Storing radio stations in memory (Station preset) | 17 |
| Operation of video components | | 18 |
| | Playback of videotape | 18 |
| | Recording of video source | 18 |
| Presence play | | 20 |
| | DOLBY 3 STEREO adjustment and playback | 21 |
| | DOLBY PRO LOGIC surround arrangement | 22 |
| | DOLBY PRO LOGIC surround playback | 23 |
| | Enjoying music with feeling of presence (THEATER LOGIC mode) | 24 |
| In case of difficulty | | 26 |
| △ Specifications | | 27 |

System connection

KR-V6070 (En)

Make connection as shown below.

When connecting the related system components, refer also to the instruction manuals of the related components.


Do not plug in the power lead until all connections are completed.

Malfunction of microcomputer



If operation is not possible or erroneous display appears even though all connections have been made properly, reset the microcomputer referring to "In case of difficulty".

→ P.28

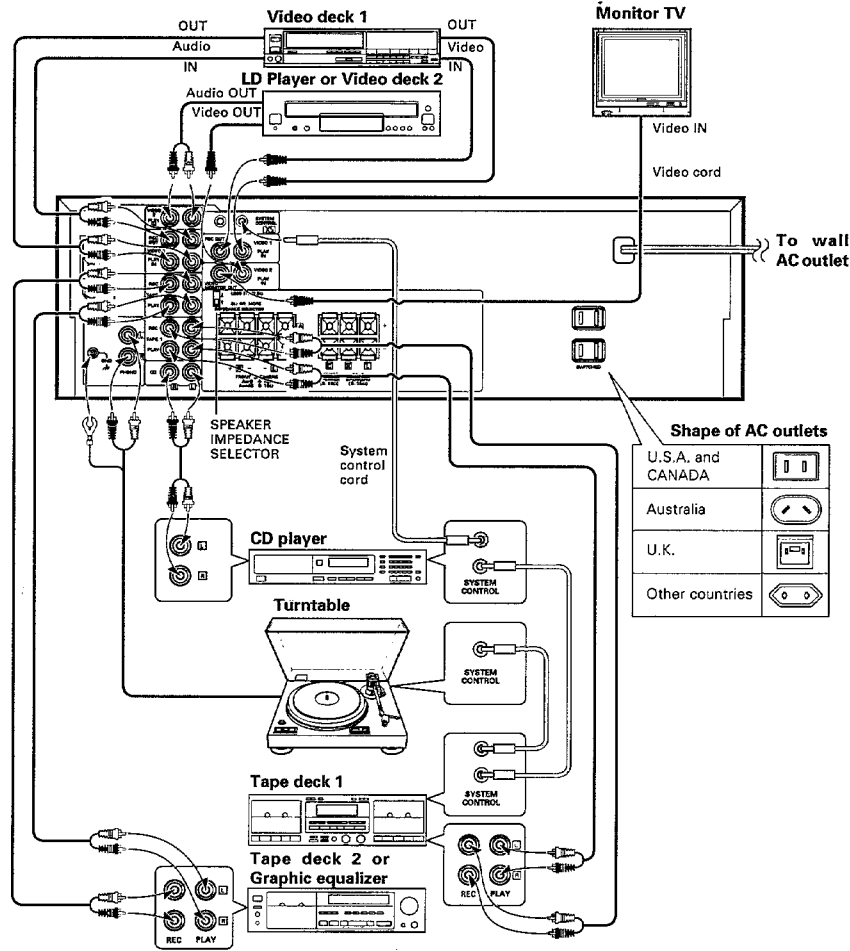

Automatic operation

When this unit is connected to KENWOOD system components such as a cassette deck and CD player through system control cords and the input source is selected with the INPUT SELECTOR, the selected component starts to play automatically. Inversely, playing a component automatically selects that source as the input to this unit. The automatic operation also occurs when the provided remote control is used.


(Automatic operation is not possible with TAPE DECK 2 or VIDEO machines.)

Notes




1. Connect all cords firmly. If connections are loose, there could be loss of sound or noise produced.
2. When plugging and unplugging connection cords, be sure to first remove the power cord from the AC outlet. Plugging / unplugging connection cords without removal of the power cord can cause malfunctions or damage to the unit.
3. Do not connect up a power source which is larger than that indicated on the socket at the rear of the unit.
4. Insert the system control plugs completely into the jacks.
5. If the system control cords or audio cords are not connected properly, the remote control or automatic operation between system components will not work properly.

Connection of speakers

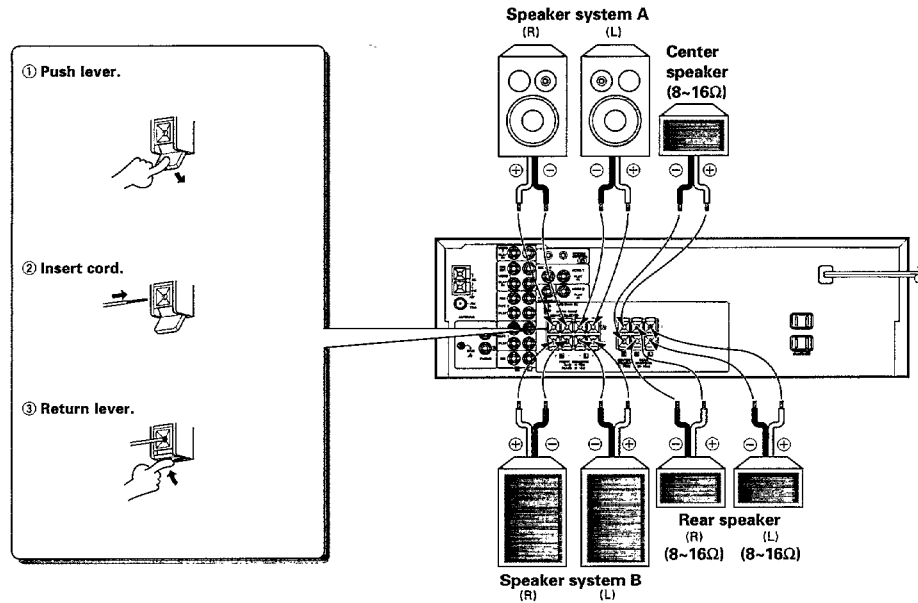

- Never short-circuit the + and - speaker cords.
- If the left and right speakers are connected inversely or if the speaker cords are connected with reversed polarity, the sound becomes unnatural with ambiguous acoustic image positioning. Be sure to connect the speakers and speaker cords correctly.

 Setting the speaker IMPEDANCE SELECTOR



When using the speaker A or speaker B separately

| Speaker impedance | Selector position |
|-------------------|-------------------|
| 4 Ω, 6 Ω | ↑ |
| 8 Ω, 16 Ω | ↓ |

When using the speaker A and B simultaneously

| Speaker impedance | Selector position |
|-------------------|-------------------|
| 8 Ω, 16 Ω | ↑ |

 
 
CAUTION: TO PREVENT FIRE OR DAMAGE REQUIRING SERVICE, SET THE IMPEDANCE SELECTOR SWITCH AS DESCRIBED BELOW.

According to the impedance of the speakers used, set the speaker **IMPEDANCE SELECTOR** on the rear panel as shown in the table.

- When the **IMPEDANCE SELECTOR** switch is set to "LESS THAN 8Ω", it is possible to use the A and B speakers at the same time. Therefore, when using the speakers A and B and simultaneously, be sure to set the **IMPEDANCE SELECTOR** switch to the "LESS THAN 8Ω" position.
- During speaker system connection and operation of the speaker **IMPEDANCE SELECTOR**, set the power key to OFF.

Connection method to each antenna terminal

- ① Push lever. ② Insert cord. ③ Return lever.




Connection of AM antenna

AM loop antenna connection

The supplied antenna is for indoor use. Place it as far as possible from the main system, TV set, speaker cords and power cord, and set it to a direction which provides the best reception.

AM outdoor antenna connection

If the reception is poor when the AM loop antenna is used, distribute a vinyl-coated wire of more than 6 meters outdoors, without disconnecting the loop antenna.

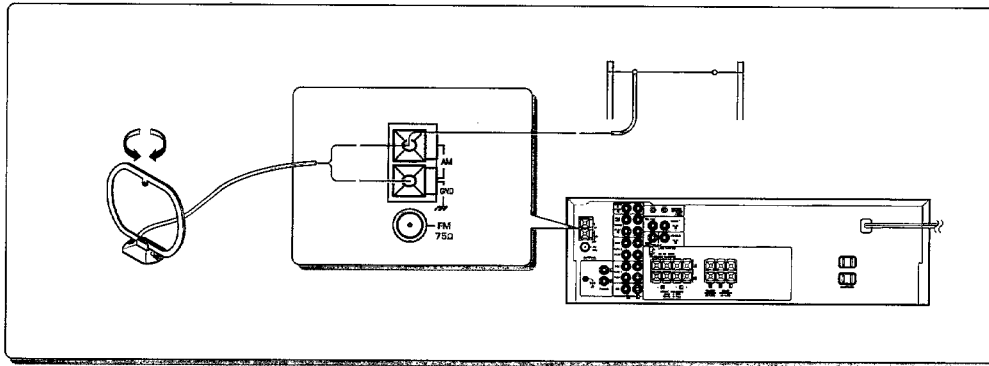


Connection of FM antenna

FM indoor antenna connection







The accessory antenna is for temporary indoor use only. For stable signal reception we recommend using an outdoor antenna. Remove the indoor antenna if you connect one outdoors.

FM outdoor antenna connection

Lead the 75Ω coaxial cable connected to the FM outdoor antenna into the room and connect it to the FM 75Ω terminal.

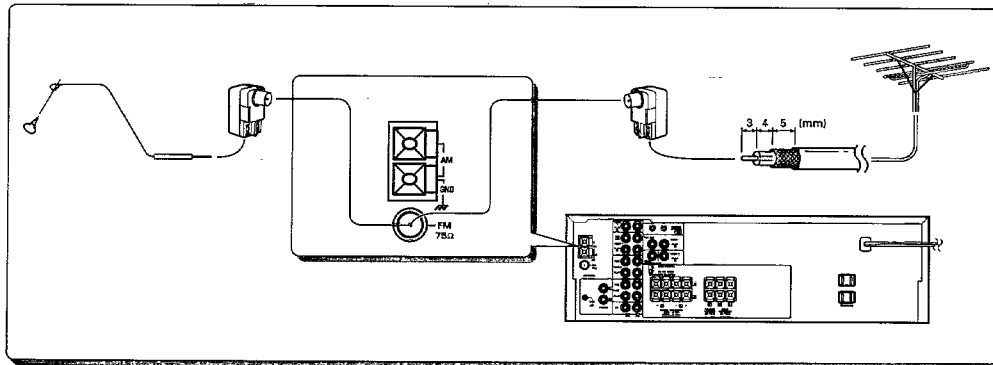


Connection of antenna adaptor
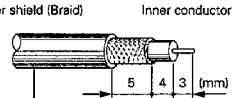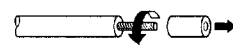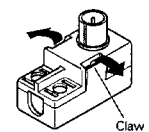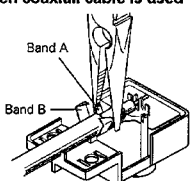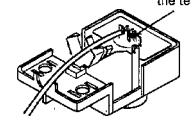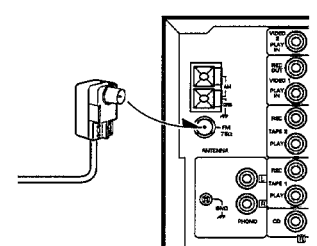
| | |
|---|---|
| <p>① Prepare the cable.</p> <p>When coaxial cable is used</p> <p>Other shield (Braid) Inner conductor</p>  <p>RG-6 (5C-2V) or RG-59 (3C-2V)</p> | <p>② Open the antenna adaptor.</p> <p>When the provided simplified antenna is used</p>  <p>Remove the vinyl coating and twist conductors.</p>  <p>Claw</p> <p>Open the claws with the fingers to release the lock and pull out the cover.</p> |
| <p>③ Attach the cable and close the cover.</p> <p>When coaxial cable is used</p>  <p>Band A Band B</p> <p>Insert the cable into the slit on the clip. Fasten bands A and B using a pair of pliers.</p> | <p>④ Connect the adaptor to the antenna terminal.</p> <p>When the provided simplified antenna is used</p>  <p>Wrap around the terminal.</p>  |


FM DE-EMPHASIS / CHANNEL SPACE switch (Except for U.S.A., Canada and Australia)

The FM DE-EMPHASIS / CHANNEL SPACE switch on the rear panel is set to the correct setting that prevails in the area to which the unit is shipped. However, if the FM DE-EMPHASIS / CHANNEL SPACE setting is not matched to the area where the unit is to be used; for instance, when you moved from area 1 to area 2 or vice versa, desired reception of AM / FM broadcasts is not expected. In this case, change the FM DE-EMPHASIS / CHANNEL SPACE setting in accordance with the area corresponding to the table. The FM DE-EMPHASIS is switched over at the same time.

- When changing the setting of the FM DE-EMPHASIS / CHANNEL SPACE switch, first disconnect the power cord, then reset the channel space switch, connect the power cord again, and turn the power on.

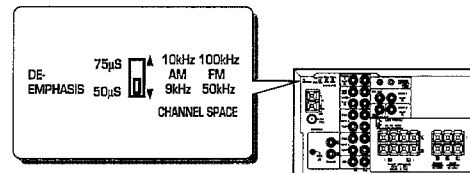

| Area | CHANNEL SPACE freq. | FM DE-EMPHASIS |
|--|-------------------------|----------------|
| 1 U.S.A., Canada and South American countries | FM: 100kHz AM: 10kHz | 75 µs |
| 2 Other countries | FM: 50kHz AM: 9kHz | 50 µs |

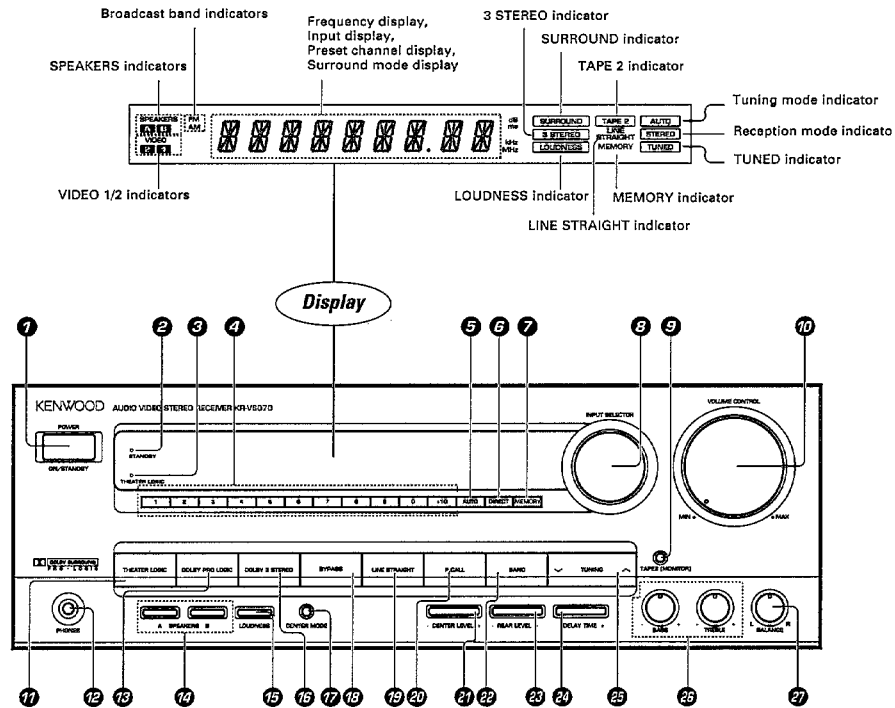


- ❶ **POWER key**
- ❷ **STANDBY indicator**
- ❸ **THEATER LOGIC indicator**
- ❹ **Numeric keys** → P.16
Used for storing and recalling stations.
- ❺ **AUTO key** → P.16
- ❻ **DIRECT key** → P.16
Press for direct station tuning based on numerical input.
- ❼ **MEMORY key** → P.17
Press to preset a station in the memory.
- ❽ **INPUT SELECTOR knob**
- ❾ **TAPE 2 (MONITOR) key** → P.14
- ❿ **VOLUME CONTROL knob**
- ⓫ **THEATER LOGIC key** → P.24
- ⓬ **PHONES jack**
Used for headphone listening.
- ⓭ **DOLBY PRO LOGIC key** → P.22
- ⓮ **SPEAKERS A/B keys**
Press to select the A and/or B speaker systems.
- ⓯ **LOUDNESS key** → P.12
Press to enhance low frequencies.
- ⓰ **DOLBY 3 STEREO key** → P.21
- ⓱ **CENTER MODE key** → P.21 → P.22
Press to selects the center mode for the DOLBY PRO LOGIC surround and DOLBY 3 STELEO modes.
- ⓲ **BYPASS key**
Press to cancel the surround modes.
- ⓳ **LINE STRAIGHT key** → P.1
Press to reproduce the source with higher sound quality.
- ⓴ **P.CALL key**
- ⓵ **CENTER LEVEL key** → P.21 → P.22 → P.2
- ⓶ **BAND key**
Press to switch the broadcast band.
- ⓷ **REAR LEVEL key** → P.22 → P.2
- ⓸ **DELAY TIME key** → P.22 → P.2
- ⓹ **TUNING keys**
- ⓺ **BASS, TREBLE knobs**
- ⓻ **BALANCE control knob**
Turn to adjust the volume balance between left and right.

STANDBY mode of POWER switch

When the power cord of this system is plugged into an AC outlet, the STANDBY indicator lights up regardless of the ON/OFF setting of the POWER switch. This indicates that a small amount of current is being supplied to the unit to back up the memory contents. This mode is referred to as the Standby mode. While the STANDBY indicator is lit, the power of the system can be switched ON/OFF from the remote control unit.

Remote control unit

This unit's remote control can operate KENWOOD cassette decks or CD players when they are connected by the SYSTEM CONTROL. For details regarding the component's functions, please refer to the operation manual for that unit.

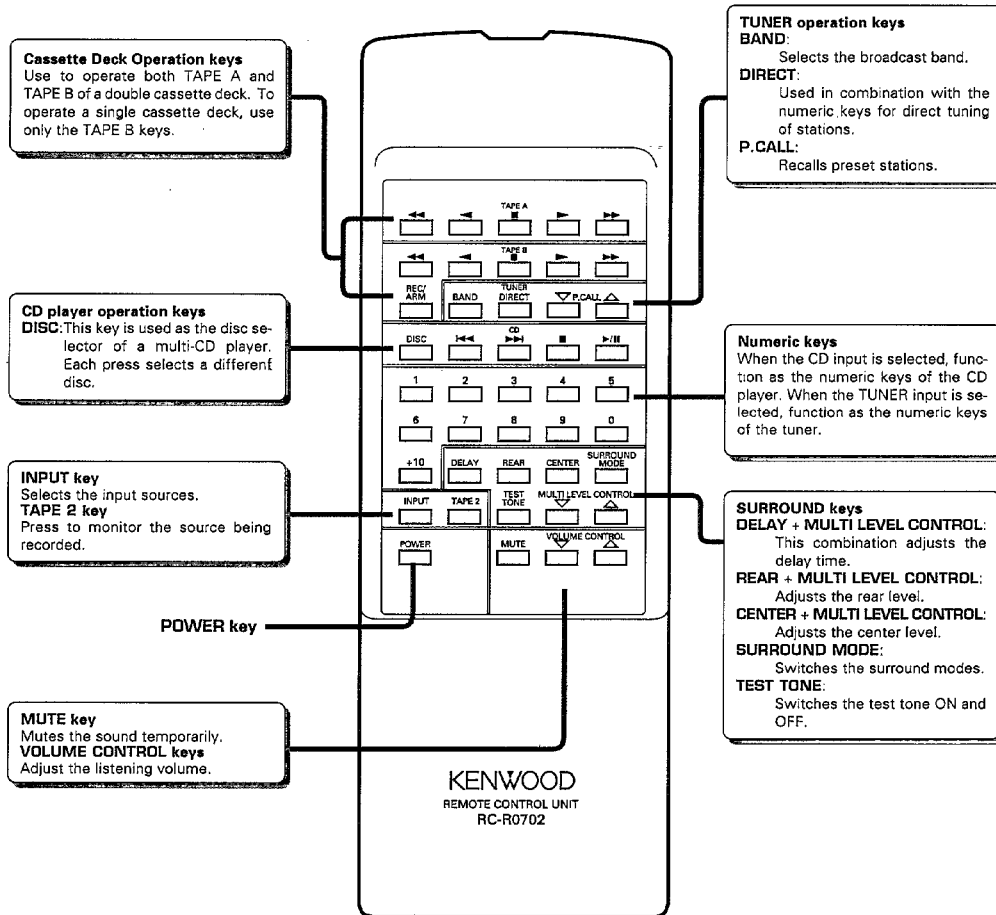


Model: RC-R0702
Infrared ray system

Operation of remote control unit


KR-V6070 (E)

Loading batteries

 
1 Remove the cover.



2 Insert batteries.

 


3 Close the cover.

 

- Insert two AA-size (R6 / SUM-3) batteries as indicated by the polarity marking.

Operation procedure


Plug the power cord of the system into an AC wall outlet, and press the POWER key on the remote control unit to turn the power on. When the power is turned on, press the key of the source component to be operated.

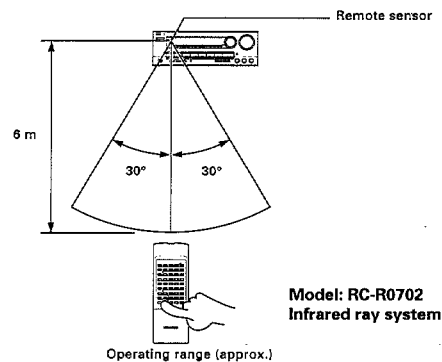

- Components connected via the system control cords, such as the CD player, can also be remote-controlled. In this case, please read the instruction manual supplied with your components.
- When two operation keys on the remote control unit are pressed successively, press each key securely reserving an interval of more than 1 second for each press.

Notes

1. The supplied batteries are intended for use in operation checks. Therefore, their lives may be shorter than ordinary batteries.
2. When the remote-controllable distance gets shorter than before, replace both batteries with new ones.
3. Malfunction may occur if direct sunlight or the light of a high-frequency lighting fluorescent lamp enters the remote control light sensor. In such a case, change the system installation position to prevent the malfunction.

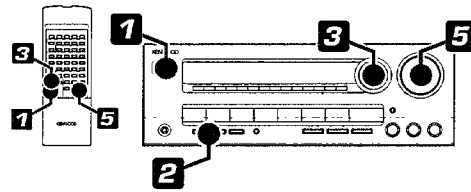

1 Turn the power ON.

2 Select the SPEAKERS switch setting.

The indicators of the speaker systems to be used should light up.

3 Select the input source.

4 Play the selected source.

5 Adjust the volume.

 
To decrease volume MIN To increase volume MAX

- A, B OFF**
Sound is not output from the speakers. Use this setting for listening through headphones, etc.
- A ON**
Sound is output from the speakers connected to the SPEAKERS A terminals on the rear panel.
- B ON**
Sound is output from the speakers connected to the SPEAKERS B terminals on the rear panel.
- A, B ON**
Sound is output from the speakers connected to the SPEAKERS A and B terminals on the rear panel.

- When a surround mode is activated while both SPEAKERS A and B are ON, the SPEAKERS B system is automatically switched off. If the **SPEAKERS B** key is pressed at this time, the SPEAKERS B system is switched ON and the SPEAKERS A system is switched OFF automatically.

- If the cassette deck(s), CD player and/or turntable is connected through system control cords, the component of the selected input source starts to play automatically.

The input sources are switched in the following order:




- The selected input source is held in memory for about 3 days even after the power cord is unplugged from the mains outlet.

- The sound of input source cannot be listened to while TAPE 2 is ON.
- When the volume is adjusted from the remote control unit, the indicator on the **VOLUME CONTROL** knob blinks.


Sound adjustment functions

KR-V6070 (E)

Adjusting the tone

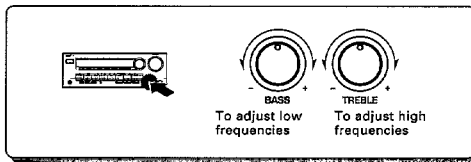


Adjusting the left/right sound balance

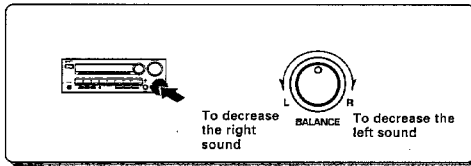

Using the LOUDNESS key

When listening at a low volume, the loudness function allows to compensate the low frequencies which human ears have difficulty in hearing at a low volume.

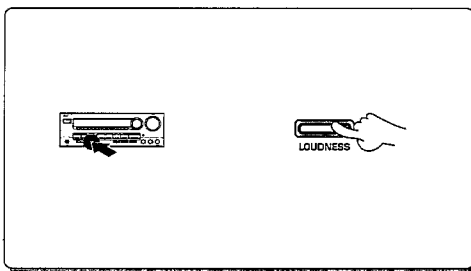

Lights up




To cancel
Press the LOUDNESS key again.



Goes off


To mute sound temporarily

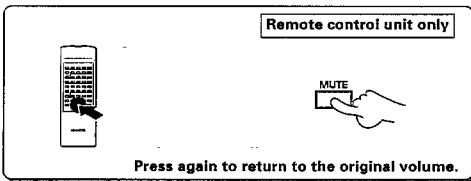


● The indicator on the VOLUME CONTROL of the main unit blinks.

To listen through headphones


① Set both of the **SPEAKERS** switches to OFF.




② Plug headphones.



③ Adjust the volume.

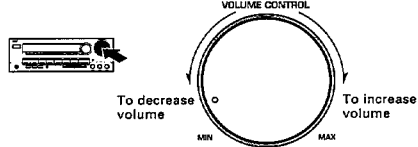

To decrease volume To increase volume

 


Make sure the light goes off.


Line-straight playback

This feature allows to enjoy music sources such as CD with an even higher sound quality.


① Select the source to be played.



② Press the **LINE STRAIGHT** key.




③ Play the source.



Lights up.

- The tone control functions are defeated during line-straight play.
- The line-straight play is cancelled when a key associated with surround play is pressed.

 

To cancel
Press the **LINE STRAIGHT** key again.



Goes off.

To record a music source

① Select the source to be recorded.



Select input source other than TAPE 1.

② Put the cassette deck in record-pause mode.



③ Play the source and start recording.

Copying tape (Tape dubbing TAPE 1 → TAPE 2)



Play the cassette deck connected to the TAPE 1 jacks and start recording of the cassette deck connected to the TAPE 2 jacks.

Copying tape (Tape dubbing TAPE 2 → TAPE 1)

① Press the TAPE 2 (MONITOR) key.



② Select a source other than TAPE 1.

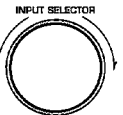

③ Play cassette deck 2 and start recording on cassette deck 1.




• For copying a tape using a double cassette deck, read the instruction manual of the double cassette deck.

Regarding TAPE 2(MONITOR)

A cassette deck or graphic equalizer can be connected to this unit's TAPE 2(MONITOR) terminals. If you connect a graphic equalizer, turn the TAPE 2(MONITOR) key ON. If you connect a 3-head cassette deck, you can monitor the source sound, or the sound being recorded, while recording. Pressing the TAPE 2(MONITOR) key lets you compare the recorded sound and the source sound. Refer to the operating manual for the component you connected for further details.

Broadcast reception

KR-V8070 (En)

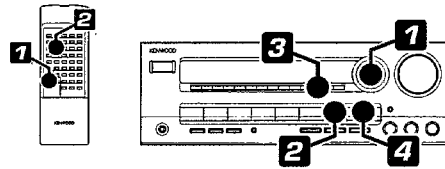


Receiving broadcast station

1 Select the TUNER input.



The input sources are switched in the following order:

 - ① TUNER (frequency display)
- ② TAPE 1
- ③ VIDEO 1
- ④ VIDEO 2
- ⑤ CD
- ⑥ PHONO



- The last frequency tuned before is displayed.

 
2 Select the broadcast band.



Each press switches the band as follows:

- ① FM
- ② AM

"AM" or "FM" indicator



3 Select the tuning method.



Each press switches the tuning method as follows:

 

- ① AUTO lit (auto tuning)
- ② AUTO not lit (manual turning)




- Usually, set the switch to **AUTO** (auto tuning).

Select manual tuning when noise interferes due to weak radio wave.
(The stereo broadcasting is received in monaural during manual tuning.)

4 Select a station.

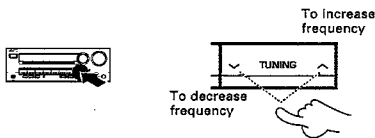


- Auto tuning :The next station found is tuned automatically.
- Manual tuning :Press repeatedly or hold until a station is tuned.

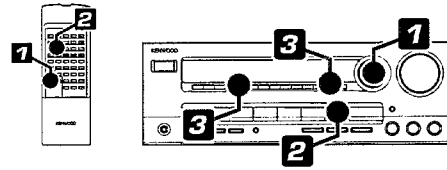

Receiving radio station by specifying its frequency

1 Select the TUNER input.

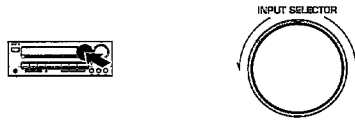

The input sources are switched in the following order:

- ① TUNER (frequency display)
- ② TAPE 1
- ③ VIDEO 1
- ④ VIDEO 2
- ⑤ CD
- ⑥ PHONO

Frequency display



 
2 Select the broadcast band.



Each press switches the band as follows:

- ① FM
- ② AM

"AM" or "FM" indicator




3 Specify the frequency.

① Press the DIRECT key.



 
② Enter the frequency of the desired station.



Press the numeric keys according to the frequency to be tuned as shown below.

| Desired station | Order of pressing numeric keys | |
|------------------|--------------------------------|------------------|
| FM 90 MHz | [9] [0] [0] | *(100 kHz space) |
| | [9] [0] [0] [0] | (50 kHz space) |
| FM 102.5 MHz | [1] [0] [2] [5] | (100 kHz space) |
| | [1] [0] [2] [5] [0] | (50 kHz space) |
| AM (MW) 810 MHz | [8] [1] | (10 kHz space) |
| | [8] [1] [0] | (9 kHz space) |
| AM (MW) 1260 kHz | [1] [2] [6] | (10 kHz space) |
| | [1] [2] [6] [0] | (9 kHz space) |

 
*FM DE-EMPHASIS/CHANNEL SPACE switch → [P.7]



- If you commit a mistake, repeat step 3 again.

 
 
Preparation

- Tune the station to be stored in memory.




Storing radio stations in memory (Station preset)

1 Press the MEMORY key during receiving a station.

Proceed to step 2 within 5 sec. (If more than 5 sec. have elapsed, press the MEMORY key again.)

 2 Select one of the preset numbers from 1 to 20.





- Press the numeric keys in the following order.
- To store in "15" [+10], [5]
 - To store in "20" [+10], [+10], [0]
- Repeat steps 1 and 2 for each of the stations to be stored in memory.
 - If a station is stored in a preset number which already stores a station memory under it, the previous memory is replaced by the new memory content.
 - Once the memory content has been preset, it is held for about 3 days even after the power cord is unplugged from the mains outlet.

Receiving a preset station

Press the preset number of the desired station.

 
① Select the TUNER input with the INPUT SELECTOR.

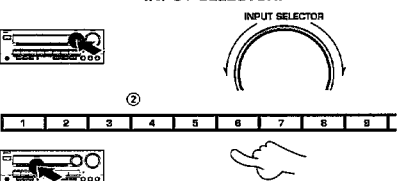- Press the numeric keys in the following order.
- To recall "15" [+10], [5]
 - To recall "20" [+10], [+10], [0]

Receiving all preset stations in order

Press the P.CALL key.




- Every time the key is pressed, the next station in the order of the preset number is received.
- When you press Δ key.... $\rightarrow 2 \rightarrow 3 \dots\dots 18 \rightarrow 19 \rightarrow 20$
- When you press ∇ key.... $\leftarrow 2 \leftarrow 3 \dots\dots 18 \leftarrow 19 \leftarrow 20$
- If the key is held pressedPreset stations will be received successively for about half a second each.

Operation of video components

KR-VB070 (En)


For the connections and operations, also read carefully the instruction manuals of the video components. 

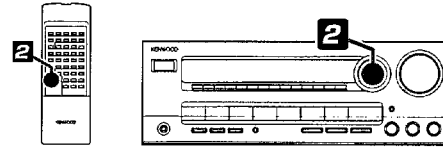

Playback of videotape

1 Turn the power of the monitor TV ON.

 2 Select the VIDEO 1 input.




3 Play the video deck.

The input sources are switched in the following order:

- ① TUNER (frequency display)
- ② TAPE 1
- ③ VIDEO 1
- ④ VIDEO 2
- ⑤ CD
- ⑥ PHONO

 VIDEO 1 should be displayed.




- Select the input to which a video deck is connected.

Recording of video source

1 Connect the video source component to be played.

 2 Select the VIDEO 2 input.



3 Play the source component.

 
4 Start recording on the recording video deck.

- Connect the component to be played to the VIDEO 2 jacks.
- The connectable components include a video deck (playback only), video camera (playback only), LD player or DBS tuner.


The input sources are switched in the following order:

- ① TUNER (frequency display)
- ② TAPE 1
- ③ VIDEO 1
- ④ VIDEO 2
- ⑤ CD
- ⑥ PHONO

VIDEO 2 should be displayed.



- Start recording with the video deck which is connected to the VIDEO 1 jacks.

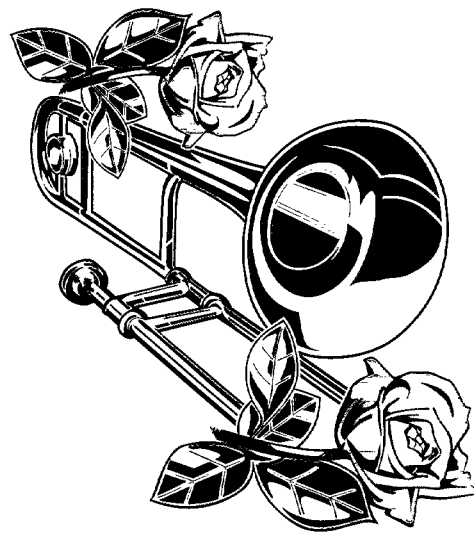


The surround modes allow to enjoy the feeling of presence in music. Select the mode according to the source or components played. For the connections of the rear and/or center speakers, refer to "Connection of speakers". → P.5

DOLBY 3 STEREO mode


→ P.21


If the left and right speakers are installed apart from each other, the center acoustic image (words, etc.) may vary depending on the listener's position. The DOLBY 3 STEREO mode provides an improved positioning of the center acoustic image regardless of the listening position. To use this mode, connect the center speaker.

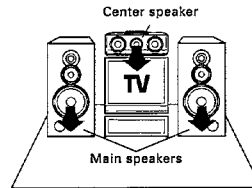

DOLBY PRO LOGIC surround mode

→ P.22


Video and LD software programs carrying the  mark contain recording of the same Dolby Surround data as those used in movie theaters. The DOLBY PRO LOGIC surround mode uses the Dolby Surround data and brings into home a similar sound field with full of presence to movie theater. To use this mode, connect the rear (and center) speakers.

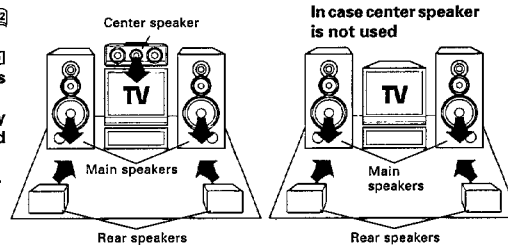


THEATER LOGIC

→ P.24

This mode provides the atmosphere of a movie theater by adding the reverberation component of movie theater to the sound of the original music source. To use this mode, connect both the rear and center speakers.

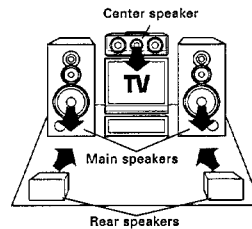


This mode improves the positioning of the acoustic image of words, etc., by applying directivity enhancer processing and using an additional center speaker when a video software program recorded with ordinary 2-channel stereo is played.

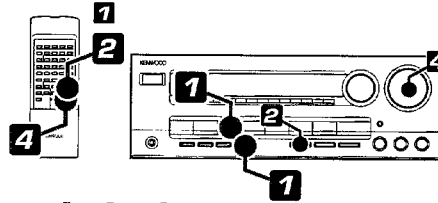

DOLBY 3 STEREO adjustment and playback

1 Activate the DOLBY 3 STEREO mode.

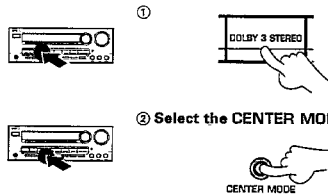

2 Select the CENTER MODE.



Lights up.

3 STEREO

Each press of the CENTER MODE key switches the center modes as follows:

- ① **NORMAL** :When the center speaker is a compact-sized speaker.
 - ② **WIDE BAND** :When the center speaker is a medium- or large-sized speaker.
- If you cannot tell whether your center speaker is compact or medium-sized, try two modes and select according to your liking.
 - The selected center mode is automatically stored in memory and held unless it is changed later.

- The test tone which is heard like noise moves between speakers at an interval of 1.5 sec.

LEFT (L)
CENTER (C)
RIGHT (R)

 
SPEAKERS
L
VIDEO
R
TEST L

SPEAKERS
L
VIDEO
R
CENTER +5

- Be sure to adjust from your listening position.
- The center level is adjusted in 1dB steps each time you press the **MULTI LEVEL CONTROL** keys.
- The center level can be adjusted in the range from -10 dB to +10 dB.
- The center level is stored in memory as the common settings with the "DOLBY PRO LOGIC" mode.


2 Adjust the volume balance.

① Generate the test tone.




② Align the center speaker volume with the main speaker volume.

 (1) Select "CENTER"



(2) Adjust

 MULTI LEVEL CONTROL
decreases level [] increases level []



③ Stop the test tone.



 
3 Play a video software program.


4 Adjust the volume.




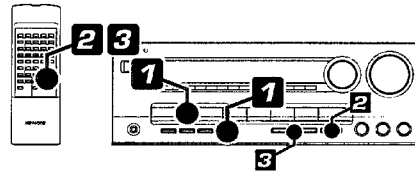
VOLUME CONTROL
To decrease [] To increase []

To cancel DOLBY 3 STEREO play




When video (LD) software carrying  mark is played, this mode provides the Dolby Surround effect, similar to movie theaters.

Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally Licensed under one or more of the following patents: U.S. numbers 3,959,590; Canadian numbers 1,004,603 and 1,037,877. "Dolby", "Pro Logic" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.




DOLBY PRO LOGIC surround arrangement


1 Activate the DOLBY PRO LOGIC mode.

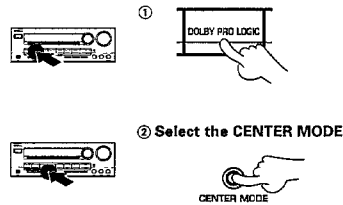


2 Adjust the delay time.

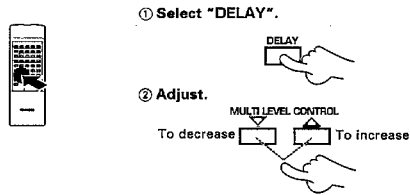

3 Adjust the volume balance.

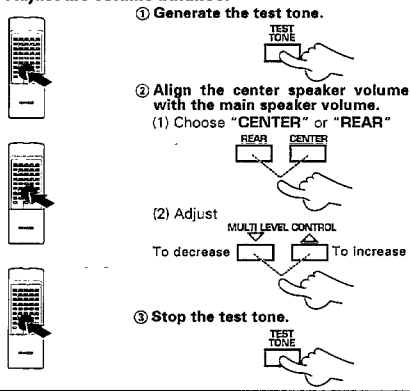

Lights up.

PRO LOGIC 

Each press of the **CENTER MODE** key switches the center modes as follows:

- ① **NORMAL** : When the center speaker is a compact-sized speaker.
 - ② **WIDE BAND** : When the center speaker is a medium- or large-sized speaker.
 - ③ **PHANTOM** : When the center speaker is not used.
- If you cannot tell whether your center speaker is compact or medium-sized, try two modes and select according to your liking.
 - The selected center mode is automatically stored in memory and held unless it is changed later.

- The delay time can be adjusted in the range from 15 ms to 30 ms, in 5 ms steps.
- Once the delay time has been preset, it is held until it is re-set later.



How to decide the DELAY TIME

→ P. 23


 

- The test tone which is heard like noise moves between speakers at an interval of 1.5 sec.

In **NORMAL** and **WIDE BAND** modes:


- Left (L)
- Center (C)
- Right (R)
- Surround (Rear) (S)


In **PHANTOM** mode:

- Left (L)
- Right (R)
- Surround (Rear) (S)

SPEAKERS  VIDEO  TEST L 

- Be sure to adjust from your listening position.
- The volume is adjusted in 1dB steps each time you press the **MULTI LEVEL CONTROL** keys.
- The volume levels can be adjusted in the range from -10 dB to +10 dB.
- The center and rear levels are stored in memory as the common settings with the "THEATER LOGIC" mode.

Before playing a video (or LD) software program carrying the  mark, be sure to complete the "DOLBY PRO LOGIC surround arrangement".

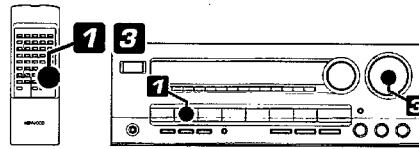


DOLBY PRO LOGIC surround playback

1 Activate the DOLBY PRO LOGIC mode.

Each press of the key switches the modes as follows: (Remote control unit)

 - ① PRO LOGIC
- ② 3 STEREO
- ③ THEATER
- ④ OFF (BYPASS)



2 Play a video software program.


3 Adjust the volume.

To cancel DOLBY PRO LOGIC SURROUND play




How to calculate the proper delay time

Assuming that the distance from the front speaker is A meters and the distance from the rear speakers is B meters

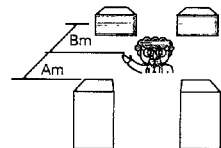

① Use the delay time calculation chart on the right.

Example: When A = 3 m, B = 3 m, the delay time is 20 ms.

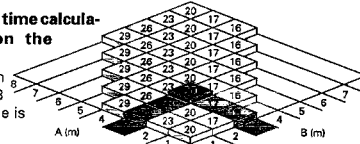


② Use the following formula for calculation.

$$\text{Delay time} = 20 + 3 \times (A - B) \text{ (Unit: ms)}$$

Set the delay time to the number closest to the one you found using either method one or two.

This mode allows to enjoy the sound field of a movie theater. By varying the settings, it is also possible to create the desired sound field. The settings should be adjusted from your listening position.

Preparation ● Play a video source.

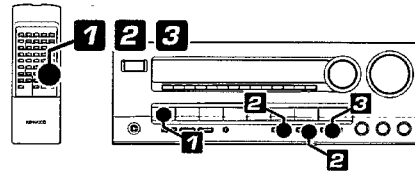

Enjoying music with a feeling of presence (THEATER LOGIC mode,

1 Activate the THEATER LOGIC mode.

Step 1 is enough for obtaining sufficient sound field effect. Proceed to steps 2 and 3 below if you like.

2 Adjust the volume balance.

① Adjust the center speaker volume.


② Adjust the rear speaker volume.

3 Adjust the delay time.

To cancel the presence play

Each press of the key switches the modes as follows: (Remote control unit)

- ① PRO LOGIC
- ② 3 STEREO
- ③ THEATER
- ④ OFF (BYPASS)

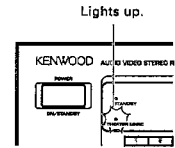

● The values set in the following steps are reset to the initial values when another surround mode is selected.

CENTER +5


- When the **CENTER** key is pressed, the center volume level is displayed on the display. The level can be adjusted by 1 dB per press of the **MULTI LEVEL CONTROL** key.
- The center volume level can be adjusted in the range from -10 dB to +10 dB.

REAR +3

- When the **REAR** key is pressed, the rear volume level is displayed on the display. The level can be adjusted by 1 dB per press of the **MULTI LEVEL CONTROL** key.
- The rear volume level can be adjusted in the range from -10 dB to +10 dB.
- The center level is stored in memory as the common setting with the "DOLBY PRO LOGIC" and "DOLBY 3 STEREO" mode, and the rear level is stored as the common settings with the "DOLBY PRO LOGIC" modes.

DELAY 30

- When the **DELAY TIME** key is pressed, the delay time is displayed on the display, which can be adjusted by 10 ms per press of the **MULTI LEVEL CONTROL** key.
- The delay time can be adjusted in the range from 10 ms to 60 ms.

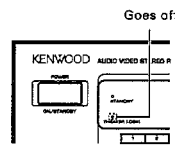

● Be sure to set the SURROUND MODE to OFF when the presence play is not required.



In case of difficulty

KR-V6070 (E)

Operation to reset

The microcomputer may fall into malfunction (impossibility to operate, erroneous display, etc.) when the power cord is unplugged while power is ON or due to an external factor. In this case, execute the following procedure to reset the microcomputer and return it to normal condition.

Unplug the power cord from the power socket and, while holding the POWER key depressed, plug the power cord into the socket again.

● Please note that resetting the microcomputer clears the contents stored in it returns it to the condition when it left the factory.

Remote control unit

| Symptom | Cause | Remedy |
|---|---|---|
| Remote control operation is not possible. | <ul style="list-style-type: none"> ● Batteries are exhausted. ● The remote control unit is too far away from the main system, controlling angle is too large, or there is an obstacle in between. ● The audio cords and system control cords are not connected properly. ● The source component to be operated does not contain the tape(s) or CD. ● An attempt is made to play a tape which is being recorded in the cassette deck. | <ul style="list-style-type: none"> ● Replace with new batteries. ● Operate the remote control unit within the controllable range. → P.10 ● Connect properly referring to "System connection". → P.4 ● Place the tape(s) or CD in the source component to be played. ● Wait until the recording is completed. |

Amplifier

| Symptom | Cause | Remedy |
|---|---|--|
| Sound is not output. | <ul style="list-style-type: none"> ● The speaker cords are disconnected. ● The VOLUME is set to the minimum position. ● MUTE is ON. ● The SPEAKERS switches are set to OFF. ● The TAPE 2 (MONITOR) key is set to ON. | <ul style="list-style-type: none"> ● Connect them properly referring to "System connection". → P.4 ● Adjust the volume to a proper level. ● Press the MUTE key to OFF. → P.12 ● Set the SPEAKERS switch(es) to ON. ● Set the TAPE 2 (MONITOR) key to OFF. |
| The STANDBY indicator blinks and sound is not output. | <ul style="list-style-type: none"> ● Speaker cords are short-circuited. | <ul style="list-style-type: none"> ● Turn the power off, eliminate the short-circuiting, then turn on the power again. → P.6 |
| Sound is not output from one of the speakers. | <ul style="list-style-type: none"> ● The speaker cord is disconnected. ● The BALANCE control is set to an extreme position. | <ul style="list-style-type: none"> ● Connect it properly referring to "System connection". → P.4 ● Adjust the Left/Right balance. → P.12 |
| Sound is not output from the Surround rear speaker and/or center speaker, or their sound is very small. | <ul style="list-style-type: none"> ● The rear-speaker cords and/or center speaker cord are disconnected. ● The Surround play mode has not been engaged. ● The REAR VOL. and/or CENTER VOL. controls are set to the minimum level. | <ul style="list-style-type: none"> ● Connect them properly referring to "System connection". → P.4 ● Set the presence mode. → P.20 ● Adjust the REAR VOL. and CENTER VOL. controls. |
| A hum noise is generated when the PHONO input selector key is pressed. | <ul style="list-style-type: none"> ● The audio cord from the turntable is not inserted securely into the PHONO jacks. ● The turntable is not grounded. | <ul style="list-style-type: none"> ● Insert the audio cord plugs securely into the PHONO jacks. → P.4 ● Connect the grounding wire to the GND terminal on the rear panel. |

Tuner

| Symptom | Cause | Remedy |
|--|--|--|
| Radio stations cannot be received. | <ul style="list-style-type: none"> ● No antenna is connected. ● The broadcast band is not set properly. ● The frequency of the desired station is not tuned. | <ul style="list-style-type: none"> ● Connect an antenna. → P.6 ● Set the broadcast band properly. ● Tune the frequency of the desired station. → P.15 |
| Interference. | <ul style="list-style-type: none"> ● Noise due to ignition noise of an automobile. ● Noise due to an influence from an electric appliance. ● Noise due to a nearby TV set. | <ul style="list-style-type: none"> ● Install the outdoor antenna apart from the road. ● Turn off the power of the appliance. ● Install the system more apart from the TV set. |
| A station which was preset cannot be received by pressing the corresponding numeric key. | <ul style="list-style-type: none"> ● The preset station belongs to a frequency that cannot be received. ● The preset memory was cleared because the power cord had been unplugged for a long period of time. | <ul style="list-style-type: none"> ● Preset a station with a receivable frequency. ● Preset the station again. → P.17 |

Note

Do not use contact cleaners because it could cause a malfunction. Be specially careful against contact cleaners containing oil, for they may deform the plastic components.



Specifications U.S.A. and Canada

⚠ *Caution: Read this page carefully to ensure safe operation*

KR-V6070 (En)

Audio section

Rated power output at the STEREO operation

100 watts per channel minimum RMS, both channels driven at 8 Ω, from 20 Hz to 20,000 Hz with no more than 0.06 % total harmonic distortions. (FTC)

Power output at the Surround operation

Front

70 watts per channel minimum RMS, both channels driven at 8 Ω, 1 kHz with no more than 0.7 % total harmonic distortions. (FTC)

Center

70 watts per channel minimum RMS, both channels driven at 8 Ω, 1 kHz with no more than 0.7 % total harmonic distortions. (FTC)

Rear

20 watts per channel minimum RMS, both channels driven at 8 Ω, 1 kHz with no more than 0.7 % total harmonic distortions. (FTC)

Total harmonic distortion (1 kHz, 8 Ω) 0.03 % at 50 W

Signal to noise ratio (IHF A)

PHONO (MM) 76 dB

CD 100 dB

Input sensitivity / impedance

PHONO (MM) 2.5 mV / 47 kΩ

CD, TAPE, VIDEO 200 mV / 47 kΩ

Tone controls

BASS ± 10 dB (at 100 Hz)

TREBLE ± 10 dB (at 10 kHz)

Loudness control at - 30 dB VOLUME level

..... + 8 dB (100 Hz)

Video section

VIDEO inputs / outputs (Composite) 1 Vp-p / 75 Ω

FM Tuner section

Tuning frequency range 87.5 MHz~108 MHz

Usable sensitivity (IHF) 13.2 dBf (1.2 μV at 75 Ω)

50 dB quieting sensitivity

STEREO 41.2 dBf (32 μV at 75 Ω)

Total harmonic distortion at 1 kHz

MONO 0.6 %

STEREO 0.7 %

Signal to noise ratio at 65 dBf (IHF)

MONO 75 dB

STEREO 68 dB

Selectivity (IHF ± 400 kHz) 50 dB

Stereo separation (IHF at 1 kHz) 40 dB

Frequency response 30 Hz ~ 15 kHz, + 0.5 dB, - 3.0 dB

AM Tuner section

Tuning frequency range 530 kHz ~ 1,700 kHz

Usable sensitivity 12 μV / (500 μV / m)

Total harmonic distortion 0.7 %

Signal to noise ratio 48 dB

Selectivity 30 dB

General

Power consumption 2.8 A

AC outlet

SWITCHED 2: (total 180 W, 1.5 A max.)

Dimensions W: 440 mm (17-5/16")

H: 143 mm (5-5/8")

D: 347 mm (13-11/16")

Weight (net) 9.0 kg (19.9 lb)

Note

KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.



Specifications Other countries

⚠ Caution : Read this page carefully to ensure safe operation

KR-V6070 (E)

Audio section

Rated power output at the STEREO operation
(EIAJ) 1 kHz, 10 % THD at 8 Ω 140 W + 140 W
(DIN/IEC) from 63 Hz to 12,500 Hz,
0.7 % T.H.D., at 8 Ω 100 W + 100 W

Power output at the Surround operation

| | | |
|--------|------------------------------------|-------------|
| Front | (1 kHz, 0.7 % T.H.D. at 8 Ω) | 70 W + 70 W |
| Center | (1 kHz, 0.7 % T.H.D. at 8 Ω) | 70 W |
| Rear | (1 kHz, 0.7 % T.H.D. at 8 Ω) | 20 W + 20 W |

Total harmonic distortion (1 kHz, 8 Ω) 0.03 % at 50 W

Signal to noise ratio (IHF'66)

| | |
|------------------|--------|
| PHONO (MM) | 76 dB |
| CD | 100 dB |

Input sensitivity / impedance

| | |
|-----------------------|----------------|
| PHONO (MM) | 2.5 mV / 47 kΩ |
| CD, TAPE, VIDEO | 200 mV / 47 kΩ |

Tone controls

| | |
|--------------|---------------------|
| BASS | ± 10 dB (at 100 Hz) |
| TREBLE | ± 10 dB (at 10 kHz) |

Loudness control at - 30 dB VOLUME level
..... + 8 dB (100 Hz)

Video section

VIDEO inputs / outputs (Composite) 1 Vp-p / 75 Ω

FM Tuner section

Tuning frequency range 87.5 MHz~108 MHz

Usable sensitivity (IHF) 13.2 dBf (1.2 μV at 75 Ω,
50 dB quieting sensitivity

| | |
|--------------|--------------------------|
| STEREO | 41.2 dBf (32 μV at 75 Ω) |
|--------------|--------------------------|

Total harmonic distortion at 1 kHz

| | |
|--------------|-------|
| MONO | 0.6 % |
| STEREO | 0.7 % |

Signal to noise ratio at 65 dBf (IHF)

| | |
|--------------|-------|
| MONO | 75 dB |
| STEREO | 68 dB |

Selectivity (IHF ± 400 kHz) 50 dB

Stereo separation (IHF at 1 kHz) 40 dB

Frequency response 30 Hz ~ 15 kHz, + 0.5 dB, - 3.0 dB

AM Tuner section

Tuning frequency range

| | |
|--------------|---------------------|
| 9 kHz | 531 kHz ~ 1,602 kHz |
| 10 kHz | 530 kHz ~ 1,610 kHz |

Usable sensitivity 12 μV / (500 μV / m)

Total harmonic distortion 0.7 %

Signal to noise ratio 48 dB

Selectivity 30 dB

General

Power consumption 230 W

AC outlet

| | |
|----------------|----------------------|
| SWITCHED | 2: (total 90 W max.) |
|----------------|----------------------|

Dimensions W: 440 mm
H: 143 mm
D: 347 mm

Weight (net) 9.0 kg

Note

KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>