

DENON

ノイズキャンセリング ヘッドホン

Noise Cancelling Headphones

AH-NC800

Owner's Manual

Bedienungsanleitung

Manuel de l'Utilisateur

Manuale delle istruzioni

Manual del usuario

Gebruiksaanwijzing

Bruksanvisning

Инструкция по эксплуатации

Instrukcja obsługi

操作説明書

 
操作说明书

取扱説明書

Accessories

Check that the following parts are supplied with the product.

- ① Owner's Manual 1
- ② Precautions on the use of headphones 1
- ③ Service center list 1
- ④ Connecting cable (Cable length: Approx 0.7 m) 1
- ⑤ Connecting cable (Cable length: Approx 1.5 m) 1
- ⑥ Conversion plug for aircraft use 1
- ⑦ R03/AAA battery 1
- ⑧ Carrying Case 1

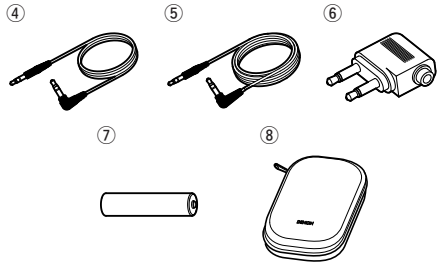


Precautions on the use of headphones

Before using the headphones, be sure to read the attached document "Precautions on the use of headphones".

NOTE

 - To prevent injury, be careful not to trap your fingers between the housing and hanger.
- Do not pull the slider with excessive force. Doing so may damage the slider.

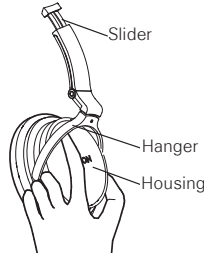


Features

- **Reduces external noise by as much as 99% ***
When using in a moving vehicle, this product reduces the effect of noise from the vehicle, letting you comfortably enjoy the music.
 - **Compressed Audio RESTORER improves portable audio player sound fidelity**
Generates the signals that were eliminated during data compression and restores the sound close to the original sound before compression.
 - **Equipped with large 42 mm diameter driver unit and acoustic optimizer**
DENON's outstanding sound quality technology and know-how provides exceptionally high quality playback.
 - **Available with thin carrying case specially designed for this headphone.**
Unique folding construction makes the headphones easy to fold and carry.
- * Calculated from the noise energy ratio reaching the ears when headphones are worn and not worn.
Noise within the audible range (20 – 20,000 Hz) is reduced an average of 99% through the use of newly developed sound isolating ear pads and housing, and the generation of a noise cancelling signal.

Inserting the battery


Make sure the headphone power is off.

 - ① Open the battery compartment cover on the R side housing.
- ② Insert the R03/AAA battery from the ⊕ side.
- ③ Close the battery compartment cover.
Be sure to close firmly by pressing until the cover clicks into place.

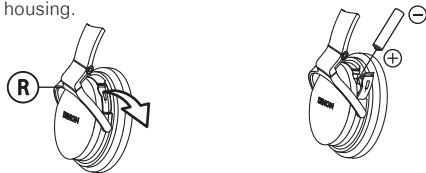

Battery replacement timing

 The indicator flashes or turns off when the battery has worn down. Replace the old battery with a new one.

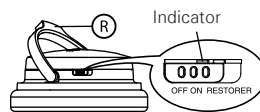

Battery lifespan

A standard alkaline battery lasts for approximately 40 hours of listening time.

Battery lifespan differs depending on how the headphones are used.

 
NOTE

For instructions on handling a dry battery, see "Precautions on the use of headphones" in the documentation supplied with the headphones.

Preparations

- 1 Connect the straight plug (black) of the connecting cable to the jack on the L side housing of the headphones.**


You can choose from two types of connecting cable: 0.7 m and 1.5 m.

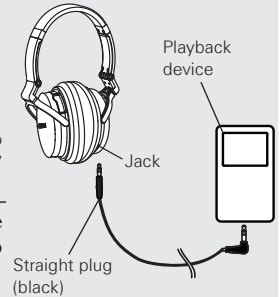

- 2 The other plug on the connecting cable connects to the playback device.**

- 3 Be sure to wear the headphones correctly, with the R side on the right ear and L side on the left ear.**

 The slider can be adjusted to 11 levels. Adjust to your preferred position.

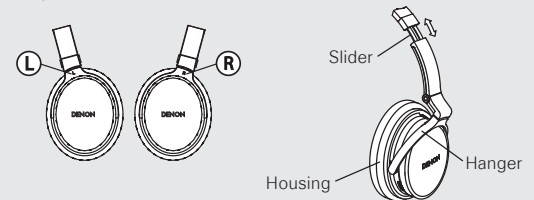


Using the headphones

Listening to audio

First, turn the volume of the audio device down.

1 Turn on the power of the audio device and start playback.

 2 Set the switch to "ON".
The noise cancellation function turns on and the indicator lights blue.

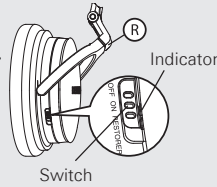

NOTE

- If the indicator does not light or flashes when the power is turned on, the battery is worn. Replace it with a new battery.
- Be sure to turn the power off after use.
- You may not be able to use with certain portable devices or other devices that are equipped with a digital amplifier.



- When the headphone power is off, the headphones can be used as standard headphones. However, in this case the noise cancelling function does not operate.
- The noise cancelling function can be used independently by not connecting the connecting cable to the headphones.

 
About the RESTORER function

Compressed audio formats such as MP3, WMA (Windows Media Audio) and MPEG-4 AAC reduce the amount of data by eliminating signal components that are hard for the human ear to hear. The RESTORER function generates these signals that are eliminated upon compression, restoring the sound to a similar state as the original uncompressed sound.

Operations

Set the switch to "RESTORER".

The noise cancellation function and the RESTORER function turn on, and the RESTORER indicator lights white.

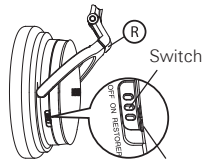

About using on planes

To use these headphones to listen to the on-board music broadcast in the aircraft cabin, use the conversion plug included.

NOTE

- The conversion plug may not be suitable for certain aircraft.
- Do not use these headphones when use of electronic devices is prohibited on board, or when the use of personal headphones to listen to the on-board music service is prohibited.

Storing in the carrying case

 
1 Remove the connecting cable and plug from these headphones.

2 Fold the headphones and place them in the carrying case.

3 Close the carrying case and shut the fastener.

NOTE

Insert the headphones into the space provided in the carrying case. Forcing the headphones into the case may cause damage to the headphones.

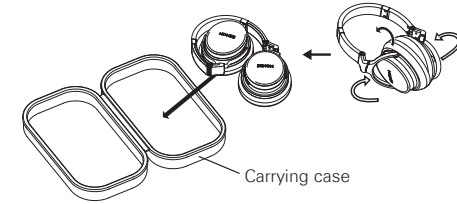

Troubleshooting

1. Is the set being operated as described in the owner's manual?

If the headphones do not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction. In this case, contact the store where you purchased these headphones.

Symptom	Cause	Countermeasure
No sound emitted.	<ul style="list-style-type: none"> • Connecting cable is not connected to the headphones, or is not connected correctly. • Connecting cable is not connected to the audio device, or is not connected correctly. • The connected audio device is not operating. • The volume of the connected device is too low. • The switch is set to on or "RESTORER", but there is not battery installed, or the battery is worn. 	<ul style="list-style-type: none"> • Check that the plug is fully inserted. • Check that the plug is fully inserted. • Turn on the power of the connected device, and press play. • Gradually increase the volume of the connected device. • Replace with the battery.
Sound is distorted.	<ul style="list-style-type: none"> • Volume of the connected audio device is too high. • Battery is worn. 	<ul style="list-style-type: none"> • Decrease the volume of the connected device. • Replace the battery.
No noise cancelling effect.	<ul style="list-style-type: none"> • Battery is worn. • This headphone power is off. • The battery is not inserted in the proper direction, as indicated by the polarity marks in the battery compartment. 	<ul style="list-style-type: none"> • Replace the battery. • Turn this headphone power on. • Insert the battery in the proper direction, following the polarity marks in the battery compartment.
Noise can be heard.	<ul style="list-style-type: none"> • Battery is worn. • A mobile phone or other electronic device is being used nearby. 	<ul style="list-style-type: none"> • Replace the battery. • Move the electronic device away from the headphones.
There is no RESTORER effect.	<ul style="list-style-type: none"> • The RESTORER function is turned off. • Battery is worn. • The battery is not inserted in the proper direction, as indicated by the polarity marks in the battery compartment. 	<ul style="list-style-type: none"> • Turn the effect on. • Replace the battery. • Insert the battery in the proper direction, following the polarity marks in the battery compartment.

Specifications

- **Type:** Dynamic type
- **Drive units:** Ø 42 mm
- **Input impedance:** 40 Ω (Power on)
- **Sensitivity:** 105 dB/mW (Power on)
- **Maximum input:** 100 mW

- **Playback frequency:** 5 – 28,000 Hz
- **Weight:** 180 g (Excluding cables and battery)
- **Plug:** Ø 3.5 mm gold-plated stereo mini plug

* For improvement purposes, specifications and design are subject to change without notice.

DENON
www.denon.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>