

Thank you for purchasing the KODAK Digital Camera Travel Charger K640. Please read these instructions for safe operation.

Features

- Charges 1 or 2 AA or AAA Ni-MH rechargeable batteries.
- Built-in switching power technology for worldwide (100-240 V AC) use.
- Automatic charging current selection for AA and AAA batteries.
- Compatible with any device powered with 2-AA or 2-AAA batteries.

Operating Instructions

HOW TO CHARGE

1. Place 1 or 2 AA or AAA size batteries into the charger so that the + (positive) and - (negative) ends (terminals) of the batteries correspond to the same + and - marking in the charger.
2. Plug the charger into an electrical outlet of 100-240 V AC. The charge indicator light is illuminated and battery charging begins. (NOTE: Do not insert or remove batteries during this charging process). The charge indicator lights are on during charging and turn off automatically when charging is complete.
3. Be careful when removing the batteries right after charging. The temperature of batteries can be high.


Specifications


Voltage:	Input	100-240 V AC, 50/60 Hz
	Output	AA: 350 mA AAA: 150 mA
LED Indication:	ON (steady green) OFF	- charging - charging complete or no batteries
2 AA or 2 AAA Ni-MH Batteries		Charging Time:
AA	2500 mAh	5.2 hours
	2100 mAh	6.1 hours
	1800 mAh	7.3 hours
AAA	1000 mAh	4.3 hours
	650 mAh	6.8 hours
Charge Protection	8-hour automatic shutoff	

IMPORTANT SAFETY INSTRUCTIONS—

Save These Instructions

ANGER—TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

 **CAUTION: Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel.**

 **CAUTION: Do not expose this product to liquid, moisture or extreme temperatures. KODAK AC Adapters and Battery Chargers are intended for indoor use only. The use of controls, adjustments or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards.**

 **CAUTION: Charge only Ni-MH AA/AAA rechargeable batteries. Other types of batteries may burst causing personal injury and damage.**

- Charge the batteries before using.
- Do not use charged and discharged batteries together.
- Use an attachment plug adapter of the proper configuration for your power outlet. This battery charger is intended to be correctly oriented in a vertical or floor mount position.
- Read and follow these instructions before using KODAK Products. Always follow basic safety procedures.
- The use of an accessory attachment that is not recommended by Kodak, such as an AC adapter, may cause fire, electric shock or injury.
- If using this product on an airplane, observe all instructions from the airline.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

WARRANTY

Limited Warranty

Kodak warrants KODAK Consumer Electronic Products and Accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase.

Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

Limited Warranty Coverage

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorised service facility for the country where the Products were purchased.

Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labour as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its discretion, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement or refund of the purchase price are the sole remedies under this warranty.

If replacement parts are used in making repairs, those parts may be remanufactured or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

Limitations

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorised service, misuse, abuse, use with incompatible accessories or attachments (such as third-party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions or failure to use items supplied by Kodak (such as adapters and cables), or for claims made after the duration of this warranty.

Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law.

The option of repair, replacement or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase or use of this Product, regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services or claims of your customers for such damages resulting from the purchase, use or failure of the Product), regardless of cause, or for breach of any written or implied warranty, is expressly disclaimed.

Your Rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific rights, and you may have other rights that vary from state to state or by jurisdiction.

Outside the United States and Canada

 
In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage or loss may be by negligence or other act.

Waste Electrical and Electronic Equipment/Battery Disposal



In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste). For more information, contact your retailer, collection facility or appropriate local authorities, or visit www.kodak.com/go/recycle. (Product weight: 66 g)

Regulatory Information



FCC compliance and advisory

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Canadian DOC statement

DOC Class B compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes—Class B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



Eastman Kodak Company
Rochester, NY 14650 U.S.A.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>