
Kodak EasyShare V530 zoom digital camera



User's guide

www.kodak.com

For interactive tutorials, www.kodak.com/go/howto

For help with your camera, www.kodak.com/go/v530support



Eastman Kodak Company

Rochester, New York 14650

© Eastman Kodak Company, 2005


All screen images are simulated.


Kodak and EasyShare are trademarks of Eastman Kodak Company.

Schneider-Kreuznach and Xenar are trademarks of Jos. Schneider Optische Werke GmbH used under license by Eastman Kodak Company.


P/N 4J3465

Front view

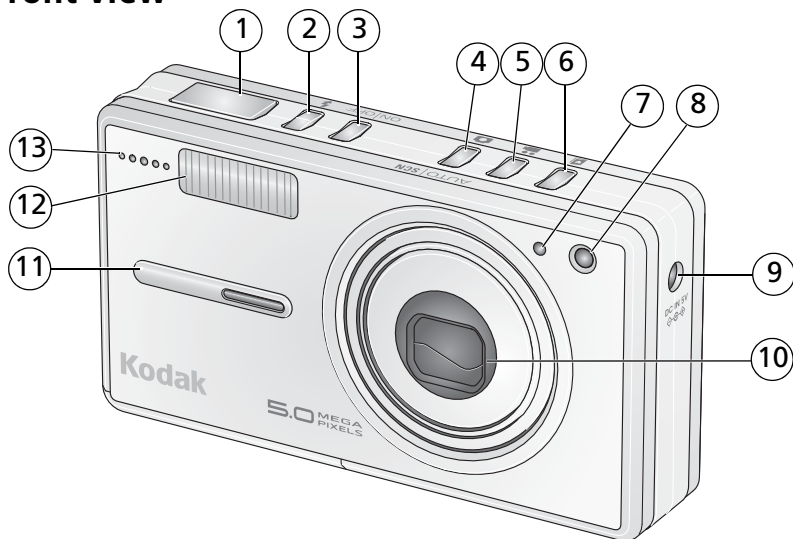

- | | | | |
|---|------------------------------|----|--|
| 1 | Shutter button | 8 | Video/Self-timer light |
| 2 | Flash button | 9 | DC-In (5V)  |
| 3 | On/Off button | 10 | Lens |
| 4 | Auto/SCN (scene) mode button | 11 | Grip |
| 5 | Video mode button | 12 | Flash |
| 6 | Favorites mode button | 13 | Microphone |
| 7 | Light sensor | | |

Back view

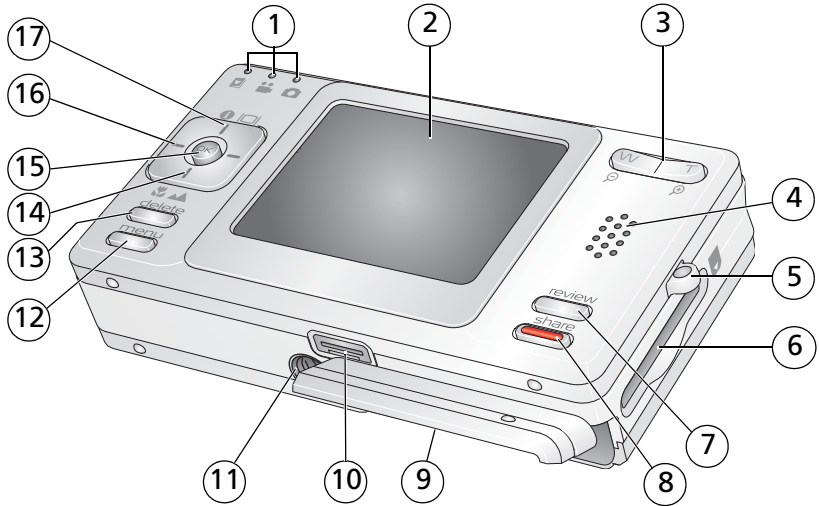

- | | | | |
|---|----------------------------------|----|--------------------------------|
| 1 | Mode/Battery charging lights | 10 | Dock connector, USB, A/V Out |
| 2 | LCD | 11 | Tripod socket |
| 3 | Wide angle/Telephoto button | 12 | Menu button |
| 4 | Speaker | 13 | Delete button |
| 5 | Strap post | 14 | Close-up/Landscape mode button |
| 6 | Slot for optional SD or MMC card | 15 | OK button |
| 7 | Review button | 16 | ◀/▶ ▲/▼ |
| 8 | Share button | 17 | LCD/Info button |
| 9 | Battery compartment | | |

Table of contents


1	Setting up your camera	1
	Attaching the strap	1
	Loading the battery	1
	Charging the battery	2
	Turning on the camera	3
	Setting the date/time, first time	3
	Storing pictures on an SD or MMC card	4
2	Taking pictures and videos	5
	Taking a picture	5
	Reviewing pictures and videos	9
	Deleting pictures and videos	11
3	Transferring and printing pictures	12
	Installing the software	12
	Transferring pictures with the photo frame dock 2	13
	Transferring pictures with the USB cable	13
	Also available for transferring	14
	Printing pictures	14
	Dock compatibility for your camera	17
4	Doing more with your camera	18
	Using optical zoom	18
	Changing the flash settings	19
	Picture-taking modes	20
	Running a slide show	23
	Cropping pictures	26
	Making pictures from a video	26
	Viewing picture/video information	27
	Using the histogram to view picture brightness	27
	Copying pictures and videos	28

Using exposure compensation to adjust picture brightness	28
Changing picture-taking settings	29
Customizing your camera	33
Pre-tagging for album names	36
Sharing your pictures	38
5 Troubleshooting	43
Camera problems	43
Computer/connectivity problems	45
Picture quality problems	45
Direct printing (PictBridge enabled printer) problems	47
6 Getting help	48
Helpful links	48
Telephone customer support	49
7 Appendix	50
Camera specifications	50
Flash settings in each mode	53
Storage capacities	54
Important safety instructions	55
Battery life	56
Upgrading your software and firmware	57
Additional care and maintenance	57
Warranty	58
Regulatory compliance	60


1

Setting up your camera

Attaching the strap

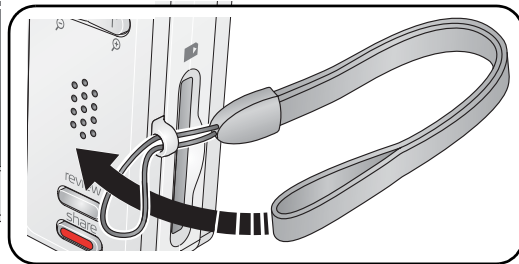

Loading the battery

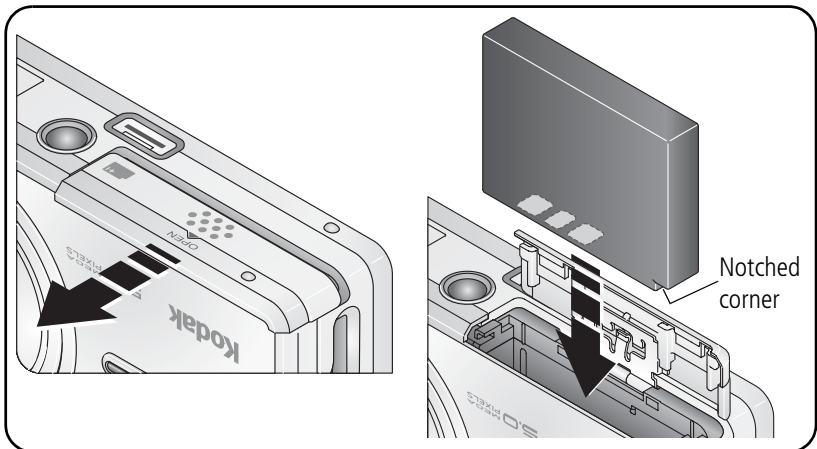

For information on replacing batteries and extending battery life, see [page 56](#).

www.kodak.com/go/support


EN 1

Charging the battery

Charge until all 3 battery charging lights are lit (approximately 3 hours).

Kodak EasyShare photo frame dock 2


(May be sold separately.)

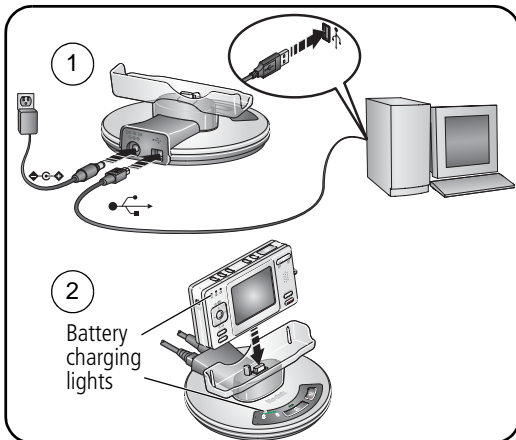

5-volt AC adapter


(included with your camera)

NOTE: Use this AC adapter to charge the battery and to power the EasyShare photo frame dock 2.

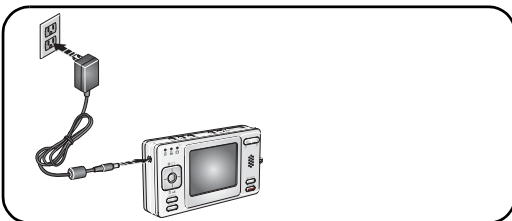

Kodak EasyShare printer dock series 3 or EasyShare camera dock series 3


(May be sold separately. For details, see the dock user's guide. For dock compatibility, see [page 17.](#))

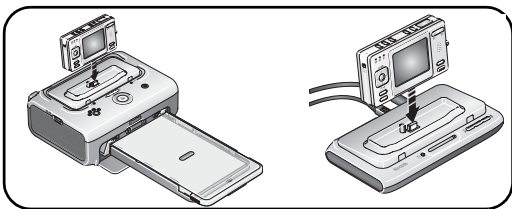






Turning on the camera

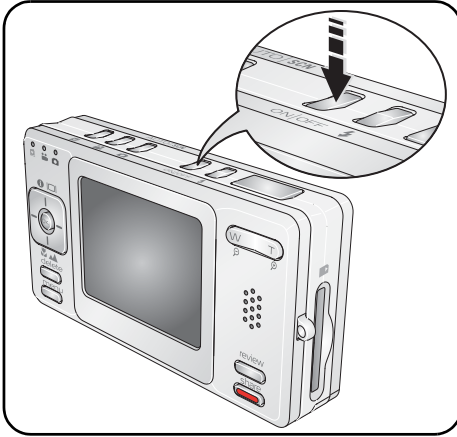
Press the On/Off button to turn the camera on in Auto mode.

NOTE: You can also press the Auto/SCN, Video, or Favorites button to turn on the camera in that mode.



Setting the date/time, first time


- 1 At the prompt, press OK.
- 2   to change.
  for previous/next field.
- 3  to accept.

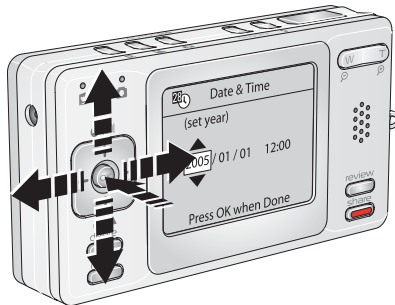

Storing pictures on an SD or MMC card

Your camera has 16 MB of internal memory. You can purchase an SD or MMC card to conveniently store more pictures and videos.

NOTE: We recommend Kodak SD or MMC cards. When using the card for the first time, format it in this camera before taking pictures (see [page 35](#)).

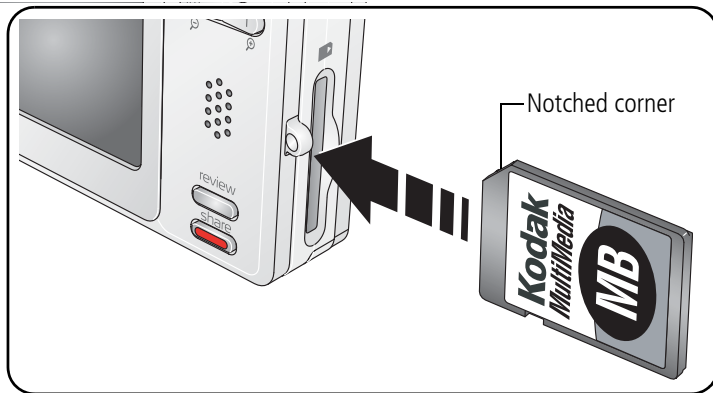

CAUTION:

A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card when the ready light is blinking may damage the pictures, the card, or the camera.

See [page 54](#) for storage capacities. Purchase SD or MMC cards at a dealer of Kodak products or www.kodak.com/go/v530accessories.

2


Taking pictures and videos

Taking a picture

- 1 Press the On/Off or the Auto/SCN mode button to turn on the camera.
- 2 Compose the picture.
- 3 Press the Shutter button halfway to focus and set exposure. When the AF/AE indicator (on the LCD) turns green, press the Shutter button completely down.

Note: Repeatedly press LCD/Info  for:

- Status icons on
- Status icons off
- Histogram on

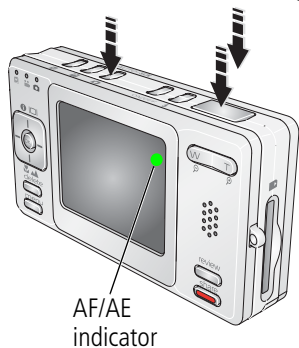


Taking a video

- 1 Press the Video mode button.
- 2 Press the Shutter button completely down and release.
To stop recording, press and release the Shutter button again.




Reviewing the picture or video just taken

After you take a picture or video, the LCD displays a quickview for approximately 5 seconds. If you press no buttons, the picture/video is saved.

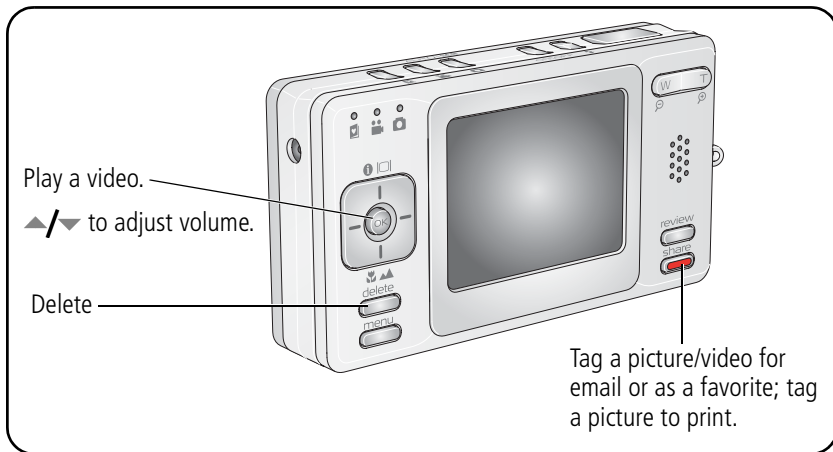

To view pictures and videos anytime, see [page 9](#).

Understanding the blur warning icons

If the feature is turned on, a picture blur warning icon  is displayed during quickview.

Green—Picture is sharp enough for an acceptable 4 x 6-inch (10 x 15 cm) print.


Yellow—Picture may be sharp enough for an acceptable 4 x 6-inch (10 x 15 cm) print or sharpness is not determined. (You may want to view on a computer monitor before printing.)

Red—Picture is not sharp enough for an acceptable 4 x 6-inch (10 x 15 cm) print.


White—Print sharpness is still being determined.

Understanding the picture-taking icons

In capture mode—no buttons pressed

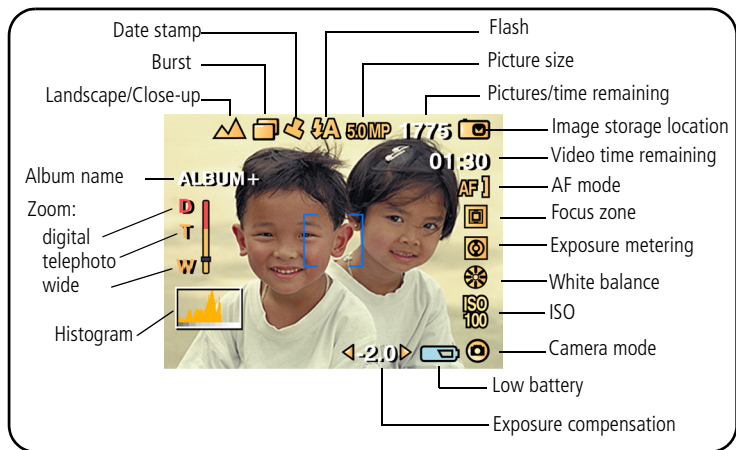

In capture mode—shutter pressed halfway

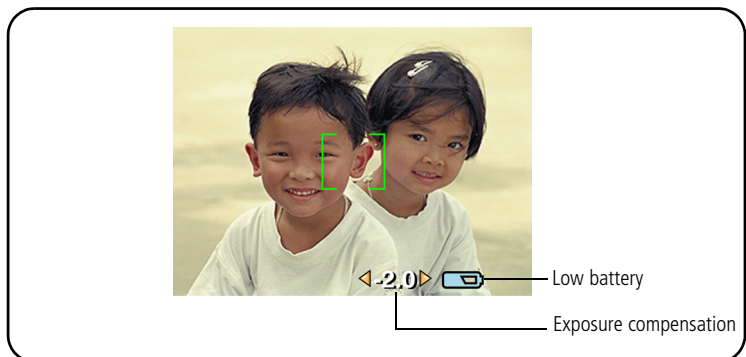


Using the auto-focus framing marks (pictures)

Framing marks indicate the camera focus area. The camera attempts to focus on foreground subjects, even if the subjects are not centered in the scene.

- 1 Press the Shutter button **halfway**.

When the framing marks turn green, focus is accomplished.

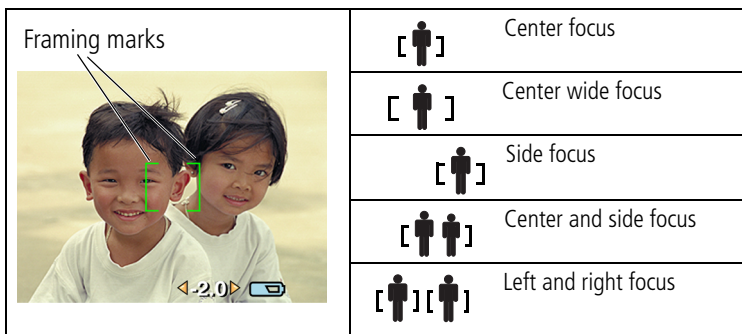


- 2 If the camera is not focusing on the desired subject (or if the framing marks disappear), release the Shutter button and recompose the scene.

- 3 Press the Shutter button **completely down** to take the picture.

NOTE: Framing marks do not appear in Landscape or Video mode. When you use Focus Zone and set Center Zone, the framing marks are fixed at Center Wide.

Reviewing pictures and videos

Press the Review button to view and work with your pictures and videos.

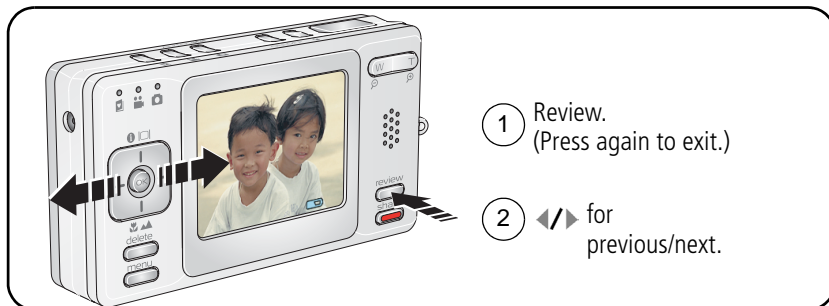

Videos:

OK Play/pause.


◀▶ Adjust the volume.

◀ Press once to play at 2X speed; press again for 4X (during playback).

▶ Press once to reverse at 2X speed; press again for 4X (during playback).

NOTE: To learn how to choose and view your favorite pictures, see [page 40](#). To save battery power, use an accessory Kodak EasyShare photo frame dock 2, EasyShare dock, or Kodak 5-volt AC adapter. (See www.kodak.com/go/v530accessories.)

Magnifying a picture during review

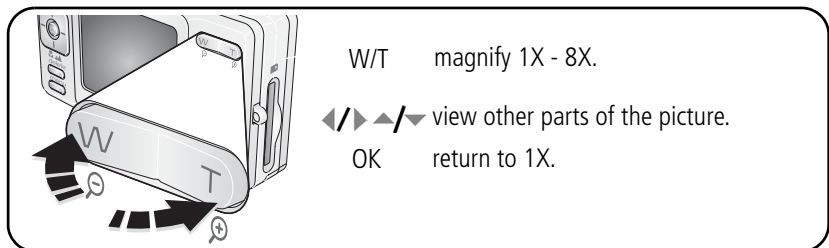


Viewing multi-up (thumbnails) during review

- ▼ view multi-up thumbnails.
- ▲/▼ ◀/▶ highlight a thumbnail.
- OK view a single picture.




Understanding the review icons

Pictures

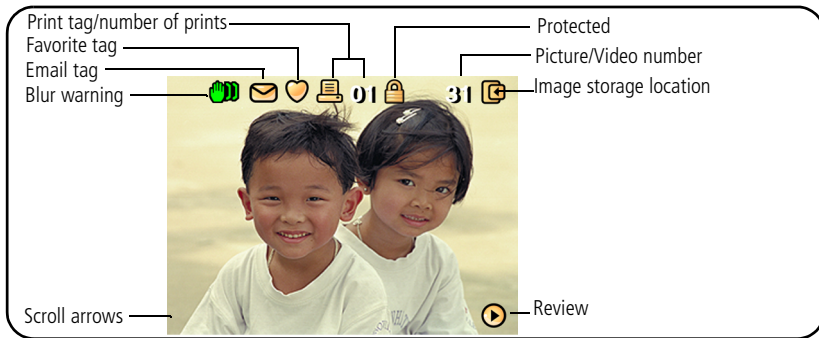


Videos

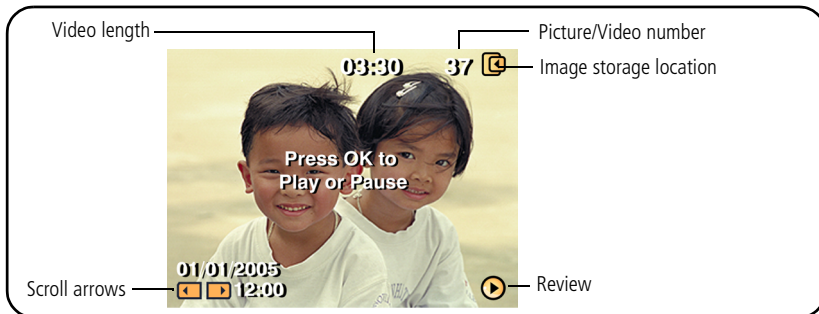


Deleting pictures and videos


- 1 Press Review.
- 2 ◀/▶ for previous/next.
- 3 Press Delete.
- 4 Follow the screen prompts.

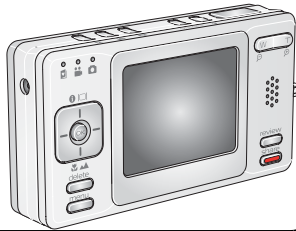


NOTE: To delete protected pictures and videos, remove protection before deleting.

Protecting pictures and videos from deletion

- 1 Press Review.
- 2 ◀/▶ for previous/next.
- 3 Press Menu.
- 4 Press  to highlight Protect, then press OK.

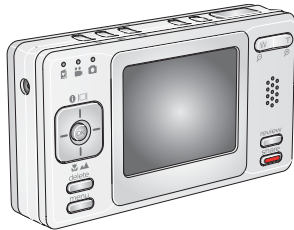

The picture or video is protected and cannot be deleted. The Protect icon  appears with the protected picture or video.

Press the Menu button to exit the menu.



CAUTION:

Formatting internal memory or an SD or MMC card deletes all (including protected) pictures and videos. (Formatting internal memory also deletes email addresses, album names, and favorites. To restore them, see EasyShare software Help.)

3

Transferring and printing pictures



CAUTION:

Install Kodak EasyShare software *before* connecting an EasyShare camera or dock to the computer. Failure to do so may cause the software to load incorrectly.

Installing the software


- 1 Close all software applications that are open on your computer (including anti-virus software).
- 2 Place the Kodak EasyShare software CD into the CD-ROM drive.
- 3 Load the software:
 - Windows OS**—if the install window does not appear, choose Run from the Start menu and type **d:\setup.exe** where **d** is the drive letter that contains the CD.
 - Mac OS X**—double-click the CD icon on the desktop, then click the Install icon.
- 4 Follow the on-screen instructions to install the software.
 - Windows OS**—select Complete to automatically install the most commonly used applications. Select Custom to choose the applications you wish to install.
 - Mac OS X**—follow the on-screen instructions.

NOTE: When prompted, register your camera and software. Registering lets you sign up for information that keeps your system up-to-date. To register later, see www.kodak.com/go/register.

For information on the software applications included on the Kodak EasyShare software CD, click the Help button in EasyShare software.


Transferring pictures with the photo frame dock 2

If you have a Kodak EasyShare photo frame dock 2, use it to transfer pictures. (To purchase accessories, see www.kodak.com/go/v530accessories.)

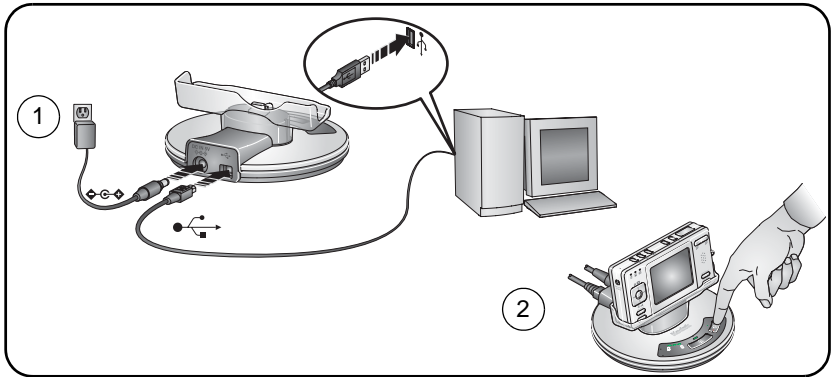

Transferring pictures with the USB cable

If you do not have an EasyShare dock, use the USB / A/V connector and USB cable model U-8 (may be sold separately).

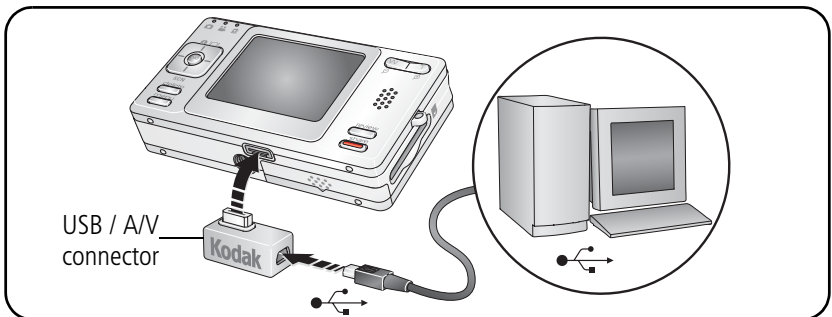

NOTE: Visit www.kodak.com/go/howto for an online tutorial on connecting.

Also available for transferring

You can also use these Kodak products to transfer your pictures and videos.

- Kodak EasyShare camera dock, Kodak EasyShare printer dock (see [page 17](#))
- Kodak multi-card reader, Kodak SD multimedia card reader-writer

Purchase these and other accessories at a dealer of Kodak products or www.kodak.com/go/v530accessories.

Printing pictures

Printing with a Kodak EasyShare printer dock

Dock your camera to the Kodak EasyShare printer dock and print directly—with or without a computer. Purchase this and other accessories at a dealer of Kodak products or www.kodak.com/go/v530accessories.

For dock compatibility, see [page 17](#).

Direct printing with a PictBridge enabled printer

Your camera is compatible with PictBridge technology, so you can print directly to PictBridge enabled printers. You need:

- Camera with fully charged battery, or with optional Kodak 5-volt AC adapter
- PictBridge enabled printer
- USB cable

Connecting the camera to a PictBridge enabled printer

- 1 Turn off the camera and printer.
- 2 Optional: If you have a Kodak 5-volt AC adapter (optional accessory), plug it into the camera and into an electrical outlet.
- 3 Connect the appropriate USB cable from the camera to the printer. See your printer user guide for details or www.kodak.com/go/v530accessories to order cables.

Printing from a PictBridge enabled printer

- 1 Turn on the printer. Turn on the camera.

The PictBridge logo is displayed, followed by the current picture and menu. (If no pictures are found, a message is displayed.) If the menu interface turns off, press any button to redisplay it.

- 2 Press ▲/▼ to choose a printing option, then press the OK button.

Current Picture—Press ◀/▶ to choose a picture. Choose the number of copies.

Tagged Pictures—If your printer is capable, print pictures that you tagged for printing and choose a print size.

Index Print—Print thumbnails of all pictures. (This option requires one or more sheets of paper.) If the printer is capable, choose a print size.

All Pictures—Print all pictures in internal memory, on a card, or in Favorites. Choose the number of copies.

Image Storage—Access internal memory, a card, or Favorites.

NOTE: During direct printing, pictures are not permanently transferred or saved to the printer. To transfer pictures to your computer, see [page 12](#). In Favorites mode, the current favorite picture is displayed.

Disconnecting the camera from a PictBridge enabled printer

- 1 Turn off the camera and printer.
- 2 Disconnect the USB cable from the camera and the printer.

Using a printer that is not PictBridge enabled

For details on printing pictures from your computer, click the Help button in EasyShare software.

Ordering prints online



Kodak EasyShare gallery (www.kodakgallery.com) is one of the many online print services offered in EasyShare software. You can easily:

- Upload your pictures.
- Edit, enhance, and add borders to your pictures.
- Store pictures, and share them with family and friends.
- Order high-quality prints, photo greeting cards, frames, and albums—and have them delivered to your door.

Printing from an optional SD or MMC card

- Automatically print tagged pictures when you insert your card into a printer with an SD/MMC card slot. See your printer user's guide for details.
- Make prints at an SD/MMC card-capable Kodak picture maker. (Contact a location prior to visiting. See www.kodak.com/go/picturemaker.)
- Take the card to your local photo retailer for professional printing.

Dock compatibility for your camera

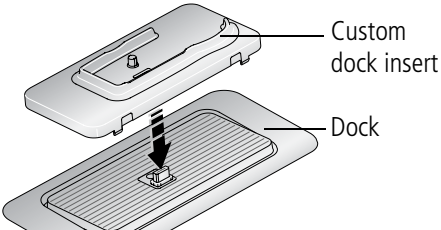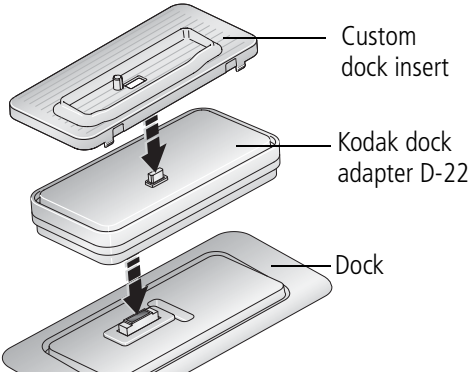Dock	Docking configuration
<ul style="list-style-type: none"> ■ Kodak EasyShare photo frame dock 2 	<p>See page 13.</p>
<ul style="list-style-type: none"> ■ Kodak EasyShare printer dock series 3 and EasyShare camera dock series 3 	 <p>Custom dock insert</p> <p>Dock</p>
<p>Kodak EasyShare:</p> <ul style="list-style-type: none"> ■ printer dock ■ printer dock plus ■ printer dock 6000 ■ camera dock 6000 	 <p>Custom dock insert</p> <p>Kodak dock adapter D-22</p> <p>Dock</p>
<p>Other docks:</p> <ul style="list-style-type: none"> ■ printer dock 4000 ■ camera dock II ■ LS420, LS443 camera dock 	<p>Not compatible</p>


Purchase camera docks, printer docks, and other accessories at a dealer of Kodak products or www.kodak.com/go/v530accessories.

4

Doing more with your camera

Using optical zoom

Use optical zoom to get up to 3X closer to your subject. Optical zoom is effective when the lens is no closer than 24 in. (60 cm) to the subject or 5 in. (13 cm) in Close-up mode.

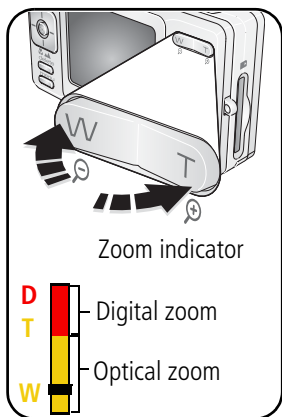

- 1 Use the LCD to frame your subject.
- 2 Press Telephoto (T) to zoom in. Press Wide Angle (W) to zoom out.
The zoom indicator shows zoom status.
- 3 Take the picture or video.


Using digital zoom

Use digital zoom in any Still mode to get up to 4X magnification beyond optical zoom.

- 1 Press Telephoto (T) to the optical zoom limit (3X). Release the button, then press it again.
- 2 Take the picture.



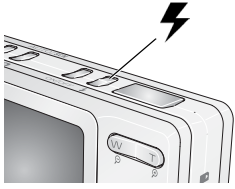

NOTE: You cannot use digital zoom for video recording. You may notice decreased image quality when using digital zoom. The blue slider on the zoom indicator pauses and turns red when the picture quality reaches the limit for an acceptable 4 x 6-in. (10 x 15 cm) print.

Changing the flash settings



Press the flash button repeatedly to scroll through flash modes.




The current flash mode is shown in the LCD status area.

Flash modes	Flash fires
 Auto Flash	When the lighting conditions require it.
 Fill	Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when light is behind the subject). In low light, hold the camera steady or use a tripod.
 Red-eye	Once, so the subject's eyes become accustomed to the flash, then fires again when the picture is taken. (If the lighting conditions require flash but do not require Red-eye reduction, the flash may fire only once.)
 Off	Never

For flash settings in each mode, see [page 53](#).



Picture-taking modes

Choose the mode that best suits your subjects and surroundings.

Use this mode	For
 Auto AUTO	General picture-taking—offers an excellent balance of image quality and ease of use.
SCN Scene	Point-and-shoot simplicity when taking pictures under special conditions. (See page 21 .)
 Video	Capturing video with sound. (See page 5 .)
 Favorites	Viewing favorite pictures. (See page 38 .)

Press a button to choose a mode.



Use this mode	For
 Landscape	Far-away scenes. The camera uses infinity auto-focus. Auto-focus framing marks are not available in Landscape.
 Close-up	Close range. Use available light instead of flash, if possible. The camera automatically sets the focus distance depending on the zoom position.



Press until the Close-up or Landscape icon appears in the LCD status area.







Scene (SCN) modes











1 Press the Auto/SCN button until the Scene icons appear on the LCD.





2 Press ◀/▶ to view scene mode descriptions.

NOTE: If the description turns off, press the OK button.

3 Press the OK button to choose a Scene mode.

Use this SCN mode		For	Camera pre-settings
	Portrait	Full-frame portraits of people.	Subject is sharp and the background is indistinct. Position your subject at least 6 ft (2 m) away and fill the frame with a head and shoulder pose. Use Telephoto to exaggerate background blur.
	Sport	Subjects that are in motion.	Fast shutter speed, Multi-Pattern Exposure Metering
	Landscape	Far-away scenes. The camera uses infinity auto-focus.	Auto-focus framing marks are not available in Landscape.
	Close-up	Close range. Use available light instead of flash if possible.	The camera automatically sets the focus distance depending on the zoom position.
	Night Portrait	Reduces red-eye of people in night scenes or low-light conditions. Place the camera on a flat, steady surface or use a tripod.	Multi-Pattern Exposure Metering, Multi-Zone Focus, Red-eye flash
	Night Landscape	Distant scenery at night. Flash does not fire. Place the camera on a flat, steady surface or use a tripod.	Infinity Focus, Center-Weight Metering, Daylight White balance, Flash Off, maximum 2-second shutter speed

Use this SCN mode		For	Camera pre-settings
	Snow	Bright snow scenes.	Center-Weight Metering, Multi-Zone Focus, +1 Exposure Compensation
	Beach	Bright beach scenes.	Center-Weight Metering, Daylight White Balance, +1 Exposure Compensation
	Text	Documents.	Macro Focus, Center-Weight Metering, Multi-Zone Focus, +1 Exposure Compensation
	Fireworks	Flash does not fire. Place the camera on a flat, steady surface or use a tripod.	2-second exposure, Infinity Focus, Center-Weight Metering, Daylight White Balance
	Flower	Close-ups of flowers or other small subjects in bright light.	Macro Focus, Daylight White Balance, Center-Zone Focus, Center-Weight Metering
	Manner/ Museum	Quiet occasions, like a wedding or lecture. Flash and sound are disabled.	No sounds, no flash, Multi-Pattern Exposure Metering, Multi-Zone Focus
	Self-Portrait	Close-ups of yourself. Assures proper focus and minimizes red-eye.	Macro Focus, Multi-Pattern Exposure Metering, Multi-Zone Focus, Red-eye Flash
	Party	People indoors. Minimizes red-eye.	Multi-Pattern Exposure Metering, Multi-Zone Focus, Red-eye Flash
	Children	Action pictures of children in bright light.	Multi-Pattern Exposure Metering, Multi-Zone Focus
	Backlight	Subjects that are in shadow or "backlit" (when light is behind the subject).	Multi-Pattern Exposure Metering, Multi-Zone Focus, Fill-Flash

Use this SCN mode	For	Camera pre-settings
 Panning Shot	Shooting a fast-moving subject. The background gives the sense of movement, while the subject appears still.	Shutter speed > 1/180 sec., Multi-Zone Focus, Multi-Pattern Exposure Metering
 Candle Light	Subjects illuminated by candle light.	Multi-Pattern Exposure Metering, Multi-Zone Focus, Daylight White Balance
 Sunset	Subjects at dusk.	Multi-Pattern Exposure Metering, Multi-Zone Focus, Daylight White Balance
 Custom	Choosing your own settings.	Settings are saved, even after the camera is turned off. (To reset, see page 32.)




Running a slide show

Use the Slide Show to display your pictures and videos on the LCD.

NOTE: If you have an EasyShare photo frame dock 2, see [page 25](#).

Starting the slide show

To save battery power, use an optional Kodak 5V AC adapter.

- 1 Press the Review button, then press the Menu button.
- 2 Press  to highlight Slide Show , then press the OK button.
- 3 Press  to highlight Begin Show, then press the OK button.

Each picture and video is displayed once.

To interrupt the Slide Show, press the OK button.

Changing the slide show display interval

The default interval setting displays each picture for 5 seconds. You can set the display interval from 3 to 60 seconds.

- 1 On the Slide Show menu, press ▲/▼ to highlight Interval, then press the OK button.
- 2 Select a display interval.
To scroll through the seconds quickly, press and hold ▲/▼.
- 3 Press the OK button.

The interval setting remains until you change it.

Running a continuous slide show loop

When you turn on Loop, the slide show is continuously repeated.

- 1 On the Slide Show menu, press ▲/▼ to highlight Loop, then press the OK button.
- 2 Press ▲/▼ to highlight On, then press the OK button.

The slide show repeats until you press the OK button or until battery power is exhausted. The Loop feature remains until you change it.


Choosing a slide show transition

- 1 On the Slide Show menu, press ▲/▼ to highlight Transition, then press the OK button.
- 2 Press ▲/▼ to select a transition, then press the OK button.

Displaying pictures and videos on a television


You can display pictures and videos on a television, computer monitor, or any device equipped with a video input. To connect the camera to a television, use the USB / A/V connector and A/V cable (may be sold separately).

NOTE: Ensure that the Video Out setting (NTSC or PAL) is correct (see [page 34](#)). The slide show stops if you connect or disconnect the cable while the slide show is running. (Image quality on a television screen may not be as good as on a computer monitor or when printed.)

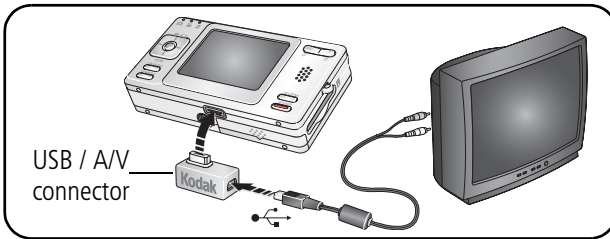





Running a slide show with the photo frame dock 2

 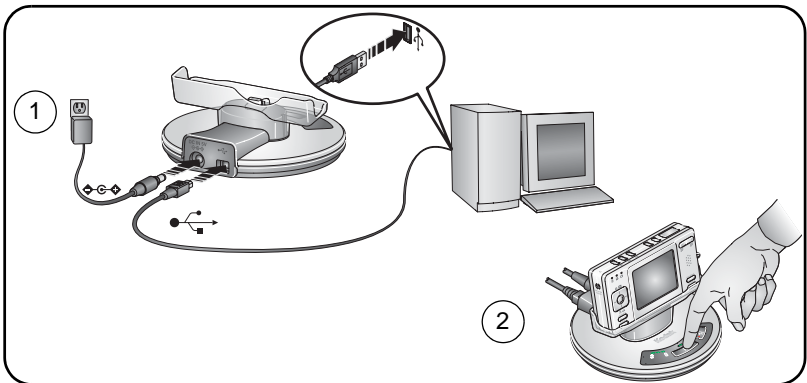Your package may include an EasyShare photo frame dock 2. See your packaging for details. (To purchase accessories, see www.kodak.com/go/v530accessories.)





Cropping pictures

- 1 Press Review.
- 2  to locate a picture to crop.
- 3 Press Menu, choose Crop , then press OK.
- 4 Press Telephoto (T) to zoom in, or   to move the crop box.
- 5 Follow the screen prompts.

The picture is copied, then cropped. The original picture is saved. A cropped picture cannot be cropped again on the camera. Cropped pictures take up space in internal memory or on a card.

Press the Menu button to exit the menu.



Making pictures from a video


- 1 Press Review.
- 2  to locate a video.
- 3 Press Menu, choose Make Picture , then press OK.
- 4 Follow the screen prompts.

A picture is created. The original video is saved. Pictures take up space in internal memory or on a card.

Press the Menu button to exit the menu.

Viewing picture/video information


- 1 Press Review.
- 2 Repeatedly press LCD/Info   for:
 - Status icons on
 - Status icons off
 - Histogram
 - Picture/video info

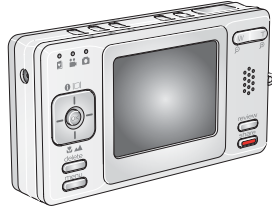

To exit Review, press the Review button.

Using the histogram to view picture brightness

The histogram shows the distribution of the subject's brightness. If the peak is to the right of the graph, the subject is bright; if it's to the left, the subject is dark. Optimal exposure is achieved when the peak is in the middle of the histogram.

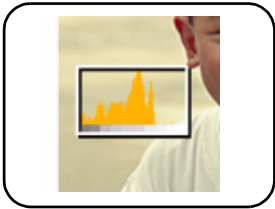

To turn on the histogram in Capture mode or in Review, press the LCD/Info   button until the histogram appears.

Copying pictures and videos

You can copy pictures and videos from a card to internal memory or from internal memory to a card.

Before you copy, make sure that:

- A card is inserted in the camera.
- The camera's picture storage location is set to the location **from** which you are copying. See [page 33](#).

Copy pictures or videos:


- 1 Press the Review button, then press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Copy $\blacktriangleright\blacktriangleright$, then press the OK button.
- 3 Press $\blacktriangle/\blacktriangledown$ to highlight an option.
- 4 Press the OK button.

NOTE: Pictures and videos are copied, not moved. To remove pictures and videos from the original location after copying, delete them (see [page 11](#)).

Tags that you applied for print, email, and favorites are not copied. Protection settings are not copied. To apply protection to a picture or video, see [page 11](#).

Using exposure compensation to adjust picture brightness

You can adjust exposure compensation to make your pictures darker or lighter.

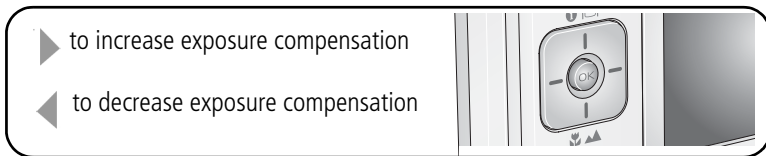






The exposure compensation level is shown on the LCD $\blacktriangle\text{-}2.0\blacktriangleright$ and the LCD gets brighter or dimmer.



 

Changing picture-taking settings








You can change settings to get the best results from your camera. (Some settings are unavailable in some modes.)



- 1 Press the Menu button.
- 2 Press ▲/▼ to highlight a setting, then press the OK button.
- 3 Choose an option, then press the OK button.

Setting	Icon	Options
<p>Self-timer A picture is taken 10 seconds after the Shutter button is pressed. (Place camera on a tripod or flat surface.)</p>		<p>Off (default) On</p> <p>Press the Shutter button halfway, then completely down. To stop the Self-timer before the picture is taken, press the Shutter button all the way down. (Use the Menu button to cancel the Self-timer.)</p> <p>Use the same procedure to take a self-timer video, but press the Shutter button completely down.</p> <p>NOTE: The video stops when no storage space remains.</p>
<p>Burst Camera takes up to 5 pictures while the Shutter button is pressed. Capture an expected event, such as a person swinging a golf club.</p>		<p>NOTE: Press the Shutter button halfway to focus and set exposure. Press the Shutter button completely down and hold it to take pictures.</p> <p><i>The camera stops taking pictures when you release the Shutter button, when the pictures are taken, or when there is no more storage space.</i></p> <p>During quickview, you can delete all pictures in the burst series. To delete selectively, do so in Review (see page 11).</p>

Setting	Icon	Options
<p>Picture Size Choose a picture resolution. <i>This setting remains until you change it.</i></p>		<p>5.0 MP (default)—for printing up to 20 x 30 in. (50 x 76 cm); pictures are highest resolution and largest file size.</p> <p>4.4 MP (3:2)— ideal for printing 4 x 6 in. (10 x 15 cm) prints without cropping. Also for printing up to 20 x 30 in. (50 x 76 cm)</p> <p>4.0 MP— for printing up to 20 x 30 in. (50 x 76 cm); pictures are medium resolution with smaller file size.</p> <p>3.1 MP—for printing up to 11 x 14 in. (28 x 36 cm); pictures are medium resolution with smaller file size.</p> <p>1.8 MP—for printing 4 x 6 in. (10 x 15 cm) prints, emailing, Internet, screen display, or for conserving space.</p>
<p>Video Size Choose a video resolution. <i>This setting remains until you change it.</i></p>		<p>640 x 480 (default) 320 x 240</p>
<p>White Balance Choose your lighting condition. <i>This setting remains until you change modes or turn off the camera.</i></p>		<p>Auto (default)—automatically corrects white balance. Ideal for general picture taking.</p> <p>Daylight—for pictures in natural lighting.</p> <p>Tungsten—corrects the orange cast of household light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash.</p> <p>Fluorescent—corrects the green cast of fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash.</p> <p>Open Shade—for pictures in shade in natural lighting. Available in Auto and SCN-Custom mode.</p>


Setting	Icon	Options
<p>ISO Speed Control the sensitivity of the camera sensor. <i>This setting remains until you change modes or turn off the camera.</i></p>		<p>Auto (default) ISO 80, 100, 200, 400, 800 (800 available only in 1.8 MP picture size.)</p>
<p>Color Mode Choose color tones. <i>This setting remains until you change modes or turn off the camera.</i></p>		<p>High Color Natural Color (default) Low Color Black & White Sepia—for a reddish-brown, antique look. NOTE: EasyShare software also lets you change a color picture to black-and-white or sepia. Unavailable in Video mode.</p>
<p>Sharpness Control picture sharpness. <i>This setting remains until you change it.</i></p>		<p>High Normal (default) Low</p>
<p>Exposure Metering Evaluate light levels at specific areas of a scene. <i>This setting remains until you change modes or turn off the camera.</i></p>		<p>Multi-pattern (default)—evaluates lighting conditions throughout the image to give an optimum picture exposure. Ideal for general picture taking. Center-weight—evaluates the lighting conditions of the subject centered in the lens. Ideal for backlit subjects. Center-spot—similar to Center-weight, except the metering is concentrated on a smaller area of the subject centered in the lens. Ideal when you need an exact exposure of a specific area in the picture.</p>

Setting	Icon	Options
<p>AF Control</p> <p>Choose an auto-focus setting. <i>This setting remains until you change it.</i></p>		<p>Continuous AF—because the camera is always focusing, there is no need to press the Shutter button halfway down to focus.</p> <p>Single AF (default)—uses TTL-AF when the Shutter button is pressed halfway down.</p>
<p>Focus Zone</p> <p>Select a large or concentrated area of focus. <i>This setting remains until you change it.</i></p>		<p>Multi-zone (default)—evaluates 3 zones to give an even picture focus. Ideal for general picture taking.</p> <p>Center-zone—evaluates the small area centered in the lens. Ideal when precise focus of a specific area in the picture is needed.</p> <p>NOTE: For the best pictures, the camera is set to Multi-zone when in Landscape mode.</p>
<p>Long Time Exposure</p> <p>Choose how long the shutter stays open.</p>		0.5, 0.7, 1, 1.5, 2, 3, 4, 6, or 8 seconds
<p>Reset to Default</p>		All picture-taking settings return to their default. Available only in SCN-Custom mode.
<p>Set Album</p> <p>Choose Album names. <i>This setting remains until you change it. You can apply different Set Album choices to videos and to pictures.</i></p>		<p>On</p> <p>Off (default)</p> <p>Pre-select album names before you take pictures or videos. Then, all the pictures or videos you take are tagged with those album names. See page 36.</p>
<p>Video Length</p> <p>Choose video record length. <i>This setting remains until you change it.</i></p>		<p>Continuous (default)</p> <p>5 sec.</p> <p>15 sec.</p> <p>30 sec.</p>
<p>Image Stabilizer</p> <p>Improve video stability.</p>		<p>On (default)</p> <p>Off</p>

Setting	Icon	Options
Image Storage Choose a storage location for pictures and videos. <i>This setting remains until you change it.</i>		Auto (default) —the camera uses the card if one is in the camera. If not, the camera uses internal memory. Internal Memory —the camera always uses internal memory, even if a card is installed.
Setup Menu Choose additional settings.		See Customizing your camera .


Customizing your camera

Use Setup to customize your camera settings.

- 1 In any mode, press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Setup , then press the OK button.
- 3 Press $\blacktriangle/\blacktriangledown$ to highlight the setting you wish to change, then press the OK button.
- 4 Choose an option, then press the OK button.

Setting	Options
Return to previous menu.	
Camera Sounds Choose sound effects.	Theme —applies the same sound effect set to all functions. Individual —choose a sound effect for each function.
Sound Volume	Off High Medium Low (default)

Setting	Options
LCD Brightness Choose LCD brightness.	Auto Power Save High Power (default)
LCD Dimmer Choose inactivity time until LCD dims.	30 seconds 20 seconds 10 seconds (default) Off (no dimming)
Auto Power Off Choose inactivity time until camera turns off.	10 minutes (default) 5 minutes 3 minutes 1 minutes
Date & Time	See page 3 .
Video Out Choose the regional setting that lets you connect the camera to a television or other external device.	NTSC (default) —used in North America and Japan; most common format. PAL —used in Europe and China.
Photo frame Choose EasyShare photo frame dock 2 settings.	Interval (between slide show frames) Loop (On/Off, for slide show) Transition (between slide show frames) Image Source (Auto/Internal/Favorites) Run Time (for slide show)
Orientation Sensor Orient pictures so that they are displayed with the correct side up.	On (default) Off On Transfer —sets Orientation Sensor on camera LCD to Off. When picture is transferred to the computer, it is rotated to the proper orientation.

Setting	Options
<p>Red Eye Preflash Choose if a pre-flash fires when the flash is in Red-eye mode.</p>	<p>On—red-eye flash fires before the picture is taken. Off (default)—red-eye flash does not fire. NOTE: The camera automatically corrects red-eye, even if the Red Eye Preflash is set to Off.</p>
<p>Date Stamp Imprint the date on pictures.</p>	<p>Choose a date option, or turn off the feature. (Default is off.)</p>
<p>Video Date Display Display Date/Time at the start of video playback.</p>	<p>On (default)— choose from date formats. Off</p>
<p>Video Print Nine frames are taken from each new video to make a 9-up picture.</p>	<p>On (default) Off</p>
<p>Blur Warning</p>	<p>On Off (default) See page 6.</p>
<p>Language</p>	<p>Choose your language.</p>
<p>Format</p> <p> CAUTION: Formatting deletes all pictures and videos, including those that are protected. Removing a card during formatting may damage the card.</p>	<p>Memory Card—deletes everything on the card; formats the card. Cancel—exits without making a change. Internal Memory—deletes everything in internal memory including email addresses, album names, and favorites; formats the internal memory.</p>
<p>About View camera information.</p>	






Pre-tagging for album names

Use the Set Album (Still or Video) feature to pre-select album names before you take pictures or videos. Then, all the pictures or videos you take are tagged with those album names.

First—on your computer

Use the EasyShare software that came with your camera to create album names on your computer. The next time you connect the camera to the computer, up to 32 album names are copied to the camera's internal memory. See Kodak EasyShare software Help for details.

Second—on your camera

- 1 In any mode, press the Menu button.
- 2 Press / to highlight Set Album , then press the OK button.
- 3 Press / to highlight an album name, then press the OK button. Repeat to mark pictures or videos for albums.
- 4 Highlight Exit, then press the OK button.
- 5 Press the Menu button to exit the menu.

Your selections are saved. Your album selection is displayed on the LCD. A plus (+) after the album name means more than one album is selected.

Third—transfer to your computer

When you transfer the tagged pictures or videos to your computer, Kodak EasyShare software opens and categorizes your pictures in the appropriate album. See EasyShare software Help for details.


Tagging pictures/videos for albums

Use the Album feature in Review mode to tag the pictures and videos in your camera with album names.

First—on your computer

Use Kodak EasyShare software to create album names on your computer, then copy up to 32 album names to the camera's internal memory. See EasyShare software Help for details.

Second—on your camera

- 1 Press the Review button, then locate the picture or video.
- 2 Press the Menu button.
- 3 Press $\blacktriangle/\blacktriangledown$ to highlight Album , then press the OK button.
- 4 Press $\blacktriangle/\blacktriangledown$ to highlight an album name, then press the OK button.

To add other pictures to the same album, press $\blacktriangle/\blacktriangleright$ to scroll through the pictures. When the picture you want is displayed, press the OK button.

To add the pictures to more than one album, repeat step 4 for each album.

The album name appears with the picture. A plus (+) after the album name means the picture was added to more than one album.

To remove a selection, highlight an album name and press the OK button. To remove all album selections, select Clear All.

Third—transfer to your computer



When you transfer the tagged pictures and videos to your computer, the Kodak EasyShare software opens and categorizes your pictures and videos in the appropriate album. See Kodak EasyShare software Help for details.

Sharing your pictures

Press the Share button to tag your pictures and videos. When they are transferred to your computer, you can share them. Press the Share button to tag pictures/videos:

- Any time. (The most recent picture/video taken is then displayed.)
- Just after you take a picture/video, during quickview (see [page 6](#)).
- After pressing the Review button (see [page 9](#)).

Tagging pictures for printing

- 1 Press the Share button. Press ◀/▶ to locate a picture.
- 2 Press ▲/▼ to highlight Print , then press the OK button.*
- 3 Press ▲/▼ to select the number of copies (0-99). Zero removes the tag for that picture.
The Print icon  appears in the status area. The default quantity is one.
- 4 **Optional:** You can apply a print quantity to other pictures. Press ◀/▶ to locate a picture. Keep the print quantity as is, or press ▲/▼ to change it. Repeat this step until the desired print quantity is applied to the pictures.
- 5 Press the OK button. Then press the Share button to exit the menu.

* To tag all pictures in the storage location, highlight Print All, press the OK button, then indicate the number of copies. Print All is not available in quickview. To remove print tagging for all pictures in the storage location, highlight Cancel Prints, then press the OK button. Cancel Prints is not available in quickview.

Printing tagged pictures

When you transfer the tagged pictures to your computer, the EasyShare software print screen opens. For details on printing, click the Help button in the EasyShare software.

For more information on printing from your computer, printer dock, PictBridge enabled printer, or card, see [page 14](#).

NOTE: For the best 4 x 6 in. (10 x 15 cm) prints, use the 4.4 MP (3:2) print quality setting. See [page 30](#).


Tagging pictures and videos for emailing

First—on your computer

Use Kodak EasyShare software to create an email address book on your computer. Then, copy up to 32 email addresses to the camera's internal memory. For details, click the Help button in the Kodak EasyShare software.

Second—tag pictures/videos on your camera

1 Press the Share button. Press ◀/▶ to locate a picture/video.

2 Press ▲/▼ to highlight Email , then press the OK button.

The Email icon  appears in the status area.

3 Press ▲/▼ to highlight an email address, then press the OK button.

To tag other pictures/videos with the same address, press ◀/▶ to scroll through them. When the picture you want is displayed, press OK.

To send the pictures/videos to more than one address, repeat step 3 for each address.

Selected addresses are checked.

4 To remove a selection, highlight a checked address and press the OK button. To remove all email selections, highlight Clear All.

5 Press ▲/▼ to highlight Exit, then press the OK button.


The Email icon  appears in the status area.

6 Press the Share button to exit the menu.

Third—transfer and email










When you transfer the tagged pictures/videos to your computer, the Email screen opens and lets you send them to the addresses you specified. For details, click the Help button in the Kodak EasyShare software.

Tagging pictures as favorites

You can preserve your favorite pictures in the Favorites  section of your camera's internal memory, then share them with friends and family.

NOTE: When you transfer pictures from your camera to your computer, all pictures (including favorites) are stored on your computer at full size. Favorite pictures - smaller copies of your originals - are loaded back to your camera, so you can share and enjoy more.




Share your favorite pictures in 3 easy steps:

1. Tag pictures as favorites	<ol style="list-style-type: none">1 Press the Share button. Press   to locate a picture.2 Press   to highlight Favorite , then press the OK button. <i>The Favorite icon  appears in the status area. To remove the tag, press the OK button again.</i>
2. Transfer pictures to your computer	<ol style="list-style-type: none">1 To enjoy full functionality, load and use the EasyShare software that was packaged with this camera. (See page 12.)2 Connect the camera to the computer using a USB cable model U-8 (see page 13) or an EasyShare dock. <i>The first time you transfer pictures, the software helps you make choices about your favorite pictures. Then, your pictures are transferred to the computer. Favorite pictures (smaller versions of the originals) are loaded to the Favorites section of your camera's internal memory.</i>
3. View favorites on your camera	<ol style="list-style-type: none">1 Press the Favorites  button.2 Press   to scroll through favorites.

NOTE: The camera holds a limited number of favorites. Use Camera Favorites in EasyShare software to customize the size of your camera Favorites section. Videos tagged as favorites remain in the Favorites folder in the EasyShare software. For more information, click the Help button in EasyShare software.



Optional settings

In Favorites mode, press the Menu button to access optional settings.

	Slide Show (page 23)		Remove all favorites (page 41)
	Multi-up (page 10)		Setup Menu (page 33)

NOTE: Pictures taken at the 4.4 MP (3:2) quality setting are displayed at a 3:2 aspect ratio with a black bar at the top of the screen.

Removing all favorites from your camera

- 1 Press the Favorites  button.
- 2 Press the Menu button.
- 3 Highlight , then press the OK button.

All pictures stored in the Favorites section of internal memory are removed. Favorites are restored the next time you transfer pictures to the computer.






- 4 Press the Menu button to exit the menu.

Preventing favorites from transferring to the camera

- 1 Open the Kodak EasyShare software. Click the My Collection tab.
- 2 Go to the Albums view.
- 3 Click the Camera Favorites Album for your camera.
- 4 Click Remove Album.

The next time you transfer pictures from your camera to the computer, use the Camera Favorites Wizard/Assistant to either recreate your Camera Favorites Album or to turn off the Camera Favorites feature.

Printing and emailing favorites

- 1 Press the Favorites  button. Press   to locate a picture.
- 2 Press the Share button.
- 3 Highlight Print  or Email , then press the OK button.

NOTE: Favorites that were taken on this camera (not imported from another source) are good for prints up to 4 x 6 in. (10 x 15 cm).

5 Troubleshooting

Camera problems

Status	Solution
Camera does not turn on	<ul style="list-style-type: none">■ Make sure the correct battery type is installed (page 56).■ Insert a charged battery.■ Connect the camera to a Kodak 5-volt AC adapter, then try again.
Camera does not turn off and the lens does not retract	
Camera buttons and controls do not function	
Lens does not extend when camera turns on or does not retract	<ul style="list-style-type: none">■ Make sure the battery is charged.■ Turn the camera off, then on again. (The lens does not extend in Favorites mode.)■ If the problem still exists, get help (page 48).
In Review, a blue or black screen is displayed instead of a picture	<ul style="list-style-type: none">■ Transfer <i>all</i> pictures to the computer (page 12).■ Take another picture. If the problem continues, change the image storage location to internal memory (page 33).
Pictures remaining number does not decrease after taking a picture	<ul style="list-style-type: none">■ Continue taking pictures. The camera is operating normally. (The camera estimates the number of pictures remaining after each picture is taken, based on picture size and content.)
Picture orientation is not accurate	<ul style="list-style-type: none">■ Set the Orientation Sensor to ON (page 34).
Flash does not fire	<ul style="list-style-type: none">■ Check the flash setting, and change as needed (page 19). <p>NOTE: The flash does not fire in all modes.</p>

Status	Solution
Storage location is almost or entirely full	<ul style="list-style-type: none"> ■ Transfer the pictures to the computer (page 12). ■ Delete pictures from the card or insert a new card. ■ Change the image storage location to internal memory (page 33).
Battery life is short	<ul style="list-style-type: none"> ■ Make sure the correct battery type is installed (page 56). ■ Wipe the contacts with a clean, dry cloth before inserting a battery in the camera. ■ Insert a new or charged battery (page 1).
You cannot take a picture	<ul style="list-style-type: none"> ■ Turn the camera off, then on again. Make sure the camera is not in Favorites mode. ■ Depress the Shutter button all the way (page 5). ■ Insert a new or charged battery (page 1). ■ Wait until the AF/AE indicator turns green before taking another picture. ■ Memory is full. Transfer pictures to the computer (page 12), delete pictures (page 11), change image storage location, or insert another card.
Error message appears on LCD	<ul style="list-style-type: none"> ■ Turn the camera off, then on again. ■ Remove the memory card. ■ Remove the battery. Wipe the contacts with a clean, dry cloth. ■ Insert a new or charged battery. ■ If the problem still exists, get help (page 48).
Memory card not recognized or camera freezes with card.	<ul style="list-style-type: none"> ■ Card may be corrupted. Format the card in the camera (page 35). ■ Use another memory card.

Computer/connectivity problems

Status	Solution
Computer does not communicate with the camera	<ul style="list-style-type: none"> ■ Insert a charged battery (page 1). ■ Turn on the camera. ■ Make sure the USB cable model U-8 is connected to the camera and the computer (page 13). (If using an EasyShare dock, check all cable connections. Make sure the camera is seated on the dock.) ■ Make sure the EasyShare software is installed (page 12).
Pictures do not transfer to computer	<ul style="list-style-type: none"> ■ Click the Help button in the EasyShare software.
Slide Show does not run on an external video device	<ul style="list-style-type: none"> ■ Adjust the camera Video Out setting (NTSC or PAL, page 34). ■ Make sure the external device settings are correct. (See the device's user's guide).

Picture quality problems

Status	Solution
Picture is not clear	<ul style="list-style-type: none"> ■ To automatically set exposure and focus, press the Shutter button halfway. When the AF/AE indicator turns green, press the Shutter button completely down to take the picture. ■ Clean the lens (page 57). ■ Make sure the camera is not in Close-up mode if you are more than 21 in. (0.7 m) from your subject. ■ Place the camera on a flat, steady surface or use a tripod (especially in high-zoom settings or in low light).

Status	Solution
Picture is too dark	<ul style="list-style-type: none">■ Reposition the camera for more available light.■ Use Fill flash (page 19) or change your position so light is not behind the subject.■ Move so that the distance between you and the subject is within the effective flash range (page 51).■ To automatically set exposure and focus, press the Shutter button halfway. When the AF/AE indicator turns green, press the Shutter button completely down to take the picture.
Picture is too light	<ul style="list-style-type: none">■ Reposition the camera to reduce the amount of available light.■ Turn the flash off (page 19).■ Move so that the distance between you and the subject is within the effective flash range (page 51).■ To automatically set exposure and focus, press the Shutter button halfway. When the AF/AE indicator turns green, press the Shutter button completely down to take the picture.■ In Auto and SCN-Custom modes, adjust the Exposure Compensation (page 28).

Direct printing (PictBridge enabled printer) problems

Status	Solution
Cannot locate desired picture.	<ul style="list-style-type: none"> ■ Turn on the camera. Make sure the camera is not in Favorites mode. ■ Use the Direct print menu to change the image storage location.
The Direct print menu interface turns off.	<ul style="list-style-type: none"> ■ Press any camera button to redisplay the menu.
Cannot print pictures.	<ul style="list-style-type: none"> ■ Make sure there is a connection between the camera and the printer (page 13). ■ Make sure the printer and the camera have power.
Camera or printer display an error message.	<ul style="list-style-type: none"> ■ Follow the prompts to resolve the issue.

6

Getting help

Helpful links

Camera

Get support for your product (FAQs, troubleshooting information, arrange for repairs, etc.)	www.kodak.com/go/v530support
Purchase camera accessories (camera docks, printer docks, lenses, cards, etc.)	www.kodak.com/go/v530accessories
Download the latest camera firmware and software	www.kodak.com/go/v530downloads
See online demonstrations of your camera	www.kodak.com/go/howto

Software

Get information on EasyShare software	www.kodak.com/go/easysw (or click the Help button in the EasyShare software)
Get help with the Windows operating system and working with digital pictures	www.kodak.com/go/pcbasics

Other

Get support for cameras, software, accessories, more	www.kodak.com/go/support
Get information on Kodak EasyShare printer docks	www.kodak.com/go/printerdocks
Get information on Kodak inkjet products	www.kodak.com/go/inkjet
Optimize your printer for truer, more vibrant colors	www.kodak.com/go/onetouch
Register your camera	www.kodak.com/go/register

Telephone customer support

If you have questions concerning this product, you may speak with Kodak customer support:

Australia	1800 147 701	Netherlands	020 346 9372
Austria	0179 567 357	New Zealand	0800 440 786
Belgium	02 713 14 45	Norway	23 16 21 33
Brazil	0800 150000	Philippines	1 800 1 888 9600
Canada	1 800 465 6325	Poland	00800 4411625
China	800 820 6027	Portugal	021 415 4125
Denmark	3 848 71 30	Singapore	800 6363 036
Ireland	01 407 3054	Spain	91 749 76 53
Finland	0800 1 17056	Sweden	08 587 704 21
France	01 55 1740 77	Switzerland	01 838 53 51
Germany	069 5007 0035	Taiwan	0800 096 868
Greece	00800 44140775	Thailand	001 800 631 0017
Hong Kong	800 901 514	Turkey	00800 448827073
India	91 22 617 5823	United Kingdom	0870 243 0270
Italy	02 696 33452	United States	1 800 235 6325 585 781 6231 (toll)
Japan	03 5540 9002	International Toll Line	+44 131 458 6714
Korea	00798 631 0024	International Toll Fax	+44 131 458 6962

For the most up-to-date listings, visit: www.kodak.com/go/dfiswwcontacts

Camera specifications

For more specifications, visit www.kodak.com/go/v530support.

CCD—1/2.5 in. CCD, 4:3 aspect ratio

Output image size—

- 5.0 MP: 2576 x 1932 pixels
- 4.4 MP (3:2): 2576 x 1716 pixels
- 4.0 MP: 2304 x 1728 pixels
- 3.1 MP: 2048 x 1536 pixels
- 1.8 MP: 1552 x 1164 pixels

Color display—2 in. (5 cm) color hybrid LCD, 960 x 240 (230 K) pixels

Preview (LCD)—Frame rate: 24 fps

Taking lens—3X optical zoom, aspheric all-glass Schneider-Kreuznach C-Variogon lens, f/2.8-4.9 (35 mm equivalent: 36-108 mm)

Lens protection—Built-in

Digital zoom—Combined zoom settings 3.2 to 12X in 0.2X increments. (Not supported for movie capture.)

Focus system—TTL-AF; auto, multi-zone, center-spot. Working range:

- 2 ft (0.6 m)—infinity @ wide
- 2 ft (0.6 m)—infinity @ telephoto
- 2-27.6 in. (0.05–0.7 m) @ wide close-up
- 11.8-27.6 in. (0.4–0.7 m) @ telephoto close-up

Exposure metering—TTL-AE; Multi-pattern, Center-spot, Center-weighted

Exposure compensation—+/-2.0 EV with 1/3 EV step

Shutter speed—

Auto: 1/8 to 1/1700 sec.

Selectable: 1/1400–1/2 sec. (1/2–8 sec. in long exposure mode)

ISO speed—

Auto: 80 to 160

Selectable: 80, 100, 200, 400, 800 (800 available only in 1.8 MB picture size.)

Electronic Flash—Auto flash with photo sensor; Auto, Fill, Red-eye, Off.

Working range @ Auto ISO: 2–8.5 ft (0.6–2.6 m) @ Wide;
2–5.9 ft (0.6–1.8 m) @ Tele

Capture modes—Auto, Landscape, Close-up, Video, Scene modes.**Burst mode—**Maximum 5 pictures @ 3 fps; Auto Exposure, Auto Focus, Auto White Balance executed for first shot only.**Video capture—**


VGA (640 x 480) @ 30 fps

QVGA (320 x 240) @ 30 fps

Image file format—

Still: EXIF 2.21 (JPEG compression); file organization DCF

Video: QuickTime (CODEC MPEG4)

Image storage—Optional MMC or SD Card  (The SD logo is a trademark of the SD Card Association.)**Internal storage capacity—**16 MB internal memory**Quickview—**Yes**Video output—**NTSC or PAL**Power—**Kodak Li-Ion rechargeable digital camera battery KLIC-7002; 5V AC adapter

Communication with computer—USB 2.0 (PIMA 15740 protocol), via USB Cable Model U-8, EasyShare camera dock or printer dock

PictBridge support—Yes

Self-timer—10 seconds

White balance—Auto, Daylight, Tungsten, Fluorescent

Color modes—High Color, Natural Color, Low Color, Black & White, Sepia

Date stamp—None, YYYYMMDD, MMDDYYYY, DDMMYYYY

Tripod mount—1/4 inch

Operating temperature—32–104° F (0–40° C)

Size—4 in. (9.2 cm) x 2 in. (5 cm) x 1 in. (2.2 cm) @ power off

Weight—4.6 oz (130 g) without card or battery

Flash settings in each mode

Capture modes	Default setting	Available settings
Auto	Auto*	Auto, Off, Fill Flash, Red-eye
Sport	Auto*	Auto, Off, Fill Flash, Red-eye
Landscape	Off	Off
Close-up	Off	Off, Fill Flash
Portrait	Auto*	Auto, Off, Fill Flash, Red-eye
Night Portrait	Red-eye*	Auto, Off, Fill Flash, Red-eye
Night Landscape	Off	Off
Snow	Auto*	Auto, Off, Fill Flash, Red-eye
Beach	Auto*	Auto, Off, Fill Flash, Red-eye
Text	Off	Fill, Off
Fireworks	Off	Off
Flower	Off	Off, Fill Flash
Manner/Museum	Off	Off
Self-Portrait	Red-eye*	Auto, Off, Fill Flash, Red-eye
Party	Red-eye*	Auto, Off, Fill Flash, Red-eye
Children	Auto*	Auto, Off, Fill Flash, Red-eye
Backlight	Fill	Fill
Panning Shot	Off	Fill, Off
Candle Light	Off	Fill, Off
Sunset	Auto*	Auto, Off, Fill Flash, Red-eye
Custom	Auto*	Auto, Off, Fill Flash, Red-eye

* When you change to Auto or Red-eye in these modes, it becomes the default until you change it.

Storage capacities

File sizes vary. You may be able to store more or fewer pictures and videos. Favorites take up additional space in internal memory.

Picture storage capacity

	Number of pictures			
	5.0 MP	4.4 MP (3:2)	3.1 MP	1.8 MP
16 MB internal memory	9	11	12	24
32 MB SD/MMC	32	22	24	48
64 MB SD/MMC	39	44	48	97
128 MB SD/MMC	79	88	97	195
256 MB SD/MMC	159	178	196	391
512 MB SD/MMC	319	356	392	783

Video storage capacity

	Minutes/seconds of video	
	VGA (640 x 480)	QVGA (320 x 240)
16 MB internal memory	48 sec.	2 min. 2 sec.
32 MB SD/MMC	53 sec.	2 min. 16 sec.
64 MB SD/MMC	1 min. 47 sec.	4 min. 32 sec.
128 MB SD/MMC	3 min. 34 sec.	9 min. 4 sec.
256 MB SD/MMC	7 min. 9 sec.	18 min. 9 sec.
512 MB SD/MMC	14 min. 19 sec.	36 min. 19 sec.

Important safety instructions



CAUTION:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Do not expose this product to liquid, moisture, or extreme temperatures. Kodak AC adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.

Using this product

- The use of an accessory attachment that is not recommended by Kodak, such as an AC adapter, may cause fire, electric shock, or injury.
- If using this product in an airplane, observe all instructions of the airline.

Battery safety and handling



CAUTION:

When removing the battery, allow it to cool; it may be hot.

- Read and follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.
- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.

- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Dispose of batteries according to local and national regulations.
- Do not charge non-rechargeable batteries.

For more information on batteries, see

www.kodak.com/global/en/service/batteries/batteryUsage.jhtml

Battery life

Kodak Li-Ion rechargeable digital camera battery KLIC-7002 (per charge): 120 pictures per charge. Battery life per CIPA testing method. (Approx. number of pictures in Auto mode, using 128 MB SD card.) Actual life may vary based on usage.

Extending battery life

- Limit the following activities that quickly deplete battery power:
 - Reviewing your pictures on the LCD
 - Excessive use of the flash
- Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading the battery in the camera.
- Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable.

Power-saving features

If no action for	The camera	To turn it back on
3 minutes	Screen turns off.	Press the OK button.
10, 5, 3 minutes	Enters auto power off.	Press a button or insert/remove card.

Upgrading your software and firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). See www.kodak.com/go/v530downloads.

Additional care and maintenance

- If the camera has been subjected to inclement weather or you suspect water has gotten inside the camera, turn off the camera and remove the battery and card. Allow all components to air-dry for at least 24 hours before using the camera again.
- Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements may be available in your country. Contact a dealer of Kodak products for more information.
- For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or the Kodak Web site at www.kodak.com/go/v530support.

Warranty

Limited warranty

Kodak warrants Kodak EasyShare digital cameras and accessories (excluding batteries) to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase.

Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

Limited warranty coverage

This limited warranty will be honored only within the geographical location that Kodak digital cameras and accessories were purchased.

Kodak will REPAIR or REPLACE Kodak EasyShare digital cameras and accessories if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Such repair service will include all labor as well as any necessary adjustments and/or replacement parts. Such repair or replacement is the sole remedy under this warranty.

If replacement parts are used in making repairs, these parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire product, it may be replaced with a remanufactured product.

Limitations

Request for Warranty service will not be accepted without proof of date of purchase, such as a copy of the original dated Kodak EasyShare digital camera or accessory sales receipt. (Always keep the original for your records.)

This warranty does not apply to the battery(s) used in digital cameras or accessories. This warranty does not cover circumstances beyond Kodak's control, nor problems caused by failure to follow the operating instructions in the Kodak EasyShare digital cameras and accessories User's Guides.

This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments, failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty.

Kodak makes no other express or implied warranty for this product. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date.

The option of replacement is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product, regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase, use or failure of the product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed and excluded herefrom.

Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

Regulatory compliance

FCC compliance and advisory



Kodak EasyShare V530 zoom digital camera

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Australian C-Tick



N137

Canadian DOC statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Class B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Waste Electrical and Electronic Equipment labeling



In the European Union, do not discard this product as unsorted municipal waste. Contact your local authorities or go to www.kodak.com/go/recycle for recycling program information.

VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

English translation: This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

MPEG-4

Use of this product in any manner that complies with the MPEG-4 visual standard is prohibited, except for use by a consumer engaging in personal and non-commercial activities.

Index

A

- A/V out, 25
- about picture, video, 27
- about this camera, 35
- accessories, 14
 - battery, 56
 - buying, 48
 - printer dock, 14
 - SD/MMC card, 4
- AF/AE (Auto-focus/Auto-exposure)
 - indicator, 5
- album
 - set, 32
- albums
 - tagging pictures for, 36
- auto, 20
 - focus control, 32
 - focus framing marks, 8
 - power off, 34
 - power-down, 57

B

- backlight, 22
- batteries
 - expected life, 56
 - extending life, 56
 - loading, 1
 - safety, 55
 - types, 56
- beach, 22
- blur warning, 6, 35
- burst button, i

button

- burst, i
- delete, i, 6
- flash, flash button, i
- info, ii
- LCD/Info, ii
- menu, ii
- OK, ii
- review, ii, 9
- self-timer, self-timer button, i
- Share, i
- wide angle, ii
- zoom, 18

C

- cable
 - audio/video, 25
 - USB, 13
- camera sounds, 33
- Canadian compliance, 61
- caring for your camera, 57
- children, 22
- clock, setting, 3
- close-up mode, 20
- color mode, 31
- computer
 - connecting camera, 12
 - transfer to, 12
- connector, USB / A/V, 13, 25
- copy pictures
 - card to memory, 28
 - memory to card, 28

to computer via USB cable, 12
cropping pictures, 26
customer support, 49
customizing camera settings, 33

D

date setting, 3
date stamp, 35
DC-in, i
delete button, i
deleting
 during quickview, 6
 from internal memory, 11
 from SD/MMC card, 11
 protecting pictures, videos, 11
digital zoom, using, 18
displaying slide show, 23
disposal, recycling, 57
dock
 connector, ii
 printer, 14
downloading pictures, 12

E

EasyShare software, 12
emailing pictures, videos, 39
expected battery life, 56
exposure
 compensation, 28
 long time, 32
 metering, 31
external video device
 viewing pictures, videos, 25

F

favorites
 removing, 41
 settings, 41
 tagging, 40
FCC compliance, 60
fireworks, 22
firmware, upgrading, 57
flash, ii
flower, 22, 23
focus
 framing marks, 8
 zone, 32
format, 35

G

guidelines, battery, 56

H

help
 Web links, 48
histogram, 27

I

icon
 blur, 6
icons, modes, 20
Image stabilizer, 32
image storage, 33
info button, ii
information
 about pictures, videos, 27
installing
 batteries, 1
 SD/MMC card, 4

software, 12
internal memory capacity, 54
ISO speed, 31

K

Kodak EasyShare software
installing, 12
upgrading, 57
Kodak Web sites, 48

L

landscape mode, 20
language, 35
LCD, i
brightness, 34
dimmer, 34
reviewing pictures, 9
reviewing videos, 9
LCD/Info button, ii
lens, i
cleaning lens, 57
loading
batteries, 1
SD/MMC card, 4
software, 12
long time exposure, 32

M

Mac OS, installing software, 12
maintenance, camera, 57
manner, 22
memory
inserting card, 4
storage capacities, 54
menu button, ii

modes, 20
auto, 20
backlight, 22
beach, 22
children, 22
close-up, 20
fireworks, 22
flower, 22, 23
landscape, 20
manner, 22
night landscape, 21
night portrait, 21
party, 22
SCN, 20
self-portrait, 22
snow, 22
text, 22

N

night landscape, 21
night portrait, 21

O

OK button, ii
online prints, ordering, 16
optical zoom, 18
orientation sensor, 34

P

party, 22
PictBridge enabled printer, 14
picture quality, 29, 30
pictures
checking settings, 10
copying, 28

- cropping, 26
- deleting, 11
- emailing tagged, 39
- printing, 16
- printing tagged, 38
- protecting, 11
- reviewing, 9
- storage capacity, 54
- tagging, 36
- taking, modes, 20
- transfer via USB cable, 12
- power
 - auto off, 57
 - camera, 3
- power off, 34
- printer dock, 14
- printing
 - from a card, 16
 - from computer, 16
 - optimizing printer, 48
 - order online, 16
 - PictBridge, 14
 - tagged pictures, 16
 - with EasyShare printer dock, 14
- protecting pictures, videos, 11

Q

- quickview, using, 6

R

- recycling, disposal, 57
- regulatory information, 60
- removing favorites, 41
- repair, 48

- review button, ii, 9
- reviewing pictures
 - as you take them, 6
 - deleting, 11
 - LCD, 9
 - protecting, 11
 - slide show, 23
- reviewing videos
 - deleting, 11
 - LCD, 9
 - protecting, 11
 - slide show, 23
- running slide show, 23

S

- safety, batteries, 55
- SCN, 20
- SD/MMC card
 - inserting, 4
 - printing from, 16
 - slot, ii
 - storage capacities, 54
- self-portrait, 22
- self-timer, 29
- service and support telephone numbers, 49
- setting
 - auto power off, 34
 - auto-focus, 32
 - blur warning, 35
 - camera sounds, 33
 - color mode, 31
 - date and time, 3
 - date stamp, 35

- exposure metering, 31
- focus zone, 32
- image storage, 33
- ISO, 31
- language, 35
- LCD brightness, 34
- LCD dimmer, 34
- long time exposure, 32
- orientation sensor, 34
- picture quality, 29, 30
- picture-taking mode, 20
- self-timer, 29
- sharpness, 31
- sound volume, 33
- video date display, 35
- video out, 34
- white balance, 30
- setting, album, 32
- setup mode, using, 33
- shaking hand, 6
- Share button, i
- sharpness, 31
- shutoff, auto, 57
- shutter problems, 44
- sleep mode, 57
- slide show
 - continuous loop, 24
 - problems, 45
 - running, 23
- snow, 22
- software
 - installing, 12
 - upgrading, 57
- sound volume, 33

- sounds, 33
- speaker, i
- specifications, camera, 50
- status
 - blur warning, 6
- storage capacity, 54
- strap, 1
- support, technical, 49

T

- tagging
 - favorites, 40
 - for albums, 36
 - for email, 39
 - for print, 38
- telephone support, 49
- television, slide show, 25
- text, 22
- time, setting, 3
- tips
 - battery guidelines, 56
 - care & maintenance, 57
- transfer, via USB cable, 12
- trash can, deleting, 6
- tripod socket, ii
- turning camera on and off, 3

U

- upgrading software, firmware, 57
- URLs, Kodak Web sites, 48
- USB
 - transferring pictures, 12

V

- VCCI compliance, 61

video

- checking settings, 10
- copying, 28
- date display, 35
- deleting, 11
- emailing tagged, 39
- out, 34
- print, 35
- protecting, 11
- reviewing, 9
- storage capacities, 54
- transfer to computer, 12
- viewing, 9

viewing picture

- after taking, 6, 9

viewing picture, video information, 27

volume, 33

W

- warranty, 58
- white balance, 30
- wide angle button, ii
- Windows OS, installing software, 12

Z

zoom

- digital, 18
- optical, 18

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>