



## CURRENT INFORMATION SUMMARY

## Opening Instructions for the KODAK MAX Waterproof One-Time-Use Camera


Wear eye protection when opening all cameras.

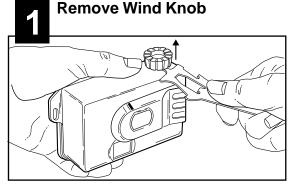

- · Ensure film is completely wound off.
- Insert tool end as shown and pry WIND KNOB off.
- · Remove the black O-RING.

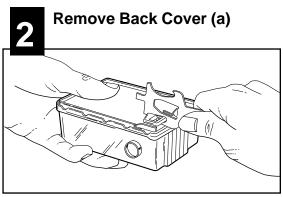


 Insert special tool into rectangular hole of PULL TAB.

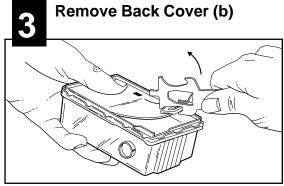


• Pry up on PULL TAB to initiate opening.


CAUTION: To avoid tool slippage, be sure tool is fully engaged with the camera body before attempting opening task.

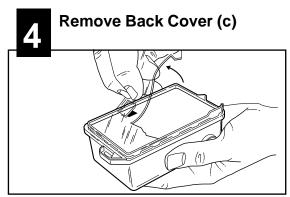

 Carefully pull up each side of the REAR HOUSING cover until it is completely removed.

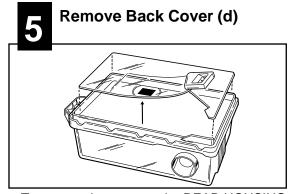

• To remove the camera, the REAR HOUSING cover must be completely removed.

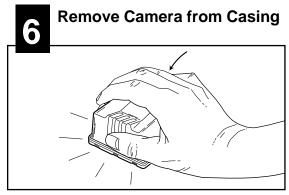

- Tap the FRONT HOUSING cover on a hard surface to loosen the camera.
- Remove the camera from the housing.
- Remove the film in the same way as typical Fun Saver 35 cameras.



- Place in recycle bin.
- Return to Kodak for recycling.

©Eastman Kodak Company, 1996

Current Information Summaries provide information of limited or specific application. Responsibility for judging the timeliness and applicability of the information to a specific photographic use rests with the end user.

Consumer Imaging EASTMAN KODAK COMPANY • ROCHESTER, NY 14650



CIS-166 Opening Instructions for the KODAK MAX Waterproof One-Time-Use Camera

Kodak and Max are trademarks.

Minor Revision 12-98 Printed in U.S.A. Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com