



Comfort Lite™ Tandem Stroller

Instructions Model No. FM3156, FB3154
Your Fashion May Vary



Read all instructions BEFORE assembly and USE of product.

KEEP INSTRUCTIONS FOR FUTURE USE.

Adult assembly is required. (Tools are not needed for assembly.)

Maximum weight of child: Not to exceed 40 lbs (18 kg) in each seat.

Front seat intended for use by children who are able to hold their head up unassisted in a supported sitting position.

Maximum storage weight for lower storage basket: 8 lbs (3.6 kg).

Message To Parents

Thank you for purchasing the Fisher-Price® Comfort Lite™ Tandem Stroller, a lightweight stroller designed to comfortably accommodate two children. Special features meet the different needs of both infant and toddlers. We hope you will find the features and styling of this product a perfect fit in satisfying the needs of both you and your children.

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us, toll-free, rather than returning it to the store. Usually we can solve the problem over the telephone or by sending you replacement parts.


If you have a question or a problem, call J. Mason Customer Service at 800-242-1922 (or 818-993-6800) from 8:30am. to 5:00pm. PST. for quick service. You can also reach us by e-mail at: customerservice@jmason.com

WARNING

The safety of your children while in the stroller depends on you! Please read and understand the following warnings and instructions before use.

- Read any caution labels on the frame before setting child in seat.
- Remove and destroy all packing materials including silica gel bags.
- **NEVER** leave children unattended. Always keep child in view.
- Avoid serious injury from falling or sliding out. **ALWAYS** use seat belt.
- **DO NOT** carry additional children, goods or accessories in or on the stroller, except as recommended in the instructions.
- When making adjustments to the stroller, **ALWAYS ENSURE** that all parts of your child(ren)'s body are clear of moving parts.
- The stroller may become unstable if the maximum weight of the storage area is exceeded. **DO NOT** exceed the maximum weight limit of 8 lbs. (3.6 kg) in the storage basket.
- The stroller may become unstable if items are hanging from or placed on the handle. **DO NOT** hang shopping bags, purses or accessories on the handle.
- This stroller is to be used by no more than two children, weighing less than 40 lbs. (18 kg) each. Excessive weight may cause a hazardous, unstable condition to exist.
- **ALWAYS** use the brakes when the stroller is stopped! **DO NOT** leave stroller unattended on a hill or incline even when brakes are latched. The stroller may roll down hill.
- When making adjustments to your stroller, always ensure that all parts of your child's body are clear of moving parts.
- To avoid burns, **NEVER** put hot liquids in this tray.
Avoid possible tipping. **DO NOT** place more than 2 lb. (0.9 kg) on the parent cup tray.
- **NEVER** lift stroller by tray!
- **DO NOT** allow child to climb unassisted into stroller, or to play with or hang onto stroller, as stroller may tip over.
- **DO NOT** hang bags on handlebar as stroller may tip over.
- **DO NOT** use stroller on stairs with child in it, as child could fall out and get injured.

Parts

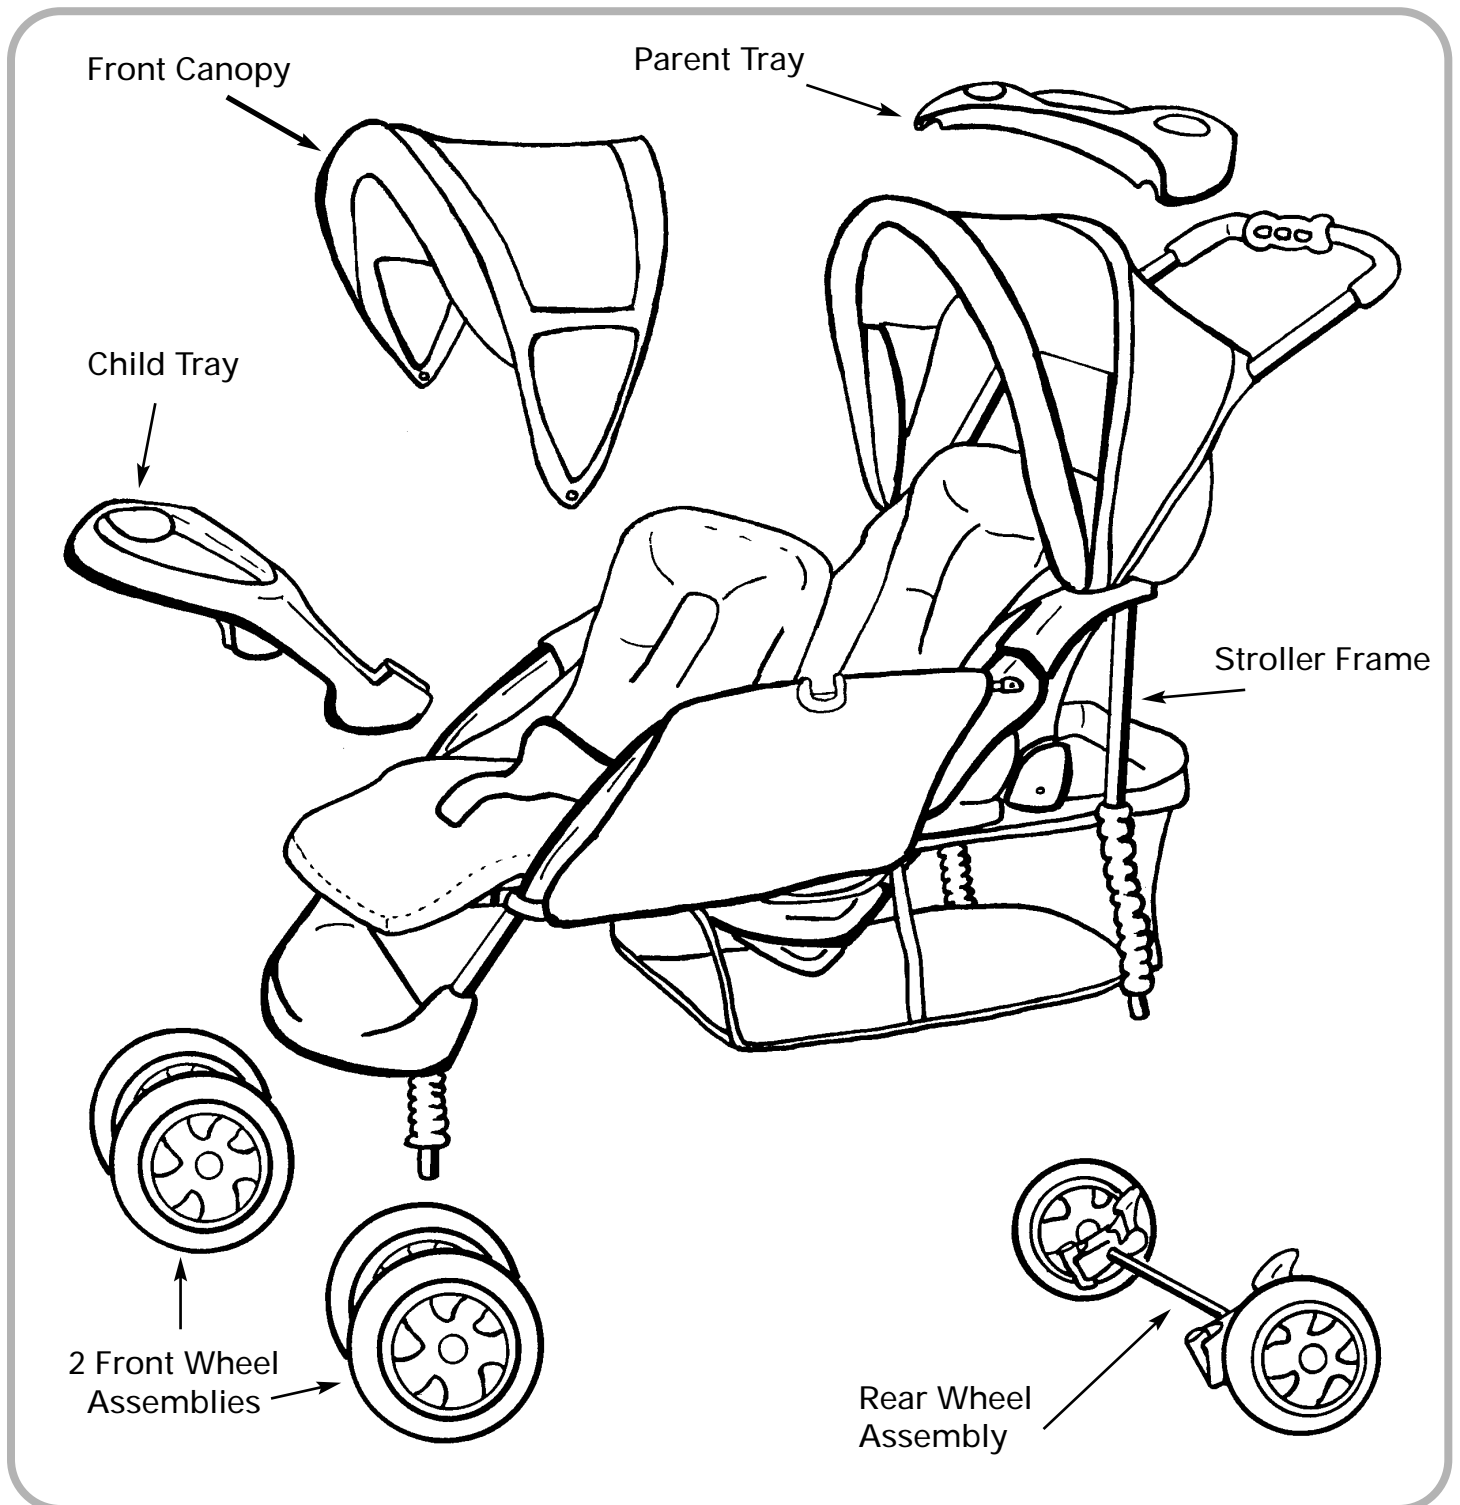


**Please keep plastic bags out of children's reach.
Dispose of plastic bags properly.**




WARNING

When making adjustments to your stroller, always ensure that all parts of your child's body are clear of moving parts.

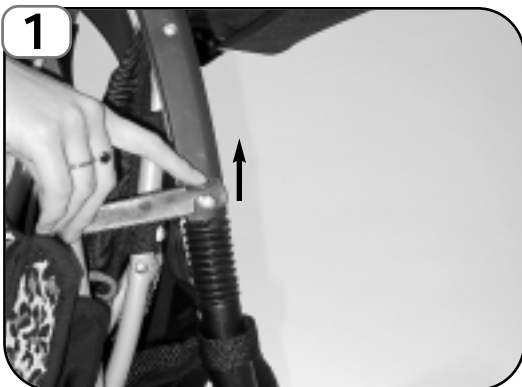

1 Lift storage clip.

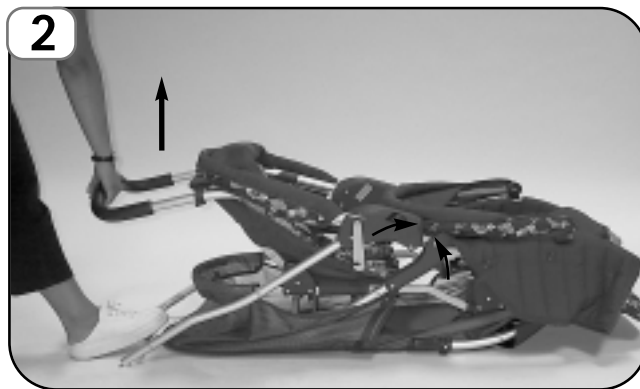

2 Lift handlebar until both side latches "snap" into position.




3 Turn the frame face down. Position rear axle assembly so brakes are pointed toward you. Push rear axle assembly firmly onto each leg so that the buttons "snap" into the holes in the wheel brackets.



4 Position each front wheel assembly onto each of the front legs. Pull back on tab, slide into position and release tab. **IMPORTANT!** Pull firmly on all wheel assemblies to be sure that they are securely attached.



5 Snap canopy assembly onto frame by aligning pin to hole in frame. To remove, gently pull canopy bracket from frame.

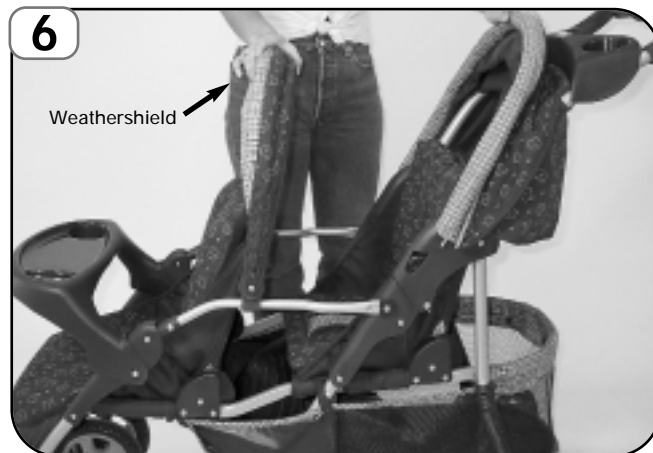

6 Both canopies are adjustable. Lift or lower each canopy to desired position. Weathershield under front canopy may be extended to protect baby from the weather.

Adjustments:



1

Parent Tray

Position parent tray onto handlebar. Push parent tray down to "snap" in place.



2

Child Tray

Position child tray onto front of frame. Push child tray frame over buttons to "snap" in place.

WARNING

To avoid burns, never put hot liquids in this tray.
Avoid possible tipping. **DO NOT** place more than 2 lb. (0.9 kg) on this tray.

WARNING

Never lift stroller by tray!



3

Front & Rear Seat

Lift release bracket and move seat back to desired position. **IMPORTANT!** Be sure to fold seats forward before folding stroller for storage.



4

Comfort Fit™ Pads

Adjust the Comfort Fit™ pads for your baby's comfort. Lift or lower the adjustment tab on the back of each seat.


⚠ WARNING

To prevent serious injury or death from falls or sliding out, always use the restraint belts.



5
Restraint Belts

Place your child in the stroller. Pull the crotch belt up between your child's legs. Fasten both waist belts to the crotch belt. **Make sure you hear a "click" on both sides.**

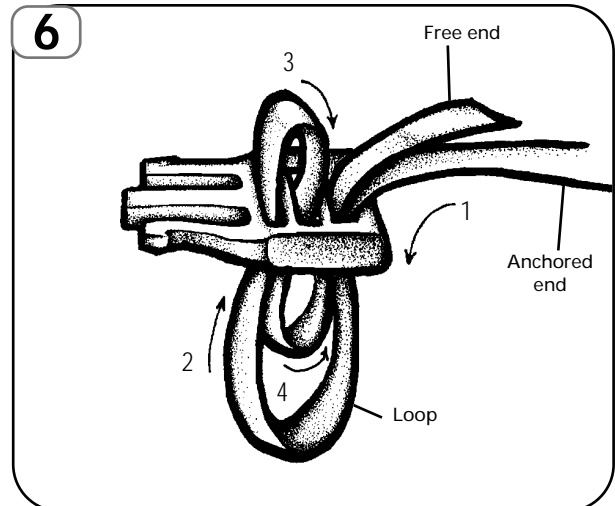

To tighten waist belt, feed the anchored end of the waist belt up through the buckle to form a loop. Pull the free end of the waist belt through.

To loosen waist belt, feed the free end of the waist belt down through the buckle to form a loop. Pull the anchored end of the waist belt.

⚠ WARNING

Always use the brakes when the stroller is stopped! Don't leave stroller unattended on a hill or incline even when brakes are latched. The stroller may roll down hill.



7
Safety Brakes

Press down on each rear brake levers with your foot until each clicks into position. Lift brake levers with foot to release.



8
Footrest

Push down footrest until it "snaps" into place.

IMPORTANT!


Before folding stroller for storage, remove all objects from storage basket




1 Push front canopy forward and back canopy backward.



2 Lift the release brackets on both seat backs and push the seat backs toward the front of the stroller.

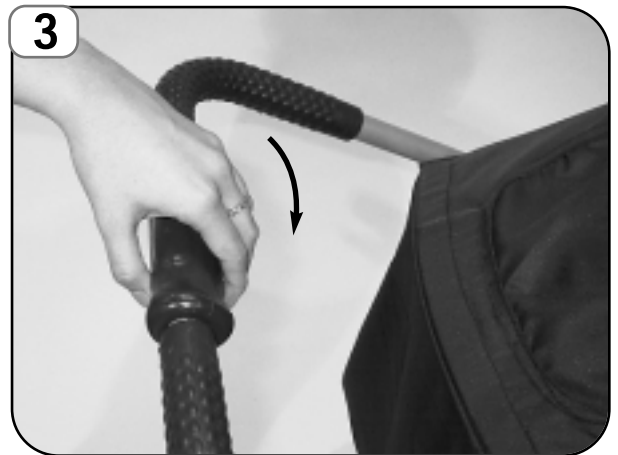

3 While gripping the one hand fold mechanism, push in the red lever and twist forward until side latches disengage.

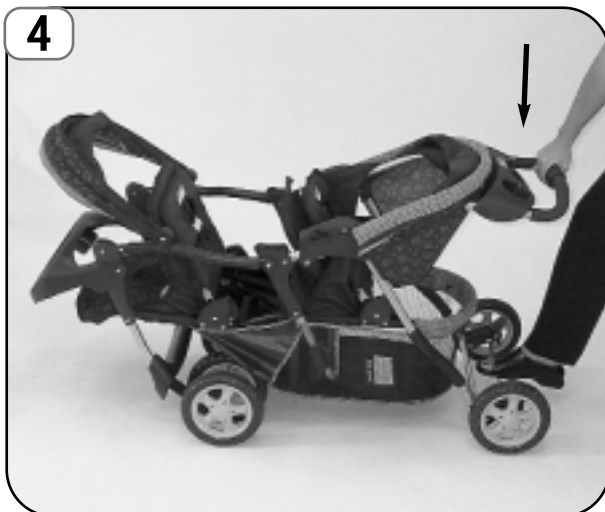

4 Push handlebar down to fold stroller.



5 Lower the red storage clip on the side of the stroller frame.

Maintenance

- Wipe down all plastic and cloth surfaces with a soft cloth. Use lukewarm water and mild detergent, air dry.
- Wipe metal parts clean with a soft damp cloth. Then wipe down with a soft dry cloth. Do not use abrasive or solvents.
- Dry off stroller with a soft cloth if used in inclement weather to assure longer life.

J. MASON WARRANTY

We would like to thank you for your purchase of this product and welcome you to our growing family of satisfied owners. We are very proud of our fine quality products and are confident that you will find the same in our workmanship. However, we recommend you retain this warranty so that should a problem arise, we will be able to respond quickly and efficiently.

J. Mason Products warrants the original components of our products. J. Mason will repair, or at its option, replace any original parts due to defects in material and workmanship. This warranty is limited to the original retail purchaser only, and under ordinary usage. This warranty is further limited to replacing the defective part without charge. The company shall not be responsible for consequential or special damages or damages resulting from use in any activities outside the realm of normal use.

This warranty will remain in effect for five (5) years on the frame and ninety (90) days on parts (excluding wearable parts), from the date of purchase as shown on the original bill of sale.

This warranty does not apply to any J. Mason product that has been abused, misused, altered by parts substitution, or used for daycare, rental and/ or other commercial purposes.

Transportation expenses are not covered in this warranty. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Proof of purchase is required to validate protection under this limited warranty.

Be a safe parent. NEVER leave child unattended!



19401 Business Center Drive, Northridge, CA 91324
Toll Free: 1-800-242-1922 Outside USA: (818) 993-6800
www.jmason.com

Fisher-Price and related trademarks and copyrights are used under license from Fisher-Price, Inc.,
a subsidiary of Mattel, Inc., East Aurora, NY 14052. U.S.A. ©2001 Mattel, Inc.
All Rights Reserved. Manufactured for and distributed by J. Mason.
Printed in China

REV. 12/4/01

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>