

KENWOOD

MULTIPLE COMPACT DISC PLAYER

CD-3280M

INSTRUCTION MANUAL

KENWOOD CORPORATION

This unit is designed for home use only. If the unit is used in a location other than at home, such as in a shop (for commercial use), in a car or in a ship, etc., and is damaged, a service fee may be charged even during the warranty period.



B60-4085-08 00 (K, P) (AP) 9811

Before applying power

⚠ Caution - Read this page carefully to ensure safe operation.

CD-9280M (EN)

Units are designed for operation as follows.

U.S.A. and Canada AC 120 V only

For the United Kingdom

Factory fitted moulded mains plug

1. The mains plug contains a fuse. For replacement, use only a 13-Amp ASTA-approved (BS1362) fuse.
2. The fuse cover must be refitted when replacing the fuse in the moulded plug.
3. Do not cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or adapter, or consult your dealer. If nonetheless the mains plug is cut off, remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue : Neutral
Brown : Live

Do not connect those leads to the earth terminal of a three-pin plug.

Unpacking

Unpack the unit carefully and make sure that all accessories are put aside so they will not be lost.

Examine the unit for any possibility of shipping damage. If your unit is damaged or fails to operate, notify your dealer immediately. If your unit was shipped to you directly, notify the shipping company without delay. Only the consignee (the person or company receiving the unit) can file a claim against the carrier for shipping damage.

We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in the future.

Keep this manual handy for future reference.

Accessories

 
Audio cord (2)



System control cord (1)



Communication cord (1)



Remote control unit (1)



Batteries (R6/AA) (2)



Safety precautions

WARNING : TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.

The marking of products using lasers (Except for some areas)

**CLASS 1
LASER PRODUCT**

The marking is located on the rear panel and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

Special features

CD player with 200-disc changer

Multi-room capability

CD-TEXT support

Title registerable

Programmed playback

Continuous playback

Filing functions suitable for a 200-disc changer

This unit can accommodate up to 200 discs and can be used like a home jukebox.

This unit consists of two CD player mechanisms and an independent second output (OUTPUT-B) for simultaneous playback of two discs. This makes it possible to enjoy different music in different rooms, by listening to the playback of a disc on Mechanism-A in Room A and that of a disc on Mechanism-B in Room B, for example.

The text information (disc title, track titles, names of the artists, songwriters, composers, etc.) recorded on the CDs can be easily called and displayed. (Some Japanese words and text may not be displayed.) → 17

In case of a disc not corresponding to CD-TEXT, you can register a disc title and track titles yourself. → 22

Disc search is possible by specifying the initial letter of the desired disc title. → 28

Desired tracks from up to 200 discs can be selected and programmed in the desired order. (Maximum 32 tracks) → 18

By preparing the disc to be played next in the other mechanism while playing a disc, two discs can be played continuously with minimum disc change time. → 31

An enhanced filing function is provided to handle the large disc capacity.

Music type: Discs are filed by 26 music genres. → 25

8 user files: Discs can be registered in up to 8 user files. → 26


Best selection: Only favorite tracks can be registered and played. → 30

Caution : Read the pages marked ▲ carefully to ensure safe operation.

Contents

▲ Before applying power	2
▲ Safety precautions	2
Special features	3
Quick-Start Guide	4
Simultaneous Dual-Room Play	4
Continuous Play	4
Skipping DTS CDs During Continuous Play	5
Naming Discs and Tracks	6
Setting-up the VR-2090 for Dual-Room operation with the CD-3280M	7
System connections	8
Controls and indicators	10
Operation of remote control unit (Mechanism-A only)	11
Preparation	12
Loading discs in the carousel	12
Selecting Mechanism A or B	13
In regard to ALL DATA READ mode (Mechanism-A only)	13
Normal play (TRACK mode)	14
Playing tracks in order from track No.1	14
Direct disc selection (Mechanism-A only)	15
Playback from desired track	16
Displays	17
Programming tracks in desired order	
(PGM mode) (Mechanism-A only)	18
Repeated playback (REPEAT mode)	20
To repeat only the desired tracks (Mechanism-A only) ...	20
To repeat one selected disc	20

Playback in a random order (RANDOM mode)	21
Registration of Title	22
Assigning Title (TITLE INPUT mode)	22
To change or delete a title	24
Listening to music by genre (MUSIC TYPE mode)	25
Registration of music type (MUSIC TYPE SET mode)	25
Creation of user's disc file (USER FILE SET mode)	26
Playing the music type or user file (MUSIC TYPE PLAY mode) (Mechanism-A only)	27
Disc search (DISC SEARCH mode) (Mechanism-A only)	28
Searching a disc by the disc title	28
Searching the music type or user file	29
Listening to your favorite titles	
(BEST SELECTION mode) (Mechanism-A only)	30
Registration of best selection file	30
Playing the best selection file	30
Continuous playback	31
Registration of DTS discs	32
Timer operation (Mechanism-A only)	33
Important items	34
In case of difficulty	35
Specifications	36

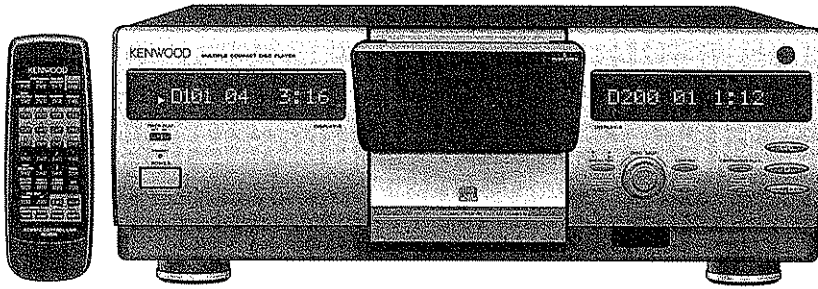


In this guide we'll show you:

- How to use Simultaneous Dual-Room Play and Continuous Play
- How to skip DTS CDs during Continuous Play
- How to enter disc and track names
- How to set up the VR-2090 receiver for Dual-Room Play with the CD-3280M

Simultaneous Dual-Room Play

The CD-3280M has dual disc mechanisms. Mechanism-A plays through analog output A and the digital output; Mechanism-B plays through analog output B. You can play discs on both mechanisms at the same time for Simultaneous Dual-Room Play.

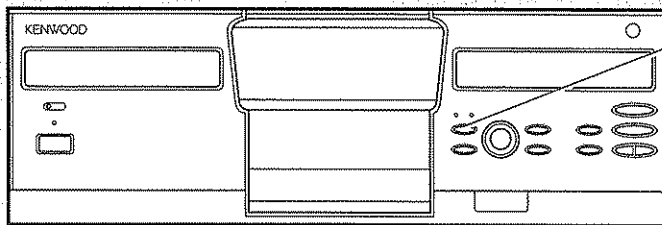

To activate either mechanism, press the front-panel **OPERATION** button.

The A and B indicators above the button will light accordingly.

The player's front-panel mechanism controls will operate the active mechanism.

Continuous Play


By alternating between its two disc mechanisms, the CD-3280M can play tracks continually without any interruption between tracks.

1. Select Mechanism-A (see above).

2. Press **PLAY**, or activate one of the following playback modes:

- All Disc Random Play,
- Program Play,
- Music Type Play,
- Best Selection Play

3. Press **CONTINUOUS PLAY**. The display reads: **CONTINUOUS PLAY**

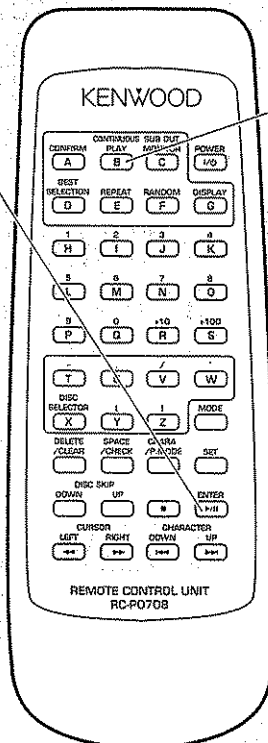

Note:


- * During Continuous Play, the same signal plays from analog outputs A and B.
- * The digital output is not used during Continuous Play.
- * DTS CDs that are skipped by the user (see next page) will be skipped during Continuous Play so that digital noise is not sent through the analog output.

Skipping DTS CDs During Continuous Play

DTS Multi-Channel Music CDs contain information that plays through the CD-3280M's digital output only.

To prevent digital noise from being played through the analog outputs during Continuous Play or when listening to music in Room B of a Dual-Room installation, the user must "skip" DTS-encoded CDs so that they can be automatically skipped.

When playing DTS music CDs, make sure you have activated the digital input on your receiver or decoder.

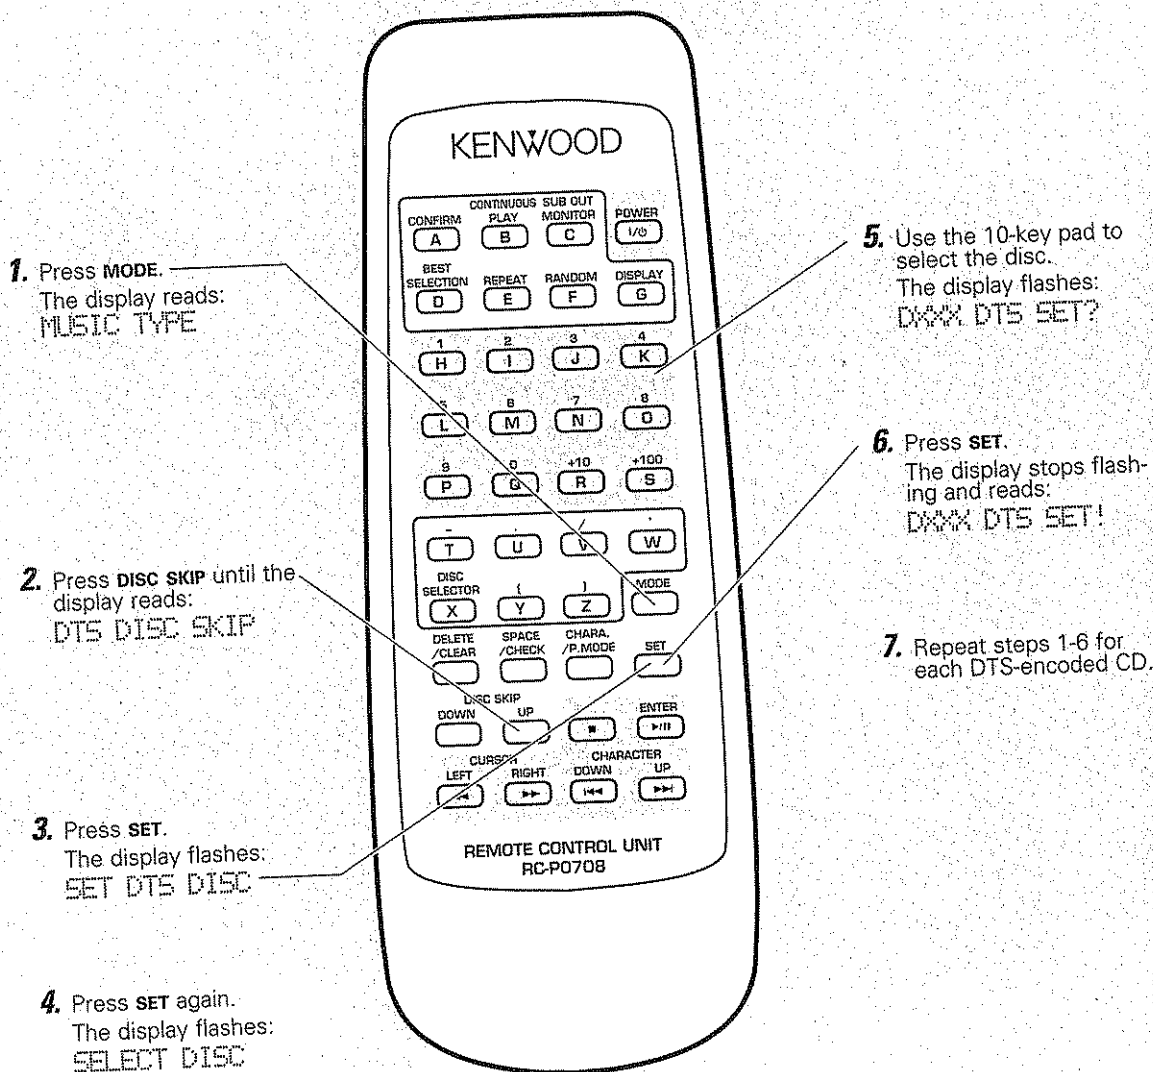

To Un-Skip a DTS CD:

Repeat steps 1-6, but after step 3, press **DISC SKIP**. The display will flash:

CANCEL DTS DISC


Then proceed with steps 4-7.

6 Naming Discs and Tracks

Discs can be given disc names (up to 25 characters), and up to 20 tracks per disc can also be named (up to 15 characters each). Although the most convenient time to enter disc and track names is when you insert the discs into the player for the first time, (that way the player keeps track of the disc names for you as you insert the discs), you can use this procedure to enter or change disc and track names any time you want.

These instructions explain how to enter disc names when you insert the discs into the player for the first time.

- 1** Open the loading door and leave it open for this entire operation.

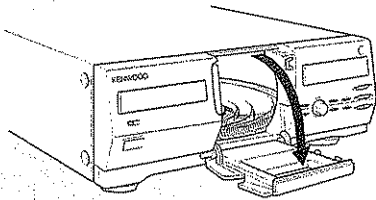


- 2** Select an empty disc slot.

Enter the disc number directly on the 10-key pad,

Then press **SET**.


OR:

Use the **DISC SKIP** buttons to select the disc.

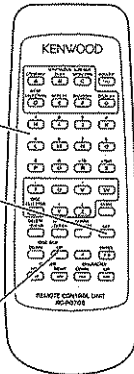

The disc tray will rotate so that the slot is in the loading position, and the display will show the disc number:

- 3** Insert a CD in the empty slot. Make sure the label faces towards your right.

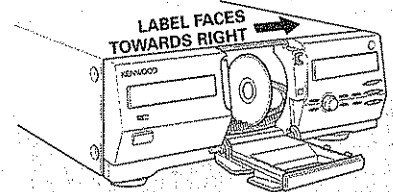

- 4** Enter the disc name

- 1.** Press **MODE**.

The display flashes:
TITLE INPUT

- 2.** Press **SET**.

The display reads:
D--- T--- SELECT
then the disc number you selected will flash:


- 3.** Press **SET** again. The display will stop flashing and will change to the alpha-numeric character display:

- 4.** Use the character-key pad to select characters.

- 5.** If you make a mistake, use **DELETE/CLEAR** to erase your last entry.

- 6.** Use **SPACE/CHECK** to enter spaces.

- 7.** Use **CHARA./P.MODE** to shift between capital letters, lowercase letters and numbers/symbols.

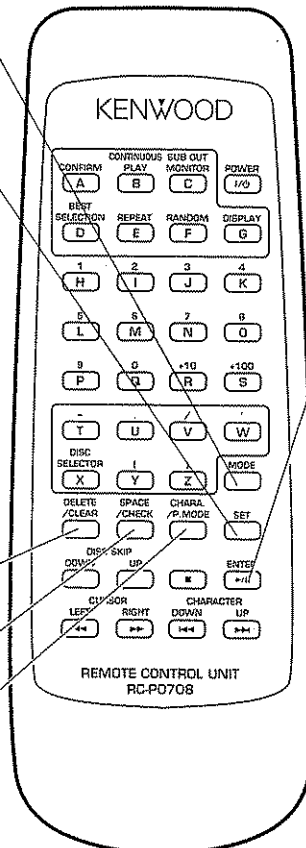

- 8.** The selected character flashes on the display. (You can also use the **CHARACTER DOWN/UP** buttons to select characters. After selecting each character, press **SET** to enter it.)

- 9.** Press **ENTER**.

The display reads:
TITLE STORE!!

- 10.** The display then switches to show the disc number, and the first track number flashes:

To enter track names:

- 11.** Repeat steps 3-9


- 12.** The display then switches to show the disc number, and the next track number flashes:

- 13.** Repeat steps 3-9 for each track on the disc.


Setting-up the VR-2090 for Dual-Room operation with the CD-3280M

If you're using a CD-3280M with a VR-2090 receiver in a dual-room installation, you need to use the PowerPad remote to set up the CD2/Tape2 input of the VR-2090 for CD2.

- 1** Select "Main menu", then select "Setup".

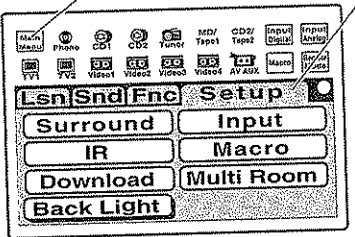


- 2** Select "Multi Room".

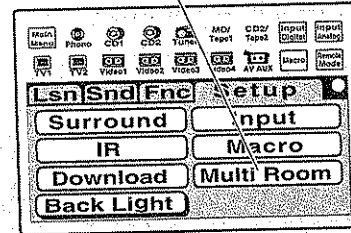

* The "Setup" menu automatically appears.


* The "Multi Room" menu automatically appears.

- 3** Select the "Multi Room" icon.

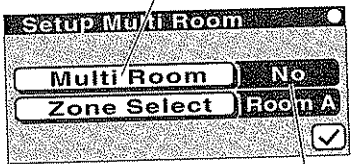


* The display box changes to **Yes**

- 4** Select the check-mark.

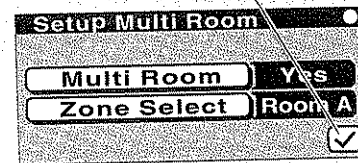


* The "Setup" menu reappears.

- 5** Select the "Input" icon.

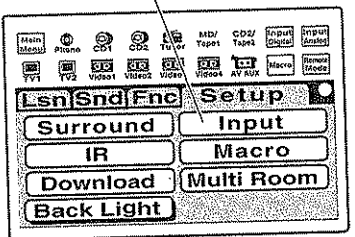

* The "Input" menu automatically appears.

- 6** Select the "CD2/Tape2" icon.

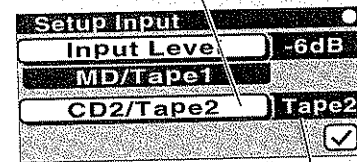

* The display box changes to **CD2**

Note:

Program both PowerPad's CD1 and CD2/Tape2 inputs to control the CD-3280M using IR code number '8992'. For programming instructions see the PowerPad Remote Commander Quick-Start Guide, or page 21 of the VR-2090/VR-2080 instruction manual.

System connections

CD-3280M (EN)

8

Make connections as shown below.

When connecting the related system components, refer also to the instruction manuals of the related components. Do not plug in the power lead until all connections are completed.

Be sure to use this unit placed on a level surface.


* 1

OUTPUT A : Analog output from Mechanism-A.
OUTPUT B : Analog output from Mechanism-B.



Malfunction of microcomputer

If operation is not possible or erroneous display appears even though all connections have been made properly, reset the microcomputer referring to "In case of difficulty". → 35

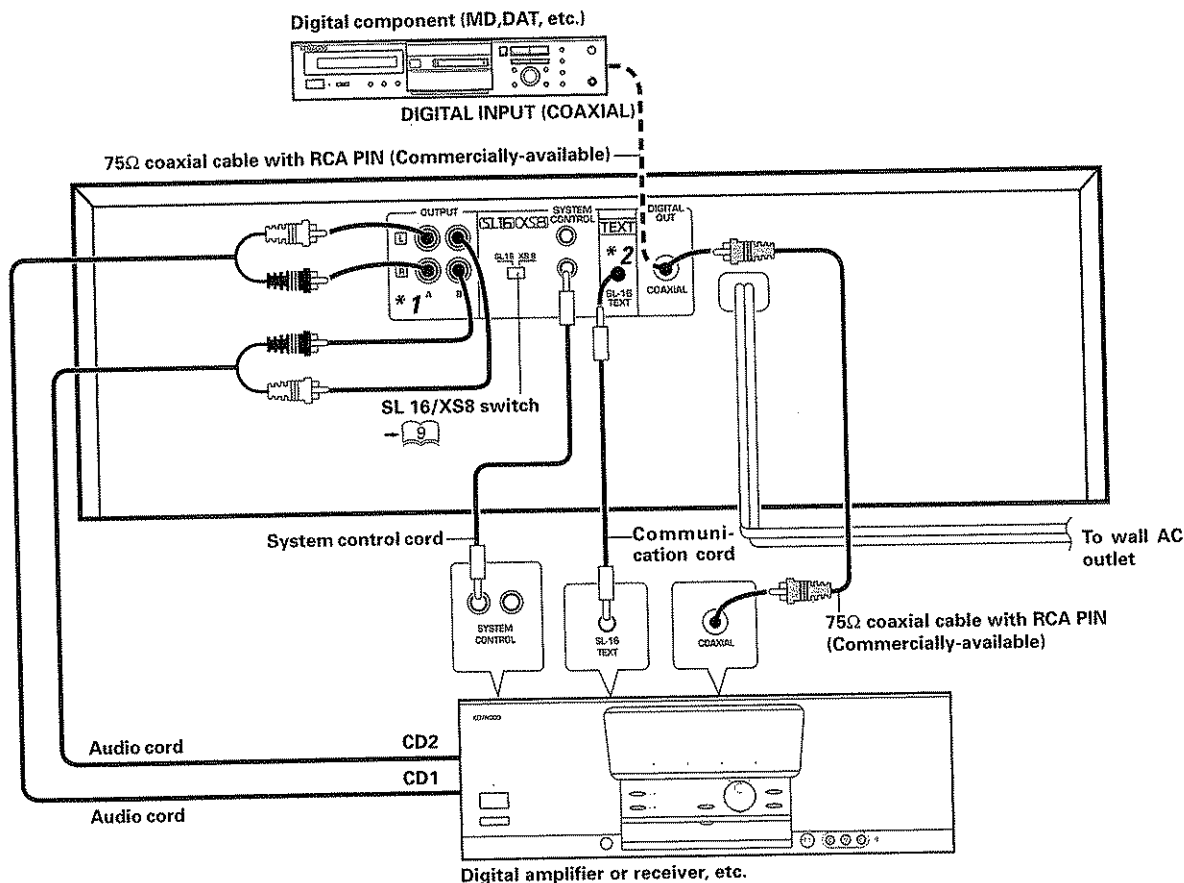

* 2

Note on the SL-16 TEXT jack

When using a KENWOOD Receiver equipped with the SL-16 TEXT jack, connect it to the Receiver using the communication cord provided with this unit. This makes it possible to display the disc and track titles on the LCD remote control unit (provided with the Receiver).



Do not forget to set the SL-16/XS8 switches of the Receiver and this unit to SL-16.

DTS Disclaimer clause

When playing DTS-encoded CDs, excessive noise will be exhibited from the analog stereo outputs. To avoid possible damage to the audio system, the consumer should take proper pre-cautions when the analog stereo outputs of the CD player is connected to an amplification system. To enjoy DTS Digital Surround™ playback, an external 5.1 channel DTS Digital Surround™ decoder system must be connected to the digital output (S/PDIF, AES/EBU, or TosLink) of the CD player.



1. Connect all cords firmly. If connections are loose, there could be loss of sound or noise produced.
2. When plugging and unplugging connection cords, be sure to first remove the power cord from the AC outlet. Plugging/unplugging connection cords without removal of the power cord can cause malfunctions or damage to the unit.

Connection to digital amplifier or MD (Mechanism-A only)

Connect the DIGITAL OUT (COAXIAL) jack to the digital input jack of the amplifier, DAT recorder, MD recorder, etc., using a coaxial cable which are commercially available in audio stores.

Connection to a general-use amplifier

Use the provided audio cords to connect the OUTPUT jacks of this unit to the CD input jacks (or AUX jacks) of the amplifier.

SYSTEM CONTROL CONNECTIONS



Connecting system control cords after connecting a KENWOOD audio component system lets you take advantage of convenient system control operations.

There are two KENWOOD system control modes. Make connections according to the groups of terminal symbols shown below. OUTPUT-B is available only in [SL16] mode.

[XS8] Mode : lets you combine [XC], [XS], and [XS8] terminals

[SL16] Mode : for [SL16] terminals only

 
This unit is compatible with both [XS8] and [SL16] modes. Select the mode according to the connected components.

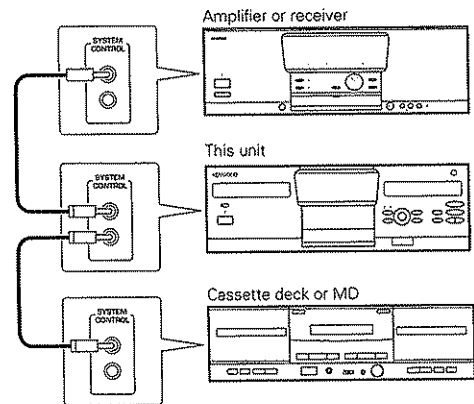

- Do this operation after completing all connections. (Ensure that the power plug is not connected.)



 1. If your amplifier or receiver does not have a system control terminal, do not connect any system control cords to the system control terminals on the other components.
2. Do not connect system control cords to any components other than those specified by KENWOOD. It may cause a malfunction and damage your unit.
3. Be sure the system control plugs are inserted all the way in to the system control terminals.



SYSTEM CONTROL OPERATIONS

Remote Control

Lets you operate this unit with the system remote control unit supplied with the amplifier or receiver.


Automatic Operation (Except [XR] equipment)

Automatically switches the input selector on the amplifier or receiver when you start playback from this unit.

Synchronized Recording (Except [XR] equipment)

Lets you synchronize recording with the start of playback when recording from a CD. Also, the simple CCRS operation enables great recordings from CDs.

See the operating instructions supplied with your cassette deck for details.

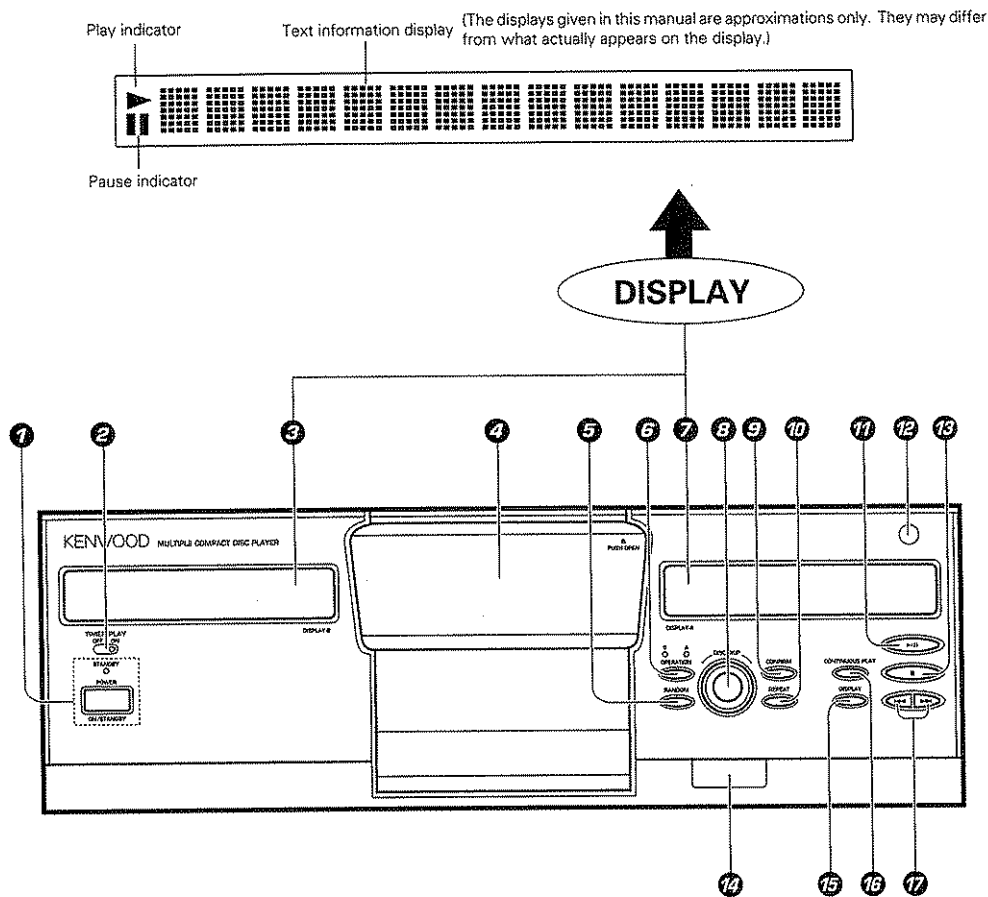

① POWER key/STANDBY indicator

② TIMER PLAY switch

Used for timer play ON/OFF.

③ Mechanism-B display

④ Door panel

⑤ RANDOM key

Press to start random playback.

⑥ OPERATION A-B key

Press to switch between mechanisms A and B. While the B indicator is lit, only the key on the main unit is valid.

⑦ Mechanism-A display

⑧ DISC SKIP knob

Used for disc selection. Characters are selected at the time of title registration.

⑨ CONFIRM key

The present playback mode is displayed.

⑩ REPEAT key

Press to start repeated playback.

⑪ Play/Pause key (▶/||)

⑫ Remote sensor

⑬ Stop key (■)

⑭ LCD remote control signal transmitter

The disc and track title data are output to the LCD remote control unit (provided with a KENWOOD Receiver or optional) through this window.

⑮ DISPLAY key

Switching between title display and time display.

⑯ CONTINUOUS PLAY key

Used for continuous play mode switching.

⑰ Skip keys (◀◀ ▶▶)

Press to skip to the beginning of another track. Characters are selected at the time of title registration.


Standby mode

While the standby indicator of the unit is lit, a small amount of current is flowing into the unit's internal circuitry to back up the memory. This condition is referred to as the standby mode of the unit. While the unit is in the standby mode, it can be turned ON from the remote control unit.

Operation of remote control unit (Mechanism-A only)

CD-328QM (EN)

The keys with the same name as those on the main unit operate the same way as on the main unit. The keys marked * are provided only on the remote control unit. The remote control unit controls Mechanism-A regardless of whether the **OPERATION A-B** indicator on the main unit is lit or not.

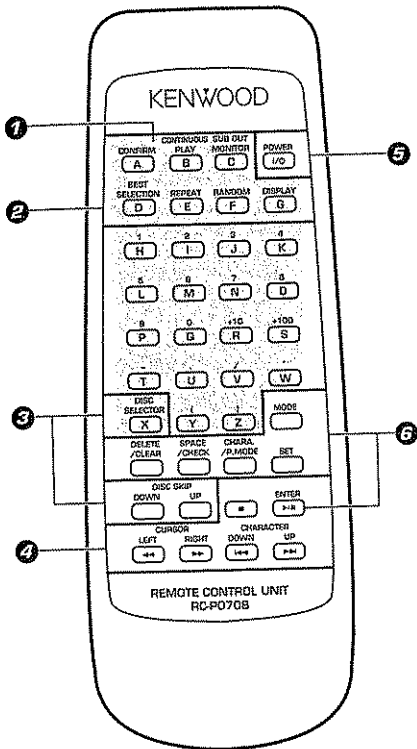

Model: RC-P0708
Infrared ray system

1 Input keys for numbers and letters *
Used for selection of disc numbers and track numbers, as well as for title registration.

2 Keys related to playback mode and display
CONFIRM key
CONTINUOUS PLAY key
 * **SUB OUT MONITOR key**
 Used to monitor the audio played on Mechanism-B.
 * **BEST SELECTION key**
 Used for best selection registration and playback.
REPEAT key
RANDOM key
DISPLAY key

3 Disc selection keys
 * **DISC SELECTOR key**
 Press to select a disc number.
DISC SKIP (DOWN/UP) keys


4 Keys for basic operation and character input
Stop key (■)
ENTER; Play/pause (▶/⏸) key
CHARACTER;
Skip (DOWN/UP) keys (◀◀, ▶▶)
 * **CURSOR (LEFT/RIGHT); Search keys (◀◀, ▶▶)**
 Press to move the played position of disc at high speed. Used as cursor keys at the time of title registration.

5 POWER (I/⏻) key


6 Keys related to program and file registration
 * **MODE key**
 Press to switch the mode.
 * **SET key**
 Used for confirmation of mode settings. At the time of title registration, one character is confirmed and the cursor goes to the next digit.
 * **ENTER key**
 Used for title confirmation.
 * **CHARA./P.MODE key**
 Used for playback mode switching. At the time of title registration, this key switches between capital letters/small letters/numbers and special characters.
 * **SPACE/CHECK key**
 Used to confirm the entered contents. Inserts a space at the time of title registration.
 * **DELETE/CLEAR key**
 Used to delete the entered contents. At the time of title registration, characters are deleted.

Loading batteries

1 Remove the cover.

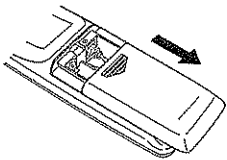


2 Insert batteries.

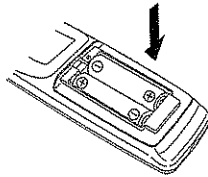


● Insert two AA-size (R6) batteries as indicated by the polarity marking.

3 Close the cover.

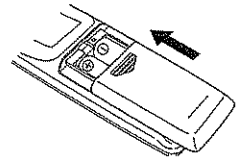

Operation

After plugging in the power cord, press the **POWER** key of the main unit to turn the power ON. When the power is turned ON, press the key of the function to be operated.

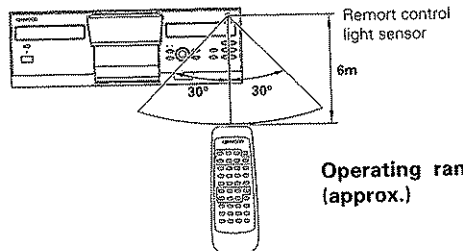

Operating range (approx.)

● When pressing more than one remote control key successively, press the keys securely by leaving an interval of 1 second or more between keys.



1. The supplied batteries are intended for use in operation checks. Therefore, their lives may be shorter than ordinary batteries.
2. When the remote-controllable distance gets shorter than before, replace both batteries with new ones.
3. Malfunction may occur if direct sunlight or the light of a high-frequency lighting fluorescent lamp enters the remote control light sensor. In such a case, change the system installation position to prevent the malfunction.


Up to 200 CDs can be loaded in the carousel. Disc exchange also is possible during playback.

Never let your hand or any object enter inside the unit.

Loading discs in the carousel


1 Switch power ON.

Press the POWER key.

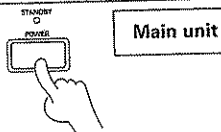

2 Open the door panel toward the front.


Press PUSH OPEN at the right top of the door panel.

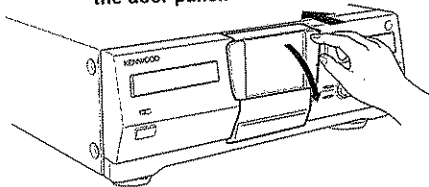

• Do not place any object on the open door panel.


3 Load discs.

① Turn the DISC SKIP knob and bring the slot with the disc to be placed to the front.

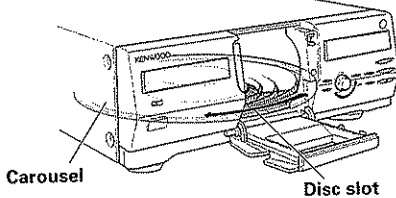

② Insert the disc vertically.

Insert CDs with the label side facing toward your right.

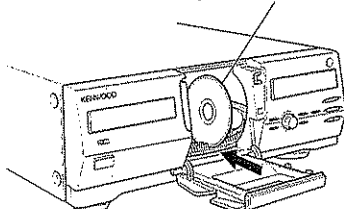

Insert one CD per slot all the way.

③ Repeat ① and ② to insert discs.

DISPLAY-A (or DISPLAY-B)

DISC001

The slot No. is displayed when the DISC SKIP knob is turned.

DISPLAY-B (or DISPLAY-A)

OPEN



Insert discs with the label on the right side. Playback is not possible when a disc is inserted the other way round.

• Do not insert more than one disc in a slot.




When a disc not corresponding to CD-TEXT is inserted, searching for this disc will be facilitated when the title is registered at the time of disc insertion.

"Registration of Title"

→ 22

4 Close the door panel.

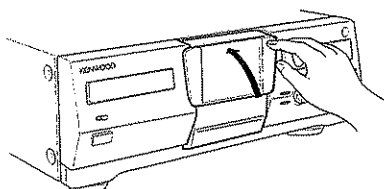

• When a title has been registered and the door panel is closed, reading operation is performed automatically.

DISPLAY-A : The display flashes.


DISC READING

Disc replacement

Discs can be replaced with the same procedure as "Loading discs in the carousel". In stopped condition, all discs can be exchanged. However, when the door panel is opened while "DISC DETECTION" is being displayed, it may not be possible to remove the disc which had been played. Accordingly, wait for the "DISC DETECTION" indication to go out before opening the door panel. When the disc information has been read in at the time of registration of disc information like title, music type, etc., the disc information can be recalled even when the disc insertion place is changed. → 22 → 25

Selecting Mechanism A or B

The audio played on Mechanism-A is output from OUTPUT-A and that played on Mechanism-B is output from OUTPUT-B. This makes it possible to enjoy different music in different rooms.

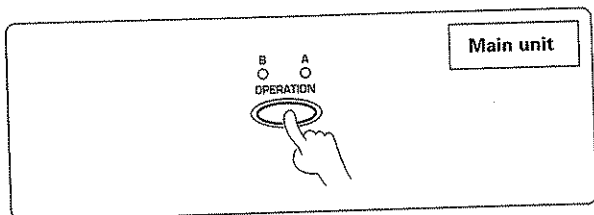

- Each press of the key switches mechanisms A and B alternately and lights the indicators accordingly.
- After selecting the mechanism, operate the player.
- The **OPERATION A-B** key is set to A during continuous play mode. It is not possible to switch the mechanism during it.
- If a DTS disc is selected when the Mechanism-B is selected, blinking "DTS DISC!" is displayed and the DTS disc selection is canceled.

 
In regard to ALL DATA READ mode (Mechanism-A only)

The disc information for all discs will be read. It is convenient to execute this mode before playback after discs have been exchanged. Close the door panel before operation.




To display the title on a LCD remote control unit (provided with a KENWOOD Receiver or optional), perform the all data read operation first, and operate the LCD remote control unit with the door left closed. For the operation of the LCD remote control unit, refer to the instruction manual provided with your receiver or LCD remote control unit.


- 1 Press the MODE key.



- 2 Select "ALL DATA READ".

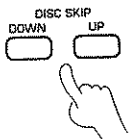

- 3 Set the input.

 

Each press switches the modes as follows:

- 1 MUSIC TYPE
- 2 DISC SEARCH
- 3 TITLE INPUT
- 4 ALL DATA READ
- 5 ALL INFORMATION
- 6 DTS DISC SKIP

DISPLAY-A

ALL DATA READ

Search in progress or reading information The display flashes.

DISC READING

When the disc is CD-TEXT

D001 : CD TEXT

- Repeat the above procedure so that the complete disc information is read into the CD player.
- In the case of a non-CD-TEXT disc, the "D001:NO CD TEXT" display will appear for approx. 3 seconds.
- This operation is not available during the continuous play mode.

To quit ALL DATA READ mode

Press the ■ key.



1. Please remove all CDs from the carousel before moving the unit.
2. If blinking "PLEASE WAIT" is displayed when the door panel is opened, do not attempt to change the disc.


Preparation

- Load discs in the carousel. → 12
- Select the Mechanism-A or Mechanism-B. → 13

Playing tracks in order from track No.1


Use the following procedure to play a CD in the original order of tracks from track No.1.

1 Select the disc.

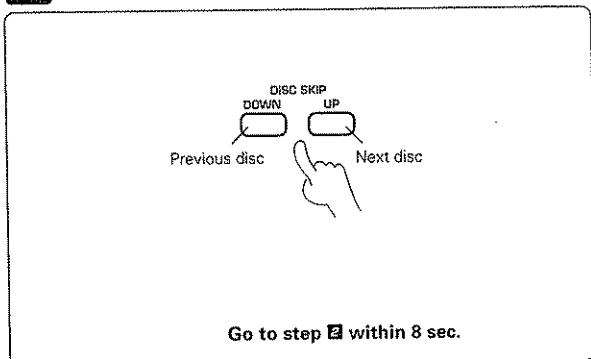


- Each press of a key increases (or decreases) the disc number. Holding the key depressed varies the disc numbers successively.
- When the disc corresponds to CD-TEXT, or when the disc title has been registered, the disc title will be displayed with scrolling. Discs can be selected by the disc title.
"Registration of Title" → 22

 Display when disc No. 123 is selected



2 Start playback.

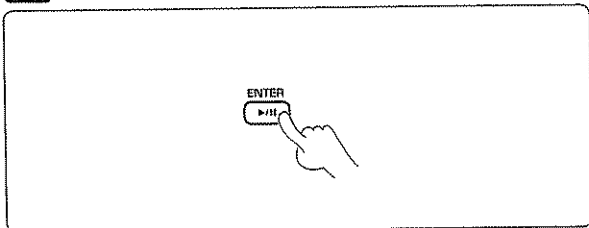

Lights up.




- When the disc corresponds to CD-TEXT, or when the track titles have been registered, the track title is displayed.
- If the selected disc is being played on the other mechanism, blinking "DISCXXX BUSY!" is displayed and the disc will not be played.

For continuous playback


Press the CONTINUOUS PLAY key.

To pause playback

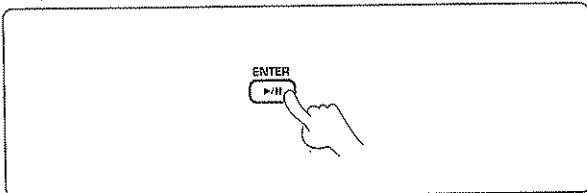

- Each press pauses and plays the CD alternately.

To stop playback

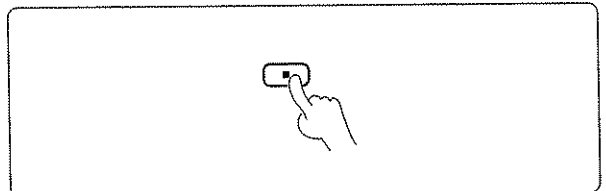

In regard to SUB OUT MONITOR



Press the SUB OUT MONITOR key to output the audio played on Mechanism-B from OUTPUT-A. Each press of the key switches this feature on and off alternately.

DISPLAY-A



- This operation is not available during the continuous play mode.


Direct disc selection (Mechanism-A only)

① Press the DISC SELECTOR key.




Within 8 seconds!

② Input the disc number.

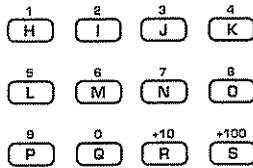

Within 8 seconds!

 ③ Start playback.



Press the numeric keys in the following order...

Disc No. 63 : **6** **3**

Disc No. 100 : **1** **0** **0**

- If the selected disc is being played on Mechanism-B, blinking "DISCXXX BUSY!" is displayed and the disc will not be played.

How to input numeric values

The input method for this product is of two different types. One can either use the traditional KENWOOD +10 key approach, or direct numeric input.

Special input method for CD player with 200-disc changer

To input 42 : **4** **2**

To input 115 : **1** **1** **5**

To input 200 : **2** **0** **0**

Same input method as other KENWOOD products

To input 42 : **+10** **+10** **+10** **+10** **2**

To input 115 : **+100** **+10** **5**

To input 200 : **+100** **+100**

What is the "normal play TRACK mode"?

Playback is made from the first track. The normal playback mode is called TRACK mode. Press the CONFIRM key to confirm the present mode.



TRACK mode

▶ TRACK D120 T02

PGM mode

▶ PGM01 D131 T02

BEST SELECTION mode

▶ BEST01 D104 T03

MUSIC TYPE mode

▶ M. TYPE Rhythm

RANDOM mode

 
▶ ONE DISC RANDOM


REPEAT mode

▶ REPEAT ON

To set the unit to the TRACK mode:


At the time of PGM mode : Press the P.MODE key.



At the time of BEST SELECTION mode : Press the  key during playback.



 At the time of MUSIC TYPE mode : Press the MODE key.



At the time of RANDOM mode : Select "RANDOM OFF".



If it is Mechanism-B that is selected, use the main unit keys for these operations.


Preparation

- Load discs in the carousel. → 12
- Select the Mechanism-A or Mechanism-B. → 13


Playback from desired track

1 Select the disc.

1 Select the disc number.

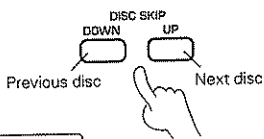


2 Set the input.

 

Go to step 2 within 8 sec.

 
Display when disc No. 123 is selected




- The disc number can be selected directly by using the **DISC SELECTOR** and numeric keys in place of the **DISC SKIP** keys.
 - When the disc corresponds to CD-TEXT, or when the disc title has been registered, the disc title will be displayed with scrolling. Discs can be selected by the disc title.
- "Registration of Title" → 22
- Repeat step 1 when it is required to change the disc number.

2 Select the track number.

1 Input the track number.

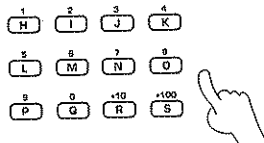


2 Set the input.

 

Press the numeric keys in the following order...

Track No.8 : 8
Track No.14 : 1 4
Track No.20 : 2 0

 
Display when track No. 8 is selected



- When the disc corresponds to CD-TEXT, or when the track titles have been registered, the track title is displayed. Tracks can be selected by the track title.
- "Registration of Title" → 22


- Playback starts.
- If the selected disc is being played on the other mechanism, blinking "DISCXXX BUSY!" is displayed and the disc will not be played.
- Repeat step 2 when it is required to change the track number.

Skipping tracks

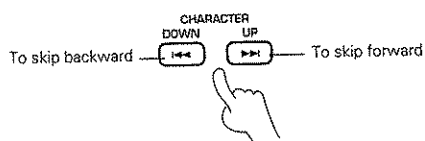

- When the **◀◀** key is pressed once during playback, the track being played will be played from the beginning.

Searching

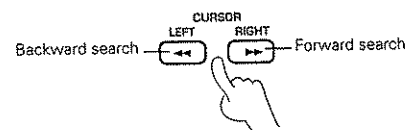

- Playback starts from the position where the key is released.



If it is Mechanism-B that is selected, use the main unit keys for these operations.

Displays scrolling

Some track titles contain so much text information that the full titles will not fit on the display. In cases like this, the letters on the display move from right to left so that the non-visible part of the title is revealed. This type of display movement is known as "scrolling of display."

Display example

← Scroll display

D123 GOOD OLD FASHION...

D123 FASHIONED

Time display

Each press of the DISPLAY key changes the displayed contents.

- Select the Mechanism-A or Mechanism-B.



Main unit

- Press the DISPLAY key.




- | | | |
|---|-------------------|--|
| ① | ▷ SAIL AWAY SWEET | Track title display (with CD-TEXT or when the track title has been registered) |
| ② | ▷ DISC123 TRACK10 | DISC NO., TRACK NO. display |
| ③ | ▷ D123 10 1:23 | Elapsed time of track being played |
| ④ | ▷ D123 10 -2:37 | Remaining time of track being played |
| ⑤ | ▷ D123 10 23:45T | Elapsed time of entire disc (T lights up.) |
| ⑥ | ▷ D123 10 -36:25T | Remaining time on entire disc (T lights up.) |

- The displays ①, ②, ③, and ④ are shown in PGM mode, RANDOM mode, MUSIC TYPE mode, and BEST SELECTION mode.
- The displays ①, ② and ③ are shown in stop mode.


Displaying all the text information (Mechanism-A only)

In the case of a CD-TEXT disc, the text information shown below is displayed automatically during normal play (TRACK mode).

 
- Press the MODE key.



- Select "ALL INFORMATION".

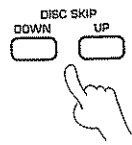


- Set the input.

 


DISPLAY-A: The display flashes.

ALL INFORMATION

To jump to the next track or to return to the previous track during display:

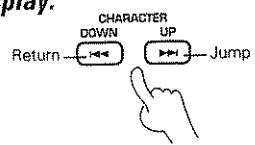

To jump to the next item or to return to the previous item during display:

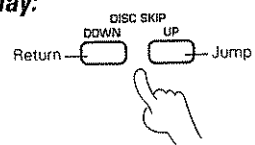

- | | | |
|---|-----------------------|--------------------------------------|
| ① | Disc/Track Title | : Disc and track titles |
| ② | Disc/Track Artist | : Artist |
| ③ | Disc/Track Songwriter | : Songwriter |
| ④ | Disc/Track Composer | : Composer |
| ⑤ | Disc/Track Arranger | : Arranger |
| ⑥ | Disc/Track Message | : Message from sponsor or artist |
| ⑦ | ID INFO. | : Record company, release date, etc. |
| ⑧ | Genre INFO. | : Genre information |

- Items from ① to ⑥ are displayed in the sequence of disc and track.
- When there is no text information to be displayed "-----" is scrolled on the display.
- In the case of a non-CD-TEXT disc, the "NO CD TEXT" display will appear for approx. 3 seconds.
- This operation is not available during the continuous play mode.

To end ALL INFORMATION during display
Press the MODE key.

Programming tracks in desired order (PGM mode)(Mechanism-A only)

CD-3280M (EN)

Use the following procedure to select desired tracks (up to 32 tracks) from different discs and program them in the desired order.

Preparation

- Load discs in the carousel. → 12
- Set the Mechanism-A to stop mode.

1 Press so that the "PGM" indicator lights.




DISPLAY-A


PGM SELECT DISC

2 Select the disc.


① Select the disc number.

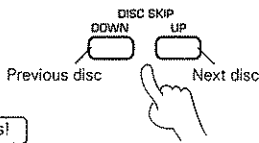

② Set the input.

 

Go to step 3 within 8 sec.

 


- The disc number can be selected directly by using the **DISC SELECTOR** and numeric keys in place of the **DISC SKIP** keys.
- When the disc corresponds to CD-TEXT, or when the disc title has been registered, the disc title will be displayed with scrolling. Discs can be selected by the disc title.

"Registration of Title"


- If you make a mistake, press the **CLEAR** key and enter the disc No. from the beginning. → 22

3 Select the track number.

 ① Input the track number.



② Set the input.

 

Press the numeric keys in the following order...

Track No.8 : 8

Track No.14 : 1 4

Track No.20 : 2 0



- To program the entire disc, press the **SET** key without inputting the track number. "ALL" will be displayed.
- When the disc corresponds to CD-TEXT, or when the track titles have been registered, the track title is displayed. Tracks can be selected by the track title.

"Registration of Title"

- Program other tracks in the desired order by repeating steps 2 and 3.
- Up to 32 tracks can be programmed. "FULL" is displayed when no more tracks can be programmed.
- If you make a mistake, press the **CLEAR** key and restart from step 2. → 22

4 Start playback.




- Tracks will be played in the order they are programmed.
- If a track to be played is located in the disc displayed on Mechanism-B, that track will be skipped.
- When the **◀◀** or **▶▶** key is pressed during playback, the track will be skipped in the direction of the pressed button.

For continuous playback

Press the **CONTINUOUS PLAY** key.

To check the programmed tracks

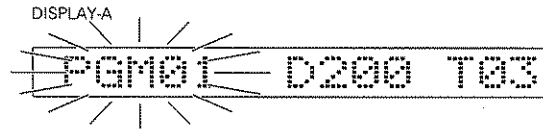

- Each time the key is pressed, the program No. and the disc No. are displayed.
- The previous display resumes in a few seconds.

To add a track to the program

Perform steps ② and ③ of "Programming tracks in desired order".



- When a track No. is entered, the track will be added to the end of the existing program.

To change a track in the program


- ① Set the Mechanism-A to stop mode.
- ② Press the CHECK key.



- ③ Perform steps ② and ③ of "Programming tracks in desired order".



- Press the CHECK key repeatedly until the program No. to be changed is displayed.

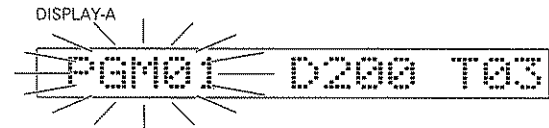

Example

- Press it while the "PGM01" indicator blinks.
- The track being played cannot be changed.

 
To clear tracks from the program

To clear tracks from the end



Each time the key is pressed, the last track in the program is cleared. The tracks which are programmed earlier than the track being played cannot be cleared.

To clear all tracks



- When the P.MODE key is pressed during playback, playback in order of tracks starts from the track being played.

 
Preparation

- Load discs in the carousel. → 12
- Select the Mechanism-A or Mechanism-B. → 13


To repeat only the desired tracks (Mechanism-A only)

- 1 Program the desired tracks by performing steps 1 to 2 of "Programming tracks in desired order". → 18

- 2 Switch REPEAT ON.



- 3 Start playback.

 

- Up to 32 tracks can be programmed by repeating steps 1.

REPEAT ON

- The current status is displayed when the key is pressed once. When it is pressed while the status is displayed, the repeat ON status can be set to OFF (or vice versa).

- All of the programmed tracks will be repeated.
- If a track to be played is located in the disc played on Mechanism-B, that track will be skipped.
- In case only one track is programmed, only that track will be repeated.


To cancel repeated playback

Press the REPEAT key twice. (REPEAT ON → OFF)


To repeat one selected disc

- 1 Check that the Mechanism is in the normal play TRACK mode. → 15

- 2 Select the disc number.

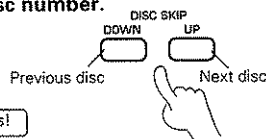

- 3 Start playback.

 

- 4 Switch REPEAT ON.



- The disc number can be selected directly by using the DISC SELECTOR and numeric keys in place of the DISC SKIP keys.

- If the selected disc is being played on the other mechanism, blinking "DISCXXX BUSY!" is displayed and the disc will not be played.

REPEAT ON

- The current status is displayed when the key is pressed once. When it is pressed while the status is displayed, the repeat ON status can be set to OFF (or vice versa).
- The operation is not available during the continuous play mode.

To cancel repeated playback

Press the REPEAT key twice. (REPEAT ON → OFF)

For random repetition → 21

For music type or user file repetition → 27

For best selection repetition → 30



If it is Mechanism-B that is selected, use the main unit keys for these operations.

Download from www.Somanuals.com. All Manuals Search And Download.

Playback in a random order (RANDOM mode)

Use the following procedure to activate random playback which selects a track at random after every track. This feature may allow you to play CDs for long hours without getting tired of.

Preparation


- Load discs in the carousel. → 12
- Select the Mechanism-A or Mechanism-B. → 13

1 Check that the Mechanism is in the normal play TRACK mode. → 15

2 Select discs.

To select one disc

① Select the disc number.

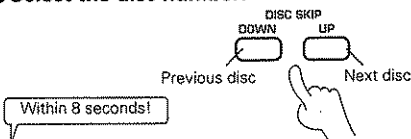

② Start playback.



③ Select "ONE DISC RANDOM".



- The disc number can be selected directly by using the **DISC SELECTOR** and numeric keys in place of the **DISC SKIP** keys.

- If the selected disc is being played on the other mechanism, blinking "DISCXXX BUSY!" is displayed and the disc will not be played.
- "ONE DISC RANDOM" cannot be selected during the continuous play mode.

Each press switches the modes as follows:

- ① ONE DISC RANDOM
- ② ALL DISC RANDOM
- ③ RANDOM OFF



The number here changes.

- Each time a track ends, the same operation as above is repeated, and the track selected next is played.
- Random play stops after all of the tunes have been played once.

To select all discs

Select "ALL DISC RANDOM".



- If a track to be played is located in the disc played on the other mechanism, that track will be skipped. (This track will not be selected later unless the REPEAT mode is set.)


For repeated playback

Press the REPEAT key to select "REPEAT ON".

For continuous playback (ALL DISC RANDOM only)

Press the CONTINUOUS PLAY key.

To select another track in the middle of playing one

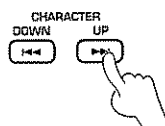

- Pressing the **CHARACTER DOWN** key once returns to the beginning of the track being played.

To cancel random playback



Select "RANDOM OFF".



- Press the **STOP** key to stop playback.
- Normal playback will be performed when **RANDOM OFF** is selected.

For random music type or random user file

→ 27



If it is Mechanism-B that is selected, use the main unit keys for these operations.

Download from www.Somanuals.com. All Manuals Search And Download.

Registration of Title

For discs not corresponding to CD-TEXT, a title can be given to the disc (max. 25 characters). Up to 20 tracks titles can be registered per disc. Operation is possible also when the door panel is open. We recommend to register titles while discs are being inserted.

Preparation

- Load discs into the carousel. → 12
- Set the Mechanism-A to stop mode.
- Check that the Mechanism-A is in the normal play TRACK mode. → 15


Assigning Title (TITLE INPUT mode)

1 Switch to title input mode.

- ① Press the MODE key.



- ② Select "TITLE INPUT".

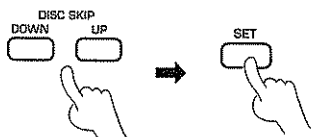

- When the **MODE** key is pressed during title input mode, the title input mode is cancelled.

DISPLAY-A : The display flashes.

TITLE INPUT


DISC SKIP DOWN UP SET

- To enter track titles without assigning the disc title, go to "To enter the track title". → 23


2 Enter the title.

To enter the disc title


- ① Select the disc number.

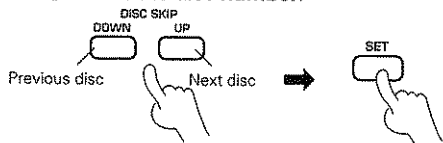

- ② Enter the disc title.

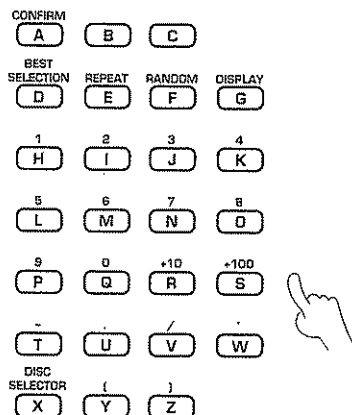

- ③ Store the disc title.

 

- The disc number can be selected directly by using the numeric keys in place of the **DISC SKIP** keys.
- During playback, the disc only being played can be selected.

- If a desired character is not provided on the remote control keys, input the character as follows. Press the **CHARACTER DOWN/UP** key (←→) until the character to be entered comes to the position of the flashing cursor. Then, press the **SET** key.
- The characters also can be selected with the **DISC SKIP** knob on the main unit (provided that the **OPERATION-A** indicator is lit). Turn the knob until the character to be entered comes to the position of the flashing cursor. Then, press the **SET** key.



Flashing cursor

- One character is set and the cursor goes to the next digit.
- Repeat this to enter the disc title.

TITLE STORE!!

- To register the disc title of another disc, repeat the entire procedure of "To enter the disc title".
- To register another track titles in the same disc, go to step ①-2 in "To enter the track title". → 23

In regard to disc information reading

The entered title is read in to the disc with the following timing.

- When the door panel is closed.
 - With closed door panel, when title input mode is cancelled.
- DISPLAY-A : The display flashes.

DISC READING


When there are discs for which the disc information already has been read in, there may be no display.

Do not move or exchange discs until the disc information has been read in.


To enter the track title

① Select the track number.

1. Select the disc number.

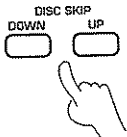


2. Select the track number.

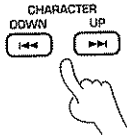


3. Press the SET key.



② Enter the track title.

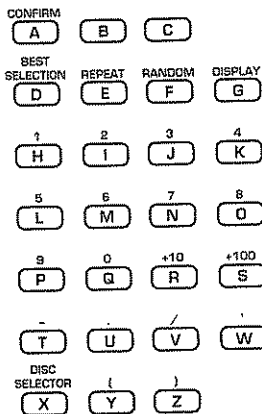

③ Store the track title.

 


To change the character type

The type of characters which can be entered is switched each time the CHARA. key is pressed.


CHARA./P.MODE

①	←ABC→	Capital letters : ABC.....XYZ.....
②	←abc→	Small letters : abc.....xyz.....
③	←0123456789 space !"# \$ % & ' () * + , - . / : ; < = > ? @ ^ _ ` 0.....	Numbers/symbols : 0 1 2 3.....7 8 9 space !"# \$ % & ' () * + , - . / : ; < = > ? @ ^ _ ` 0.....

 DISPLAY-A



- If a desired character is not provided on the remote control keys, input the character as follows. Press the **CHARACTER DOWN/UP** key (◀▶) until the character to be entered comes to the position of the flashing cursor. Then, press the **SET** key.
- The characters also can be selected with the **DISC SKIP** knob on the main unit (provided that the **OPERATION-A** indicator is lit). Turn the knob until the character to be entered comes to the position of the flashing cursor. Then, press the **SET** key.

 

Flashing cursor

- One character is set and the cursor goes to the next digit.
- Repeat this to enter the track title.



- Up to 20 track titles can be registered per disc by repeating steps from ①-2 to ③ for each.

To exit title input mode

Press the **MODE** key.

Notes
 1. For discs corresponding to CD-TEXT, a new title can not be registered.
 2. As the entered title and the CD-TEXT title information are memorized, the information may be displayed even when a disc has been removed.
 Download from www.Somanuals.com. All Manuals Search And Download.

Preparation

- Close the door panel.




To change or delete a title

1 Perform steps **1** and **2** of "Assigning Title".


2 Change or delete characters one by one.

Change

① Move the cursor to the desired character (to be changed).

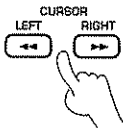


② Select a character.

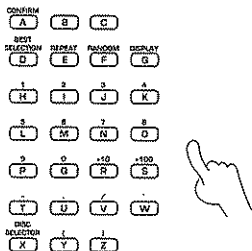


③ Delete the unnecessary character.
(See "Deletion".)

 - Call the disc to be changed.
- Deletion mode is cancelled when the **MODE** key is pressed.



← Move with the ◀ ▶ keys →

 - If the title to be changed is too long to be displayed on the display section, press the ◀ or ▶ key to scroll the display so that the characters hidden until then appear.




Flashing cursor

- If a desired character is not provided on the remote control keys, input the character as follows. Press the **CHARACTER DOWN/UP** key (◀, ▶) until the character to be entered comes to the position of the flashing cursor. Then, press the **SET** key.
- The characters also can be selected with the **DISC SKIP** knob on the main unit (provided that the **OPERATION-A** indicator is lit). Turn the knob until the character to be entered comes to the position of the flashing cursor. Then, press the **SET** key.

Deletion

① Move the cursor to the desired character (to be deleted).

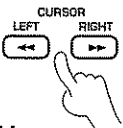

② Press the DELETE key.



To enter a space



- When a title is to be deleted, delete all characters one by one.

3 Execute title change or deletion.



To quit title input mode
Press the **MODE** key.


 
Listening to music by genre (MUSIC TYPE mode)

CD-3280M (EN)

25

 
Discs can be registered separately by 26 types of music genres.

Preparation

- Load discs in the carousel. 
- Close the door panel.
- Set the Mechanism-A to stop mode.
- Check that the Mechanism-A is in the normal play TRACK mode. 

In regard to disc information reading

The entered music type or user file is read in to the disc with the following timing.

- When that disc is played.
- When ALL DATA READ is executed. 

Do not move or exchange discs until the disc information has been read in.


Registration of music type (MUSIC TYPE SET mode)

1 Activate the music type set mode.


① Press the MODE key.

MODE

② Select "MUSIC TYPE".

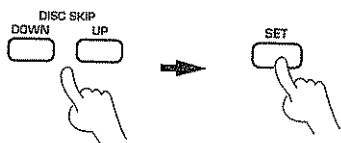

③ Select "MUSIC TYPE SET".

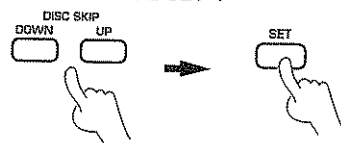

- When the MODE key is pressed during MUSIC TYPE SET mode, the MUSIC TYPE SET mode is cancelled.

Each press switches the modes as follows:

- ① MUSIC TYPE
- ② DISC SEARCH
- ③ TITLE INPUT
- ④ ALL DATA READ
- ⑤ ALL INFORMATION
- ⑥ DTS DISC SKIP


DISPLAY-A : The display flashes.

MUSIC TYPE

DISPLAY-A : The display flashes.

MUSIC TYPE SET

2 Select the music type.

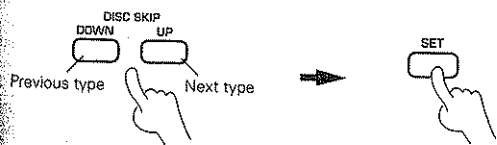

Each press switches the modes as follows:

Adult Contemporary → Alternative Rock → Children's Music → Classical → Contemporary Christian → Country → Dance → Easy Listening → Folk → Gospel → Hip Hop → Jazz → Latin → Musical → New Age → Opera → Operetta → Pop Music → RAP → Reggae → Rock Music → Rhythm & Blues → Sound Effects → Sound Track → Spoken Word → World Music.....

DISPLAY-A : When "Rock Music" is selected

Rock Music


- When the selected disc corresponds to CD-TEXT and contains a genre code, that genre code is registered as the music type.

To confirm the genre code ...

"Displaying all the text information"



3 Select the desired disc.

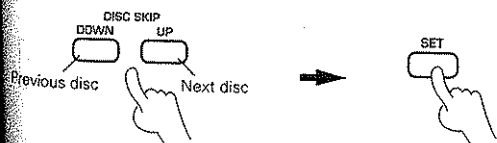

- The disc number can be selected directly by using the numeric keys in place of the DISC SKIP keys.
- Repeat step 2 if it is required to register another disc in the music type selected above.
- To register another music type, exit the MUSIC TYPE SET mode once and restart from the beginning.

To quit MUSIC TYPE SET mode


Press the MODE key.

Creation of user's disc file (USER FILE SET mode)


Eight user files are available for registering desired discs. This makes the user possible to create files registering the discs of a favorite artist(s) or the user's favorite discs.

1 Activate the user file set mode.


① Press the **MODE** key.

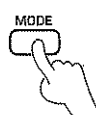

② Select "MUSIC TYPE".

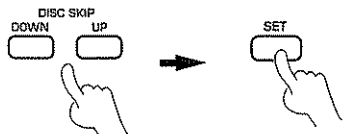

③ Select "USER FILE SET".

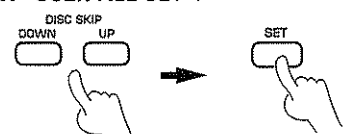

- When the **MODE** key is pressed during USER FILE SET mode, the USER FILE SET mode is cancelled.

Each press switches the modes as follows:

- ① MUSIC TYPE
- ② DISC SEARCH
- ③ TITLE INPUT
- ④ ALL DATA READ
- ⑤ ALL INFORMATION
- ⑥ DTS DISC SKIP


DISPLAY-A : The display flashes.

MUSIC TYPE

DISPLAY-A : The display flashes.

USER FILE SET


2 Select the desired user file.

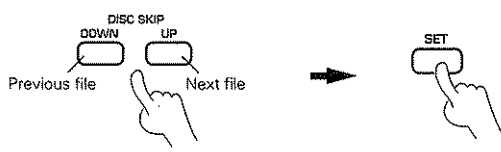

Each press switches the modes as follows:

USER FILE 1 → USER FILE 2 → USER FILE 3 → USER FILE 4 →
USER FILE 5 → USER FILE 6 → USER FILE 7 → USER FILE 8.....

3 Select the desired disc.

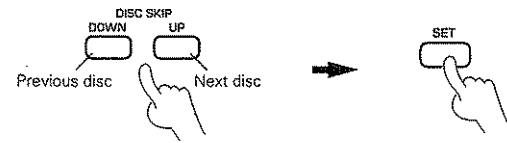

- The disc number can be selected directly by using the numeric keys in place of the **DISC SKIP** keys.
- Repeat step ② if it is required to register another disc in the user file selected above.
- To register another user file, exit the USER FILE SET mode once and restart from the beginning.
- The same disc can be registered in more than one user files.
- If the **CHECK** key is pressed while the disc number is blinking, the music type of the disc is displayed provided that its music type has been registered.


To quit USER FILE SET mode

Press the **MODE** key.

To clear the music type or user file registered for a disc

① Play the music type or user file. - 27

② Press the **CLEAR** key during playback of the disc to be deleted.



DISPLAY-A :

D122 TYPE CLEAR

When music types or user files have been registered for the discs, it is possible to enjoy playback of discs of the selected music type or user file. Random playback for a selected music type or user file is also possible.

 
Preparation

- Load discs in the carousel. → 12
- Close the door panel. → 12
- Register music type or user file. → 25 → 26
- Set the Mechanism-A to stop mode. → 15
- Check that the Mechanism-A is in the normal play TRACK mode. → 15

Playing the music type or user file (MUSIC TYPE PLAY mode) (Mechanism-A only)

1 Activate the music type play mode.

- ① Press the MODE key.



- ② Select "MUSIC TYPE".



- ③ Select "MUSIC TYPE PLAY".



- When the **MODE** key is pressed during MUSIC TYPE PLAY mode, the MUSIC TYPE PLAY mode is cancelled.

Each press switches the modes as follows:

- ① MUSIC TYPE
- ② DISC SEARCH
- ③ TITLE INPUT
- ④ ALL DATA READ
- ⑤ ALL INFORMATION
- ⑥ DTS DISC SKIP


DISPLAY-A : The display flashes.

MUSIC TYPE

DISPLAY-A : The display flashes.

MUSIC TYPE PLAY

2 Select the music type or user file.

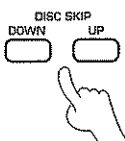


- Press repeatedly until the desired music type or user file is displayed.

DISPLAY-A : When "USER FILE 1" is selected

USER FILE 1

 3 Start playback.



- Playback is performed in increasing order of the disc numbers they were registered for the respective music type or user file. Skipping to the next disc is done when the ►► key is pressed.
- If the disc to be played is being played in Mechanism-B, the disc will be skipped.
- Each time the **CHECK** key is pressed, the registered disc numbers are displayed in increasing order of the disc numbers.

For repeated playback

Press the **REPEAT** key to select "REPEAT ON".

For random playback

Press the **RANDOM** key.

- Select "RANDOM OFF" to quit random playback.

For continuous playback

Press the **CONTINUOUS PLAY** key.

To quit MUSIC TYPE PLAY mode

 
Press the **MODE** key.

DISPLAY-A

M. TYPE MODE OFF

Preparation

- Load discs in the carousel.
- Close the door panel.
- Input the title.
- Check that the Mechanism-A is in the normal play TRACK mode.



Searching a disc by the disc title

By inputting the initial letter of the desired disc title, discs which have the disc titles beginning with that character can be searched in sequence.

1 Activate the disc search mode.

① Press the **MODE** key.

② Select "DISC SEARCH".

③ Select "CHARAC. SEARCH".

- When the **MODE** key is pressed during DISC SEARCH mode, the DISC SEARCH mode is cancelled.

Each press switches the modes as follows:

- ① MUSIC TYPE
- ② DISC SEARCH
- ③ TITLE INPUT
- ④ ALL DATA READ
- ⑤ ALL INFORMATION
- ⑥ DTS DISC SKIP

DISPLAY-A : The display flashes.

DISC SEARCH

DISPLAY-A : The display flashes.

CHARAC. SEARCH

DISPLAY-A : When initial letter "A" is selected.

< A > SEARCH ?

2 Input the initial letter of the disc title to be searched.

Hand pressing the SET key.

- The type of characters (capital letters or numbers/symbols) is switched each time the **CHARA.** key is pressed.
- If a desired character is not provided on the remote control keys, input the character as follows. Press the **CHARACTER DOWN/UP** key (◀▶) repeatedly to select the character, and press the **SET** key.
- The characters also can be selected with the **DISC SKIP** knob on the main unit (provided that the **OPERATION-A** indicator is lit). Turn the knob to select the character, and press the **SET** key.
- The disc titles beginning the specified character will be scrolled in the display.
- If there is no disc title beginning with the specified character, "**NO ENTRY**" will be displayed.

To quit DISC SEARCH mode

Press the **MODE** key.

To search the next disc






Hand pressing the DISC SKIP UP key.

To play the searched disc

Hand pressing the ENTER key.

- If the selected disc is being played on Mechanism-B, blinking "**DISCXXX BUSY!!**" is displayed and the disc will not be played.

Preparation

- Load discs in the carousel. →  → 
- Close the door panel.
- Register music type or user file. →  → 
- Check that the Mechanism-A is in the normal play TRACK mode. → 

Searching the music type or user file


The discs registered in the specified music type or specified user file can be searched in sequence.

1 Activate the disc search mode.


- ① Press the MODE key.



- ② Select "DISC SEARCH".

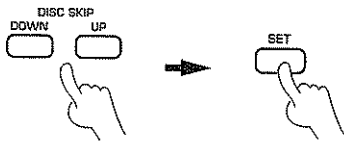

- ③ Select "M. TYPE SEARCH".

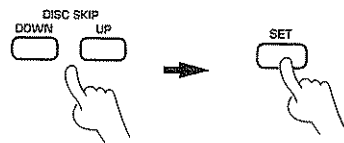

- When the MODE key is pressed during DISC SEARCH mode, the DISC SEARCH mode is cancelled.

Each press switches the modes as follows:

- ① MUSIC TYPE
- ② DISC SEARCH
- ③ TITLE INPUT
- ④ ALL DATA READ
- ⑤ ALL INFORMATION
- ⑥ DTS DISC SKIP


DISPLAY-A : The display flashes.

DISC SEARCH

DISPLAY-A : The display flashes.

M. TYPE SEARCH

2 Select the music type or user file to be searched.

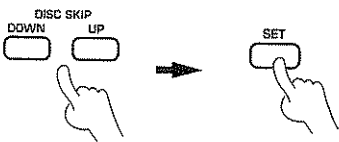

Each press switches the modes as follows:


USER FILE 1 → USER FILE 2 → USER FILE 3 → USER FILE 4 →
 USER FILE 5 → USER FILE 6 → USER FILE 7 → USER FILE 8 →
 Adult Contemporary → Alternative Rock → Children's Music →
 Classical → Contemporary Christian → Country → Dance →
 Easy Listening → Folk → Gospel → Hip Hop → Jazz → Latin →
 Musical → New Age → Opera → Operetta → Pop Music → RAP
 → Reggae → Rock Music → Rhythm & Blues → Sound Effects
 → Sound Track → Spoken Word → World Music.....

- The disc titles registered in the specified music type or user file will be scrolled in the display.
- If there is no disc registered in the specified music type or user file, "NO ENTRY" will be displayed.

To quit DISC SEARCH mode

Press the MODE key.

To search the next disc

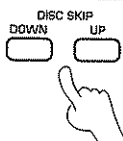

To play the searched disc



- If the selected disc is being played on Mechanism-B, blinking "DISCXXX BUSY!" is displayed and the disc will not be played.

Listening to your favorite titles (BEST SELECTION mode) (Mechanism-A only)

CD-3280M (EN)

You can select only your favorite titles and register them as the best selection. Use the following procedure to register favorite tracks in the best selection file while playing a CD.

 
Preparation

- Load discs in the carousel.



Registration of best selection file

1 Play the track to be registered.



- Only the track being played can be registered.

2 Register it in the best selection file.



DISPLAY-A

BEST01 D104 T03

3 Register other favorite tracks by performing steps 1 and 2 for each of them.

- Up to 32 tracks can be registered. "FULL" is displayed when no more disc is acceptable.

Playing the best selection file

1 Check that the Mechanism-A is in the normal play TRACK mode, and set the Mechanism-A to stop mode.

2 Press the BEST SELECTION key.



DISPLAY-A

BEST SELECTION

- The tracks are played in the order they are registered.
- If a track to be played is located in the disc played on Mechanism-B, that track will be skipped.
- Each time the CHECK key is pressed, the disc numbers and track numbers are displayed.

For repeated playback

Press the REPEAT key to select "REPEAT ON".

For continuous playback

Press the CONTINUOUS PLAY key.

To quit BEST SELECTION mode

Press the ■ key during playback.

- The recorded contents remain stored even when best selection mode is quit.

To delete the registered best selection

This is done during best selection mode.

- 1 Play the track to be cleared.
- 2 Press the CLEAR key.

DELETE
/CLEAR




 
DISPLAY-A

BEST02 CLEAR

Continuous playback

With this feature, the time required for disc change can be minimized so even different discs can be played naturally and almost continuously. The same audio signal is output at both OUTPUT-A and OUTPUT-B.

Preparation

- Load discs into the carousel. → 
- Close the door panel. → 
- Set the Mechanism-B to stop mode.

Initiate the continuous play mode.



DISPLAY-B

CONTINUOUS PLAY

- The **OPERATION A-B** key is set to A during continuous play mode.
- When the door panel is opened, the continuous play mode is released and playback also stops.
- It is not possible to select a DTS disc during continuous play mode.

To quit continuous play mode
Press the **CONTINUOUS PLAY** key.

For continuous playback in normal play mode → 

For continuous playback in PGM mode → 

For continuous playback in ALL DISC RANDOM mode
→ 

For continuous playback in MUSIC TYPE PLAY mode
→ 

For continuous playback in BEST SELECTION mode
→ 

Registration of DTS discs

CD-3280M (EN)

 
When playing DTS-encoded discs, excessive noise will be exhibited from the analog stereo outputs. If DTS discs are registered beforehand, the audio signal from the Mechanism-B (analog OUTPUT-B) is skipped. Use the following procedure before playing the DTS disc.

Preparation


- Load DTS discs into the carousel. → 12
- Check that the Mechanism-A is in the normal play TRACK mode. → 15

1 Activate the DTS DISC SKIP mode.

① Press the MODE key.



② Select "DTS DISC SKIP".

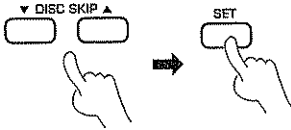


- When the MODE key is pressed during DTS DISC SKIP mode, the DTS DISC SKIP mode is cancelled.

Each press switches the modes as follows:

- ① MUSIC TYPE
- ② DISC SEARCH
- ③ TITLE INPUT
- ④ ALL DATA READ
- ⑤ ALL INFORMATION
- ⑥ DTS DISC SKIP

2 Select "SET DTS DISC".

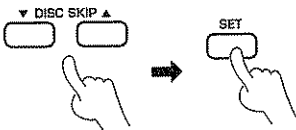


Each press switches the modes as follows:


- ① SET DTS DISC
- ② CANCEL DTS DISC

3 Select the DTS disc.

Select the disc number.

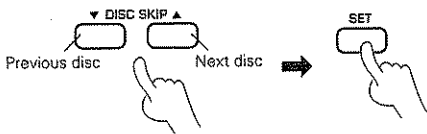

 - The disc number can be selected directly by using the numeric keys in place of the DISC SKIP keys.
- To register another DTS disc, repeat the procedure from step 3.




To quit DTS DISC SKIP mode
Press the MODE key.

To delete the DTS registration


Use the following procedure before moving or changing a DTS disc, and register the disc again.

① Perform steps 1 of "Registration of DTS discs".

② Select "CANCEL DTS DISC".

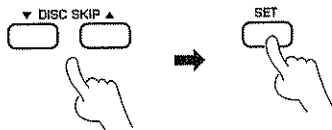


③ Select the DTS disc to be deleted.

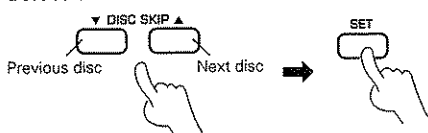

Each press switches the modes as follows:

 - ① SET DTS DISC
- ② CANCEL DTS DISC



To quit DTS DISC SKIP mode
Press the MODE key.



When a DTS disc is played, the audio signal is not output at the analog OUTPUT A jacks.

Timer operation (Mechanism-A only)


CD-3280M (EN)

33

As this unit incorporate the timer standby function, playback can be started at desired moment if a commercially available audio timer is combined with this unit.

Preparation


- Load discs in the carousel.
- Close the door panel.
- Select the Mechanism-A.
- Connect the system components so that their power can be switched on by the timer.
- Read the instruction manual of the timer carefully.

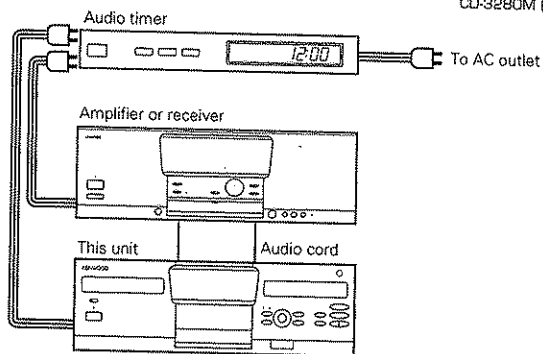

1 Set the power switches of the system components to the ON positions.


2 Select the disc to be played.

① Select the disc number.

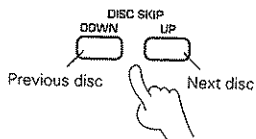

Within 8 seconds!

 ② Play the disc.



- The disc number can be selected directly by using the **DISC SELECTOR** and numeric keys in place of the **DISC SKIP** keys.

- If the selected disc is being played on Mechanism-B, blinking "**DISCXXX BUSY!**" is displayed. In this case, either stop Mechanism-B and select the same disc again, or select another disc.

3 Set the listening volume.

- ① Adjust the volume on the amplifier or receiver.
- ② Stop playback.

4 Set the timer for the desired ON time.


5 Set the **TIMER PLAY** switch to ON.



- Read the instruction manual of the timer carefully.


- When the set time comes, playback will start automatically.
- The playback mode will be TRACK mode.

Disc handling precautions

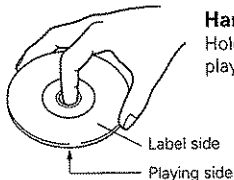


Handling

Hold the discs so that you do not touch the playing surface.

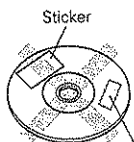

Sticky paste

 Do not attach paper or tape to either the playing side or the label side of the discs.




Cleaning

If fingerprints or foreign matter become attached to the disc, lightly wipe the disc with a soft cotton cloth (or similar) from the center of the disc outwards in a radial manner.

Storage

When a disc is not to be played for a long period of time, remove it from the player and store it in its case.

Discs which can be played with this unit

CD (12 cm), and the audio part of CDV, CD-G, CD-EG and CD-EXTRA. Use discs that comply with the IEC standard, for example a disc carrying the  marking on the label surface.

- An 8 cm CD cannot be played back.

Never play a cracked or warped disc

During playback, the disc rotates at high speed in the player. Therefore, to avoid danger, never use a cracked or deformed disc or a disc repaired with tape or adhesive agent. Please do not use discs which are not round because they may cause a malfunction.

Disc accessories

The disc accessories (stabilizer, protection sheet, protection ring, etc.) which are marketed for improving the sound quality or protecting discs as well as the disc cleaner should not be used with this system because they may cause malfunction.

Maintenance of the unit

When the front panel or case becomes dirty, wipe with a soft, dry cloth. Do not use thinner, benzine, alcohol, etc. for these agents may cause discoloration.

Caution on condensation

Condensation (of dew) may occur inside the unit when there is a great difference in temperature between this unit and the outside. This unit may not function properly if condensation occurs. In this case, leave the unit for a few hours with the power left ON, and restart the operation after the condensation has dried up.

Be specially cautious against condensation in a following circumstance:

When this unit is carried from a place to another across a large difference in temperature, when the humidity in the room where this unit is installed increases, etc.

Memory backup function

Stored contents for at least 3 weeks after power plug is unplugged from the AC outlet.

Power status (ON or OFF),
Title registration contents
Music type registration contents
User file registration contents
Best selection registration contents
DTS registration contents

In regard to contact cleaner

Do not use contact cleaners because it could cause a malfunction. Be specially careful not to use contact cleaners containing oil, for they may deform the plastic component.

Note related to transportation and movement

Before transporting or moving this unit, carry out the following operation:

1. Remove all discs from the carousel and close the door panel.
2. Confirm that the flashing "NO DISC" display has changed to steady lighting, and then switch off the power.

DISPLAY-A and DISPLAY-B

NO DISC

3. Wait a few seconds, then disconnect the power plug.

Operation to reset

The microcomputer may malfunction (impossibility to operate, erroneous display, etc.) when the connection cords are unplugged while power is ON or due to an external factor. In this case, execute the following method to reset the microcomputer and return it to normal condition.

Unplug the power cord from the power socket and plug the power cord into the socket again.

To reset the registered contents

The registered contents for title, music type, user file, best selection and DTS disc can be reset by the following procedure.

Unplug the power cord from the power socket, and while holding the **■** key depressed, plug the power cord into the socket again.

Remote control unit

Symptom	Cause	Remedy
Remote control operation is not possible.	<ul style="list-style-type: none"> ● Batteries are exhausted. ● The remote control unit is too far away from the main system, controlling angle is too large, or there is an obstacle in between. 	<ul style="list-style-type: none"> ● Replace with new batteries. → 11 ● Operate the remote control unit within the controllable range. → 11

CD Player

Symptom	Cause	Remedy
No power is applied with the POWER key ON.	<ul style="list-style-type: none"> ● Power plug is loosely connected. ● With the power plug connected to the switched AC outlet of an amplifier, the power of the amplifier is turned off. 	<ul style="list-style-type: none"> ● Insert the power plug firmly to the AC outlet. ● Insert the power plug to the wall AC outlet.
Disc is loaded, player does not play.	<ul style="list-style-type: none"> ● Disc is loose. ● Disc is dirty. ● Disc is cracked. ● Condensation occurred on the optical lens unit. 	<ul style="list-style-type: none"> ● Insert disc properly. → 12 ● Wipe off the dust on the surface of the disc referring to "Disc handling precautions". → 34 ● Replace the disc with a new one. ● Leave the player for about 1 hour so that the condensation is removed. → 34
No sound.	<ul style="list-style-type: none"> ● Disc is not loaded. ● Play mode is not entered (The play indicator is not lit). ● Disc is too dirty. ● Disc is cracked. ● The connection cords are inserted loosely. 	<ul style="list-style-type: none"> ● Load a disc and press the ▶/ key. → 12 ● Press the ▶/ key. ● Wipe off the dust on the disc surface referring to "Disc handling precautions". → 34 ● Replace the disc with a new one. ● Connect all connection cords firmly. → 8
Music is interrupted. (Sound is skipped.)	<ul style="list-style-type: none"> ● Disc is too dirty. ● Disc is cracked. ● Oscillation is applied to this unit. 	<ul style="list-style-type: none"> ● Wipe off the dust on the disc surface referring to "Disc handling precautions". → 34 ● Replace the disc with a new one. ● Try selecting a place where no strong vibrations occur by changing the installation place, etc.
Disc selection is not possible.	<ul style="list-style-type: none"> ● MUSIC TYPE PLAY mode is selected. 	<ul style="list-style-type: none"> ● Press the MODE key to quit MUSIC TYPE PLAY mode. → 27
Disc begins to play when power is switched ON.	<ul style="list-style-type: none"> ● The TIMER PLAY switch is set to ON. 	<ul style="list-style-type: none"> ● Set the TIMER PLAY switch to OFF unless timer playback is required. → 33

Specifications

CD-3280M (EN)

36

[Format]

System Compact disc digital audio system
Laser Semiconductor laser

[D/A Convertors]

D/A Conversion 1 Bit
Oversampling 8 fs (352.8 kHz)

[Audio]

Frequency response 4 Hz ~ 20 kHz, \pm 0.5 dB
Signal to noise ratio More than 97 dB
Dynamic range More than 94 dB
Total harmonic distortion + noise
..... Less than 0.005% (at 1 kHz)
Channel separation More than 92 dB (at 1 kHz)
Wow & flutter Unmeasurable Limit
Output level/impedance
Fixed 2.0 V/0.9 k Ω
Digital output
Coaxial 0.5 Vp-p/75 Ω

[General]

Power consumption 14 W
Dimensions
W : 440 mm (17-5/16")
H : 163 mm (6-7/16")
D : 479 mm (18-7/8")
Weight (Net) 9.0 kg (19.8 lb)



1. KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.
2. The full performance may not be exhibited in an extremely cold location (under a water-freezing temperature).

For the U.S.A.

FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

For the U.S.A.

CAUTION:

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

KENWOOD CORPORATION
2967-3, ISHIKAWA-CHO, HACHIOJI-SHI,
TOKYO, JAPAN

KENWOOD CORP. CERTIFIES THIS EQUIPMENT CON-
FORMS TO DHHS REGULATIONS NO. 21 CFR 1040.10,
CHAPTER 1, SUBCHAPTER J.

KENWOOD

For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on this product.
Location: Back Panel

Model _____ Serial Number _____

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>