

# KENWOOD

UD COMPONENT SYSTEM/COMPACT HI-FI SYSTEM

## UD-403

### INSTRUCTION MANUAL

KENWOOD CORPORATION

#### **For your records**

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on the product.


Model \_\_\_\_\_ Serial Number \_\_\_\_\_

#### **Unpacking**

Unpack the unit carefully and make sure that all accessories are put aside so they will not be lost. Examine the unit for any possibility of shipping damage. If your unit is damaged or fails to operate, notify your dealer immediately. If your unit was shipped to you directly, notify the shipping company without delay. Only the consignee (the person or company receiving the unit) can file a claim against the carrier for shipping damage.

We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in the future.

#### **Accessories**

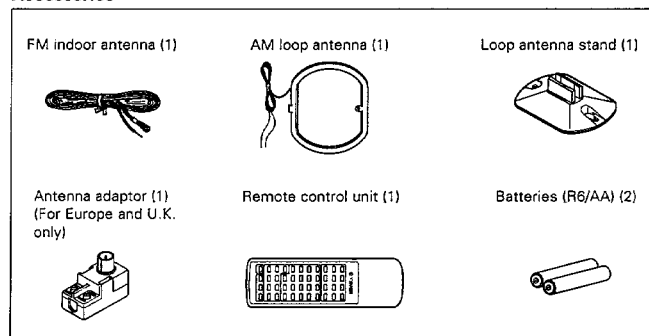

B60-2145-00 (SD) (T) (AF)

# Before applying power

**Caution : Read this page carefully to ensure safe operation**

UD-403 (E)

Units are designed for operation as follows.

- 2
- U.S.A. and Canada ..... AC 120 V only
  - Europe and U.K. .... AC 230 V only
  - Australia ..... AC 240 V only
  - \*Other countries ..... AC 110-120 / 220 / 230-240 V switchable

## For the United Kingdom

### Factory fitted moulded mains plug

1. The mains plug contains a fuse. For replacement, use only a 13-Amp ASTA-approved (BS1362) fuse.
2. The fuse cover must be refitted when replacing the fuse in the moulded plug.
3. Do not cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or adapter, or consult your dealer. If nonetheless the mains plug is cut off, remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.





IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue : Neutral  
Brown : Live

Do not connect those leads to the earth terminal of a three-pin plug.

## Safety precautions

**WARNING :** TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
	THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.	
	THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.	

### The marking of products using lasers (Except for some areas)

**CLASS 1  
LASER PRODUCT**

The label is attached to the rear panel and says that the component uses laser beams that have been classified as Class 1. It means that the unit is utilizing laser beams that are of a weaker class. There is no danger of hazardous radiation outside the unit.

## Special features



### Easy operation

Nearly all operations for CD, tuner, and cassette deck can be done just with the self-illuminated basic operation keys. (Color keyed function control).  
When the input selector is operated, the power is automatically switched on and play (reception) starts (except AUX).



### Dynamic rotary volume control - 8

When adjusting the volume, fast turning of the volume control produces a larger volume change for the same angle of rotation of the VOLUME CONTROL knob. Slow turning produces a small volume change, thus permitting fine adjustment.



### L.L.C. (Low Level Control) - 8

For listening at a low level at night etc., the volume can be lowered by one-touch operation. At this time, the low and the high range are compensated automatically for a more natural sound reproduction. The level at the time of low level can be changed as desired.



### 3-Disc carousel CD player - 9

The CD player is of the 3-disc carousel type which can accommodate up to 3 discs at a time. The disc can be replaced easily, even during playback of another disc. This feature is useful when playing various discs for long periods.



### One-touch edit - 26, 27

Only desired tracks from discs or an entire disc can be recorded on tape with a one-touch operation. This feature allows you to produce custom tapes.



### Versatile tone and sound field adjustment - 28

Dolby Pro Logic and Dolby 3 Stereo functions for recreation of the powerful sound of a movie theater are built in. In addition, our original sound quality and sound location modes also are provided. The powerful sound of a movie theater is reproduced.  
DOLBY PRO LOGIC, DOLBY 3 STEREO

The tone can be selected according to the genre of the music played:  
POP, ROCK, JAZZ, CLASSIC.

The sound field can also be selected as desired:  
ARENA, JAZZ CLUB, STADIUM, HIT MASTER.

## Contents

	UD-403 (En)
▲ Before applying power .....	2
▲ Safety precautions .....	2
System connection .....	4
Operation of remote control unit .....	6
Clock adjustment .....	7
Sound adjustment functions .....	8
Playback of CD .....	9
Playing tracks in order from track No.1 .....	9
Playback from desired track .....	10
Programming tracks in desired order .....	11
Repeated playback .....	13
Playback in a random order (Random playback) .....	15
Playback of tape .....	16
Tape playback .....	16
Searching for the desired music program (DPSS) .....	18
Broadcast reception .....	19
Receiving broadcast station .....	19
Storing radio stations in memory (Station preset) .....	20
Recording (Deck B only) .....	21
Preparation for recording .....	21
Recording (Deck B only) .....	22
Copying tape (Tape dubbing) .....	23
CD edit recording .....	24
Select the type of edit recording .....	24
Timed edit recording .....	25
Recording desired tracks while playing a CD .....	26
Recording an entire disc .....	27
Tone adjustment .....	28
Demonstration .....	28
Playing music with the desired tone .....	29
Enjoying music with the presence effect (presence modes) .....	29
DOLBY PRO LOGIC surround adjustment .....	30
DOLBY PRO LOGIC surround playback .....	31
DOLBY 3 STEREO adjustment and play .....	32
Easy Karaoke singing (HIT MASTER) .....	33
Timer operation .....	34
Timer programming .....	34
Sleep timer .....	36
Maintenance .....	37
In case of difficulty .....	39
Specifications .....	42



### Convenient timer functions - 34

In addition to the possibility of storing up to 2 timer programs in memory, the following functions are available.

AI timer: When the power is turned ON by the timer, the sound level increases gradually.

Sleep timer: Useful when you want to go asleep while listening to music.

# System connection

UD-403 (E)

**Do not plug the power cord into the power outlet until all of the required connections have been made.**


- In case an associated system component is connected, also read the instruction manual of the component.
- Align the front panels of the unit flush.

### Malfunction of microcomputer



If operation is not possible or erroneous display appears even though all connections have been made properly, reset the microcomputer referring to 'In case of difficulty'.

→ 39

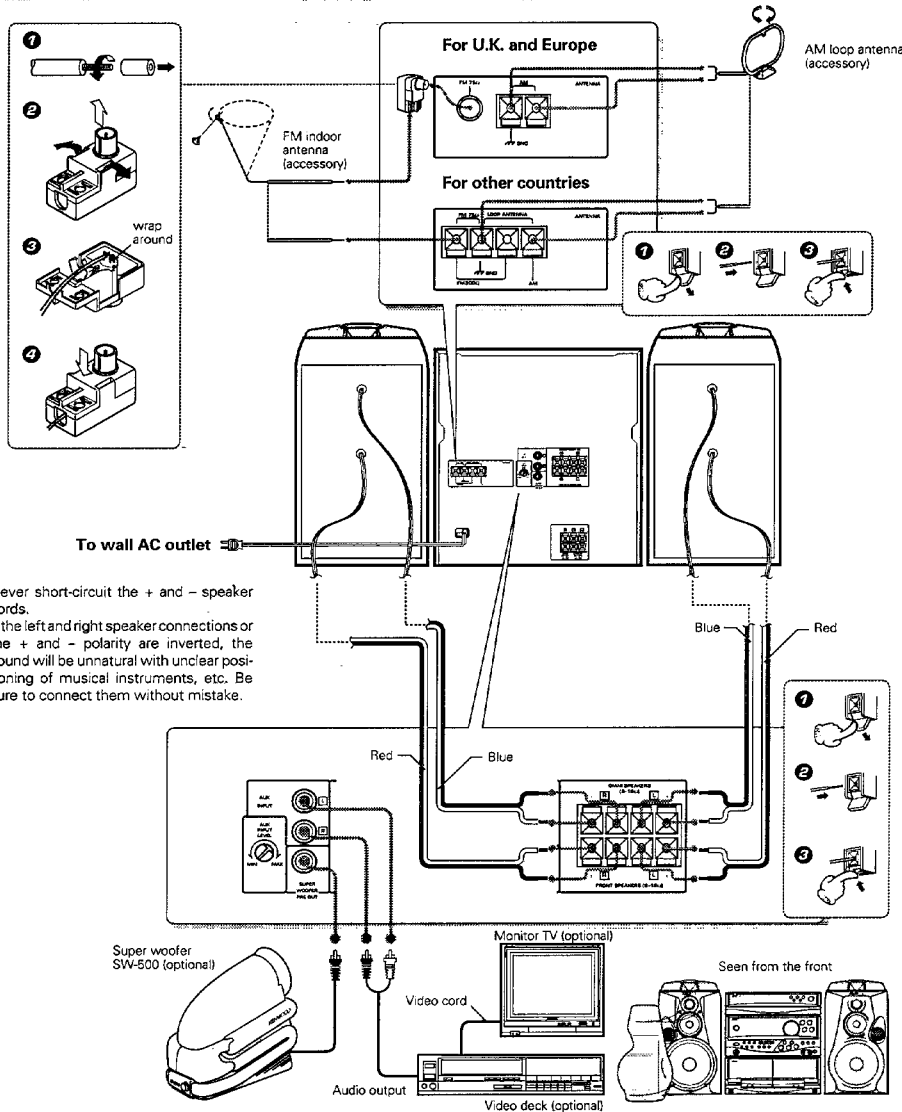


### Notes



1. Be sure to insert all connection cords securely. If their connections are imperfect, the sound may not be produced or noise may interfere.
2. Before plugging or unplugging a connection cord, be sure to unplug the power cord from the wall AC outlet, if connection cords are plugged or unplugged with the power cord left plugged in, malfunction or damage may result.

### Center speaker, rear speaker (optional) connection

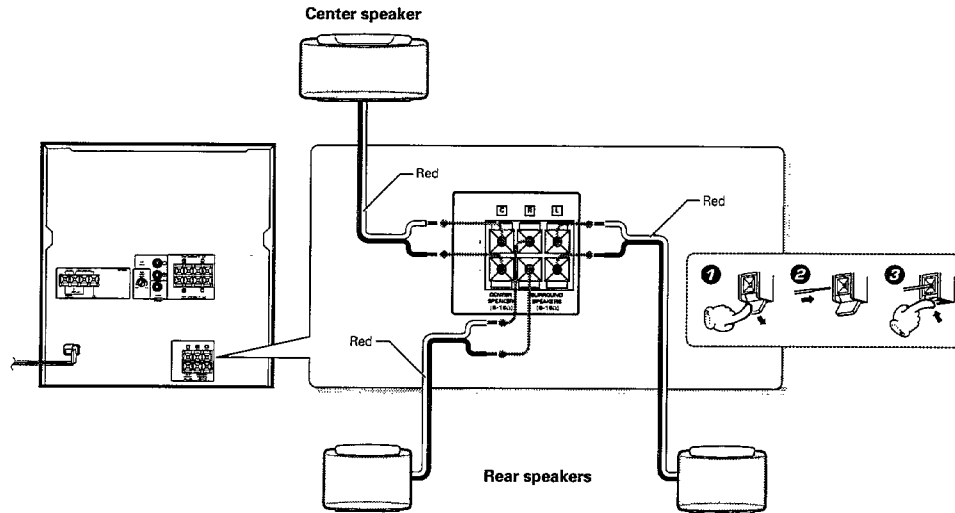


#### DOLBY PRO LOGIC surround mode

- 30

Video and LD software programs carrying the **DOLBY SURROUND** mark contain recording of the same Dolby Surround data as those used in movie theaters.

The DOLBY PRO LOGIC surround mode uses the Dolby Surround data and brings into home a similar sound field with full of presence to movie theater.

To use this mode, connect the rear (and center) speakers.

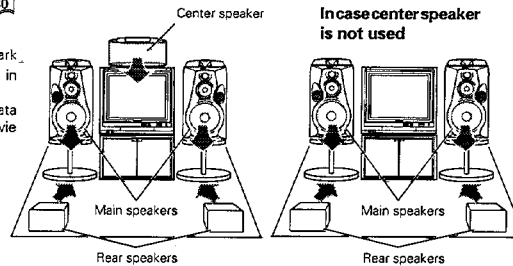


#### DOLBY 3 STEREO mode

- 32

If the left and right speakers are installed apart from each other, the center acoustic image (words, etc.) may vary depending on the listener's position. The DOLBY 3 STEREO mode provides an improved positioning of the center acoustic image regardless of the listening position.

To use this mode, connect the center speaker.

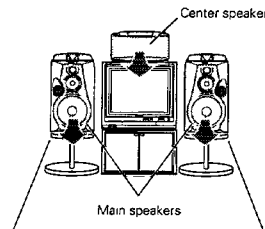

#### AUX INPUT LEVEL control

This control adjusts the input level from the component connected to the AUX INPUT jacks. Usually the AUX INPUT LEVEL should be set to MAX. Adjust the control when the input level is too high.


Note :

The AUX INPUT LEVEL control has been set to the MIN (minimum) position when the unit left the factory. Be sure to adjust the AUX INPUT LEVEL control if you connect an external component to the AUX jacks.


## Operation of remote control unit

### Loading batteries


➊ Remove the cover.

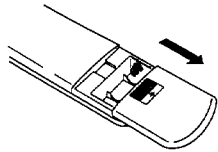

➋ Insert batteries.

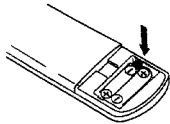

➌ Close the cover.

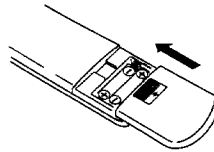


● Insert two R6 ("AA"-size) batteries following the polarity indications.

### Operation

After plugging the power cord of this unit, press the **POWER** key of the remote control unit to turn the power of the system **ON**. When the power is turned **ON**, press the key of the function to be operated.

● When pressing more than one remote control keys successively, press the keys securely by leaving an interval of 1 second or more between keys.

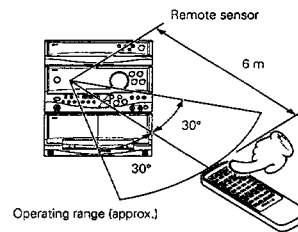

Model: RC-F4  
Infrared ray system

#### Notes



 
1. The provided batteries are intended for use in operation checking, and their service life may be short.
2. When the remote controllable distance becomes short, replace both of the batteries with new ones.
3. If direct sunlight or the light of a high-frequency fluorescent lamp (inverter type, etc.) is incident to the remote sensor, malfunction may occur. In such a case, change the installation position to avoid malfunction.

# Clock adjustment


This unit incorporates a clock function. Be sure to adjust the correct time before using the timer function.

## Preparation


Ensure that the power is OFF.




UD-403 (En)

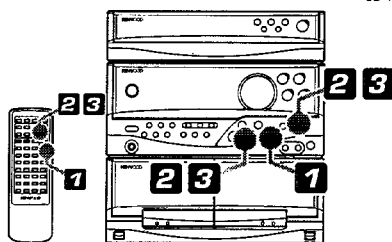

## 1 Activate the clock adjustment mode.


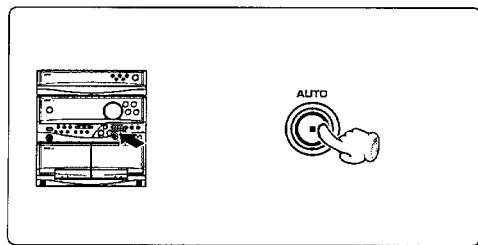


Example: Adjustment to 8:45

 



• The time display starts to blink.

## 2 Enter the figure of hour.

 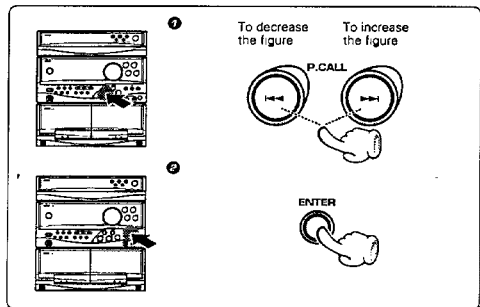

• The time of the day is represented in 12-hour AM/PM method.  
• Press the ENTER key. The hour is entered and the minute display starts to blink.

## 3 Enter the figure of minute.

 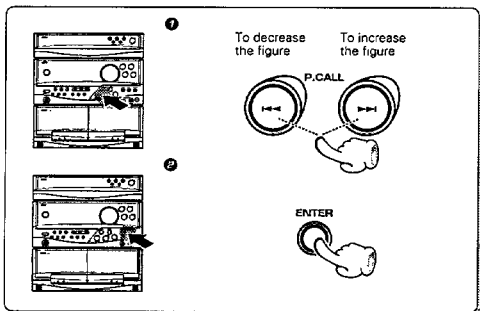



• If you make a mistake, restart from the beginning.  
• To adjust correct time, press the ENTER key at the same moment as a time announcement.  
• The time display blinks after a power failure or when the power cord has been unplugged from the AC outlet and plugged again. In such a case, adjust the clock again.

# Sound adjustment functions

  UD-403 (En)

## Power ON / OFF

Press the POWER key.



Remote control unit

- The power also is switched on when an input selector key (CD, TAPE, TUNER, etc.) is pressed.


## Listening through headphones

- 1 Insert the headphone plug into the PHONES jack.



- The sounds from all speakers are cut off.
- 2 Adjust the volume.

## Volume adjustment


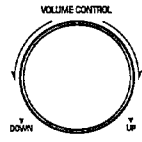


Remote control unit

- Quick turning produces a larger change amount.
- The display shows a reference value.



## Muting the sound temporarily

  Remote control unit only



- Press again to resume the original volume.
- This is cancelled when the volume or the L.L.C. is operated.

## Bass compensation (N.B.: Natural Bass circuit)

 
 


- This is cancelled when it is pressed again.

## Listening at low volume (L.L.C.: Low Level Control)

  The volume for quiet listening (L.L.C. volume) can be called by one-touch operation.

Press the L.L.C. key.      Blinking (5 sec) → Lit



When the key is pressed again after the L.L.C. indicator has finished flashing, this function is cancelled.

- The volume is reduced and the low range and the high range are compensated.
- When L.L.C. is ON, the change amount will be constant, independent of the speed with which the VOLUME CONTROL knob is turned.
- When the memorized L.L.C. volume is larger than the present volume, the volume will not change.
- The volume will not return to the original volume when L.L.C. is cancelled. Please adjust as required.



## To change the setting

- 1 Switch the L.L.C. to ON.
- 2 Adjust the volume with the VOLUME CONTROL knob or the remote control unit while the L.L.C. indicator is flashing.
- 3 Press the L.L.C. key once more while the L.L.C. indicator is flashing.

- When the L.L.C. volume exceeds 29, no compensation is executed for high and low range.

## Adjustment of the left/right volume balance

 
Within 5 sec!

- 1 Switch to balance mode.


- 2 Adjust the left/right balance.



The right sound becomes lower.



The left sound becomes lower.

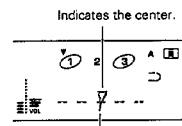

- Return to the original display is made when the BALANCE key is pressed or by waiting a few seconds.

## STANDBY mode of POWER switch


As long as the plug of the power cable of this unit is connected to a receptacle, independent of power ON/OFF, the time display is lit. The reason for this is that a small current is kept flowing for memory protection. This is called standby condition. As long as the time display is lit, power ON/OFF also can be done by remote control.



# Playback of CD

UD-403 (En)


When a disc is placed into the CD player in advance, this unit will be switched on automatically and the CD will be played when the CD (▶/⏮) key is pressed.

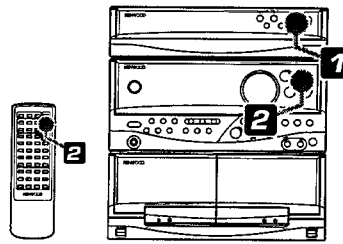

## Playing tracks in order from track No. 1



Use the following procedure to play a CD in the original order of tracks from track No. 1.

### 1 Load a disc.

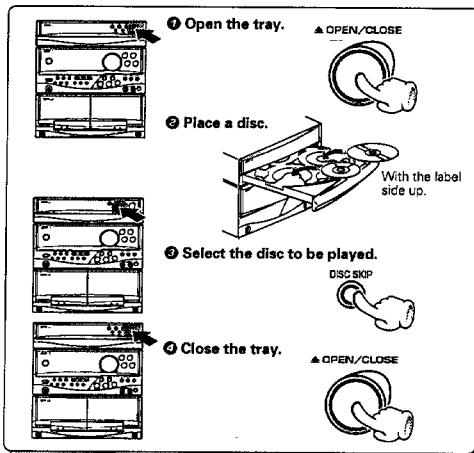

- Do not touch the played side of disc.
- Rotate the tray with the **DISC SKIP** key to insert the third disc.
- The tray of the disc to be played should come to the left position when the unit is seen from the front.


### 2 Start playback.

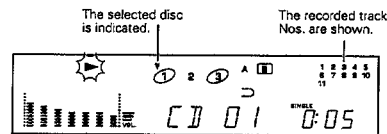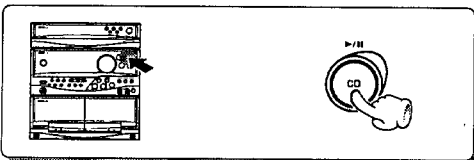

- After a few seconds, play starts from track No.1.

### Listening to a different disc


Select the disc number to be played.

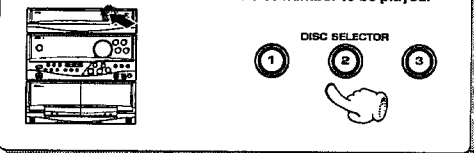

- The disc can also be selected with the **DISC SKIP** key.




### To pause playback

 

• Each press pauses and plays the CD alternately.

### To stop playback

 

## Playback from desired track

### Preparation

 
- Select the "CD" input.
- Load discs in the CD player.

### Selecting a track

① Select the disc.



② Select the desired track No.



• The disc can also be selected with the DISC SELECTOR key.



Press the numeric keys as shown below...

To enter track No. 23 : [+10], [+10], [3]

To select track No. 40 : [+10], [+10], [+10], [+10], [0]


• Playback starts from the selected track and continues on the subsequent tracks.

### Skipping tracks

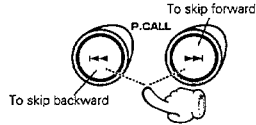 

- The track in the direction of the button pressed is skipped, and the selected track will be played from the beginning.
- When the P.CALL key is pressed once during playback, the track being played will be played from the beginning.

### Searching

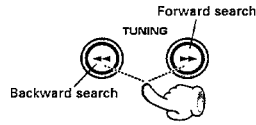


• Playback starts from the position where the key is released.

# Programming tracks in desired order





## Preparation



- Select the "CD" input.
- Load discs in the CD player.

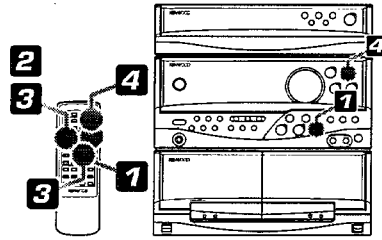

### 1 Check that the CD player is in the stop mode.

 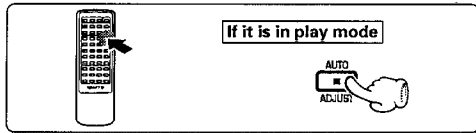

### 2 Light the "PGM" indicator.

 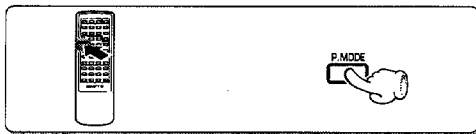



### 3 Enter track Nos. in the order you want to play them.

① Select the disc.


② Select the track.

- To select tracks from more than one disc, repeat ① and ②.
- To program all tracks of a CD, select the disc and then press the P.MODE key without selecting any tracks.

  - The disc can also be selected with the **DISC SELECTOR** key.
- Up to 32 tracks can be programmed. When "FULL" is displayed, no more tracks can be programmed.
- If you make a mistake, press the P.MODE key to quit the program mode and restart from step 2.



### 4 Start playback.

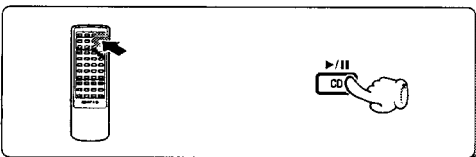

- Tracks will be played in the order they were programmed (in order of P Nos.).
- When the **⏮** or the **⏭** key is pressed during play, the program will jump to the preceding or the following track respectively.
- When the **⏮** key is pressed once during playback, the play position returns to the beginning of the current track being played.
- A space of several seconds is produced between tracks.



### To stop playback

 


### To add a track to the program

① Select the disc.



② Select the track.




● When a track No. is entered, the track will be added to the end of the existing program.

### To quit the program mode



 Goes off



● If the key is pressed during playback, normal playback in order of tracks resumes from the current track.

# Repeated playback

## Preparation

- Select the "CD" input.
- Load discs in the CD player.


## To repeat a disc

① Confirm that the "PGM" indicator is not lit.


If the "PGM" indicator is lit, press the P.MODE key to turn it off.

② Press to select DISC REPEAT.

③ Select the disc.

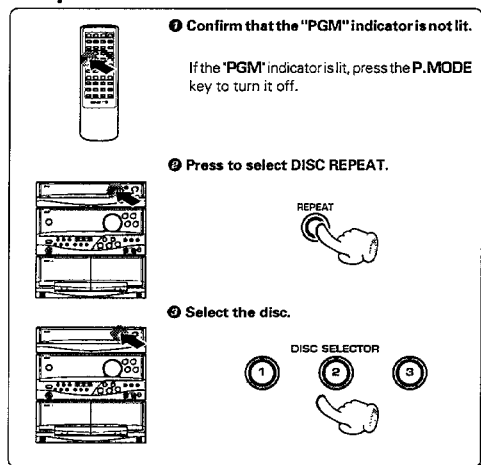


Confirm that this is not lit.

 

Each press switches the repeat mode.

 - ① REPEAT
- ② DISC REPEAT
- ③ ALL REPEAT
- ④ Repeat OFF



## To stop repeated playback

Press the REPEAT key twice.

- The "DISC" and "REPEAT" indicators go off and the playback following the current mode of the CD player starts.

## To repeat all discs


All tracks on all of the discs loaded on the disc tray will be played repeatedly.

① Confirm that the "PGM" indicator is not lit.


If the "PGM" indicator is lit, press the P.MODE key to turn it off.

② Press to select ALL REPEAT.

③ Select the disc to be played first.

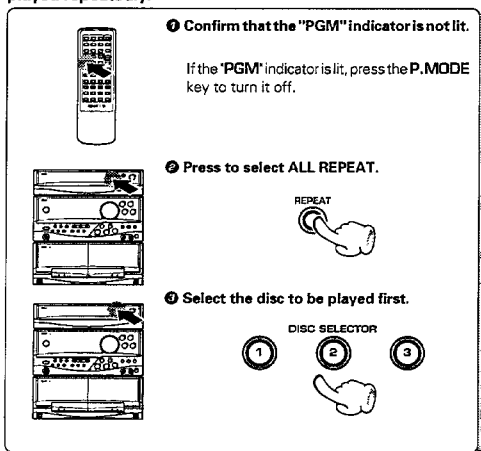


Confirm that this is not lit.

 

Each press switches the repeat mode.

 - ① REPEAT
- ② DISC REPEAT
- ③ ALL REPEAT
- ④ Repeat OFF



## To stop repeated playback

Press the REPEAT key again.

- The "ALL" and "REPEAT" indicators go off and the playback following the current mode of the CD player starts.



### To repeat only one track

❶ Confirm that the "PGM" indicator is not lit.  
If the "PGM" indicator is lit, press the P.MODE key to turn it off.

❷ Press to select REPEAT.

 
❸ Select the disc.

❹ Select the track.

Each press switches the repeat mode.

- ❶ REPEAT
- ❷ DISC REPEAT
- ❸ ALL REPEAT
- ❹ Repeat OFF

Lights up



### To stop repeated playback

Press the REPEAT key three times.

- The "REPEAT" indicators goes off and the playback following the current mode of the CD player starts.

### To repeat only the programmed tracks

❶ Light the "PGM" indicator.

 
 
❷ Select the disc.

❸ Select the track.


❹ Press to select REPEAT.

❺ Start playback.

"PGM" lights up



 - All of the programmed tracks will be played repeatedly.
- Up to 32 tracks can be programmed by repeating steps ❷ and ❸. When "FULL" is displayed, no more tracks can be programmed.



### To stop repeated playback

Press the REPEAT key again.

- The "REPEAT" indicator goes off and the playback following the current mode (PGM) of the CD player starts.


# Playback in a random order (Random playback)

As Tracks are selected at random, you can enjoy listening to for a long time.

## Preparation

- Select the "CD" input.
- Load discs in the CD player.

1  
2

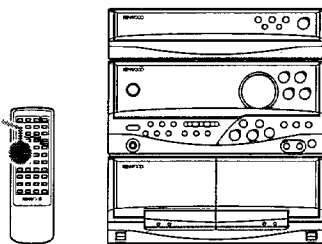


## 1 Confirm that the "PGM" indicator is not lit.

If the "PGM" indicator is lit, press the P.MODE key to turn it off.



 Confirm that this is not lit.




## 2 Select the RANDOM mode.

For "DISC RANDOM" playback, select the disc in advance.




Each press switches the modes as follows.

 - ① DISC RANDOM (Random play of one disc)
- ② ALL RANDOM (Random play of all discs)
- ③ Random play cancelled.




Random play of one disc

 

Random play of all discs

• The random playback can also be repeated by pressing the REPEAT key.

## To select another track in the middle of playing one

 

• Pressing the  $\lll$  key once returns to the beginning of the track being played.

## To cancel random playback

Press so that the "RANDOM" indicator goes off.




• The "RANDOM" indicator goes off and the playback in order of the tracks starts from the track being played.




## Playback of tape:

16 When a tape is placed into the cassette deck in advance, this unit will be switched on automatically and the tape in deck B will be played when the TAPE (◀▶) key is pressed.




For play of a tape recorded with presence effect, switch off the presence. 

UD-403 (En)

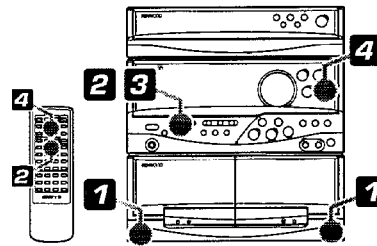


## Tape playback

### 1 Load a cassette tape.

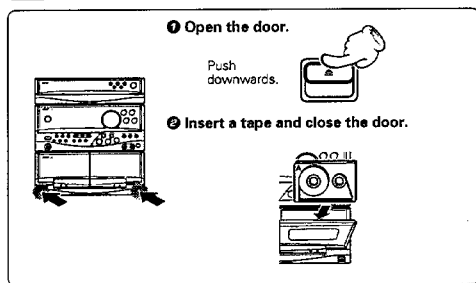


- The type of tape, that is, Normal, Chrome or Metal, is set automatically
- Remove tape slack before loading.


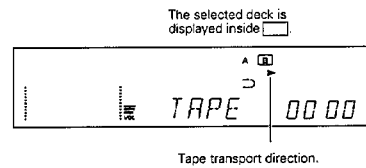


- Close the door securely.

### 2 Select the deck to be used for playback.

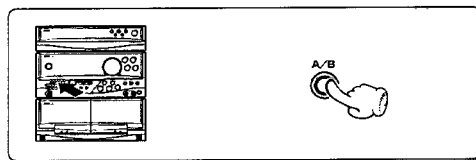

### 3 Determine the playback modes.

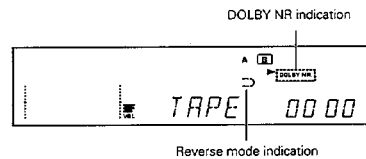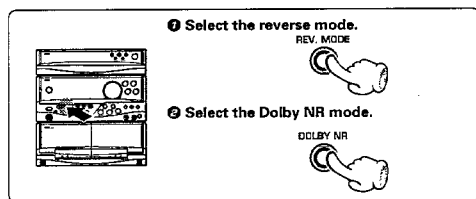


Each press switches the modes as follows.

- ① "▶" ..... Playback stops after having played the two sides.
- ② "◀▶" ..... Endless playback occurs.
- ③ "◀" ..... Playback stops after having played a side.

- ① DOLBY NR OFF
- ② DOLBY NR ON

- Select the Dolby NR mode according to the recording condition of the tape.

### 4 Start playback.

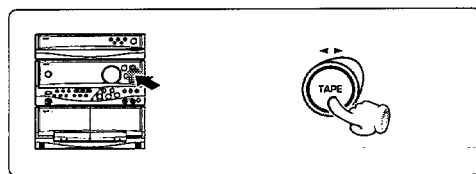


- If the tape transport direction is not the desired direction, press the TAPE ▶◀ key again.







### Relay play

 When tapes are set in the decks A and B and the reverse mode is set to "↔" (play of both sides), play of the second deck will be started automatically after play of the first deck has been completed. Tape play will be repeated alternately.





- Relay play is not possible in the reverse modes "↔" and "↔".

### To stop playback

  

- Do not press the eject key until the tape has stopped completely.


### To wind tape at high speed

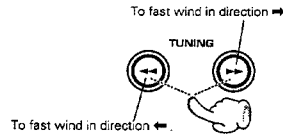 

- Press the ■ key to stop fast winding.

### A tip for use of the tape counter

 
The tape counter is set to 0000 when a cassette tape is loaded. By writing down the counter reading in case you want to interrupt recording (playback) in the middle of the tape, the memo will be helpful as a reference for locating the same position when continuing the recording (playback) the next time. The tape counter figure decrements during recording or playback of the back side (while the ◀ tape transport indicator is lit). To reset the tape counter to 0000, unload the tape then load it again.



### Dolby Noise Reduction (NR)

The Dolby NR system minimizes the hiss noise heard when playing tape. When playing a tape prerecorded with Dolby NR ON, be sure to set the DOLBY NR ON for playback.

 
Lit when DOLBY NR is ON.



### Transport direction indicators

The ◀ and ▶ indicators indicate the current direction in which the tape advances when playback or recording is started automatically by the easy operation function, etc. This direction is the direction stored in memory when the tape was last stopped.

 (To change the direction, press the TAPE (◀▶) key then press the ■ key.)



Transport direction indicators




## Searching for the desired music program (DPSS)

 UD-403 [En]


**18** The DPSS (Direct Program Search System) is capable of detecting non-recorded spaces of more than 4 seconds as "blanks between programs" and, based on this information, can return to the beginning of the music program being played or the beginning of a desired program by skipping up to 16 other programs.

### To return to the beginning of the current music

During play in direction ►




During play in direction ◀

 


### To skip to the beginning of a desired music

 During play in direction ►



 
To play the next program : Press once.  
To play the 4th program after the current program : Press 4 times.



To return to the beginning of the current program : Press once.  
To play the 4th program before the current program: Press 5 times.

During play in direction ◀

 To play the next program : Press once.  
To play the 4th program after the current program : Press 4 times.



To return to the beginning of the current program : Press once.  
To play the 4th program before the current program: Press 5 times.

#### Notes



The DPSS may not function normally with the following kinds of tape.


- Tapes containing several no-sound intervals of more than 4 seconds, such as conversation and talk tapes.
- Tapes containing pianissimo sections, such as classical music tape.
- Tapes in which large noise is recorded in blanks between programs.
- Tapes containing blanks between programs that are shorter than 4 seconds.
- Tapes recorded at low level.
- Tapes recorded by cross-fade recording (in which the beginning of next program is overlapped on the end of previous program).

# Broadcast reception




It is also possible to receive them by one-touch operations by storing up to 20 stations in the preset memory.

When the TUNER key is pressed, this unit will be switched on automatically.

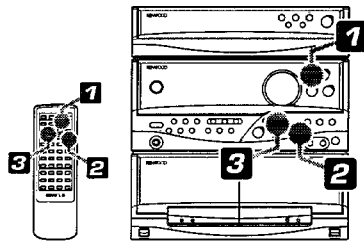

## Receiving broadcast station

### 1 Select the broadcast band.

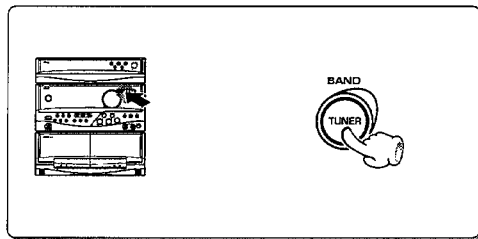


Each press alternates the band.

For U.K.


- ① FM
- ② MW
- ③ LW

Except for U.K.

 - ① FM
- ② AM




### 2 Select the tuning mode.

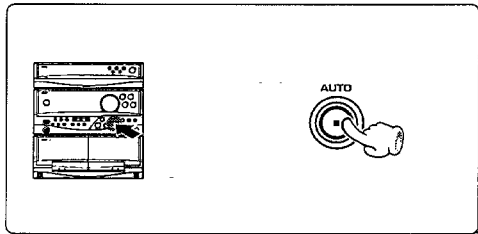

Each press alternates the mode.

 
- ① AUTO lit (Auto tuning)
- ② AUTO not lit (Manual tuning)




• Normally, use the **AUTO** (Auto tuning) mode.

Use the manual tuning mode when reception is noisy due to weak reception. (In the manual mode, stereo broadcasts are received in monaural.)

### 3 Select a station.

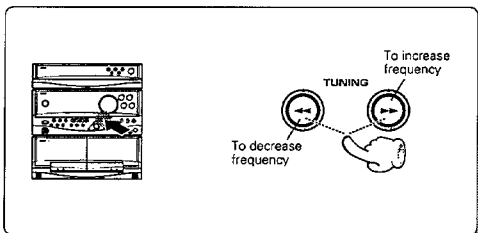

 The "TUNED" indicator lights when a station is received.



Lights during stereo reception.

Auto tuning : Each press receives the next station.  
Manual tuning : Press the key repeatedly or hold it depressed until a station is received.




# Storing radio stations in memory (Station preset)

UD-403 (En)

20

## Preparation


- Receive a station to be stored in preset memory.

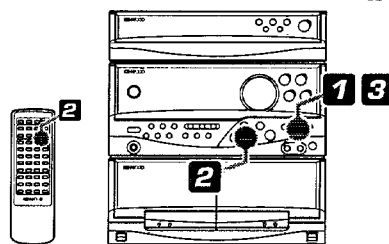

## 1 Press the ENTER key during reception.




 
\*MEMO\* lights (for approx. 5 sec.)



Go to step 2 within 5 sec.

If more than 5 seconds have elapsed, press the ENTER key again.


## 2 Select one of the preset numbers from 1 to 20.

 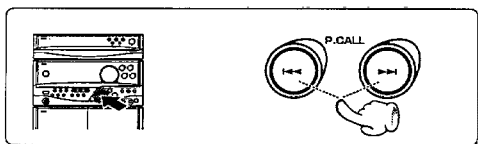

Go to step 3 within 5 sec.


If more than 5 seconds have elapsed, restart the procedure from step 1.

## 3 Press the ENTER key again.

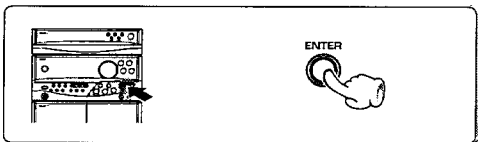


- Repeat steps 1 2 3 to preset other stations.
- If several stations are preset under the same number, the previous memory is replaced with the latest memory contents.

 Goes off



## Receiving a preset station

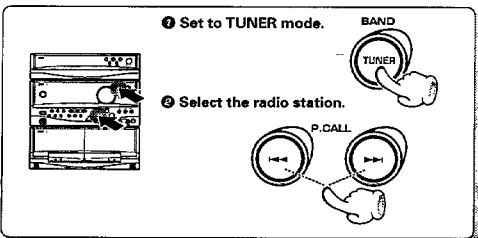

- Every time the key is pressed, the preset stations are switched over as follows.

Press ►► for the order of 1→2→3 ... 18→19→20→1...  
 Press ◄◄ for the order of 20→19→18 ... 3→2→1→20...


- When a key is held depressed, preset stations will be skipped at an interval of about 0.5 second.

# Recording (Deck B only)




UD-403 (En)

Note that this cassette deck cannot record onto Metal tapes.

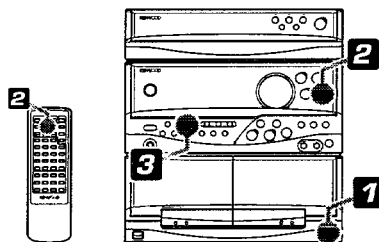



## Preparation for recording

### 1 Load a tape in deck B.

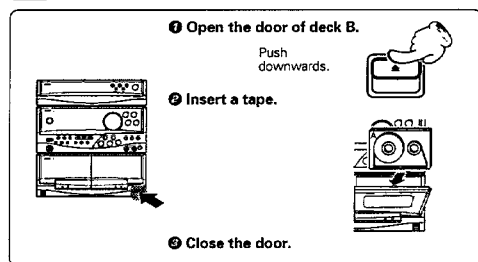


- The type of tape, that is, normal or chrome is set automatically.
- Remove tape slack before loading.
- When the microphone is not used, set the MIC MIXING control fully counterclockwise to the minimum position.

### 2 Select the tape transport direction.

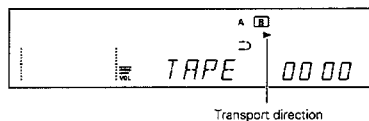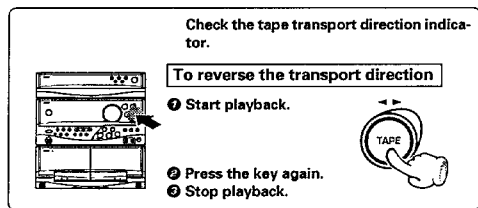

- When recording is started, the tape is transported in the direction selected in this step.
- Wind the tape to the position where recording is to be started.

### 3 Set the recording condition.

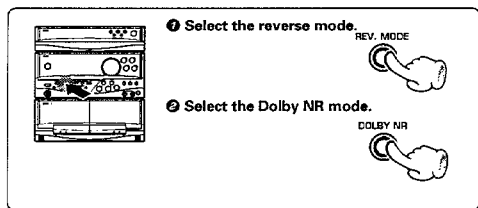

Each press switches the modes as follows.

- ① "→" .... Recording will end after having recorded on two sides.
  - ② "↔" .... Recording will end after having recorded on two sides.
  - ③ "←" .... Recording will end after having recorded on one side.
- ① DOLBY NR OFF
  - ② DOLBY NR ON

### Dolby HX Pro

The Dolby HX Pro headroom extension system records high frequencies such as the cymbal sound clearly by controlling the bias current during recording according to the frequency composition of the sound being recorded. This system is activated automatically during recording with this unit.



# Recording (Deck B only)

UD-403 (En)


22

## Preparation


- Load a cassette tape in the deck.
- Select the tape transport direction (◀ or ▶).
- Select "↔" (two-side recording) or "→" (one-side recording).
- Select the Dolby NR mode.
- (Insert a disc in the CD player.)




The presence effects applied to the music are recorded together with the music sound.

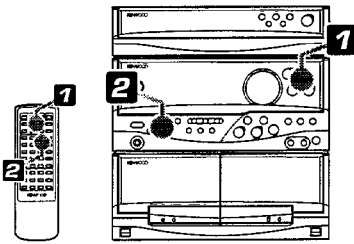

## 1 Select the source to be recorded.

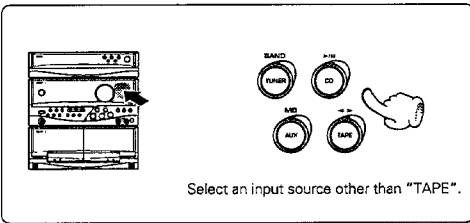

 
Select an input source other than "TAPE".




The input source component to be recorded should be displayed.

- When the CD input is selected and if a disc has been set in the CD player, its playback starts immediately.

## 2 Start recording.

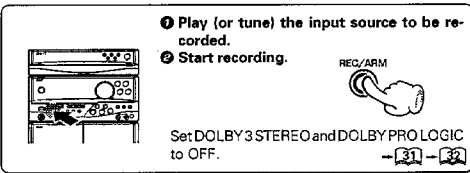

 Set DOLBY 3 STEREO and DOLBY PRO LOGIC to OFF.



- Recording stops automatically when the tape side(s) to be recorded have been fully recorded.

## To end recording



- When the key is pressed, recording stops after leaving a non-recorded blank of 4 seconds.
- If the key is pressed again in less than 4 seconds after it has been pressed, recording resumes from that instant.

## Beat cancel function

There may be cases in which beat noise interferes with recording of AM (MW/LW) broadcasting. In such a case, press the DEMO key during recording to reduce or suppress the beat noise. The DEMO key acts as the demonstration key except during tuner recording.

 
DEMO



## Display during recording

During recording, the time display on the display panel shows the remaining play time of the track (or disc). The displayed contents vary depending on the play mode.

- When the "PGM" indicator is not lit  
..... Remaining time on the disc being recorded.
- When the "PGM" indicator is lit  
..... Remaining time on the track being recorded.



# Copying tape (Tape dubbing)



UD-403 [En]


The contents of the tape in deck A can be copied onto the tape in deck B.

## Preparation

- Select the "TAPE" input.
- Load tapes in the decks.



- Select "→" (double-side recording) or "←" (one-side recording).

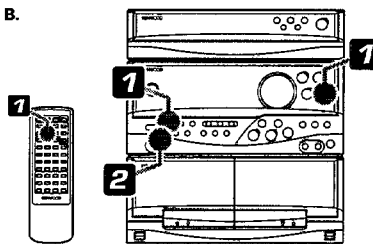


## 1 Use the same tape transport directions.

Check the tape transport direction indicators.

### To reverse the transport direction

- 1 Select the deck to change the transport direction.

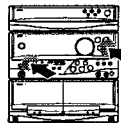

- 2 Start playback.



- 3 Press the key again.



- 4 Stop playback.



Running direction


- When recording is started, the tape will be transported in the direction selected in this step.

## 2 Start dubbing.

 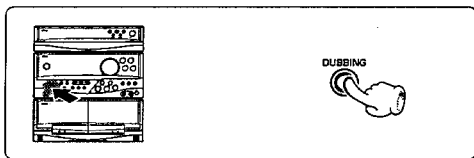

- Dubbing ends automatically when the side(s) to be dubbed has been completed.

## To stop dubbing

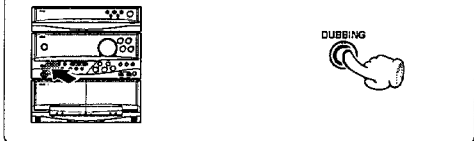

- The deck B will stop after creating a non-recorded portion of about 4 sec, and then the deck A will stop.
- The dubbing can also be stopped by pressing the **STOP** key. Non-recorded blank is not created in this case.

### Note

The **DOLBY NR** key is not active in dubbing mode. The tape recorded on deck B assumes the same Dolby NR condition as the tape played on deck A.





## CD edit recording

UD-403 (En)

The system is capable of three types of edit recording which may be selected as follows:

24

### Select the type of edit recording

**If you want to avoid any tune being interrupted at the end of tape**



#### **Timed edit recording**

- 25

Edit recording of CD is possible by the simple operation of entering the recording length of the tape.

**If you want to select the tracks to be recorded while playing a CD**



#### **Recording desired tracks while playing a CD**

- 26

Play a CD and, if a track you want to record starts, press the **ONE TOUCH EDIT (O.T.E.)** key. The track will be recorded from the beginning.

**If you want to record a CD in order of track numbers**



#### **Recording an entire disc**

- 27

Press the **ONE TOUCH EDIT (O.T.E.)** key when in the stop mode. The disc will start to be recorded.



# Timed edit recording



UD-403 [En]


By simply specifying the recording time of the tape, the CD tracks will be recorded with their order automatically changed so that no tune is interrupted at the end of tape sides A and B.

## Preparation

- Load a cassette tape in the deck B.
- Select the tape transport direction (◀ or ▶).
- Select "↔" (two-side recording).
- Select the Dolby NR mode.
- Select the "CD" input.
- Insert a disc in the CD player.



The presence effects applied to the music are recorded together with the music sound.

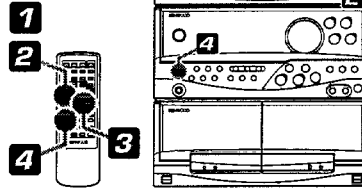

## 1 Select the "EDIT" mode.

 
- ① Confirm that the "PGM" indicator is not lit.

If the "PGM" indicator is lit, press the P.MODE key to turn it off.


- ② Press the EDIT key.



Confirm that this is not lit.



 - To cancel the EDIT mode, press the P.MODE key of the remote control unit.



Go to step 2 within 8 sec.


If more than 8 seconds have elapsed, select the mode again.

## 2 Select the disc.



- Even if the disc has already been selected, select the disc again.

## 3 Enter the recording length of the tape.

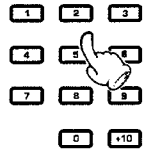

Confirm flashing of the ► indication and then go to step 4.

 
Press the numeric keys as shown below.

30-minute tape : [+10], [+10], [+10], [0]

46-minute tape : [+10], [+10], [+10], [+10], [6]

- If you make a mistake in entering the recording time, check that the ► indicator is blinking and restart from step 3.

- Up to 32 tracks can be edited.
- The ► indicator blinks after completion of automatic editing.
- Every time the ► key is pressed, the edited track numbers will be displayed in the changed order. Press the ■ key to return to the track number of the first track.




## 4 Start edit recording.



Set DOLBY 3 STEREO and DOLBY PRO LOGIC to OFF.

 - The tape and CD stop automatically when recording has completed.
- The time display during recording is the remaining time on the current side of tape.





# Recording desired tracks while playing a CD

UD-403 (En)

The following procedure allows you to record CD tracks by selecting them while playing a CD.

20


## Preparation

- Load a cassette tape in the deck B.
- Select the tape transport direction (◀ or ▶).
- Select "→" (two-side recording) or "→" (one-side recording).
- Select the Dolby NR mode.
- Select the "CD" input.
- Insert a disc in the CD player.





The presence effects applied to the music are recorded together with the music sound.

-(29)

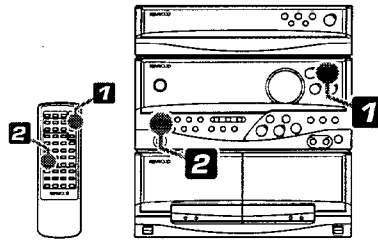


## 1 Play a CD.

  Select a mode other than random play.




## 2 When you want to record a track being played, press the ONE TOUCH EDIT (O.T.E.) key.

 

Set DOLBY 3 STEREO and DOLBY PRO LOGIC to OFF.

-(31) -(32)

 In case the key is pressed with track No.3




- Playback restarts from the beginning of the track being played and recording starts at the same time.
- The time display shows the remaining time of each track.

When recording has been completed, a non-recorded portion of 4 seconds will be produced and the cassette deck part will stop. The CD player will enter temporary stop condition.

To record a different track, repeat the steps 1 and 2.

## To end recording in the middle

 

- Both the cassette deck and CD player stop.

# Recording an entire disc



UD-403 (Er)


When the ONE TOUCH EDIT (O.T.E.) key is pressed while the CD player is in the stop mode, recording of a CD can be started at the same time as playback.

## Preparation


- Load a cassette tape in the deck B.
- Select the tape transport direction (◀ or ▶).
- Select "↔" (two-side recording).
- Select the Dolby NR mode.
- Select the "CD" input.
- Insert a disc in the CD player.



The presence effects applied to the music are recorded together with the music sound.

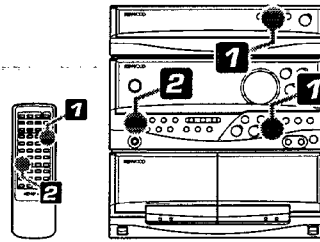

## 1 Select the disc.


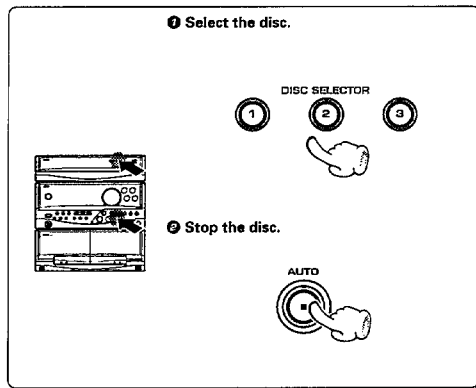


- Select a mode other than random play.



Step ② also can be executed after the order of the tracks has been programmed.


## 2 Press the ONE TOUCH EDIT (O.T.E.) key.

 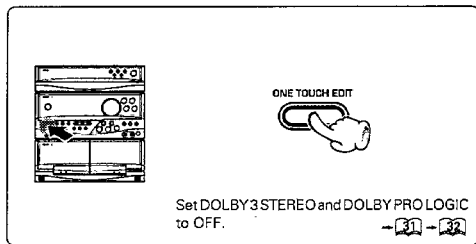

- Recording of CD starts at the same time as playback.
- At the end of tape, the music is not recorded on the leader tape portion. If you do not want any music to be interrupted in the middle, refer to "Recording" and start recording of side B with the interrupted track.



## To end recording in the middle

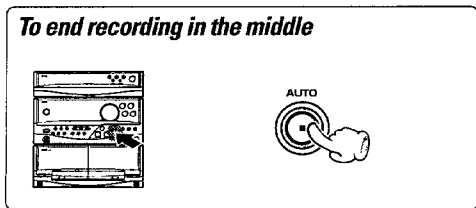

- Both the cassette deck and CD player stop.



# Tone adjustment

UD-403 (En)


**20** The system allows you to select 4 kinds of graphic equalizer patterns or 4 kinds of presence (sound field) modes. Select graphic equalizer patterns according to the genre of music and select the presence modes according to the acoustic ambience required.

## Demonstration

This feature applies various tone adjustment effects of the graphic equalizer and presence sound fields in sequence with the sound. The display also changes as the applied effects change. Check out the tone adjustment effects both visually and aurally.


### DEMO 1

The effects of graphic equalizer and presence can be heard.

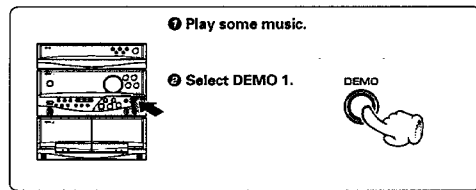

Each press of the key switches the demonstration modes as follows.

 
- ① DEMO 1
- ② DEMO 2
- ③ OFF (Demonstration cancelled)



The letters flow on the display.


### DEMO 2

The contents of the above DEMO 1 will be executed for the respective input sources in the order of CD player, cassette deck, tuner, and AUX (connected external unit).

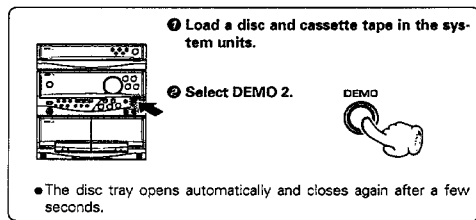

Each press of the key switches the demonstration modes as follows.

 - ① DEMO 1
- ② DEMO 2
- ③ OFF (Demonstration cancelled)



The letters flow on the display.

### To stop the demonstration




#### Note



Demonstration also starts automatically when the power plug is unplugged then plugged while the power is ON or when the power supply has recovered from a failure.



UD-403 (En)


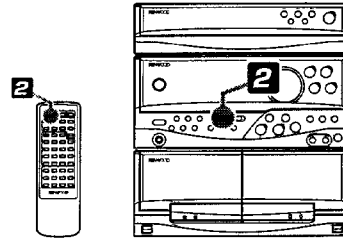


## Playing music with the desired tone

The graphic equalizer patterns can be selected according to the genre of music played.

**1** Play the desired music.

 **2** Select the music category.

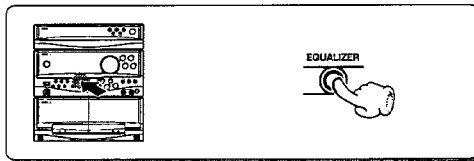

Display characters scroll from the right to the left.

Press repeatedly to select.



- ① POP (Popular)
- ② ROCK (Rock)
- ③ JAZZ (Jazz)
- ④ CLASSIC (Classic)
- ⑤ EQ OFF (EQ.ON not lit ... Equalizer cancelled)

## Enjoying music with the presence effect (presence modes)


The presence (sound field) mode can be selected according to the music played and to your liking. The presence effect applied to the sound can be recorded together with the sound.

**1** Play a desired music.

**2** Select a presence sound field.

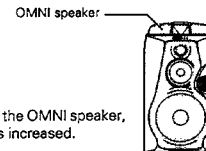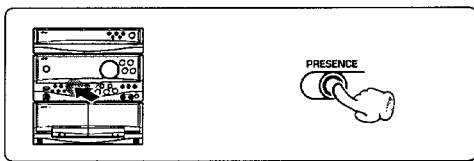

 Sound is put out also from the OMNI speaker, and the presence effect is increased.



Display characters scroll from the right to the left.

Press repeatedly to select.

- ① ARENA  
Reproduction of a live feeling as if the listener is in the first row of the arena seat.
- ② JAZZ CLUB  
Reproduction of a jazz live house where cymbals resound.
- ③ STADIUM  
Reproduction of an open atmosphere with little reverberations which are usually reflected from the ceiling.
- ④ HIT MASTER (Vocal canceller)  
For use in Karaoke singing.
- ⑤ PRESENCE OFF  
(PRESENCE, EQ.ON not lit ... Presence cancelled)




# DOLBY PRO LOGIC surround adjustment

UD-403 (En)

30 When video (LD) software carrying **DOLBY SURROUND** mark is played, this mode provides the Dolby Surround effect, similar to movie theaters.

Manufactured under license from Dolby Laboratories Licensing Corporation. Additionally licensed under one or more of the following patents: U.S. numbers 3,959,590; Canadian numbers 1,004,803 and 1,037,877. "DOLBY", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

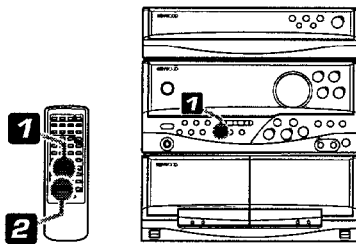


## 1 Activate the DOLBY PRO LOGIC mode.

**1 Activate the DOLBY PRO LOGIC mode.**

Within 5 seconds!

**2 Select the CENTER MODE.**

Press during display of center mode.

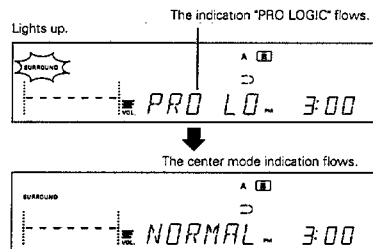

- After several seconds, return is made to the original display. During indication of the center mode, switching is done each time the DOLBY PRO LOGIC key is pressed.
- 1 NORMAL** :When the center speaker is compact-sized speaker.
- 2 WIDE BAND** :When the center speaker is medium- or large-sized speaker.
- 3 PHANTOM** :When the center speaker is not used.
- If you cannot tell whether your center speaker is compact or medium-size, try two modes and select according to your liking.
- The selected center mode is automatically stored in memory and held unless it is changed later.

## 2 Adjust the volume balance.

**1 Generate the test tone.**

**2 Align the speaker volume with the main speaker volume.**

<b>Center speaker volume</b>	<b>Rear speaker volume</b>
To increase	To increase
<b>CENTER LEVEL</b>	<b>REAR LEVEL</b>
To decrease	To decrease

**3 Stop the test tone.**

 
- The test tone which is heard like noise moves between speakers at an interval of 1.5 sec.

**In NORMAL and WIDE BAND mode:**

- Left (L)
- Center (C)
- Right (R)
- Surround (Rear) (S)

**In PHANTOM mode:**

- Left (L)
- Right (R)
- Surround (Rear) (S)




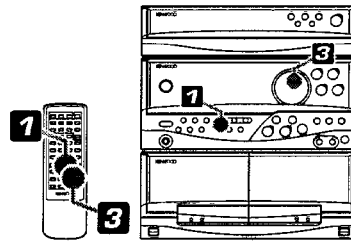
- Be sure to adjust from your listening position.
- The volume level can be adjusted in steps of 1 dB.
- The volume levels can be adjusted in the range from -10 dB to +10 dB.
- The center level value is memorized as a common setting with DOLBY 3 STEREO.

# DOLBY PRO LOGIC surround playback



 
 

UD-403 (En)

Before playing a video (or LD) software program carrying the  mark, be sure to complete the "DOLBY PRO LOGIC surround arrangement".



No sound is put out by the OMNI speaker during DOLBY PRO LOGIC mode.


## 1 Activate the DOLBY PRO LOGIC mode.

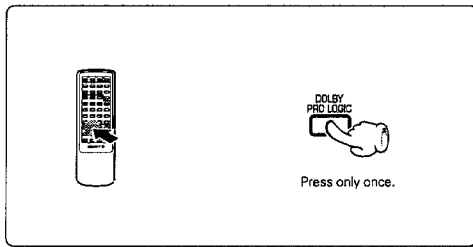



•After several seconds, return is made to the original display.

## 2 Play a video software program.

## 3 Adjust the volume.

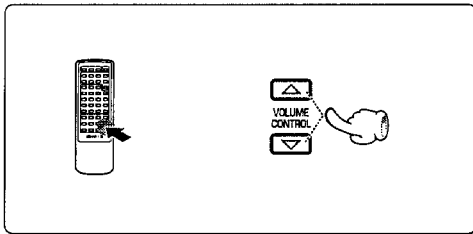

## To cancel DOLBY PRO LOGIC surround play

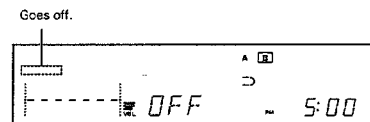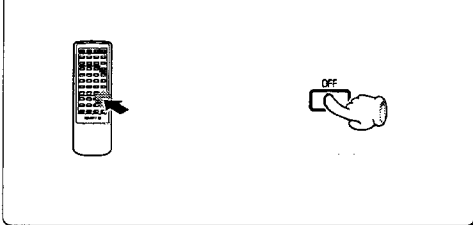




# DOLBY 3 STEREO adjustment and play

UD-403 (En)

32 This mode improves the positioning of the acoustic image of words, etc., by applying directivity enhancer processing and using an additional center speaker when a video software program recorded with ordinary 2-channel stereo is played.

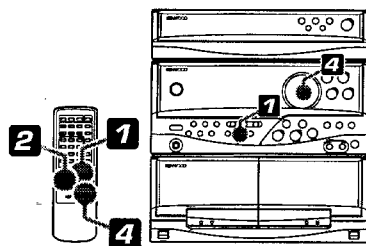

No sound is put out by the OMNI speaker during DOLBY 3 STEREO mode.


## 1 Activate the DOLBY 3 STEREO mode.

① Activate the DOLBY 3 STEREO mode.

Within 5 seconds!

② Select the CENTER MODE.

Press during display of center mode.

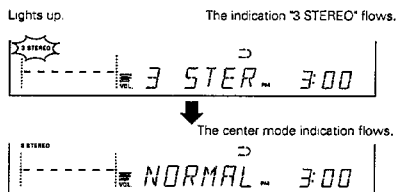


After several seconds, return is made to the original display.

During indication of the center mode, switching is done each time the DOLBY 3 STEREO key is pressed.

- ① **NORMAL** :When the center speaker is compact-sized speaker.
- ② **WIDE BAND** :When the center speaker is medium- or large-sized speaker.

- If you cannot tell whether your center speaker is compact or medium-sized, try two modes and select according to your liking.
- The selected center mode is automatically stored in memory and held unless it is changed later.

The test tone which is heard like noise moves between speakers at an interval of 1.5 sec.

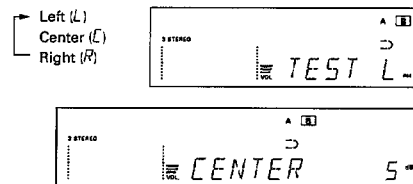

- Be sure to adjust from your listening position.
- The center level can be adjusted in steps of 1 dB.
- The volume levels can be adjusted in the range from -10 dB to +10 dB.
- The center level value is memorized as a common setting with DOLBY PRO LOGIC SURROUND.

## 2 Adjust the volume balance.

① Generate the test tone.

② Adjust the center speaker volume with the main speaker volume.

To increase

To decrease

③ Stop the test tone.

## 3 Play a video software program.

## 4 Adjust the volume.

## To cancel DOLBY 3 STEREO play

Goes off





No sound is put out by the OMNI speaker when HIT MASTER is ON.

## 1 Connect a microphone.

① Turn the MIC MIXING control fully counterclockwise.

② Plug the microphone into one of the MIC jacks.

③ Adjust the volume balance between the music input and microphone input.

To decrease microphone volume

To increase microphone volume

- Use a microphone equipped with a mini-plug.
- Set the MIC MIXING control to the fully counterclockwise position when the microphone is not used.

 
## 2 Play the music.

## 3 Select HIT MASTER.

PRESENCE

Select by pressing repeatedly.

- ① ARENA (Arena)
- ② JAZZ CLUB (Jazz club)
- ③ STADIUM (Stadium)
- ④ HIT MASTER (Hit master)
- ⑤ PRESENCE OFF (Presence OFF)



- The volume of the vocal parts of the song decreases. However, this effect may not be clear with some songs and discs.

- Adjust the overall volume with the VOLUME CONTROL knob.

## 4 Sing along with the accompaniment.

### To record Karaoke singing

① Perform the procedure above until step 3.

② Start recording.

— 21 — 22

During Karaoke singing using the song recorded on a tape, the Karaoke sound cannot be recorded.



A Karaoke tape can be created by recording the performance while the MIC MIXING control is in the fully counterclockwise position.



# Timer operation

Adjust the clock before setting the timer.

UD-403 (En)

Two 24-hour timer systems (PROG.1, PROG.2) (which can be used every day) and a sleep timer system (which works only once) are available.

In each of PROG.1 and PROG.2, the timer data including the operating period and played contents can be set and selected to be activated or not as required.



Timer reservation is possible for the two types PROG.1 and PROG. 2 at the same time.

- Please make reservations with an interval of at least one minute, so that the operation times of PROG. 1 and PROG. 2 do not overlap.

## Timer playback, timer recording (PROG.1, PROG.2)

With each of the two timer programs, a selected source can be played (or radio broadcast can be recorded) in the previously set time period.

### AI timer playback (PROG.1, PROG.2)

When timer playback starts, the volume increases gradually.

 



### Sleep timer

The power is turned OFF automatically after the specified period has elapsed.



36

## Timer programming
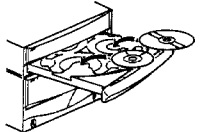
### 1 Make preparations for the play (recording).

<ul style="list-style-type: none"> <li>• To listen to radio</li> </ul> <p>The station should be preset prior to the above.</p> 	<ul style="list-style-type: none"> <li>• To listen to CD</li> </ul> <p>Insert a disc. (Program playback is not possible.)</p>  <p>Select the disc to be played (1, 2 or 3).</p>	<ul style="list-style-type: none"> <li>• To listen to tape</li> </ul> <p>Set a tape into deck B.</p> 	<ul style="list-style-type: none"> <li>• Playing the auxiliary input source</li> </ul> <p>Make timer setting of the component connected to the AUX jacks.</p>	<ul style="list-style-type: none"> <li>• For recording</li> </ul> <p>Make preparations for recording.</p> 
--	--	--	---	---

### 2 Adjust the listening volume.

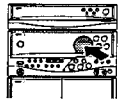
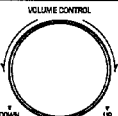



VOLUME CONTROL

DOWN UP

- When recording radio, the listening volume is automatically set to the minimum volume at the moment the power is turned ON by the timer.


### 3 Set the POWER switch to OFF (STANDBY) position.

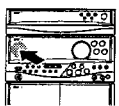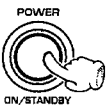POWER

ON / STANDBY

### 4 Select a program No.

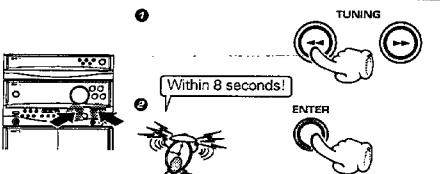

TUNING

 
ENTER

Within 8 seconds!


- The selected program No. lights.
- If a program No. under which a timer program has already been reserved, it is replaced by the new timer program.

Each press of the key switches the program numbers as follows.


- ① PROG.1 (Program 1)
- ② PROG.2 (Program 2)
- ③ Normal operation



**5 Enter the ON time.**

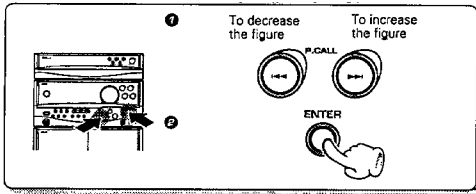


 • After entering the figure of "hour" with the procedure in ① and ②, enter the figure of "minute" using the same procedure.



• If you commit a mistake, restart from step ②.

**6 Enter the OFF time.**

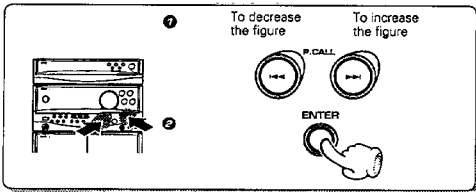

• After entering the figure of "hour" with the procedure in ① and ②, enter the figure of "minute" using the same procedure.






• If you commit a mistake, restart from step ②.

**7 Make the desired reservation.**

  
 
 
**For timer playback or AI timer playback**

① **Select the mode. Select "PLAY" or "AI".**  
(Each press alternates them.)



  
 ↓  
 ENTER  

 Enter it.

 


PLAY (Timer play)  
 REC  
 AI (Timer play with gradually increasing volume)

② **Select the input source.**  
Select the source to be played.  
(Each press switches the following).



  
 ↓  
 ENTER  

 Enter it.

TUNER  
 CD  
 TAPE  
 AUX

③ **Select the broadcast station (only when TUNER is selected above).**  
Select the preset station No.

 




  
 ↓  
 ENTER  

 Enter it.

15 FM 89.00

• The station to be received with timer must be preset beforehand.




**Timer recording of radio broadcasts**

 ① **Select the mode.** Select "REC".  
(Each press alternates them.)




  
 ↓  
 ENTER  

 Enter it.

PLAY  
 REC  
 AI

② **Select the broadcast station.**  
Select the preset station No.

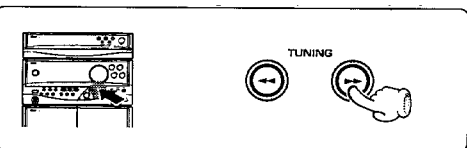

  
 ↓  
 ENTER  

 Enter it.

**8 Select the timer program No. to be used.**



Each press of the key switches the program numbers as follows.

- ① PROG.1 Execution of program 1 only.
- ② PROG.2 Execution of program 2 only.
- ③ PROG.1, 2 Execution of programs 1 and 2.
- ④ Timer OFF

- The selected program No. lights.
- The timer will not function unless a program No. is selected.



## Adjust the clock before setting the timer.

UD-403 (En)

 
 
Ensure that the power is OFF.



**Note** The reservation contents cannot be cleared. The contents are cleared only when they are changed.

### Check the reservation content.

Select the program number to be checked.



Each press of the key switches the program numbers as follows.

- PROG. 1 (Display of program 1)
- PROG. 2 (Display of program 2)
- Normal mode



- The reserved contents will be displayed for 3 seconds per item. After this, the previous display content appears again.

### To change the reserved contents

  Restart the procedure of "Timer programming" from the beginning.

### When timer operation is not required

Press so that all PROG. indicators are OFF.





Each press of the key switches the program numbers as follows.

- PROG. 1 (Program 1 operates.)
- PROG. 2 (Program 2 operates.)
- PROG. 1, 2 (Programs 1 and 2 operate.)
- Not lit (No program operates.)

- The reservation contents are held in memory.

### To set the same timer program again

  Press so that the desired PROG. indicators lights.



Each press of the key switches the program numbers as follows.

- PROG. 1 (Program 1 operates.)
- PROG. 2 (Program 2 operates.)
- PROG. 1, 2 (Programs 1 and 2 operate.)
- Not lit (No program operates.)

- Also prepare the disc or tape and adjust the listening volume.

## Sleep timer

### Set the number of minutes after which the power is to be turned OFF.

① Turn the power ON.

 


② Set the time.



- The power is turned OFF automatically after the set time has elapsed.
- Each press decreases the time by 10 minutes. The maximum time that can be set is 90 minutes.

90→80→70...30→20→10→Cancel→90→80...



Duration for sleep timer

### To cancel

Turn the power OFF or press the SLEEP key until the sleep time is cancelled.


# Maintenance

UD-403 (En)

## Notes on cassette tape

### Safety tab (accidental erasure prevention tab)

After an important recording has been finished, break the safety tab, to prevent the recorded contents from being erased or recorded on accidentally.

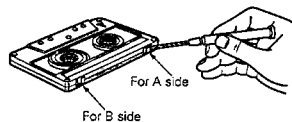


### To store cassette tapes

do not store the tapes in a place which is subject to direct sunlight, or near equipment that generates heat. Keep the cassette tapes away from any magnetic field.



### When there is slack in the tape

 In such a case, insert a pencil into the reel hole and wind the reel hub to remove the slack.



### To re-record

Apply tape only to the position where the tab has been removed.

### Notes


#### 1. 110/120-minute cassette tape

Since a 110/120-minute cassette tape is very thin, the tape could adhere to the pinch roller or be easily broken. It is recommended that these tapes not be used with this unit to prevent possible damage.

#### 2. Endless tapes

Do not use an endless tape, as this could damage the mechanism of the unit.

## Cleaning the head section

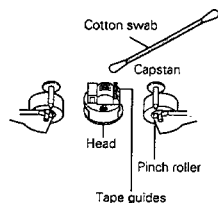

### Cleaning the heads and peripheral components

For maintaining the best condition of the deck and for longer service life, always keep the heads (recording / playback / erase), capstan and pinch roller clean. To clean them, perform the following:

1. Open the cassette holder.
2. Using a cotton swab dipped in alcohol, clean the head (recording / playback / erase), capstan and pinch roller carefully.

### Demagnetizing the head

When the recording / playback head is magnetized, the sound quality will deteriorate. In such a case, demagnetize the head using a commercially available demagnetizer (head eraser).

### Note

There are precisely aligned parts around the heads, including the tape guides. When cleaning, pay special attention so as not to apply shock to them.

## Beware of condensation

When water vapor comes into contact with the surface of a cold material, condensation is produced.


If condensation occurs, correct operation may not be possible, or the unit may not function correctly.

This is not a malfunction, however, and the unit should be dried-out. (To do this, turn the POWER switch ON and leave the unit as it is for several hours.)

Be especially careful in the following conditions:


- When the unit is brought from a cold place to a warm place, and there is a large temperature difference.
- When a heater starts operating.
- When the unit is brought from an air-conditioned place to a place of high temperature with high humidity.
- When there is a large difference between the internal temperature of the unit and the ambient temperature, or in conditions where condensation occurs easily.

## Disc handling precautions

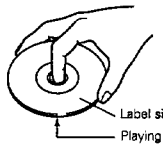


### Handling

 Hold compact discs so that you do not touch the playing surface.




 Do not attach paper or tape to either the playing side or the label side of compact discs.



### Cleaning

If fingerprints or foreign matter become attached to the disc, lightly wipe the disc with a soft cotton cloth (or similar) from the center of the disc outwards in a radial manner.

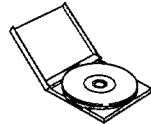

### Storage

When a disc is not to be played for a long period of time, remove it from the CD player and store it in its case.

## Caution on disc used



### Never play cracked or warped disc.

During playback, the disc rotates at high speed in the player. Therefore, to avoid malfunction, never use a cracked or deformed disc or a disc repaired with tape or adhesive agent.

## Discs which can be played with this unit

### CD (12 cm, 8 cm), CDV (only the audio part)

• With CD-G (CD Graphics) discs, this unit can play only the audio.

Dolby noise reduction and HX Pro headroom extension manufactured under licence from Dolby Laboratories Licensing Corporation. HX Pro originated by Bang & Olufsen. "DOLBY", the double-D symbol and "HX PRO" are trademarks of Dolby Laboratories Licensing Corporation.

When your unit needs to be repaired, bring the entire set (Speakers excluded) to your dealer.

## Memory backup function

Stored contents which are cleared immediately when power plug is unplugged from power outlet

Clock display

Stored contents which are cleared in at least a day after power plug is unplugged from power outlet

**Amplifier**  
POWER status (ON or OFF)  
input selection  
Volume control value

 
**Tuner unit**  
Receiving band  
Frequency  
Preset stations  
Program settings

**Cassette deck unit**  
Transport direction  
DOLBY NR  
Reverse mode

## Note related to transportation and movement (CD player)

Before transporting or moving this unit, carry out the following operations.

1. Turn the power ON but do not load a disc.
- Press the CD (▶/⏸) key to check that no disc is present on the tray.
2. Wait a few seconds and verify that the display shown appears.



3. Turn the power OFF.

**Operation to reset**

The microcomputer may fall into malfunction (impossibility to operate, erroneous display, etc.) when the power cord is unplugged while power is ON or due to an external factor. In this case, execute the following procedure to reset the microcomputer and return it to normal condition.

Unplug the power cord from the power socket, and while holding the **ENTER** key depressed, plug the power cord into the socket again.

● Please note that resetting the microcomputer clears the contents stored in it returns it to condition when it left the factory.

**Receiver unit, speakers**

Symptom	Cause	Remedy
Sound is not produced.	<ul style="list-style-type: none"> <li>● The speaker cords are disconnected.</li> <li>● The volume control is set to the minimum position.</li> <li>● The MUTE switch of remote control unit is switched ON.</li> <li>● The headphone plug is inserted into the jack.</li> </ul>	<ul style="list-style-type: none"> <li>● Connect properly referring to "Connections".</li> <li>● Adjust to an required volume. -[3]</li> <li>● Switch MUTE OFF.</li> <li>● Unplug the headphone plug.</li> </ul>
The character display blinks and sound is not produced.	<ul style="list-style-type: none"> <li>● The speaker cords are short-circuited.</li> </ul>	<ul style="list-style-type: none"> <li>● Turn the power OFF, remove the short-circuit and turn the power ON again.</li> </ul>
Sound is not produced from the left or right speakers.	<ul style="list-style-type: none"> <li>● The speaker cords are disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>● Connect properly referring to "System connections". -[4]</li> </ul>
No sound from the surround (rear) speaker.	<ul style="list-style-type: none"> <li>● The speaker cords are disconnected.</li> <li>● Surround mode has not been selected.</li> </ul>	<ul style="list-style-type: none"> <li>● Connect properly referring to "System connections". -[5]</li> <li>● Set the surround mode correctly. -[20] -[31] -[32]</li> </ul>
The clock display blinks without changing the figures.	<ul style="list-style-type: none"> <li>● There was a power failure.</li> <li>● The power cord was unplugged from the outlet.</li> </ul>	<ul style="list-style-type: none"> <li>● Adjust the present time again. -[7]</li> <li>● Adjust the present time again.</li> </ul>
Timer operation is not possible.	<ul style="list-style-type: none"> <li>● The present time has not been adjusted or there was a power failure.</li> <li>● The timer ON time and OFF time have not been set.</li> <li>● The timer execution was not set up.</li> </ul>	<ul style="list-style-type: none"> <li>● Adjust the present time referring to "Clock adjustment". -[7]</li> <li>● Set the timer ON time and OFF time. -[34]</li> <li>● Press the ►► key to set up the execution. -[34]</li> </ul>
Radio stations cannot be received.	<ul style="list-style-type: none"> <li>● The antennas have not been connected.</li> <li>● A proper broadcasting band has not been selected.</li> <li>● The frequency of the station to be received is not tuned.</li> </ul>	<ul style="list-style-type: none"> <li>● Connect antennas. -[4]</li> <li>● Select a band. -[16]</li> <li>● Tune to the frequency of the desired station.</li> </ul>
Noise interferes.	<ul style="list-style-type: none"> <li>● Car ignition noise.</li> <li>● Influence of an electric appliance.</li> <li>● A TV set is installed near the system.</li> </ul>	<ul style="list-style-type: none"> <li>● Install the outdoor antenna in an apart position from the road.</li> <li>● Switch the suspected electric appliance OFF.</li> <li>● Install the TV or the system at an increased distance between them.</li> </ul>
A station has been preset but it cannot be received by pressing the P.CALL key.	<ul style="list-style-type: none"> <li>● The frequency of the preset station is not tunable.</li> <li>● The preset memory has been cleared because the power cord has been unplugged for a long period.</li> </ul>	<ul style="list-style-type: none"> <li>● Preset stations with tunable frequencies.</li> <li>● Preset stations again. -[20]</li> </ul>
Demonstration starts suddenly.	<ul style="list-style-type: none"> <li>● The power plug was unplugged from the outlet while the power switch was ON, or there was a power failure.</li> </ul>	<ul style="list-style-type: none"> <li>● This is not malfunction. Press the DEMO key to cancel the demonstration. -[28]</li> </ul>

## Cassette deck unit

Symptom	Cause	Remedy
Sound cannot be produced by pressing the play key or no operation occurs even when an operation key is pressed.	<ul style="list-style-type: none"> <li>The head is dirty.</li> <li>The tape is wound too tight due to irregular winding.</li> <li>A nonrecorded tape is played.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the head referring to "Maintenance". -[37]</li> <li>Try another tape.</li> <li>Play a recorded tape.</li> </ul>
No operation occurs even when an operation key is pressed.	<ul style="list-style-type: none"> <li>The cassette holder is not closed completely.</li> <li>The operation key is pressed immediately after closing the cassette holder.</li> <li>The operation key is pressed in less than 4 seconds after turning the power ON.</li> <li>A tape is not inserted in the unit.</li> <li>The tape is wound too tight due to irregular winding.</li> <li>The tape is fully wound to one of the reels.</li> </ul>	<ul style="list-style-type: none"> <li>Close the holder completely.</li> <li>Press operations keys in more than a few seconds after closing the holder.</li> <li>Press operation keys after waiting for more than 4 seconds.</li> <li>Insert a tape.</li> <li>Try another tape.</li> <li>Change the tape transport direction or reverse the tape insertion orientation.</li> </ul>
The DPSS malfunctions.	<ul style="list-style-type: none"> <li>The tape used is not suitable for DPSS, for example the spaces between tunes may be too short.</li> </ul>	<ul style="list-style-type: none"> <li>Refer to "Searching for the desired music program (DPSS)". -[13]</li> </ul>
In dubbing, the tape stops at different moments in decks A and B.	<ul style="list-style-type: none"> <li>This is due to the difference in the tape length or characteristics of the mechanisms of two cassette decks.</li> </ul>	<ul style="list-style-type: none"> <li>Small time difference does not mean a malfunction.</li> </ul>
The cassette holder cannot be opened by pressing the eject key.	<ul style="list-style-type: none"> <li>The key is pressed during recording or playback.</li> <li>The microcomputer is malfunctioning due to external noise.</li> </ul>	<ul style="list-style-type: none"> <li>Press in stop mode.</li> <li>Unplug the power cord and plug it again.</li> </ul>
Sound is harsh or high frequencies are not reproduced.	<ul style="list-style-type: none"> <li>The head is dirty.</li> <li>The tape is stretched or shrunk.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the head referring to "Maintenance". -[37]</li> <li>Try another tape.</li> </ul>
Sound is distorted.	<ul style="list-style-type: none"> <li>The tape being played was recorded with distorted sound.</li> </ul>	<ul style="list-style-type: none"> <li>Try another tape.</li> </ul>
Noise is noticeable.	<ul style="list-style-type: none"> <li>The tape head is magnetized.</li> <li>External noise is induced.</li> <li>A tape recorded with Dolby NR ON is played with Dolby NR OFF.</li> </ul>	<ul style="list-style-type: none"> <li>Demagnetize the head referring to "Maintenance". -[37]</li> <li>Install the system at a distance from other electric appliances and TV.</li> <li>Set the Dolby NR to on.</li> </ul>
Sound vibrates.	<ul style="list-style-type: none"> <li>The capstans or pinch rollers are dirty.</li> <li>The tape is wound irregularly.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the head referring to "Maintenance". -[37]</li> <li>Wind the tape again by fast forwarding, rewinding or playing from an end to the other.</li> </ul>
Recording cannot be started by pressing the record key.	<ul style="list-style-type: none"> <li>The recording protect tab of the cassette has been broken.</li> <li>The cassette holder is not closed completely.</li> <li>The TAPE input is selected.</li> <li>The tape is fully wound to one of the reels.</li> </ul>	<ul style="list-style-type: none"> <li>Use a cassette with an unbroken recording protect tab or block the hole.</li> <li>Close the holder completely.</li> <li>Select the source to be recorded with the input selector key.</li> <li>Change the tape transport direction of deck B or reverse the tape insertion orientation.</li> </ul>
Volume of the recorded track changed.	<ul style="list-style-type: none"> <li>MIC MIXING control knob is moved during recording.</li> </ul>	<ul style="list-style-type: none"> <li>Fully turn the MIC MIXING control knob to the left.</li> </ul>



**CD player unit**

Symptom	Cause	Remedy
A CD is placed in the player but it cannot be played.	<ul style="list-style-type: none"> <li>The disc is placed upside down.</li> <li>The disc position is displaced.</li> <li>The disc is extremely dirty.</li> <li>The disc is scratched.</li> <li>Dew is condensed on the optics lens.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc properly, with the label side facing upward.</li> <li>Place the disc properly.</li> <li>Clean the disc referring to "Disc handling precautions". - (38)</li> <li>Try another disc.</li> <li>Refer to "Beware of condensation" and remove the condensation by evaporation. - (37)</li> </ul>
Sound is not produced.	<ul style="list-style-type: none"> <li>The disc has not been placed.</li> <li>The player is not put to the play mode.</li> <li>The disc is extremely dirty.</li> <li>The disc is scratched.</li> </ul>	<ul style="list-style-type: none"> <li>Place a disc in the CD player.</li> <li>Press the CD (▶/⏮) key.</li> <li>Clean the disc referring to "Disc handling precautions". - (38)</li> <li>Try another disc.</li> </ul>
Sound skips.	<ul style="list-style-type: none"> <li>The disc is dirty.</li> <li>The disc is scratched.</li> <li>The player is subject to vibration.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc referring to "Disc handling precautions". - (38)</li> <li>Try another disc.</li> <li>Install the unit in a place not subject to vibrations.</li> </ul>

**Remote control unit**

Symptom	Cause	Remedy
Remote control operation is not possible.	<ul style="list-style-type: none"> <li>Batteries are exhausted.</li> <li>The remote control is too far away from the system, the controlling angle is deviated or there is an obstacle in between.</li> <li>There is no tape or CD set in the component to be played.</li> <li>An attempt is made to play the cassette deck which is recording something.</li> </ul>	<ul style="list-style-type: none"> <li>Replace with new batteries. - (3)</li> <li>Operate the unit inside the remote controllable range. - (3)</li> <li>Set a tape or CD in the component to be played.</li> <li>Wait until the recording ends.</li> </ul>

**Notes**

- With some tapes, a squeaky noise is produced when the tape is stopped automatically. This is due to the tape protection function, and not a malfunction.
- Do not use 120-minute tapes, for the tape is too thin and gets easily tangled.
- Do not use contact cleaners because it could cause a malfunction. Be specially careful not to use contact cleaners containing oil, for they may deform the plastic component.

**WARNING NOTICE:**

IN MOST CASES IT IS AN INFRINGEMENT OF COPYRIGHT TO MAKE COPIES OF TAPES OR DISCS WITHOUT THE PERMISSION OF THE COPYRIGHT OWNERS. ANYONE WISHING TO COPY COMMERCIALY AVAILABLE TAPES OR DISC SHOULD CONTACT THE MECHANICAL COPYRIGHT PROTECTION SOCIETY LIMITED OR THE PERFORMING RIGHTS SOCIETY LIMITED.

# Specifications (For U.K. and Europe)

UD-403 (E-

## Main unit (RXD-F4L)

### Amplifier section

Rated power output

#### STEREO MODE

55 watts per channel minimum RMS, both channels driven, at 6  $\Omega$ , 1 kHz with no more than 5 % total harmonic distortion.

(DIN) 1 kHz at 6  $\Omega$ , 0.7 % T.H.D. .... 38 W + 38 W

#### SURROUND MODE

FRONT ..... 55 W + 55 W (1 kHz, 6  $\Omega$ , 5 % T.H.D.)

CENTER ..... 10 W (1 kHz, 8  $\Omega$ , 5 % T.H.D.)

REAR ..... 3 W + 3 W (1 kHz, 8  $\Omega$ , 5 % T.H.D.)

Input sensitivity / Impedance

AUX ..... 200 mV / 47 k $\Omega$

MIC ..... 2.4 mV / 2.2 k $\Omega$

Signal to noise ratio

AUX ..... 86 dB (IHF'66)

### FM Tuner section

Tuning frequency range ..... 87.5 MHz ~ 108 MHz

Sensitivity (DIN at 75  $\Omega$ )

MONO ..... 1.4  $\mu$ V / 13.2 dBf

### MW (AM) Tuner section

Tuning frequency range ..... 531 kHz ~ 1,602 kHz

Usable sensitivity ..... 12  $\mu$ V / (500  $\mu$ V / m)

### LW Tuner section (For U.K. only)

Tuning frequency range ..... 153 kHz ~ 279 kHz

Usable sensitivity ..... 22  $\mu$ V

### Cassette deck section

Track ..... 4-track, 2-channel stereo

Recording system ..... AC bias system  
(Frequency: 105 kHz)

Heads

A deck Playback head ..... 1

B deck Playback / recording head ..... 1

Erasing head ..... 1

Motors ..... 1

Fast winding time ..... Approx. 120 seconds  
(C-60 tape)

### CD player section

Laser ..... Semiconductor laser

Playing rotation ..... 200 rpm ~ 500 rpm (CLV)

Wow & Flutter ..... Unmeasurable Limit

#### General

Power consumption ..... 130 W

Dimensions ..... W: 270 mm

H: 305 mm

D: 341 mm

Weight (net) ..... 8.3 kg

### Speakers (LS-F4)

Enclosure ..... Bass-reflex type

Speaker configuration ..... 3-Way system

MAIN

Woofer ..... 150 mm, cone type

Tweeter ..... 65 mm, cone type

Super tweeter ..... 25 mm, Piezo-Electric type

Impedance ..... 6  $\Omega$

Maximum input level ..... 60 W

OMNI ..... 65 mm, cone type

Impedance ..... 6  $\Omega$

Maximum input level ..... 60 W

#### General

Dimensions ..... W: 180 mm

H: 341 mm

D: 263 mm

Weight (net) ..... 3.6 kg (1 piece)

**Note** KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.



### For the U.S.A.

#### Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

### For the U.S.A.

#### CAUTION:

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

KENWOOD CORPORATION  
2967-3, ISHIKAWA-CHO,  
HACHIOJI-SHI,  
TOKYO, JAPAN

KENWOOD CORP. CERTIFIES THIS EQUIPMENT  
CONFORMS TO DHHS REGULATIONS NO. 21 CFR  
1040. 10, CHAPTER I, SUBCHAPTER J.

Location: Back Panel

**For the U.S.A.****FCC WARNING**

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

KENWOOD

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>