

LIMITED WARRANTY

SHOULD ACCESSORY PARTS BE NEEDED, CONTACT THE MANUFACTURER FOR IN-WARRANTY REPLACEMENT PARTS. A COPY OF PROOF-OF-PURCHASE MUST BE INCLUDED ALONG WITH THE TYPE AND STYLE, WHICH IS LOCATED ON THE BOTTOM OF YOUR APPLIANCE.

This product is warranted for one year from the date of original purchase against defects in workmanship and/or materials. At our option, parts that prove to be defective will either be repaired or replaced or the whole product will be replaced.

Should electrical or mechanical repair become necessary during the warranty period, send your complete product, postage or freight prepaid to the nearest service center. Call the number below for the service station nearest you.

Should a part need replacement, you must give us the type and style of your appliance. You will find this at the bottom of the appliance. In either case, a copy of your proof of purchase is requested.

This warranty does not apply if the damage occurs because of accident, improper handling or operation, shipping damage, abuse, misuse, unauthorized repairs made or attempted, or the use of the product for commercial service.

ALL WARRANTIES, EXPRESSED OR IMPLIED, LAST FOR ONE YEAR FROM THE DATE OF ORIGINAL PURCHASE. THIS WARRANTY DOES NOT COVER LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR ANY CAUSE WHATSOEVER.

Some states do not allow limitations on how long any implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so that the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

FOR PARTS:

For Replacement Parts please call: **1-800-966-2028. MONDAY THROUGH FRIDAY, BETWEEN THE HOURS OF 8 AM AND 4 PM EST. "PLEASE DO NOT RETURN PRODUCT TO PLACE OF PURCHASE."** Reference the type and style of product (located on the underside of the product) when you call.

 
FOR TECHNICAL ASSISTANCE and SERVICE CENTER LOCATIONS:

For any questions, comments or the location of your nearest service center, **PLEASE CALL OUR TOLL-FREE "HOTLINE" AT 1-800-233-0268. MONDAY THROUGH FRIDAY, BETWEEN THE HOURS OF 8 AM AND 5 PM EST.** Please reference product name and model no. when you call.

Appliance Service Dept. • 300 Confederate Drive Franklin, TN 37065-0569
PLEASE DO NOT SEND PRODUCT TO THIS LOCATION!



8 Inch Electrically Reversible TWIN Window Fan with Thermostat

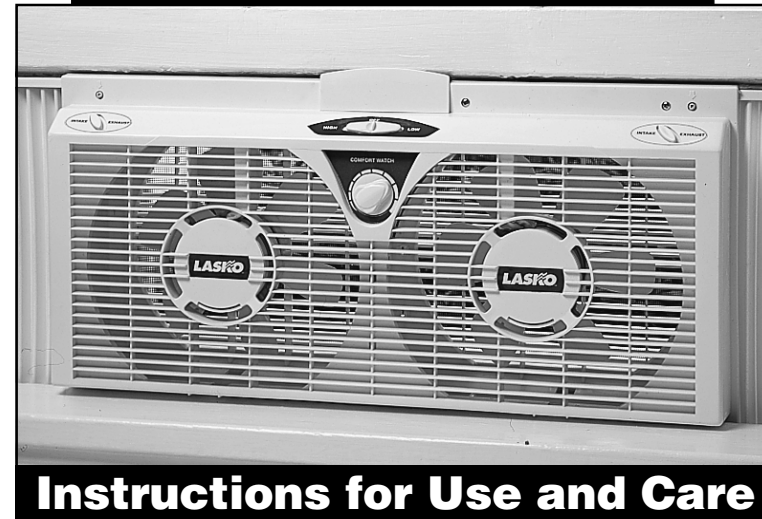

Instructions for Use and Care

 
READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS FAN

1. Use the Fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury.
2. This product is intended for household use ONLY and not for commercial, industrial, or outside use.
3. To protect against electrical shock, do not immerse unit, plug or cord in water. Do not spray the Fan with liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug the Fan from outlet when not in use, when moving Fan from one location to another, servicing parts, and before cleaning.
6. Avoid contact with moving parts.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. Do not place Fan or any parts near an open flame, cooking or other heating appliance.
9. Do not operate Fan with a damaged cord, plug, after a malfunction or if dropped or damaged in any manner.
10. The use of attachments not recommended or sold by LASKO may be hazardous.
11. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
12. Always use on a dry level surface.
13. Do not hang or mount Fan on a wall or ceiling.
14. Do not operate without Fan grills properly in place.
15. This Fan is rated for use as a Window Fan, however, we recommend that during rain, this Fan be removed from the window.
16. This Fan is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. THIS IS A SAFETY FEATURE. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. DO NOT defeat the purpose of the polarized plug.

WARNING: To reduce the risk of fire or electrical shock, DO NOT USE THIS FAN with any SOLID STATE Speed Control Device.

INSTALLATION FOR DOUBLE HUNG WINDOW

- Lift Handle and snap Window Grabber into Slots under Handle.
- We recommend keeping window screen in place.
- Center Fan in window, pull Expander Panels out to securely fit in window track.
- Lock Expander Panels in place by tightening 4 Screws.
- Lower window and secure behind Window Grabber on top of Fan.

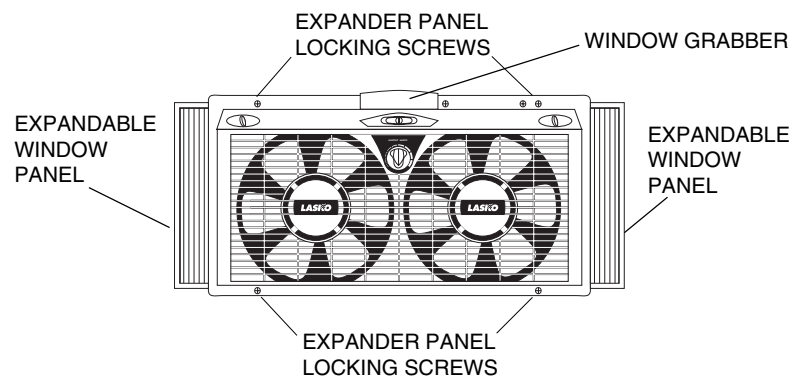

FOR VERTICAL, SLIDER-TYPE WINDOWS, and CASEMENT WINDOWS:

 
- Lift Handle and snap Window Grabber into Slots under Handle.
- We recommend keeping window screen in place.
- Position the Fan in the window with the Switch facing the center of the opening.
- Fan must fit securely against the inside edge of the window opening.
- Slide the sliding window to meet the edge of the Fan. The side edge of the window must fit securely behind the lip of the Fan Housing.
- For windows larger than 38", build a plywood panel to fit the open area and secure to Fan and window frame.
- On casement windows wider than 12" it will be necessary to build plywood frame around Fan and then secure frame to Fan and window frame.

OPERATING INSTRUCTIONS

- Make sure the Power Switch is in the OFF position.
- Plug into 120V AC outlet.
- Set Reversing Switches to desired position.
 INTAKE- to bring fresh air in.
 EXHAUST- to take stale air out
 To use as air exchanger set one Reversing Switch on INTAKE and one on EXHAUST.


WARNING: MAKE SURE FAN IS TURNED OFF BEFORE ADJUSTING REVERSING SWITCHES.

- Slide Power Switch to desired speed. (HIGH, LOW)
- Adjust the Comfort Watch™ Thermostat so that the Fan cools the room to a comfortable level. The Comfort Watch™ Thermostat will automatically turn the Fan off and on as the room temperature changes.

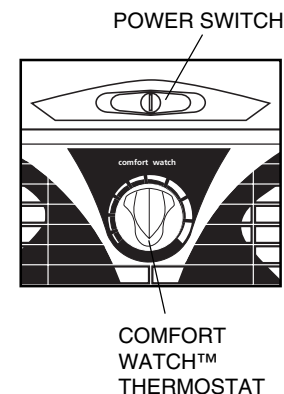

FEET INSTALLATION

 When using Fan as Floor or Table Fan, lock four (4) Feet into place by hooking Feet into Slots and pulling outward until the Feet snap in place.

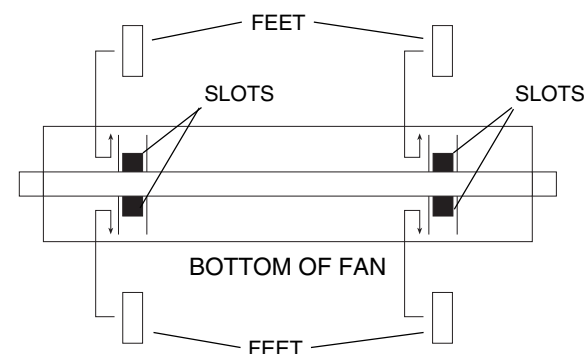

WARNING: MAKE SURE FEET ARE NOT ATTACHED WHEN USING FAN IN A WINDOW.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>