


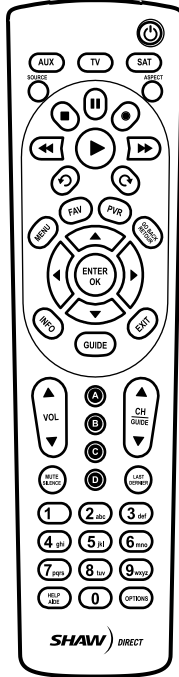

## SHAW DIRECT IRC600/ URC600 Remote Control Télécommande IRC600/ URC600 SHAW DIRECT



kind of interference, you must "pair" each remote control with each receiver by assigning a new "address" to each combination. This "address" assignment is made using your remote control as follows:

- Press the SAT button to select the remote control's SAT mode.
- Press the OPTIONS button to display the Options screen on your TV.
- On the Options Menu use the arrow **▲▼▶◀** buttons and press ENTER/OK to open the following menus. You can also press the indicated number on the remote control to access each menu directly.
  - 6 System Setup (select models only)
  - 4 System Settings
  - 3 Installation Settings
  - 2 Remote Control Address.
- Once you are on the "Remote Control Address screen" program the remote control using the remote control keypad programming sequence.
- Press and hold the remote controls SAT mode key until the red lights flash at least twice and release the SAT key.
- Enter a new 3 Digit SAT address from the below list using the number keys the remote control.

SAT ADDRESS	CODE
ADDRESS 0	000
ADDRESS 1	001
ADDRESS 2	002
ADDRESS 3	003
ADDRESS 4	004
ADDRESS 5	005
ADDRESS 6	006
ADDRESS 7	007

- Press ENTER/OK to save the new address and pair the remote with your satellite receiver.
- Press EXIT to leave the Options menu.

## OVERVIEW

The Shaw Direct IRC600 IR and URC600 IR/RF Remote Controls by Universal Electronics are our latest generation universal remote controls. Their sophisticated technology allows you to consolidate up to three of your original home entertainment remote controls into one easy-to-use product.

The remote control requires installing two (2) new AA batteries (included) and simple programming instructions to control your TV. For best results, please read and perform all instructions listed here. Also, keep this guide for future reference.

## INSTALLING BATTERIES

- Pull back the remote control's battery cover and remove it.
- Insert the two (2) supplied AA batteries according to the + and - marks in the battery case.
- Push the battery cover back into place.
- Test the unit by pressing the power key.
 

If batteries are inserted correctly, the Red Light will blink.

NOTE: When batteries need replacement, the remote control will stop operating. Replace the old batteries with new AA batteries.

## PROGRAMMING SAT CONTROL

Your remote control address is set at the factory to 000 to control all of the functions on your Motorola satellite receiver. However, if you have more than one satellite receiver, you may want to prevent the remote control in one room from affecting the satellite receiver in another room. To prevent this

## PROGRAMMING DEVICE CONTROL

The Shaw Direct IRC600 and URC600 Remote Controls are preprogrammed to operate a Motorola satellite receiver, a Sony TV, and Sony DVD player. To program devices other than the default brands, perform the following steps; otherwise skip this section.

- Turn on the TV or Auxiliary device.

NOTE: Please read steps 2 to 4 completely before proceeding. Highlight or write down the codes and device you wish to program before moving on to step 2.

- Press and hold Device key (TV or AUX) until the Red Lights flash at least twice, then release TV or AUX.
- Locate the code for your device in Manufacturer's Codes on the back of this user guide. Brands are listed in alphabetical order with the most popular codes listed first.
- Enter the first five-digit code for your TV or Auxiliary Device. If you perform this procedure correctly, the Red Light will blink twice.
 

NOTE: If you enter an invalid code, the red light will not blink when entering the last digit and exit the programming mode. Repeat steps 2 to 4 with a valid code.
- Aim the remote control at your TV or Auxiliary Device and press Power once. The device should turn off. If it does not respond, repeat steps 2 to 4, trying each code listed for your brand until you find one that works. If it still does not work, try Searching For Your Code.
- The TV or Auxiliary Device code will be stored in the remote control and will be automatically reprogrammed when the batteries are changed.

TV Code:

AUX Code:

## PROGRAMMING CHANNEL CONTROL LOCK

By default, the remote control's channel-control capabilities are locked to the satellite receiver. The affected keys are 0 through 9, CH+, CH- and LAST. This guarantees that you do not inadvertently change a channel on your TV. However, you can de-activate this feature to allow full access to these keys in the TV mode.

### Unlocking Channel Control

- On the remote control, press and hold SAT until it blinks twice.
- Enter 9-7-3. The SAT key blinks twice.
- Press CH - once. The SAT key blinks four times.

### Locking Channel Control to SAT

- On the remote control, press and hold SAT until it blinks twice.
- Enter 9-7-3. The SAT key blinks twice.
- Press CH+ once. The SAT key blinks twice.

## SEARCHING FOR YOUR CODE

If your brand of Device does not respond to the remote control after trying all of the codes listed, or if your brand is not listed at all, try searching for your code.

1=TV, 2=DVD/VCR, 3=AUDIO

- Turn on your Device.
- Press and hold Device key (TV or AUX) until the Red Lights flash at least twice, then release TV or AUX.
- Enter in 9 - 9 - 1. The Red Light will blink twice.
- Press Digit 1 to search for a TV, Press Digit 2 to search for a DVD/VCR or Press Digit 3 to search for an Audio device.

- While pointing the remote control at the Device, press and release the CH + key until the Device turns off. (Note: You may need to press [CH+] numerous times).

NOTE: In the search mode, the remote control will send IR codes from its library to the target device.

- Press Device key (TV or AUX) once to lock in the code. The Red Light will blink twice.

## CHECKING THE CODES

If you have set up the remote control using the Searching For Your Code procedure, you may need to find out which five-digit code is operating your TV. Perform the following steps after setting up your TV to find out which five-digit code operates your TV.

- Press and hold TV until the Red Light flashes at least twice, then release TV.
- Enter in 9 - 9 - 0. The Red Light will blink twice.
- To view the code for the first digit, press 1 once. Wait 3 seconds and count the number of times the Red Light blinks (e.g., 3 blinks =3) and write down the number in the left most TV Code box (at end of this section).

NOTE: If a code digit is "0", the red light will not blink.

- Repeat step 3 four more times for the remaining digits. Use 2 for the second digit, 3 for the third digit, 4 for the fourth digit and 5 for the fifth digit. Finish writing down the code in the TV Code boxes (at end of this section).
- To check AUX code, repeat steps 1 through 4 using the AUX key in step 1.
- To check SAT code, repeat steps 1 through 4 using the SAT key in step 1.

Note: When verifying the SAT Address only digits 1, 2 and 3 are required.

TV Code:

AUX Code:

## CHANGING VOLUME CONTROL

On the Shaw Direct IRC600 and URC600 Remote Controls, Global Volume Lock is set to TV, so you can control TV volume while in the AUX, or SAT mode.

You can perform Individual Volume Unlock on a selected device to set its volume control for independent operation.

### Locking Volume to a Specific Mode.

- Press and hold SAT until the Red Lights blink at least twice, then release SAT.
- Enter in 9 - 9 - 3 (The Red Light will blink twice after the 3).
- Press and release the Mode Key (TV or AUX) to lock Volume to.

### Unlocking Volume from a Specific Mode.

- Press and hold mode key to be unlocked (e.g. AUX) until the Red Lights blinks at least twice, then release the mode.
- Enter in 9 - 9 - 3 (The Red Light will blink twice after the 3).
- Press and release the Volume Down Key the Red light will flash 4 times.

## USING THE MASTER POWER KEY

The Shaw Direct IRC600 and URC600 Remote Controls have a unique feature that allows you to sequentially turn up to three of your home entertainment devices on or off with a single key press.

NOTE: The MASTER POWER (Power) default setting is the SAT mode. If it is not programmed, only the Satellite receiver and TV will turn on or off. In the AUX or TV mode, pressing the Power key will only turn on or off the selected device.

## PROGRAMMING THE MASTER POWER KEY

- Press and hold SAT until the Red Light blinks at least twice, then release SAT.
- Enter in 9 - 9 - 5 The Red Light will blink twice.
- Press and release each mode key once in the order that you want them in the Master Power sequence.
- Press and release the Power key (The red light under SAT will flash twice).

## USING THE MASTER POWER KEY

After Programming, point the remote control at your devices and press and hold the POWER key for 1.5 seconds

### Removing the Master Power Key

- Press and hold SAT until the Red Light blinks twice, then release SAT.
- Enter in 9 - 9 - 5 The Red Light will blink twice.
- Press and release the Power key (The red light under SAT will flash twice).

## TROUBLESHOOTING

- PROBLEM:** Device key does not blink when you press a key.
- SOLUTION:** Replace the batteries with two (2) new AA alkaline batteries
- PROBLEM:** Device key blinks when you press a key, but home entertainment device does not respond.
- SOLUTION:** Be sure you are aiming the remote control at your home entertainment device and that you are within 15 feet of the device you are trying to control.

**PROBLEM:** The remote control does not

control home entertainment devices or commands are not performing properly.

**SOLUTION:** Try all listed codes for the device brand being set up. Make sure all devices can be operated with an infrared remote control.

## ADDITIONAL INFORMATION

This product does not have any user-serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your Shaw Direct IRC600 and URC600 Remote Controls.

• For help via the Internet, visit us at: [www.shawdirect.ca](http://www.shawdirect.ca)

Copyright© 2010 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without prior written permission of Universal Electronics Inc.

## COMPLIANCE WITH FCC RULES AND REGULATIONS

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged or try to correct the interference by one or more of the following measures:

- Increase or decrease the separation between the equipment and receiver.
- Consult the dealer or an experienced remote control/ TV technician for help.

This equipment has been verified to comply with the limits for a Class B computing device, pursuant to FCC Rules. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

## FCC AUTHORIZATION LABEL

FCC ID: MG33051

IC: 2575A-3051

Model URC-3051

Universal Electronics Inc

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

## MANUFACTURER'S CODES

## SETUP CODES FOR AUDIO

## CODES DE RÉGLAGE POUR CHAÎNES STÉRÉO

Aiwa	31405, 30189, 31388, 31641
Alkal	31512
Alco	31390
Altec Lansing	32595, 32596
AMC	31077
Amphion Media	31563
AMW	31563
Anam	31609
Anthem	32220
Apex Digital	31257, 31430, 31774
Arcam	31189, 30189
Audiotronic	31189
Audiovox	31390
B & K	30820
Bose	31229, 30639, 31629, 31841, 31933
Boston Acoustics	32162
Cambridge Sound	31370
Carver	31189, 30189
Cary Audio Design	31879
Coby	31389
Curtis	31389
Daewoo	31250
Denon	32134, 31360, 32279, 32857
Elan	30647
Fisher	31801
Flextronics	31879
Gateway	31517
Halcro	31934
Harman/Kardon	30892, 30189, 31304, 31306, 32241, 32443
Hitachi	31273, 31801
iHome	32435
iLive	32013
Insignia	31030, 31077, 31751, 31893, 32126, 32169, 32175, 32472, 32474
Integra	31298, 31320, 31805
iSymphony	32018, 32258, 32442
JBL	31306
JVC	31374, 31495, 32040, 32161, 32239, 32331
Kenwood	31313, 31570, 31569
KLH	31390, 31428
Koss	31366, 31497
Krell	31837, 32463
Left Coast	30892
Lexicon	31802
LG	31293, 32197, 32284
Linn	30189
Liquid Video	31497
Marantz	30892, 31892, 32138, 31189, 31269, 30189, 31289, 32114
Magnavox	31189, 31269, 30189, 31514
Mark Levinson	32405
Mclintosh	31289
Micromega	31189
Mitsubishi	31393
Myriad	31189
Nakamichi	31313
NexTech	31751
Norcent	31389, 31751
Nova	31389
Onkyo	30842, 31298, 31320, 31531, 31805, 32451
Optimus	30823, 31023
Ortron	31366, 31497
Panasonic	31308, 31518, 31275, 31288, 31316, 31548, 31633, 31763, 31764, 32221, 32452, 32967
Parasound	31934
Philco	31838
Philips	30892, 31189, 31269, 30189, 31266, 32311, 32459
Pioneer	30823, 31023, 31384, 31935
Polaroid	31508
Polk Audio	30892, 32242, 30189, 31289, 32244, 32270
Primare	31851
Proscan	31254
RCA	30823, 31023, 31609, 31254, 31390, 31511, 32041
Rio	31869
Samsung	31295, 31304, 31500, 31868
Sansul	30189
Sanyo	31469, 31801
Sherwood	31077, 31517, 31653, 31905, 32169
Sherwood New	32169
Sonic Blue	31869
Sony	31759, 31058, 31441, 31258, 31622, 31558, 31658, 31758, 31822, 31858, 32172, 32216, 32320, 32475, 32522
Stereophonics	31023
Sunfire	31313
Teac	31390, 31528
Technics	31308, 31518, 31633
Thorens	31189
Thule Audio	31851
Toshiba	31788
Venturer	31390
Vizio	31517
Wards	30189
Yamaha	30176, 30376, 31176, 31276, 31331, 31375, 31376, 31476, 31815, 32061, 32455, 32467, 32471
Zenith	31293

Albatron	10700, 10843
Ampro	10751
AOC	10030, 11365, 11589, 11590, 12014, 12087, 12402, 12479
Aomni	11623
Apex Digital	10748, 10879, 10765, 10767, 10868, 11217, 12397
Astar	11531, 11738
Audiovox	10451, 10623, 10802, 10846, 10875, 11937, 11951, 11952
Aventura	10171
Axion	11937
Bell & Howell	10154
BenQ	11032, 11212, 11315
Bright	10893
Broksonic	10463, 11905, 11929, 11935, 11938
Bydsign	11309
C & M	10700
Candle	10030
Carnivale	10030
Carver	10054
CCE	10623
Celebrity	10000
Celera	10765
Changhong	10765
Citizen	10060, 10030, 11669, 11671, 11672, 11928, 11935
Coby	11634, 12306, 12314, 12315, 12326, 12338, 12340, 12343, 12344, 12345, 12347, 12348, 12350, 12351, 12560
Commercial Solutio	11447, 10047
Crosley	10000, 10054
CTX	10700
Curtis	11326, 12352, 12466
Cytron	11326
Daewoo	10154, 10451, 11661, 10623, 10661, 10672, 11928
Dell	11264, 11080, 11178, 11403, 11863
Denon	10145
Diamond Vision	11996
Digital Lifestyles	11765
Digital Projection	11750
DirectTV	11501
Disney	11665, 12152
Dream Vision	11164
Dumont	10017
Durabrand	10463, 10178, 10171, 11034, 11665
Dwin	10720, 10774
Dynex	11463, 11780, 11785, 11810, 12049, 12184
Electroband	10000
Electrograph	11755, 11623
Electrohome	10463, 11670, 11672
Element	11687, 12183
Emerson	11894, 10154, 10451, 10463, 10178, 10171, 11661, 10623, 11394, 11665, 11905, 11928, 11929, 11944, 11963
Emprex	11422, 11765
Envision	10030, 10813, 11365, 11589, 12014, 12087
Epson	10833, 10840, 11290
ESA	10812, 10171, 11944, 11963
Fisher	10154
Fujitsu	10809, 10683, 10853
Funai	10000, 10171, 11271, 11904, 11963, 11979
Gateway	11755, 11756
GE	11447, 10047, 10051, 10451, 10178, 11347, 11922, 12359
GF	10171, 11665, 11963, 12167
GFM	11351
Gibraltar	10017, 10030
Go Video	10886, 11823
GoldStar	10178, 10030, 11926
Grundig	10683
Haier	11034, 11749, 12309
Hallmark	10178
Hanns-G	11783

## SETUP CODES FOR DVD PLAYERS

### CODES DE RÉGLAGE POUR LECTEURS DVD

Accurian	20675, 21416
Aiwa	20641
Akai	20695, 20770, 21089
Alco	20790
Allegro	20869
Amphion Media	20872
AMW	20872
Apex Digital	20672, 20755, 20794, 20796, 20797, 21004, 21020, 21056, 21061, 21100, 22619
Arrgo	21023
Aspire Digital	21168, 21407
Astar	21489
Audio Authority	22555
Audiovox	20790
B & K	20655, 20662
BBK	21224
Bel Canto Design	21571
Blue Parade	20571
Bose	21895
Broksonic	20695, 20868
California Audio	20490
Cinea	20831
CineVision	20876, 20833, 20869
Citizen	20695, 21277, 22116
Coby	20778, 21086, 21107, 21177, 21628
Craig	20831
Curtis Mathes	21087
CyberHome	20816, 20874, 21023, 21024, 21117, 21129, 21502, 21537

Daewoo	20784, 20705, 20833, 20869, 21169, 21172, 21234, 21242
Daytek	20872
Denon	20490, 20634, 21634, 22258
Desay	21407
DigitalMax	21738
Disney	20675, 21270
Dual	21068, 21085
Durabrand	21023, 21127
DVD2000	20521
Dynex	22255
Electrohome	22116
Emerson	20591, 20675, 20821, 21268
Enterprise	20591
ESA	20821, 21268
Fisher	20670
Funai	20675, 21268, 21334
Gateway	21073, 21077, 21158
GE	20522, 20815
GFM	20675, 21268
Go Video	20744, 20715, 20741, 20783, 20833, 20869, 21044, 21075, 21099, 21158, 21304, 21730

GoldStar	20741, 20869
Gradiente	20651
Grundig	20539, 20705
Harman/Kardon	20582, 20702, 21229
Helios	22080, 22192
Hello Kitty	20831
Hitachi	20573, 20664
Hiteker	20672
Humax	21500, 21588
iLO	21348
Insignia	20675, 21268, 22095, 22255, 22428, 22596

Integra Irradio	20571, 20627, 21634, 21769, 22147
JBL	20646
JVC	20702
Kawasaki	20558, 20623, 20867, 21164, 21275, 21550, 21602, 22365, 22472

Kenwood	20790
Kenwood	20490, 20534
KLH	20790, 21020, 21149
Koss	20651
Lasonic	20798
Lennox	21127
LG	20591, 20741, 20869, 21602, 22135
LiteOn	21058, 21158, 21416, 21440, 21656, 21738
Loewe	20511
Logitech	22639
Magnavox	20503, 20539, 20646, 20675, 20821, 21177, 21268, 21354, 21506, 22229
Marantz	20539, 22414
Mintosh	21533, 21273
Memorex	20695, 20831, 21270, 22213
Microsoft	20522, 22083
Mintek	20839
Mitsubishi	21521, 20521
NAD	20741, 22572
NEC	20785
NewsTech	21402
Norcent	21003, 20872, 21107, 21265
Nyko	22340
Olevia	22331
Onkyo	20503, 20627, 21612, 21769, 22147, 22215

Oppo	20575, 21224, 22185, 22545
Oritron	20651
Panasonic	20490, 20503, 20632, 20703, 21579, 21641, 21762
Philco	20675
Philips	20503, 20539, 22056, 20646, 20675, 20854, 21158, 21260, 21267, 21340, 21354, 21506, 22084, 22434
PianoDisc	21024
Pioneer	20525, 20571, 20142, 20631, 20632, 21460, 21512, 21571, 22442
Polaroid	21020, 21061, 21086
Polk Audio	20539
Portland	20770
Presidian	20675, 21738
Proced	20672
Proscan	20522
Provision	20778
Qwestar	20651
RCA	20522, 20571, 20790, 20822, 21022, 21132, 21769, 22213, 22392

RE-BL	22555
Rio	20869
Rotel	20623, 21178
Rowa	20823
Sampo	20698, 20752
Samsung	20490, 20573, 20199, 20820, 21044, 21075, 21470, 22069, 22329, 22369, 22489, 22556
Sansui	20695
Sanyo	20670, 20695, 20873
Schneider	20646
Sensory Science	21158
Sharp	20630, 20675, 20752, 21256, 22530, 22561
Sharper Image	21117

Sherwood	20770, 21043, 21077
Sherwood New	21077
Shinsonic	20533, 20839
Sonic Blue	20869, 21099
Sony	20533, 21533, 20864, 20772, 21033, 21070, 21431, 21516, 21536, 21633
Superscan	20821
Sylvania	20675, 20821, 21268, 22194
Symphonic	20675, 20821
Teac	20790
Technics	20490, 20703
Terapin	21031
Theta Digital	20571
Tivo	21503, 21512
Toshiba	20503, 20695, 21154, 21503, 21510, 21588, 21608, 21769,22006, 22277, 22705

Urban Concepts	20503
US Logic	20839
Venturer	20790
Viore	22553
Vizio	21064, 21226, 22563
WB Electronics	22555
Xbox	20522, 22083
Yamaha	20490, 20539, 20646, 20545, 20497, 20817, 21416, 22298, 22558
YBA	20872
Zektor	21730
Zenith	20503, 20591, 20741, 20869
Zoece	21265

#### SETUP CODES FOR BLU-RAY DVD PLAYERS

### CODES DE RÉGLAGE POUR

### LECTEURS DVD BLUE-RAY

Denon	22258
Insignia	20675, 22428, 22596
Integra	21769, 22147
JVC	22365
LG	20741, 21602
Magnavox	20675
Marantz	22414
Microsoft	22083
NAD	22572
Olevia	22331
Onkyo	21612, 21769, 22147
Oppo	22545
Panasonic	21641
Philips	22084, 22434
Pioneer	20142, 22442
RCA	21769
Samsung	20199
Sharp	22250, 22561
Sony	21516
Sylvania	20675, 22194
Toshiba	21769, 22705
Viore	22553
Vizio	22563
Xbox	22083
Yamaha	22298

#### SETUP CODES FOR VCR

### CODES DE RÉGLAGE POUR

### MAGNÉTOSCOPES

ABS	21972
Accurian	20000
Admiral	20048, 20209, 20479
Adventura	20000
Aiwa	20037, 20000
Alienware	21972
Allegro	20039, 21137
American High	20035
Audiovox	20037
Bell ExpressVu	21944
Bright House	22763
Broksonic	20184, 20121, 20209, 20479, 21479
Cable One	22763
Cablevision	22763
Calix	20037
Canon	20035
Carver	20081
Charter	22763
CineVision	21137
Citizen	20037, 21278
Comcast	22448, 22763
Cox	22763
Craig	20037
Crosley	20081, 20000
CyberPower	21972
Daewoo	20045, 21137, 21278
Dell	21972
Denon	20042
DirectTV	20739, 22033
Dish Network	21944
Dishpro	21944
Durabrand	20039, 20038
Dynatech	20000
Echostar	21944
Electrohome	20037, 20043
Electroponic	20037
Emerex	20032
Emerson	20037, 20184, 20000, 20121, 20043, 20209, 20479, 2059, 21278, 21479, 21593

ESA	21137
Expressvu	21944
Fuji	20035, 20033
Funai	20000, 20593, 21593
Garrard	20000
Gateway	21972
GE	20060, 20035, 20807, 21035, 21060
GFM	21593
Go Video	20614, 21137
GOI	21944
GoldStar	20037, 20038, 21137, 21237
Gradiente	20000
Harley Davidson	20000
Harman/Kardon	20081, 20038
Headquarter	20046
Hewlett Packard	21972
Hitachi	20000, 20042, 20089, 20593
Howard Computers	21972
HP	21972
HTS	21944
Hughes Network	20042
Humax	20739
Hush	21972
iBUYPOWER	21972
Insigt	22763

Instant Replay	20035
JVC	20067, 21944
KEC	20037
Kenwood	20067, 20038
Kodak	20035, 20037
LG	21037, 21137
Linksys	21972
Lloyd's	20000
LXI	20037
Magnasonic	20593, 21278
Magnavox	20035, 20039, 20081, 20000, 20149, 20563, 20593, 21593,21781
Marantz	20035, 200571
Marta	20037
Matsushita	20035, 20162, 21162
Media Center PC	21972
Mediacom	22763
MEI	20035
Memorex	20035, 20162, 20037, 20048, 20039, 20000, 20209, 20046, 20479, 21037, 21162, 21237, 21262

MGA	20043
Microsoft	21972
Mind	21972
Minolta	20042
Mitsubishi	20067, 20043, 20807
Motorola	20035, 20048, 22763
MTC	20000
Multitech	20000
NEC	20067, 20038
Niko	20037

Niveus Media	21972
Northgate	21972
Olympus	20035
Orion	20184, 20209, 20479, 21479
Pace	22763
Panasonic	21062, 20035, 20162, 20225, 20614, 20616, 21035, 21162,21262
Pentax	20042
Philco	20035
Philips	20739, 20035, 20081, 20618, 21081, 21181
Pioneer	20067
Polk Audio	20081
Presidian	21593
Proscan	20060, 21060
Pulsar	20039
Quarter	20046
Quartz	20046
Quasar	20035, 20162, 21035, 21162
RadioShack	20000, 21037

Radix	20037
Randex	20037
RCA	20060, 20035, 20042, 20149, 20807, 20880, 21035, 21060
Realistic	20035, 20037, 20048, 20000, 20046
ReplayTV	20614, 20616
Ricavision	21972
Rio	21137
Runco	20039
Samsung	20045, 21014
Sanky	20048, 20039
Sansui	20000, 20067, 20209, 20479, 21479
Sanyo	20046
Scott	20184, 20045, 20121, 20043, 20210
Sears	20035, 20037, 20000, 20042, 20046, 21237
Sharp	20048, 20807, 20848
Signature	20035
Sonic Blue	20614, 20616, 21137
Sony	21232, 20032, 20035, 20033, 20000, 20636, 21032, 21972

Stack 9	21972
STS	20042
Suddenlink	22763
Sylvania	20035, 20081, 20000, 20043, 20593, 21593, 21781

Symphonic	20000, 20593, 21593
Systemax	21972
Tagar Systems	21972
Tashiko	20037
Teac	20000

Technics	20035, 20162
Teknika	20035, 20037, 20000
Thomas	20000
Time Warner	22763
Tivo	20739, 20618, 20636, 21996, 22448
Toshiba	20045, 20043, 20209, 20210, 20845, 21008, 21145, 21972, 21996
Toshiba	20037
Touch	21972
Vector	20045
Vector Research	20038
Video Concepts	20045
Videomagic	20037
Viewsonic	21972
Villain	20000
Voodoo	21972
White West.	20209
XR-1000	20035, 20000
Yamaha	20038
Zenith	20037, 20039, 20033, 20000, 20209, 20479, 21137, 21479
ZT Group	21972

## APERÇU

Les télécommandes Shaw Direct IRC600 IR et URC600 IR/RF fabriquées par Universal Electronics sont nos télécommandes univser-selles de la toute dernière génération. Leur technologie sophistiquée vous permet de regrouper les fonctions de trois de vos télé-commandes d'appareils de divertissement maison en un seul produit facile à utiliser.

La télécommande requiert l'installation de deux (2) piles AA neuves (comprises) et une programmation simple afin de faire fonction-ner votre téléviseur. Pour obtenir les meil-leurs résultats, veuillez lire et exécuter toutes les instructions décrites ici. Conservez ce guide pour référence ultérieure.

### INSTALLATION DES PILES

- Soulevez le couvercle du compartiment

des piles et retirez-le.

- Insérez les deux (2) piles AA qui sont fournies selon les marques « + » et « - » à l'intérieur du compartiment des piles.

- Remettez en place le couvercle du compartiment des piles.

- Effectuez une vérification en appuyant sur la touche d'alimentation.

Si les piles sont insérées correctement, le voyant rouge clignotera.

NOTA : Lorsque les piles doivent être remplacées, la télécommande cesse de fonctionner. Remplacez les piles par des piles AA neuves.

## PROGRAMMATION DE LA COMMANDE SAT

L'adresse de votre télécommande est pré-dé-claré par le fabricant à 000 pour comman-der toutes les fonctions de votre récepteur de signaux de satellite Motorola. Toutefois, si vous avez plus d'un récepteur de sig-naux de satellite, vous voudrez peut-être empêcher la télécommande qui se trouve dans une pièce d'affecter le récepteur qui se trouve dans une autre pièce. Afin d'éviter ce type d'interférence, vous devez assigner chaque télécommande à un récepteur en attribuant une nouvelle adresse à chaque combinaison. Vous pouvez attribuer une adresse à l'aide de votre télécommande de la façon suivante :

- Appuyez sur la touche SAT pour sélec-tionner le mode SAT de la télécommande.
- Appuyez sur la touche OPTIONS pour afficher l'écran Options sur votre télévi-seur.
- Dans le Menu Options, utilisez les flèches de défilement et appuyez sur la touche ENTER/OK ▲▼◀▶ pour ouvrir les menus suivants. Vous pouvez égale-ment appuyer sur le numéro indiqué sur la télécommande pour avoir un accès direct à chaque menu.

6 Configuration du système (certains modèles seulement).

4 Réglages du système.

3 Réglages de l'installation.

2 Adresse de la télécommande.

- Lorsque vous arrivez à l'écran « Adresse de la

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>