

ide line®

[STIL]



Model: HW-302
Art. No.: 745-175

Please read this instruction manual carefully and familiarise yourself with your new jug kettle before using for the first time.

Please retain this manual for future reference.

IMPORTANT SAFEGUARDS:

When using your kettle, basic safety precautions should always be followed, including the following.

 
1. Read all instructions carefully, even if you are familiar with the appliance.
2. Close supervision is necessary when any appliance is used by or near children.
3. Before connecting the kettle, check if the voltage indicated on the appliance (underside of kettle and base unit) corresponds with the main voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
4. Switch off and unplug from the outlet before filling, emptying or cleaning, or when not in use.
5. Do not overfill as boiling water may be ejected. The maximum level is marked on the inside of the kettle.
6. Do not operate or place any part of this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
7. Do not let the cord hang over the edge of a table or counter. Do not let the cord touch hot surfaces.
8. Never yank on the cord as this may damage the cord and eventually cause a risk of electric shock.
9. If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer, because special purpose tools are required.
10. Avoid touching hot kettle surfaces - use the handle and knobs.
11. To avoid possible steam damage, turn the spout away from walls or cabinets when operating the kettle.
12. If operated on wood furniture, use a protective pad to prevent damage delicate finishes.
13. To avoid scalding, always ensure the lid is correctly positioned before operating.
14. Scalding may occur if the lid is removed whilst heating.
15. Remove and replace the lid carefully when hot.
16. Extreme caution must be used when moving the kettle containing hot water. Never lift the kettle by its lid. Always use the body handle.
17. Do not switch your kettle on if it is empty.
18. To protect from electrical hazard, do not immerse this kettle, power base or cord in any liquid.
19. Use the kettle only with the supplied base unit. Do not use the base unit for other

purposes.

20. To protect against fire, do not operate in the presence of explosive and/ or flammable fumes.
21. A kettle should not be left connected to a wall socket when the room temperature is likely to fall to outdoor winter temperatures. At sub-zero temperatures the automatic control thermostat may reset to boil energize the element.
22. Do not use the kettle for any purpose other than heating water. Other liquids or food will contaminate the interior.
23. This product has not been designed for any other uses than those specified in this booklet.

PRODUCT DESCRIPTION:

- A. Spout
- B. Lid
- C. Control lamp
- D. On/Off button
- E. Contact
- F. Base with cord rewind

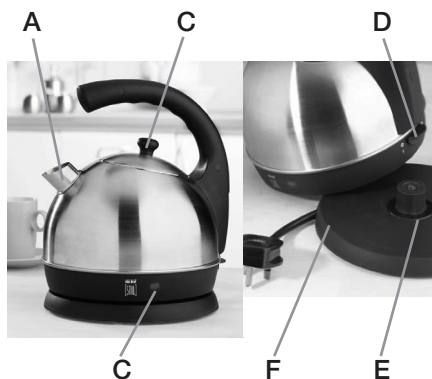

INSTRUCTIONS FOR USE:

1. Before first use, fill the kettle with clean water to maximum capacity and boil. Discard the water and repeat.
2. The kettle should always be unplugged when filling or adding water.
3. Fill the kettle with water to the desired level. Do not overfill or there will be a risk of spillage or spitting. The water level indicator will assist you to measure correct amount. You can fill the kettle via the spout or after opening the lid. Do not forget to close the lid after filling otherwise the kettle will not automatically switch off after use.
4. Do not fill with less than 0,35 litre of water.
5. Do not fill with more than 1,7 litres of water.
6. An automatic safety cut-out has been fitted for protection against overheating. It will operate if the kettle is switched on when containing insufficient water.
7. If the automatic safety cut-out has operated, switch the kettle off, disconnect from the power outlet and allow the kettle to cool down for 5- 10 minutes. Then refill with water and switch on - the kettle will then boil and cut off as in normal operation.
8. The kettle may be switched off at any time by either pushing the switch of the kettle to the "up" position or by switching the power off at the power outlet.
9. To pour water, lift the kettle from the power base and pour.

CORDLESS KETTLE:

1. Place the power base on a dry, flat surface.
2. Place the kettle on the power base. The electrical connections will be made automatically as the kettle slides onto the power base.
3. Plug the cord into an earthed power socket and switch on by depressing the switch of the kettle to the "down" position.
4. When the water has boiled, the kettle will switch off automatically. After allowing the kettle to cool down for 15-20 seconds, the water can be brought back to the boil by pushing the switch back to the "down" position. During the cooling down time do not force the on/off switch into the "down" ("I") position as this can damage the operating mechanism.
5. Do not remove the kettle from the power-base without first switching off.
6. Remember, if you do not wish to re-boil the kettle, turn it off at power point.
7. The kettle may be switched off at any time by either pushing the switch of the kettle to the "0" position or by switching the power off at the power outlet.
8. To pour water, lift the kettle from the power base and pour.

HOW TO CARE FOR YOUR KETTLE:

Wipe the exterior of the kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powders. Never immerse the kettle in water or other liquids.

Since this kettle has concealed heating element, is it important to keep the bottom clean, between the decalcification you may use a washing-up brush or sponge.

From time to time, dependent on the nature of your water supply, a limescale deposit is naturally formed and can be found mostly adhered to the heating element and reduce the heating capacity.

The amount of limescale deposited (and subsequently the need to clean or descale) largely depends on the water hardness in your area and the frequency with which the kettle is used.

Limescale is not harmful to your health. But if poured into your beverage it can give a powdery taste to your drink. Therefore, the kettle should be descale periodically as indicated below:

DESCALING:

Descale the kettle regularly. With normal use: at least twice a year.

1. Fill the kettle up to the "MAX" with a mixture of one part acetic acid and two parts water. Switch on and wait for the appliance to switch off automatically.
2. Let the mixture remain inside the kettle overnight.
3. Throw the mixture away the next morning.
4. Fill the kettle with clean water up to "MAX" and boil again.
5. Throw away this boiled water to remove any remaining scale and vinegar.
6. Rinse the inside of the kettle with clean water.

ENVIRONMENTAL TIP

An electronic appliance should, when it is no longer capable of functioning be disposed with least possible environmental damage. The appliance should be disposed according to the local regulations in your municipality, in most cases you can discharge the appliance at your local recycling center.

THE WARRENTY DO NOT COVER

- If the above points have not been observed.
- If the appliance has not been properly maintained, if force has been used against it or if it has been damaged in any other way.
- Errors of faults owing to defects in the distribution system.
- If the appliance has been repaired or modified or changed in any way or by any person not properly authorised.

Owing to our constant development of our products on both functionality and design we reserve the right to change the product without preceding notice.

IMPORTER

Elof Hansson A/S

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>