

SAMSUNG TECHWIN



SALES NETWORK

• **SAMSUNG TECHWIN CO., LTD.**

145-3, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, 462-120, Korea
TEL : +82-31-740-8151~8158 FAX : +82-31-740-8145

• **SAMSUNG OPTO-ELECTRONICS UK, LTD.**

Samsung House, 1000 Hillswood Drive, Hillswood Business Park Chertsey, Surrey KT16 OPS
TEL : +44-1932-45-5308 FAX : +44-1932-45-5325

www.samsungtechwin.com
www.samsungcctv.com

VAN 08. 04

L39ME0145

Download from www.Somanuals.com. All Manuals Search And Download.

SAMSUNG

An **Ideal**
Face of Security



Professional Security LCD Monitor STM-19LA/17LA User's Manual

Thank you for purchasing a SAMSUNG LCD Monitor.
Before attempting to connect or operate this product,
please read these instructions carefully and save this manual for future use.

ENGLISH

CONTENTS

IMPORTANT SAETY INSTRUCTIONS3

SAFETY INSTRUCTION.....4

CAUTIONS.....5

FCC RF INTERFERENCE STATEMENT6

CONNECTING WITH EXTERNAL EQUIPMENT6

REMOTE FUNCTIONS.....7

CONTROLS AND FUNCTIONS.....7

OSD MENU DESCRIPTION8

MOUNTING GUIDE13

D-SUB CONNECTOR PIN ASSIGNMENTS13

POWER MANAGEMENT14

TROUBLESHOOTING GUIDE.....14

SPECIFICATIONS15

DIMENSION.....15

IMPORTANT SAFETY INSTRUCTIONS

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this aparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug.
 A polarized plug has two blades with one wider than the other.
 A grounding type plug has two blades and third grounding prong.
 The wide blade or the third prong are provided for your safety.
 If the provided plug does not fie into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
 When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in anyway, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
 - Minimum distances(e.q. 10cm) around the apparatus for sufficient ventilation.

"WARNING - To reduce the risk of fire or electric shock, do not expose the apparatus to rain or moisture."

"The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vaces, shall be placed on the apparatus."

SAFETY INSTRUCTION

Thank you for purchasing our product. Before operating this product, please read the instruction manual.

1. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
2. Do not use this product near water.
3. Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
4. Slots and openings in the cabinet and the back are provided for ventilation: to ensure reliable operation of the product, these openings must not be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
5. This product should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
6. This product is equipped with a 3 wire grounding type plug having a third (grounding) pin. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.
7. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
8. If an extension cord is used with this product, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord ampere rating. Also, make sure that the total of all products plugged into the wall outlet does not exceed 10 amperes.
9. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill any kind of liquid on the product.
10. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks. Refer all servicing to service personnel.
11. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions.
 - When the power cord or plug is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the Product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTIONS

- **NEVER REMOVE THE BACK COVER**

Removal of the back cover should be carried out only by qualified personnel.

- **DO NOT USE IN HOSTILE ENVIRONMENTS**

To prevent shock or fire hazard, do not expose the unit to rain or moisture. This unit is designed to be used in the office or home. Do not subject the unit to vibrations, dust or corrosive gases.

- **KEEP IN A WELL VENTILATED PLACE**

Ventilation holes are provided on the cabinet to prevent the temperature from rising. Do not cover the unit or place anything on the top of unit.

- **AVOID HEAT**

Avoid placing the unit in direct sunshine or near a heating appliance.

- **TO ELIMINATE EYE FATIGUE**

Do not use the unit against a bright back ground and where sunlight or other light sources will shine directly on the monitor.

- **BE CAREFUL OF HEAVY OBJECT**

Neither the monitor itself nor any other heavy object should rest on the power cord. Damage to a power cord can cause fire or electrical shock.

FCC RF INTERFERENCE STATEMENT

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technician for help.
- Only shielded interface cable should be used.


Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment.

• DOC COMPLIANCE NOTICE

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the radio interference regulation of Canadian Department of communications.

CONNECTING WITH EXTERNAL EQUIPMENT

A. BOTTOM PANEL CONTROL

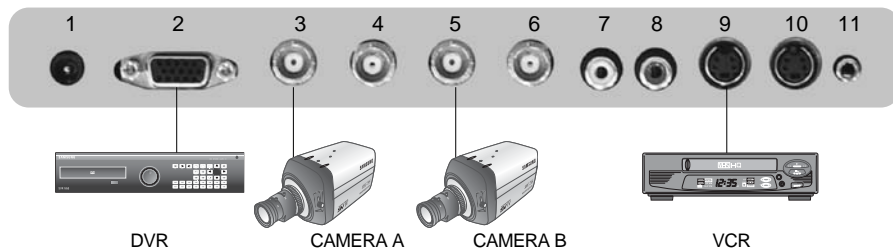


1. DC 12V IN
2. D-SUB IN : PC Signal Input
3. VIDEO 1(AV1) IN : Composite signal Input for AV1
4. VIDEO 1(AV1) OUT : Video looping output for AV1
5. VIDEO 2(AV2) IN : Composite signal Input for AV2
6. VIDEO 2(AV2) OUT : Video looping output for AV2
- 7 / 8. AUDIO IN(L+R) : Stereo Audio Signal Input
9. S-VIDEO (Y/C) IN : Y/C separated signal input
10. S-VIDEO (Y/C) OUT : Y/C separated signal looping output
11. PC STEREO IN

REMOTE FUNCTIONS

B. REMOTE CONTROLLER

1. **POWER** (⏻) : Turns the power ON or OFF. There will be a few seconds delay before the display appears.
2. **SOURCE** : Select pc or video(AV1 / AV2 / S-Video / PC) sources.
3. **APC (Auto Picture Control)** : Select picture mode.
4. **ACC (Auto Colour Control)** : Select Colour mode.
5. **AV1** : Select AV1 mode
6. **AV2** : Select AV2 mode
7. **S-VIDEO** : Select S-VIDEO mode
8. **PC** : Select PC mode
9. **AUTO** : Auto geometry adjustment in PC Source.
10. **MUTE** : Mute the sound.
11. **MENU** : Activates and exits the On Screen Display.
12. **EXIT** : Exit the On Screen Display.
13. **VOL** (◀▶) : Increases or decreases the level of audio volume.
14. **UP/DOWN** : Move to OSD menu.
15. **ENTER** : Accepts your selection or displays the current mode.
16. **INFO** : Input mode information Display.
17. **STILL** : Pause the picture.

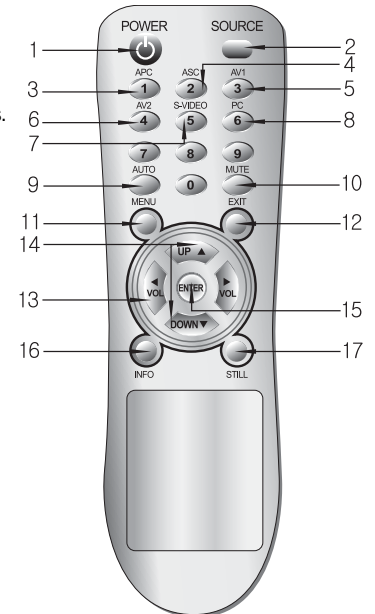

CONTROLS AND FUNCTIONS



• Front Key Control

1. **SOURCE** : Select input source, and move the previous menu.
2. **MENU** : Activates and exits the On Screen Display. This button can also be used to move previous menu or status. OSD MENU(MAIN) : Custom, Picture/Sound, Setup.
- 3/4. **AUTO** / [Down Arrow] / [Up Arrow] : This button allows user to enter the sub-menu of the activated function
AUTO: Auto geometry adjustment in PC Source.

5/6. ◀ VOL ▶ : Adjust the volume / Adjust menu settings.


7. IR Sensor : Remote controller sensor.

8. POWER ON/OFF (⏻)


Turns the power ON or OFF. There will be a few seconds delay before the display appears. The power LED(next to the power switch) lights with green when the power is turned ON. The power is turned off by pressing the power switch again and the power LED goes Red.

• OSD MENU DESCRIPTION

A: CUSTOM MENU (Only Video mode)

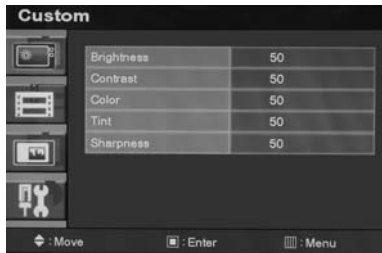


Press the MENU button and then up(▲) / down(▼) button to select the Custom menu.

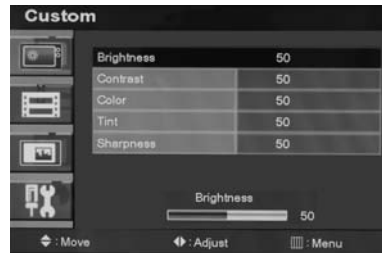

Press the up(▲) / down(▼) button to select Custom sub menu. Press the left(◀) /right(▶) button to adjust picture setting. Press the MENU button to save.

- **Brightness:** Increase or decrease the intensity of the image.
- **Contrast:** Increase or decrease the intensity (lightness or dimness) of the image.
- **Color:** Increase or decrease the colour of the picture.
- **Tint:** Increase or decrease the tint of the picture.
- **Sharpness:** Increase or decrease the sharpness of the picture.

A: CUSTOM MENU (Only PC mode)

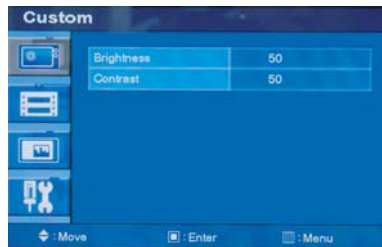


Press the MENU button and then up(▲) / down(▼) button to select the Custom menu.



Press the up(▲) / down(▼) button to select Custom sub menu. Press (◀) /right(▶) button to adjust picture setting. Press the MENU button to save.

B. Picture / Sound Menu(Only Video mode)

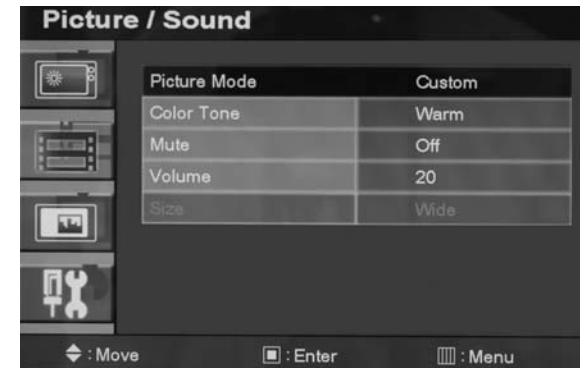

Press the MENU button and then up(▲) / down(▼) button to select the Picture / Sound.

Press the right(▶) or ENTER button.

1. Picture Mode




Press the up(▲) / down(▼) button to select the Picture Mode.

Press the right(▶) or ENTER button and then press up(▲) / down(▼) button to select the desire Picture Mode.

2. Color Tone




Press the up(▲) / down(▼) button to select the Color Tone.

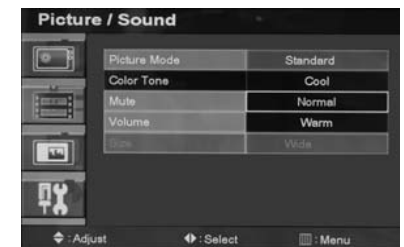


Press the (▶) or ENTER button and then up(▲) / down(▼) button to select the desired color tone. Press the MENU button to save.

3. Mute

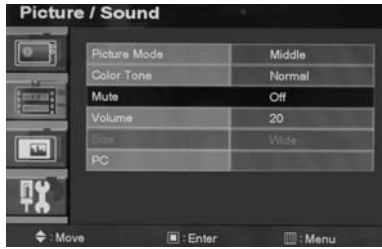


Press the up(▲) / down(▼) button to select the Color Tone.

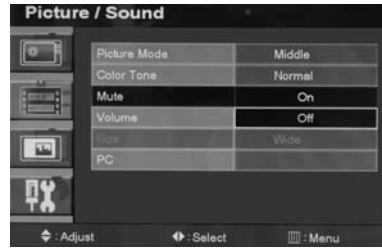


Press the (▶) or ENTER button and then up(▲) / down(▼) button to select the desired Mute.
Press the MENU button to save.

4. Volume

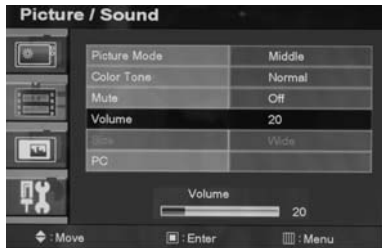


Press the up(▲) / down(▼) button to select the Volume.
Press the (◀) / right(▶) button to adjust Volume.
Press the MENU button to save.

5. PC (Only PC mode)

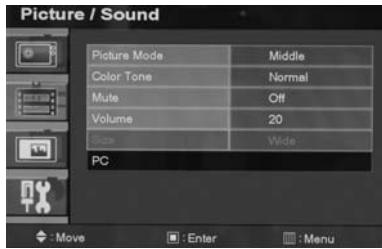


Press the up(▲) / down(▼) button to select the PC
Press the (▶) or ENTER button

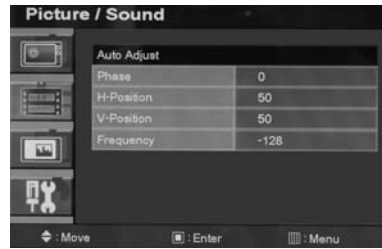

Press the up(▲) / down(▼) button to select PC sub menu. Press the right(▶) or ENTER button and then left(◀) / right(▶) button to adjust PC setting.
Press the MENU button to save.


- **Auto Adjust:** Auto geometry adjustment
- **Phase:** Adjust the number of horizontal picture elements.
- **H. position:** Move image horizontally on screen right or left.
- **V. position:** Move image vertically on screen up or down.
- **Frequency:** Adjust the vertical noise of screen image.

C. SETUP MENU

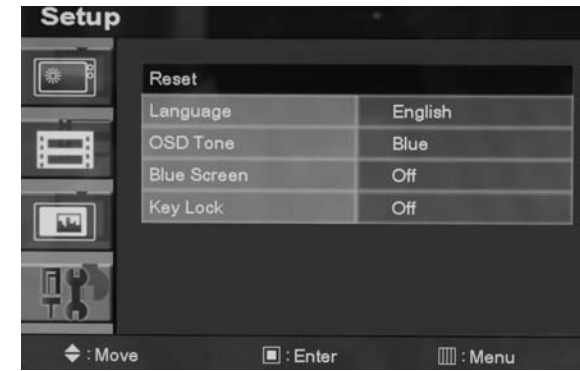

Press the MENU button and then up(▲) / down(▼) button to select the Setup menu.
Press the right(▶) or ENTER button.

1.Reset

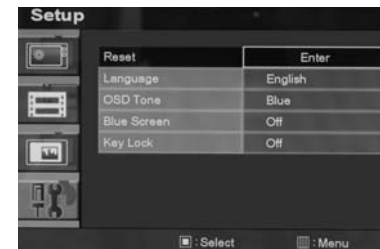

Press ENTER button to select the reset
Reset: Select to reset all setting to the factory default values.

2. Language



Press the up(▲) / down(▼) button to select the Language menu.
Press the right(▶) or ENTER button.




Press the up(▲) / down(▼) button to select language.
Press the MENU button to save.

3. OSD Tone



Press the up(▲) / down(▼) button to select the OSD tone menu.
Press the right(▶) or ENTER button

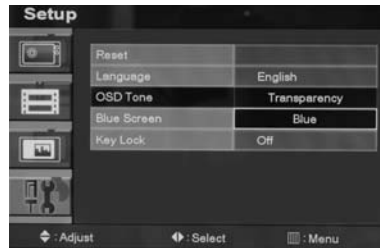

Press the up(▲) / down(▼) button to select the desire OSD Tone.
Press the MENU button to save.

4. Blue Screen



Press the up(▲) / down(▼) button to select the blue screen.
Press the right(▶) or ENTER button.



Press the up(▲) / down(▼) button to select on or off.
Press the MENU button to save.

5. Key Lock



Press the up(▲) / down(▼) button to select the key lock menu.
Press the right(▶) or ENTER button





Press the up(▲) / down(▼) button select on or off
Press the MENU button to save.

MOUNTING GUIDE

Wall mountable using two methods:


- 1) Using the 200 mm pre-cut holes
- 2) Using the VESA standard wall mount design and the 100mm hole pattern on the back panel to install the LCD monitor to the wall.

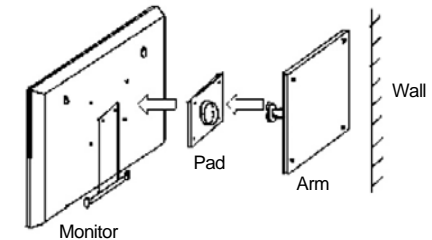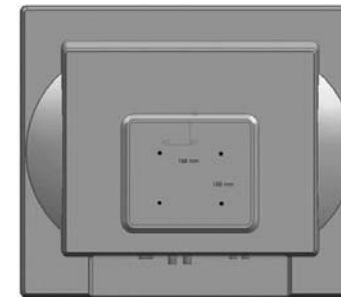

D-SUB CONNECTOR PIN ASSIGNMENTS

• PIN ASSIGNMENTS

Pin 1	RED VIDEO	Pin 9	
Pin 2	GREEN VIDEO	Pin10	SIGNAL CABLE DETECT
Pin 3	BLUE VIDEO	Pin 11	GROUND
Pin 4	GROUND	Pin 12	SAD(for DDC)
Pin 5	GROUND	Pin 13	H-SYNC.(or H+V SYNC.)
Pin 6	RED GROUND	Pin 14	V-SYNC
Pin 7	GREEN GROUND	Pin 15	SLC(for DDC)
Pin 8	BLUE GROUND		

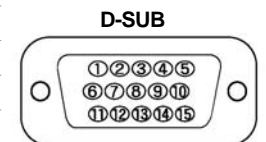

• ACCESSORY

- | | | | |
|-------------------|------------------|------------------------|------------------------|
| 1. POWER CORD | 2. USER'S MANUAL | 3. PC cable | 4. Adaptor |
| 5. Remote Control | 6. Batteries | 7. Wall mount (Option) | 8. Rack mount (Option) |

POWER MANAGEMENT

This monitor features a power management system to “power down” upon receipt of the VESA DPMS(The display power management signaling) from a VESA DPMS video card. The VESA DPMS-compliant video card performs this signaling system through not sending horizontal, vertical, or sync signal. This monitor enters an appropriate mode through identifying each of the three modes of the signaling system.

• POWER CONSUMPTION

MODE	POWER CONSUMPTION	MODE	POWER CONSUMPTION
ON	<50W	SUSPEND	<11W
STANDBY	<11W	ACTIVE OFF	< 8.5W

• LED INDICATOR

The power management feature of the monitor is comprised of four stages : On(Green), Standby, Suspend, Active off(Red on/off 1 sec) and Unsupported mode(Green).

MODE	LED COLOR	MONITOR OPERATION
ON	GREEN	Normal Operation
STANDBY	RED ON/OFF 1 SEC	Screen blanks after preset idle time and some electronic circuits or all circuitry in the monitor shutdown.
SUSPEND		
ACTIVE OFF		
UNSUPPORTED MODE	GREEN	Normal operation but the on screen display will show error message.
POWER OFF	RED	Not operation

TROUBLESHOOTING GUIDE


TROUBLE	TROUBLESHOOTING TIP
No image on display screen	<ol style="list-style-type: none"> 1. Check that power cord of the monitor have been connected securely into wall outlet or grounded extension cable or strip. 2. Power switch should be in the ON position and LED is lit. 3. Check that the Brightness and / or the Contrast adjustments of the Display have not been turned down to minimum levels.
“Going to Sleep” message on screen	<ol style="list-style-type: none"> 1. The signal cable should be completely connected to the video card / computer 2. The video card should be completely seated in its slot and the computer is switched ON.
Display image is not centered, too small or too large in PC mode	Push the down key in front side or Auto key in remote.
Vertical or Horizontal noise is present in the picture	Adjust Clock and Phase in the OSD.

SPECIFICATIONS

Model Name		STM-19LA	STM-17LA
Video	Composite	2ch input 1.0Vp-p, 75 terminated, loop-through out	
	S-VIDEO	1ch input (Y/C), loop-through out	
	VGA	1ch input	
Resolution	1280x1024@60Hz		
Frequency	Horizontal(KHz)	31KHz ~ 64KHz	
	Vertical(Hz)	50Hz ~ 75Hz	
VGAMode	720x480@60Hz, 720x576@50Hz, 800x600@60/75Hz 1024x768@60/75Hz, 1280x1024@60Hz		
Power Consumption	Max. 42W		Max. 36W
Dimensions (WxDxH)	Net	430x428x200mm	382.4x390.5x200mm
	Packing	490x506x225mm	436x476x225mm
Weight(kg)	Net Weight	6.61Kg	6.20Kg
	Gross Weight	8.43Kg	7.73Kg
Power Supply	DC 12V / 4.16A		
Environmental Considerations	Operating Temperature	50°F-104°F (10°C-40°C)	
	Operating Humidity	10%-80%, Non-condensing	
	Storage Temperature	-4°F-113°F (-20°C-45°C)	
	Storage Humidity	5%-95%, Non-condensing	
LCD Panel Spec	Size	19" Diagonal AM-TFT	17" Diagonal AM-TFT
	Active Display Area	376.32x301.056mm	337.92x270.336mm
	Pixel Pitch(mm)	0.294mm(H) x 0.294mm(V)	0.264mm(H) x 0.264mm(V)
	Brightness(cd/m2)	300cd/m2	
	Contrast Ratio	800:1	1000:1
	Response Time(ms)	5ms	
	Viewing Angle(L/R/ T/B)	80/80/75/85	80/80/80/80

• Technical specifications are subject to change without notice.

DIMENSION

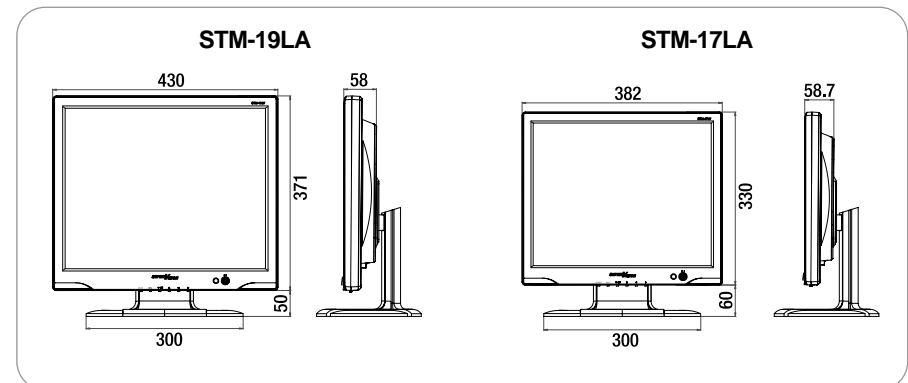

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>