

Mobile Phone user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Bluetooth ID : B014646

www.samsungmobile.com

Printed in Korea
Code No.:GH68-21373A
English (SEA), 12/2008, Rev. 1.1



WARNING Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.



CAUTION Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/ 113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

 
Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.



Internal antenna

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram of body tissue.

During testing, the maximum SAR recorded for this model was 0.295 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.

The Declaration of Conformity at the back of this manual demonstrates your phones compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its

working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)

 


This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.


To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Install the SIM card and battery

- Remove the battery cover and insert the SIM card.

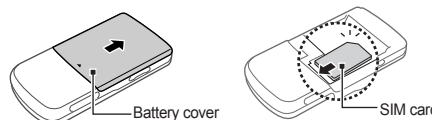

 - Insert the battery and replace the battery cover.

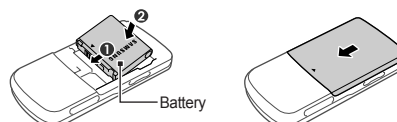

Charge the battery

- Plug the supplied travel adapter.



- When charging is finished, unplug the travel adapter.

Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: Press <Menu> → Messages (represents Menu, followed by Messages)
	Square brackets: phone keys; for example: [Power/Menu] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

 
Turn your phone on or off

- Slide open the phone.
- To turn your phone on, press and hold [Power/Menu].
- To turn your phone off, press and hold [Power/Menu].

Access menus

To access your phone's menus,

- In Idle mode, press <Menu> to access Menu mode.
- Use the navigation key to scroll to a menu or option.
- Press <Yes>, <Save>, or the Confirm key to confirm the highlighted option.

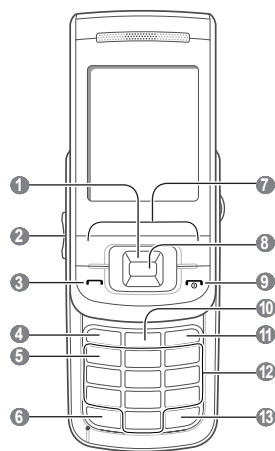

- 1 4-way navigation key**
In Idle mode, access My menu mode (up) or user-defined menus (left/right/down); In Menu mode, scroll through menu options
- 2 Volume key**
In Idle mode, adjust the key tone volume; Send an SOS message
▶ Activate and send an SOS message
- 3 Dial key**
Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers
- 4 Music player key**
In Idle mode, launch the music player
- 5 Voice mail service key**
In Idle mode, access voice mails (press and hold)
- 6 Pause key**
Enter a dial pause (press and hold)
- 7 Softkeys**
Perform actions indicated at the bottom of the display

- 8 Confirm key**
In Idle mode, access the web browser menus; In Menu mode, select the highlighted menu option or confirm an input
- 9 Power/Menu exit key**
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
- 10 Delete key**
Delete characters or items in an application
- 11 Camera key**
In Idle mode, turn on the camera; In Camera mode, take a photo or record a video
- 12 Alphanumeric keys**
- 13 Silent profile key**
In Idle mode, activate or deactivate the Silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	Signal strength		Bluetooth activated
	GPRS network connected		New text message (SMS)
	EDGE network connected		New multimedia message (MMS)
	Call in progress		New voice mail message
	Call diverting active		FM radio on
	SOS message feature activated		Memory card inserted
	Alarm activated		Normal profile activated
	Connecting to secured web page		Silent profile activated
	In Home Zone service area		Battery power level
	In City Zone service area		

- In Idle mode, enter an area code and a phone number.
- Press [**☎**] to dial the number.
- To end the call, press [**☎**].

The volume through mono earphones is very low or virtually inaudible. Use stereo earphones only.

Answer a call

- When a call comes in, press [**☎**].
- To end the call, press [**☎**].

Adjust the volume

To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Phone profiles**.
- Scroll to the phone profile you are using.
- Press **<Options>** → **Edit**.
- Select **Ringtone volume**.
- Scroll left or right to adjust the volume level.
- Press **<Select>**.
- Press **<Options>** → **Save profile**.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key up or down to adjust the earpiece volume.

Change your ringtone

- In Menu mode, select **Settings** → **Phone profiles**.
- Scroll to the phone profile you are using.
- Press **<Options>** → **Edit**.
- Select **Voice call ringtone**.
- Select a ringtone category → a ringtone.
- Press **<Options>** → **Save profile**.

Call a recently dialled number

- In Idle mode, press [**☎**].
- Scroll left or right to select a call type.
- Scroll up or down to select a number or name.
- Press the Confirm key to view details of the call or [**☎**] to dial the number.

Enter text

To change the text input mode

- Press and hold [*****] to switch to an input mode or Number mode.
Depending on your region, you may be able to access an input mode for your specific language.
- Press [*****] to change case.
- Press and hold [**#**] to switch to Symbol mode.

T9 mode

- Press the appropriate alphanumeric keys to enter an entire word.

- When the word displays correctly, press [**#**] to insert a space. If the correct word does not display, select an alternate word from the list that appears.

ABC mode

Press the appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press the appropriate alphanumeric key to enter a number.

Symbol mode

Press the appropriate alphanumeric key to select a symbol.

- To move the cursor, press the navigation key.
- To delete characters one by one, press [**C**]. To delete all of the characters, press and hold [**C**].
- To insert a space between characters, press [**#**].
- To enter punctuation marks, press [**1**].

Add a new contact

- In Idle mode, enter a phone number and press **<Options>**.
- Select **Save contact** → a memory location (phone or SIM) → **New**.
- Select a number type (if necessary).
- Enter contact information.
- Press **<Save>** to add the contact to memory.

Use the Bluetooth messenger

Learn to chat with your family or friends instantly via the Bluetooth wireless feature.

- In Menu mode, select **Messages** → **Bluetooth messenger**.
- Press **<Yes>** to turn on the Bluetooth wireless feature (if necessary).
- Press **<Options>** → **Search Bluetooth contact** → **Search for new devices**.
- Scroll to a device and press **<Select>**.
- Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press **<OK>**.
When the owner of the other device enters the same PIN or accepts the connection, pairing is complete.
- Enter your message and press the Confirm key.

Use the camera

Capture photos

- In Idle mode, press [**📷**].
- Rotate the phone anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments.
- Press the Confirm key to take a photo.
- Press **<📷>** or [**📷**] to take another photo (step 3).

Send and view messages

To send a text message

- In Menu mode, select **Messages** → **Create message** → **Text message**.
- Enter the message text.
- Press **<Options>** → **Send**.
- Enter a destination number.
- Press **<Options>** → **Send** to send the message.

To send a multimedia message

- In Menu mode, select **Messages** → **Create message** → **Multimedia message**.
- Select **Subject**.
- Enter a subject and press the Confirm key.
- Select **Image or video** → **Add image** or **Add video** and add an image or a video.
- Select **Sound** → **Add sound** and add a sound. If you have attached a video, you cannot add a sound.
- Select **Text**.
- Enter the message text and press the Confirm key.
- Press **<Options>** → **Send** to send the message.

To view text or multimedia messages

- In Menu mode, select **Messages** → **My messages** → **Inbox**.
- Select a text or multimedia message.

View photos

In Menu mode, select **My files** → **Images** → **My photos** → a photo file.

Listen to music

- In Idle mode, press [**🎵**].
- Select a music category → a music file.
- Control playback using the following keys:

Keys	Function
Confirm	Pause or resume playback
Volume	Adjust the volume up or down
Navigation	<ul style="list-style-type: none"> Left: Restart playback; Skip backward (press within 3 seconds); Scan backward in a file (press and hold) Right: Skip forward; Scan forward in a file (press and hold) Up: Open the playlist Down: Stop playback

In sound player (under my files), skip forward and skip backward can not be supported for memory card.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>