

# Premium Security



## Digital Video Recorder SVR-1650/1640/950 User's Manual

Thank you for purchasing a Samsung Digital Video Recorder.  
Before attempting to connect or operate this product,  
please read these instructions carefully and save this manual for future use.



# Introduction

Thank you for purchasing the SVR-1650/1640/950.

This is a user manual for SVR-1650/1640/950. Before product installation and operation, please become thoroughly familiar with this user manual and other manuals referenced by this manual.

This user manual and the software and hardware described here are protected by the copyright law. Therefore, with the exception of copying for general use within the copyright law, copying and reprinting the user manual, either partially or in its entirety, or translating it into another language without the consent of Samsung Techwin, Inc. is prohibited.

This specification may be changed without prior notice for improvement of product performance.

## Product warranty and limits of responsibility

The manufacturer does not assume any other responsibility concerning the sale of this product and does not delegate any right to a third party to take any responsibility on its behalf. Product warranty does not cover cases of accidents, negligence, alteration, misuse or abuse. In addition, no warranty is offered for any attachments or parts not supplied by the manufacturer.

The warranty period for this product will be for 2 years from the date of purchase. The following cases are not covered by the warranty and payment is required for repairs.

- ❖ Malfunction due to negligence in handling by the user
- ❖ Deliberate disassembly and replacement by the user
- ❖ Connection of a power source other than a properly rated power source
- ❖ Malfunction caused by natural disasters (fire, flood, tidal wave, etc.)
- ❖ Replacement of expendable parts(HDD, FAN, etc.)

Warranty only refers to the warranty covering products that have been paid for.

After expiration of the warranty period (2 years), examination and repair will be provided for a fee. Even during the warranty period, repair and examination of items outside the preceding warranty scope will require a payment.

Please inquire at the point of purchase or the local service center for repairs requiring a payment.

# Table of Contents

<b>Introduction .....</b>	<b>1</b>
Product warranty and limits of responsibility .....	1
<b>Chapter 1. Safety Cautions .....</b>	<b>5</b>
Symbols displayed for each item .....	5
<b>Chapter 2. Summary .....</b>	<b>8</b>
2.1 Features .....	8
2.2 Components .....	11
2.3 Name and Function of Each Part.....	11
2.3.1 Front panel .....	11
2.3.2 Back connector terminals .....	14
2.3.3 Remote Controller.....	15
2.4 Product specification .....	16
<b>Chapter 3. Installation method .....</b>	<b>20</b>
3.1 Overall connection.....	20
3.1.1 Front connection method .....	20
3.1.2 Back connection method .....	21
3.2 Detailed connection .....	22
3.2.1 Rack mount.....	22
3.2.2 Video/Audio connection.....	23
3.2.3 External connector .....	25
<b>Chapter 4. Operation method .....</b>	<b>32</b>
4.1 Preoperation inspection items .....	32
4.2 Connection of power supply .....	32
4.3 Live screen .....	32
4.3.1 FUNCTION screen display .....	33
4.3.2 Single channel screen display.....	33
4.3.3 Multi screen display.....	34
4.4 Recording .....	35
4.4.1 General recording .....	35
4.4.2 Scheduled recording.....	35
4.5 Search .....	36

4.5.1 Time search .....	36
4.5.2 Event search .....	37
4.5.3 Log search.....	38
4.6 Recording file playback .....	38
4.6.1 Jog dial / shuttle ring.....	39
4.7 Live / Playback screen conversion .....	39
4.8 Digital zoom .....	40
4.9 Copy .....	40
4.9.1 SLiM Player .....	42
4.10 PTZ .....	44
4.10.1 PTZ adjustment .....	44
4.10.2 Preset setup .....	44
4.10.3 Preset utilization .....	45
4.10.4 Using OSD for the Speed Dome Camera.....	45
4.11 Quick setup .....	46
4.12 PIP .....	47
4.13 System information .....	48
4.14 SPOT.....	49

## **Chapter 5. Setup method..... 50**

5.1 Menu organization .....	50
5.2 Initial value setup .....	52
5.3 Operation description.....	60
5.4 FUNCTION menu .....	61
5.4.1 LIVE/PLAY mode .....	61
5.4.2 FUNCTION operation description.....	61
5.5 Menu screen description.....	65
5.6 Screen setup .....	66
5.6.1 Screen.....	66
5.6.2 Sequencing.....	67
5.6.3 Display .....	70
5.6.4 Covert.....	71
5.6.5 SPOT .....	71
5.7 Record setup .....	72
5.7.1 Record mode .....	72
5.7.2 Record program.....	74
5.7.3 Recording time table .....	75
5.8 Event setup.....	76
5.8.1 Event .....	76
5.8.2 Motion detection.....	77

5.8.3 Relay.....	78
5.8.4 TEXT .....	78
5.9 Communication setup .....	79
5.9.1 NETWORK .....	79
5.9.2 RS-232.....	80
5.9.3 RS-422/485 .....	81
5.9.4 E-MAIL.....	82
5.10 System setup.....	83
5.10.1 System .....	83
5.10.2 HDD.....	86
5.10.3 Password .....	87
5.10.4 Date setup.....	88
5.10.5 PTZ .....	89
5.11 Video recording search.....	90
5.11.1 Time search .....	90
5.11.2 Event search.....	91
5.11.3 Log search.....	91
5.12 Copy .....	92
5.13 Exit .....	93

## **Chapter 6. Network viewer program ..... 94**

6.1 Introduction.....	94
6.1.1 System requirements.....	94
6.1.2 Program installation .....	95
6.2 DVR MANAGER Function .....	96
6.3 VIEWER screen function.....	99
6.3.1 Name for each function.....	99
6.3.2 Image display section .....	100
6.3.3 Page control section .....	100
6.3.4 DVR status display section.....	104
6.3.5 Main button section .....	105
6.3.6 List display section.....	109
6.3.7 PTZ control section .....	110
6.3.8 Additional functions.....	111

## **Chapter 7. Troubleshooting ..... 112**

Product Specifications .....	114
------------------------------	-----

# Chapter 1. Safety Cautions

## Symbols displayed for each item



### Warning

Refers to information users need to know in order to prevent serious injury or death.



### Caution

Provides information users need to know in order to prevent minor injury or product damage.



### ❖ Before installation

- ✓ Verify the supplied voltage (AC100V~AC240V) before connecting the power supply.
- ✓ Make sure the power supply is off before installation.
- ✓ Do not install in a very humid environment. Doing so may cause an electric shock or fire.
- ✓ Make sure ground line is connected to reduce electric shock risk.

### ❖ During operation

- ✓ Do not open the product cover except qualified personnel or system installer.. Opening the product cover may cause an electric shock.
- ✓ Do not plug multiple appliances into one power outlet. Doing so may cause fire.
- ✓ Do not place dishes containing water or heavy objects on the product. Doing so may cause a malfunction.
- ✓ Do not use in areas containing inflammable materials like propane gas and gasoline or in areas that generate dust. Doing so may cause an explosion or fire.
- ✓ Do not touch the power line with a wet hand. Doing so may cause an electric shock.
- ✓ Do not insert a hand into the opening of the DVD. Doing so may cause an injury.
- ✓ Make sure conduction materials do not enter the cooling ventilator opening.

- ✓ Do not apply excessive force when pulling on the power cord. Damaging the cord may cause an electric shock or fire.
- ✓ Random replacement of built-in battery by other types of batteries may cause explosion.
- ✓ The battery shall be replaced by the same battery.
- ✓ The used batteries shall be disposed carefully because they can cause environment pollutions.

#### ❖ Dismantling and cleaning

- ✓ Do not dismantle, repair or modify the product deliberately. Doing so may cause a damage, an electric shock or an injury.
- ✓ Do not use water, thinner or organic solvent for cleaning the product exterior. Doing so may cause a malfunction or an electric shock. Use a dry cloth to clean the exterior.



#### ❖ During installation

- ✓ To get adequate ventilation, install the product with at least 15cm of space between the cooling ventilation opening and a wall.
- ✓ To prevent falling, install the product in a flat area . Dropping the product may cause an injury or a malfunction.
- ✓ Avoid areas exposed to sun light or heat since they may cause deformation or a malfunction.
- ✓ If a camera is installed while the DVR is recording, image in another channel may be disrupted. Start the storage after installing the camera is recommended.

#### ❖ During use

- ✓ Make sure the product is not exposed to shocks or shaking when using the product or during moving.
- ✓ Do not move the product while it is in operation, and apply strong shocks to the product or throw the product.
- ✓ If hard disk drives other than those recommended are used additionally, abnormal operation may occur. Inquire at the point of purchase of the product before installing such a hard disk drive.
- ✓ Product warranty will not cover deliberate additional use of such hard disk drives.
- ✓ This product is a supplementary rather than primary means for preventing fire and theft. Our company is not responsible for incidence of incident or damage that may occur.



## INFORMATION

This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## Correct Disposal of This Product (Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems) This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



Samsung Techwin cares for the environment at all product manufacturing stages to preserve the environment, and is taking a number of steps to provide customers with more environment-friendly products. The Eco mark represents Samsung Techwin's will to create environment-friendly products, and indicates that the product satisfies the EU RoHS Directive.

## Chapter 2. Summary

This product is a digital video recorder that digitizes 16 channels of video input and stores it in the built-in hard disk drive. Product functions can be setup conveniently using the mouse and buttons on the front panel.

Samsung SVR-1650/1640/950 is a digital image recorder that can be used as security equipment in banks, apartments, and government and public offices. It is a stand-alone product with proven performance and stability. Since a hard disk drive is used for storage instead of a video tape, high quality can be maintained for even repetitive recordings and fast retrieval of digital files is also possible. This is a user friendly digital device with a diverse array of functions including a high quality video, a large capacity storage, perfect simultaneous implementation of recording/playback/backup functions, motion detection, PTZ (Pan, Tilt, Zoom) control function, password setup, real time voice data storage, an event list with up to 10,000 events and log file storage.

### 2.1 Features

#### Monitoring Screen

Vivid live video with high image quality is realized and various observation screens are provided for each channel.

- ❖ Implementation of real time MPEG-4 video
  - NTSC : 480 frames(SVR-1650)/120 frames(SVR-1640/950)
  - PAL : 400 frames(SVR-1650)/100 frames(SVR-1640/950)
- ❖ Various observation screen modes:
  - SVR-1650/1640 : Single, 4 DIVISION, 9 DIVISION, 16 DIVISION
  - SVR-950 : Single, 4 DIVISION, 9 DIVISION
- ❖ Automatic screen conversion (AUTO)
- ❖ Various monitor output supported [3 Composite (including 1 Spot), 1 VGA, 1 RCA]
- ❖ Pan, Tilt, Digital Zoom, PIP(Picture in Picture; view screen within a screen)

#### Voice recording

Real time voice input and recording function is provided.

- ❖ Real time, simultaneous recording of 4 channels voice input possible (1, 2, 3, 4 channel fixed)
- ❖ Input: 4 channels (4 back side), Output: 2 (1 back side/ 1 front side)
- ❖ Simultaneous recording and playback is possible

## Video recording

High image quality MPEG4 video recording is possible. Up to 480 frames(SVR-1650)/120 frames(SVR-1640/950) per second of recorded video can be stored and pre-event recording can be done for up to 5 seconds before an event occurs. In addition, privacy is protected by the COVERT (image hiding) function.

- ❖ MPEG-4 video recording with high image quality
- ❖ 4 steps video recording resolution setup to adjust storage capacity
- ❖ Multiple recordings possible for manual & events or schedule & events
- ❖ Simultaneous execution of the following 4 functions:  
recording/playback/backup/network.
- ❖ Easy setup of video recording resolution and motion detection for each channel.
- ❖ Video recording setup of up to 480(NTSC : SVR-1650)/120(NTSC :SVR-1640/950) or 400(PAL : SVR-1650)/100(PAL : SVR-1640/950) frames per second possible (352x240 or 352x288(CIF) based),
- ❖ Manual and scheduled recording possible
- ❖ Video loss detection function
- ❖ Record events(sensor, video loss, motion detection and text) in the event list
- ❖ Up to 5 seconds of pre-alarm event recording for each channel possible

## Search/Playback

A wide range of convenient functions for search and playback are provided.

- ❖ Playback by time, by date, by channel
- ❖ Convenient search using the mouse
- ❖ Still image step up/down playback
- ❖ Playback based on EVENT(sensor, video loss, motion detection and text) list
- ❖ Easy search using the remote controller and jog/shuttle
- ❖ Digital zoom in playback screen

## Storage device

A built-in hard disk drive is provided. User may also select to use DVD+RW and USB memory for backup.

- ❖ Standard storage: Built-in hard disk drive
- ❖ Various backup devices available: DVD+RW and USB memory

## Network

Various networks including LAN, xDSL is supported. Key functions of the product may be manipulated easily and maintained remotely using the dedicated viewer for PC.


- ❖ If an EVENT occurs, transmit by E-mail through TCP/IP, DHCP
- ❖ Live image viewing from a remote location is possible (entire or 4 DIVISION screen selection is possible)
- ❖ PC playback, storage, search function and DVR control function using the network viewer is possible
- ❖ Search and playback by time or by event from a remote location is possible
- ❖ 10/100Mbps Ethernet/xDSL support
- ❖ Multiple DVR connection

## Others

- ❖ GUI and mouse for user convenience
- ❖ Convenient firmware upgrade function using USB memory
- ❖ PTZ CONTROL (SPEED DOME), PRE-SET support
- ❖ Multiple language support: Korean, English, Italian, Spanish, Japanese, etc.
- ❖ Video recorded image backup function (still images/video) using the USB port
- ❖ 16 DVRs may be controlled conveniently using one remote controller


## 2.2 Components

DVR package contains the main body and the following accessories. Please verify whether all accessories are included at the time of purchase. If any accessory is missing, inquire at the point of purchase.

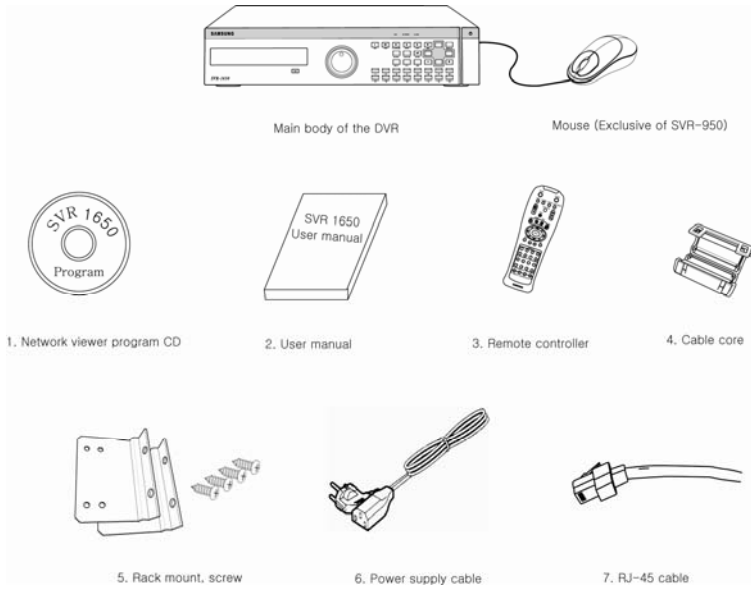

## 2.3 Name and Function of Each Part

### 2.3.1 Front panel

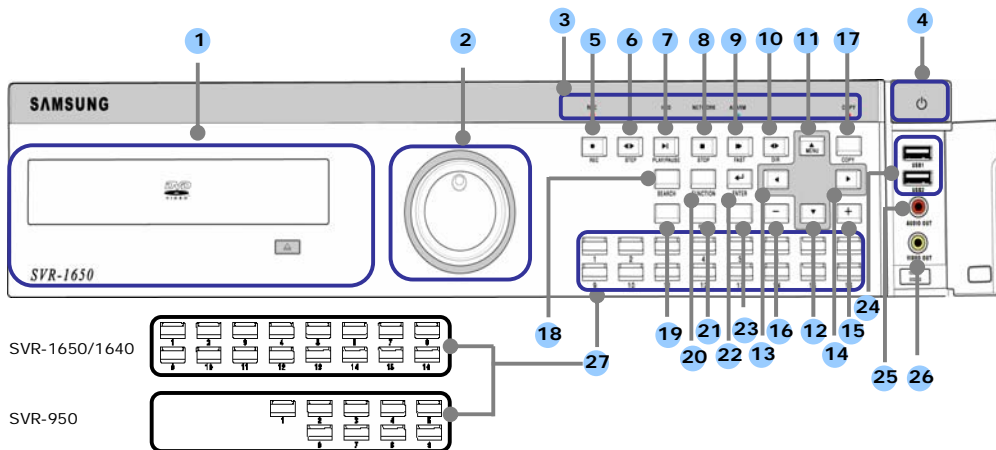

### Backup(Copy) section

Category	Function
1. DVD-Multi : DVR for backup	Used to backup recorded/stored images on DVD+RW/CD-RW media.

### Jog/shuttle section

Category	Function
2. JOG/SHUTTLE	Menu setup values can be adjusted and STEP function can be controlled with JOG. SHUTTLE can be used for moving items between menus, increasing or decreasing playback speed, changing playback direction and for controlling PTZ.

### Display section

	Category	Function
3.	REC display LED	Indicates whether recording is in progress.
	HDD display LED	Indicates whether hard disk drive is in operation.
	NETWORK display LED	Indicates whether network is in connection.
	ALARM display LED	Indicates whether event is in detection.
	COPY display LED	Indicates whether COPY is in progress.

### Power supply section

Category	Function
4. Stand-by button	Turn product ON or OFF.

### Playback and recording section

Category	Function
5. REC	Start or stop the manual mode video recording.
6. STEP	Start 1 Frame playback.
7. PLAY/PAUSE	Start playback or pause momentarily.
8. STOP	Stop playback and return to live screen mode.
9. FAST	Playback is carried out faster than the normal playback speed.
10. DIR	Used to change the playback direction.

**Function button section**

Category		Function
MENU	11. ▼	Used for movement in the lower direction
	12. ▲	Used for movement in the upper direction.
	13. ◀	Used for movement to the left
	14. ▶	Used for movement to the right
15. +		Used to increase value to be setup or move to another page.
16. -		Used to decrease value to be setup or move to another page.
17. COPY		Display the copy menu. Store data in DVD+RW and USB Memory Stick at the preset time.
18. SEARCH		Select data search mode.
19. MULTI		Convert to a divided screen.
20. FUNCTION		Display the LIVE screen menu for FUNCTION.
21. PTZ		Select PTZ mode.
22. ENTER		Store or execute the select options.
23. ESC.		Return to the previous stage menu.


**USB, Audio/Video section**

Category	Function
24. USB1, USB2, USB3	Connection port for mouse, USB Memory Stick and DVD+RW
25. AUDIO OUT	Output port for connecting speaker.
26. VIDEO OUT	Output port to connect TV monitor.

**Channel button section**

Category	Function
27. CH1~CH16 (SVR-1650/1640) / CH1 ~ 9 (SVR-950)	Display selection button of each channel (Live/Playback), Select single mode and PIP channel.

### 2.3.2 Back connector terminals

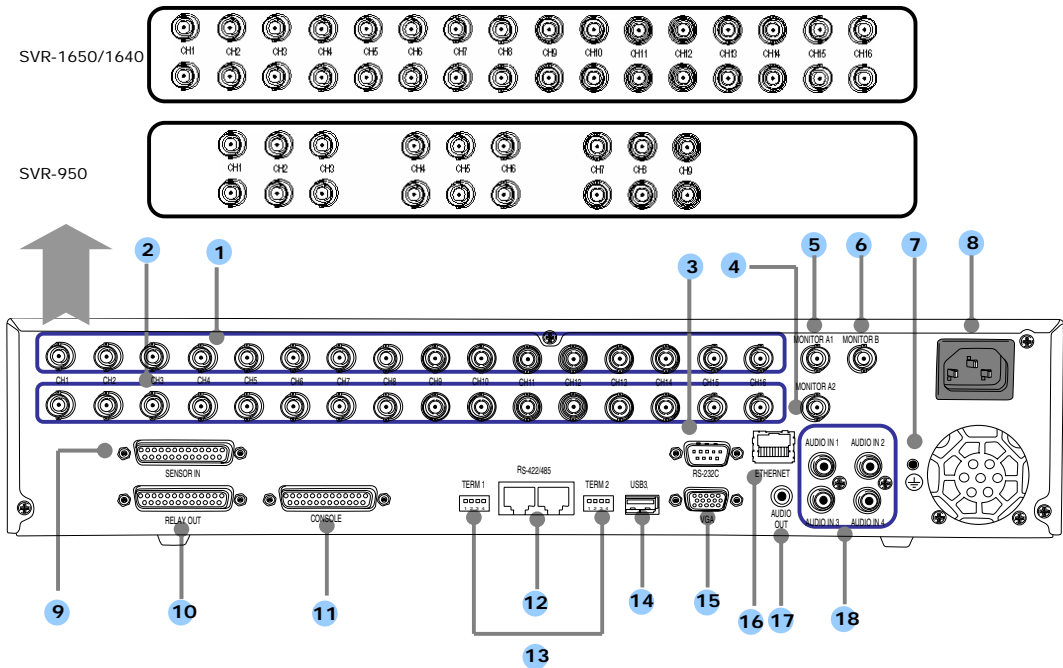

No.	I/O terminal names	Function
1	CH1~16 (SVR-950: CH1~9)	BNC input connector terminal for the camera.
2	LOOP OUT	BNC output (loop) connector terminal for the camera.
3	RS-232C	RS-232C terminal.
4	MONITOR A2	BNC connector terminal for monitor output.
5	MONITOR A1	BNC connector terminal for monitor output.
6	MONITOR B	BNC connector terminal for SPOT monitor output.
7	GROUND	Ground terminal for DVR main body and external equipment.
8	POWER IN	Socket for AC100V ~ AC240V power supply cord.
9	SENSOR IN	Input terminal for external alarm sensor.
10	RELAY OUT	Relay output terminal.
11	CONSOLE	Auxiliary port
12	RS-485/422	Terminal to connect expansion controller, speed dome camera, SRX-100B connector.
13	TERMINATION	Switch for RS-485 termination resistor setup.
14	USB	Terminal to connect external equipment (DVD+RW, CD-RW, etc.).
15	VGA OUTPUT	Output port to connect the PC monitor.
16	ETHERNET(Main)	LAN connection terminal.
17	AUDIO OUT	Terminal for speaker output.
18	AUDIO IN	Terminal for microscope input.






Refer to 'Chapter 3. Installation method' and 'Chapter 4. Operation method' for detailed description about setup and utilization.



Because console terminal is a reserve terminal, a user may not connect it arbitrarily.

### 2.3.3 Remote Controller

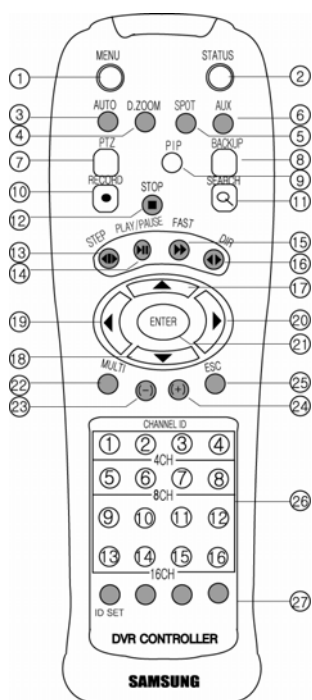

Button names	Function
1. MENU	Menu screen conversion
2. STATUS	System setup information display
3. AUTO	Automatic screen conversion
4. D.ZOOM	Digital zoom execution
5. SPOT	SPOT monitor screen conversion
6. AUX	Auxiliary
7. PTZ	PTZ mode conversion
8. COPY	Copy menu display, store the image through USB
9. PIP	View picture in picture
10. RECORD(●)	Start or stop general video recording
11. SEARCH(Q)	Search menu display
12. STOP(■)	Cancel playback mode
13. STEP(◀▶)	Playback 1 frame
14. PLAY/PAUSE(⏮⏭)	Playback and pause
15. FAST(▶▶)	High speed playback
16. DIR(◀▶)	Change playback direction (forward direction or reverse direction)
17. (▲)	Move cursor up in the setup menu
18. (▼)	Move cursor down in the setup menu
19. (◀)	Move cursor to the left in the setup menu
20. (▶)	Move cursor to the right in the setup menu
21. ENTER	Setup value selection, execution
22. MULTI	Divided screen selection
23. (-)	Reduce setup value, move to another page.
24. (+)	Increase setup value, move to another page.
25. ESC	Cancel the setup, exit the menu
26. Channel button	Camera channel selection
27. Remote controller ID	Remote controller ID selection

## 2.4 Product specification

### Video

Items	Specification
Input method	Composite input 16 channels(SVR-1650/1640) / 9 channels(SVR-950)
Video input level	1.0 V <sub>p-p</sub> , composite
Live screen presentation speed	NTSC - SVR-1650/1640 : 480 frames/sec - SVR-950 : 270 frames/sec PAL - SVR-1650/1640 : 400 frames/sec - SVR-950 : 225 frames/sec
Live screen resolution	NTSC : 720(horizontal) × 480(vertical) pixels, if entire screen selected PAL : 720(horizontal) × 576(vertical) pixels, if entire screen selected
Monitor output	1.0V <sub>p-p</sub> Composite, 75Ω output Back : 2 terminals(BNC : composite), 1 terminal(BNC : SPOT composite) Front : 1 terminal(RCA : composite) Loop(BNC) 16 CH(SVR-1650/1640) / 9CH(SVR-950) output
VGA output (PC monitor)	RGB output
PIP screen	PIP screen size: 240×160(Fixed on left top side) PIP screen organization: Small live screen inside the live entire screen

### Audio

Items	Specification
Audio	4 channel audio input
Line input level	1.0V / 20kΩ
Line output level	1.0V / 1kΩ
Storage method	PCM method

### Electric Specification

Items	Specification
Power supply	AC 100V ~ 240V, (50/60Hz), Max, 2A
Power consumption	About 75W (if one hard disk drive used)

### Alarm

Items	Specification
Input	16 channels(SVR-1650/1640) / 9channels(SVR-950)
Output	4 relay outputs(video loss, power off, motion detection, sensor) user setup possible

## Connector terminals

Items	Specification
Video input	BNC(SVR-1650/1640: 16, SVR-950: 9)
Loop output	BNC(SVR-1650/1640: 16, SVR-950: 9)
Monitor output	BNC(2), RCA(Front 1)
SPOT Monitor output	BNC(1)
VGA output (PC monitor)	15 pin VGA
Audio	RCA input (4), RCA output (2 - including the front)
25 pin DSUB	Sensor input (SVR-1650/1640: 16, SVR-950: 9), relay output(4)
Dual RJ-45	RS-422/485(2)
9 pin DSUB	RS-232C(1)
USB port	Front (2), back (1)
RJ-45	Network (Ethernet)-10/100M bps supported

## Controller

Item	Specification
Remote controller	Infrared LED(Max. 5m)
Mouse(USB)	Menu setup and DVR setup handling possible
Dedicated controller	SCC-3100A(RS-485)

## Hard disk drive

Items	Specification
Max. no. of mounts	4
Basic mount	1 (built-in)
Hard disk drive type	EIDE(ULTRA DMA-133)
Min. speed	7200rpm
Recommended product	Maxtor series, Samsung Electronics



The recommended models are as follows.

Model	HDD capacity	Buffer	Manufacturer
6L160P0	160G	8M	Maxtor
7L250R0	250G	16M	Maxtor
7H500R0	500G	16M	Maxtor
SP1644N	160G	2M	Samsung Electroics

※ If other products are used, HDD operation error may occur.

## Exterior appearance

Items	Specification
Material	Metal case, Front(aluminum, plastic)
Dimensions	430(width) × 465(length) × 88(height) mm
Weight	About 8.9kg(1 HDD)

## Operation environment

Items	Specification
Operating temperature	5°C ~ 40°C
Storage temperature	-10°C ~ 60°C
Humidity	30% ~ 90%

## Video recording

Items	Specification	
	SVR-1650	SVR-1640/950
Compression method	MPEG-4	
Video recording method	2 video recording modes: schedule & event, manual & event	
Maximum number of frames per second (resolution)	NTSC(704×480) : 120 frames/sec NTSC(704×240) : 240 fields/sec NTSC(352×240) : 480 fields/sec PAL(704×576) : 100 frames/sec PAL(704×288) : 200 fields/sec PAL(352×288) : 400 fields/sec	30 frames/sec 60 fields/sec 120fields/sec 25 frames/sec 50 fields/sec 100 fields/sec
Picture quality	4 levels of picture quality: User setup possible (SUPER, HIGH, MID, LOW)	
Pre Alarm	Setup possible within maximum 5 seconds	
Post Alarm	Setup possible within maximum 5 minuets	



**Countries using NTSC : USA, Canada, Japan, Korea, Taiwan, Mexico, etc.**  
**Countries using PAL : Australia, Austria, Belgium, China, Denmark, Finland, Germany, England, Nederland, Italy, Kuwait, Malaysia, New Zealand, Singapore, Spain, Sweden, Switzerland, Thailand, Norway, etc.**

## Network

Items	Specification
General	Compression method : MPEG-4 Connection method: Dedicated viewer Supported protocols: TCP/IP, DHCP Supported interfaces: Ethernet(10M/100M bps), xDSL
PC requirements	CPU: Pentium IV 3.0GHz or higher (Hyper Threading recommended) Memory: Over 512MB recommended Video Card : Memory over 128MB recommended Hard Disk : Size larger than 120GB is recommended OS: Windows 2000 or higher versions recommended Monitor: Over 1,024×768 pixels(1280×1024 recommended) LAN interface: 10/100 Base-T Network card

**Copy**

Item	Specification
Digital copy	DVD+RW (Built-in DVR) External USB memory



Only DVD+RW, CD-RW media may be used.

**Search and playback**

Item	Specification
Search mode	Search by time : year, month, day, hour, minute, second Search by channel : For each channel Search by event : sensor, motion detection, video loss and text
Log file	Power ON/OFF, video recording start/stop, display miscellaneous information
Event item	Alarm, motion detection, video loss
Playback speed and direction	Forward direction, reverse direction
High speed search	Fast forward (×2, ×4, ×8, Max), reverse(×2, ×4, ×8, MAX)
Pause and frame playback	Playback screen pause function, function to reproduce one frame at a time from the paused state

**Password**

Item	Specification
2 stage password	8 digit numeric code Admin: Control all functions User: Connect through the network

**Accessories**


Item	Specification
Supplied accessories	Network viewer program CD User manual Quick guide manual Remote controller Mouse (Exclusive of SVR-950) Cable core RJ-45 cable (2 cable) Rack mount and screw Power supply cable

# Chapter 3. Installation method

## 3.1 Overall connection


### 3.1.1 Front connection method

Connection organization diagram for DVR front side terminals are as follows.

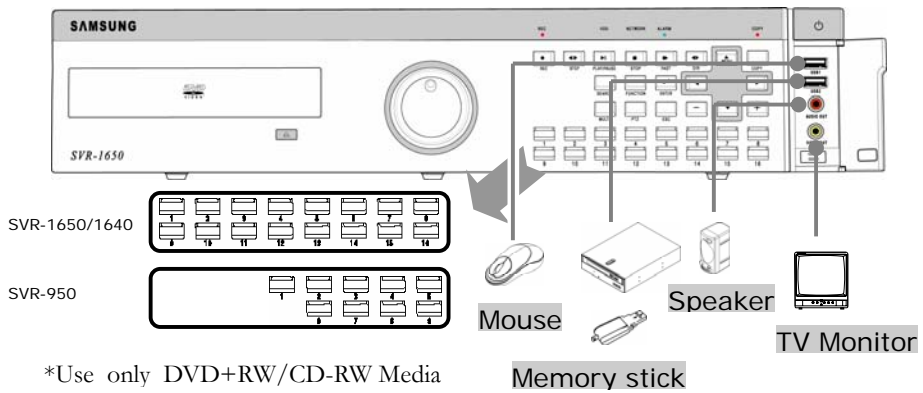

### 3.1.2 Back connection method

The organization chart for DVR and monitors, CCTV cameras and external devices is as follows.

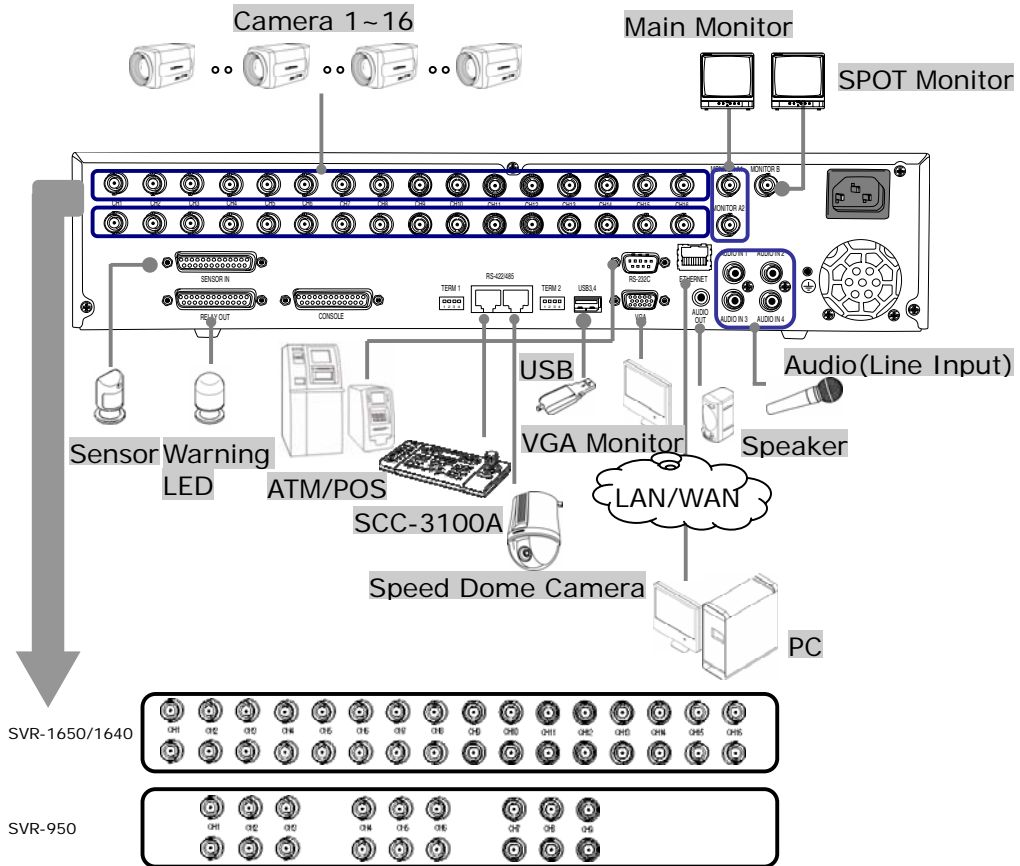


3  
 Installation method

## 3.2 Detailed connection


### 3.2.1 Rack mount

To mount the product, the enclosed rack must be mounted first. Mount sequence is as follows.

- ❖ The enclosed rack mount is mounted on the product.

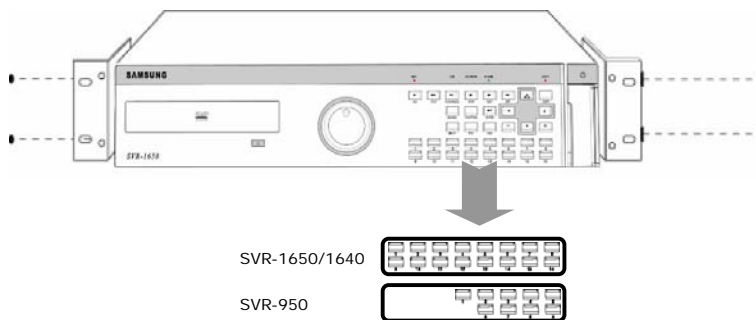


- ❖ The product is mounted on the 19 inch rack.

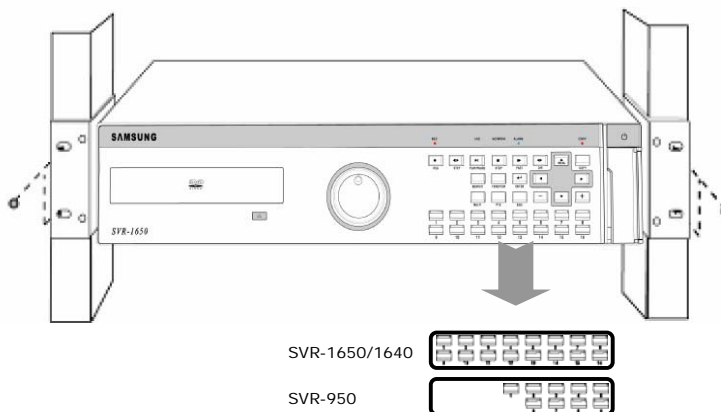



### 3.2.2 Video/Audio connection

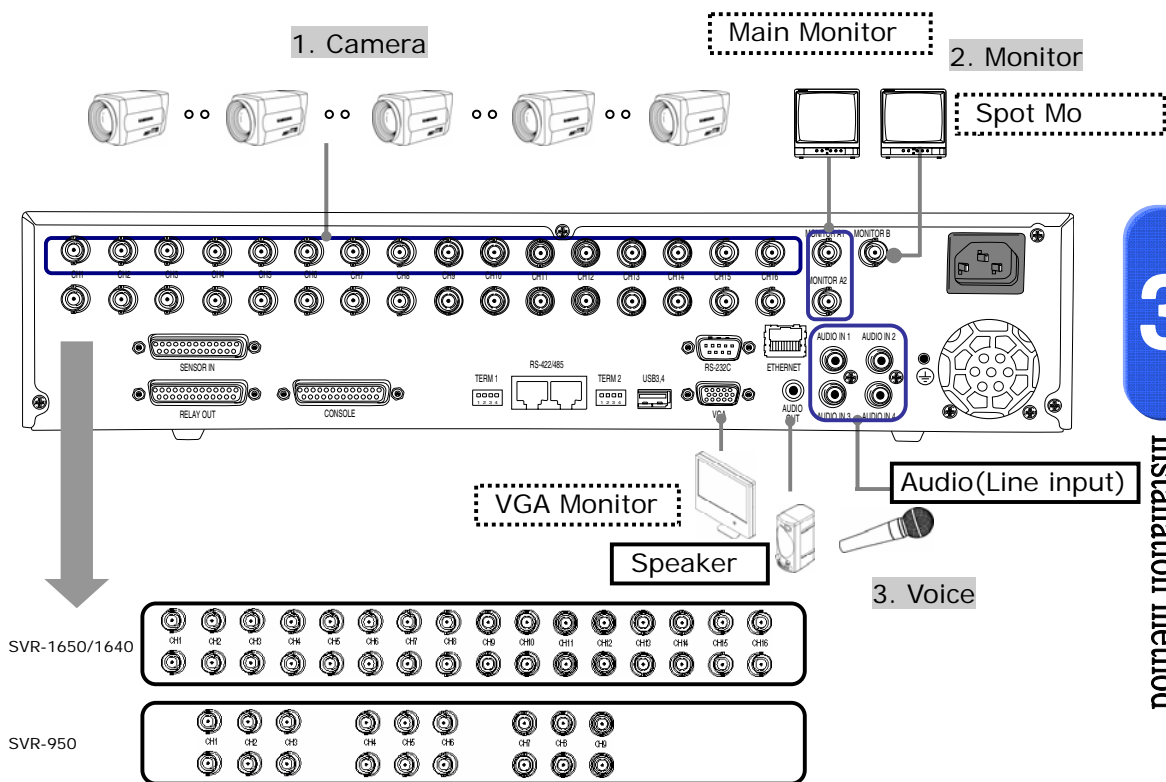

Installation method

#### 1. Camera

Up to 16(SVR-950: Up to 9) CCTV cameras can be connected to DVR. Connect the BNC terminal for each camera to the CAMERA IN terminal in the back of this product.



**If BNC terminal is only connected to CAMERA IN, a 75Ω terminating resistor is setup internally.**

**If connected to both CAMERA IN and CAMERA OUT, the device receiving the output must setup a terminating resistor of 75Ω.**

Since CAMERA OUT terminal is a loop output for the camera input, it should only be connected and used when there is an image input in CAMERA IN terminal.

If cable connected to the CAMERA OUT terminal is not connected to an external device and is left exposed, image quality may be adversely affected.

Input video system type (NTSC/PAL) is recognized automatically when the product power button is pushed. However, if a CCTV using a different system type is connected to a CAMERA IN terminal during product operation, the product must be turned OFF and ON again for proper automatic recognition of the input video system type .



Image input from each camera is output simultaneously to the external device connected to the MONITOR OUT terminal in the back of the product.

## 2. Monitor

To output screen information to the main monitor, connect the VGA terminal for monitor output in the back of the product and the monitor BNC terminal with a BNC cable. There are 5 monitor output terminals [BNC 3(SPOT 1), RCA 1, VGA 1) and up to 5 auxiliary monitors can be connected.



Monitor outputs are labeled A and B. If one monitor is used, it is connected to MONITOR A. MONITOR B is used to connect the SPOT monitor.

## 3. Voice connection

This product has a function to store input voice information. Appropriate devices must be connected to store or output voice information.

### Voice input

Connect a RCA voice input terminal (like a line level input) to the AUDIO IN terminal in the back of the product.




To setup voice input, set [AUDIO] to ON in the record setup screen in the Setup menu. Refer to '5.7 Record setup' for details.

Four voice inputs are each synchronized 1:1 with CH1~CH4 and voice output is only possible in the single screen mode. Voice is not output even during single mode double speed playback. Voice playback is not possible for live, playback and network multi screen modes.

### Voice output

Connect a RCA voice output terminal (like a monitor with a speaker) to the AUDIO OUT terminal in the back and front of the product.


### 3.2.3 External connector

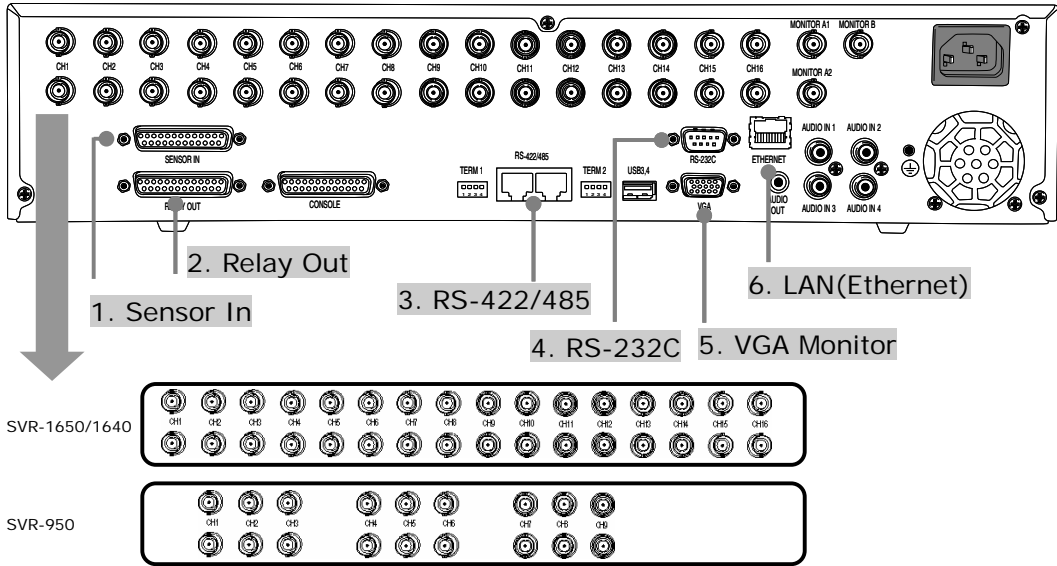

3  
Installation method

#### 1. Sensor input (SENSOR IN)

This is an external sensor connection terminal used to input information from the connected sensors or devices to the product.

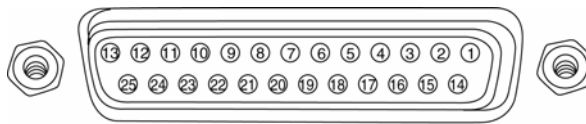

SENSOR IN

No.	Description	No.	Description		
1	S1	SENSOR 1	14	S14	SENSOR 14
2	S2	SENSOR 2	15	S15	SENSOR 15
3	S3	SENSOR 3	16	S16	SENSOR 16
4	S4	SENSOR 4	17	GND	Ground
5	S5	SENSOR 5	18	GND	Ground
6	S6	SENSOR 6	19	GND	Ground
7	S7	SENSOR 7	20	GND	Ground
8	S8	SENSOR 8	21	GND	Ground
9	S9	SENSOR 9	22	GND	Ground
10	S10	SENSOR 10	23	GND	Ground
11	S11	SENSOR 11	24	GND	Ground
12	S12	SENSOR 12	25	GND	Ground
13	S13	SENSOR 13			




Sensor input type can be setup in the Event setup screen in the Main menu. Refer to '5.8.1 Event setup' for details.

※ For SVR-950, sensors 10 to 16 are not connected (NC)

## 2. Relay output (RELAY OUT)

This is an alarm output terminal used to output alarms for sensor, motion detection, video loss and power OFF to external devices.

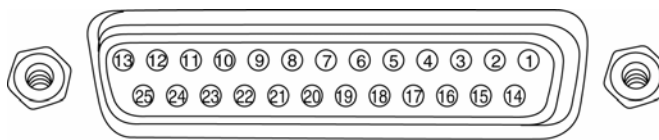

RELAY OUT


No.	Description		No.	Description	
1	NO1	Normal Open	14	D_IO 0	Digital I/O
2	CM1	Common	15	D_IO 1	Digital I/O
3	NC1	Normal Close	16	D_IO 2	Digital I/O
4	NO2	Normal Open	17	D_IO 3	Digital I/O
5	CM2	Common	18	D_IO 4	Digital I/O
6	NC2	Normal Close	19	D_IO 5	Digital I/O
7	NO3	Normal Open	20	D_IO 6	Digital I/O
8	CM3	Common	21	D_IO 7	Digital I/O
9	NC3	Normal Close	22	GND	Ground
10	NO4	Normal Open	23	GND	Ground
11	CM4	Common	24	GND	Ground
12	NC4	Normal Close	25	GND	Ground
13	GND	Ground			



For operation of each relay output, refer to the main menu event setup in '5.8.3 Relay setup'.

### 3. External control equipment (RS-422/485)

This is a terminal for connecting external control equipment.  
The switch labeled TERM is used to turn ON/OFF terminating resistance for RS-422/485 communication equipment.

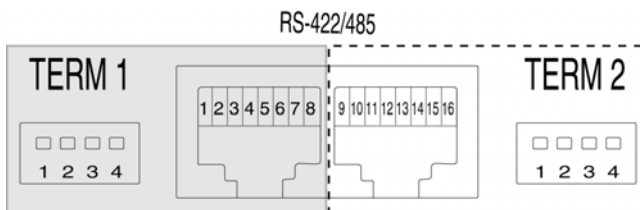


PORT	No.	RS-422	RS-485
PORT A (Controller SCC-3100A Control)	1	RX+ (+Data Receive)	Data+
	2	RX- (-Data Receive)	Data-
	3	N/C (Not connected)	N/C (Not connected)
	4	N/C (Not connected)	N/C (Not connected)
	5	GND(Ground)	GND(Ground)
	6	N/C (Not connected)	N/C (Not connected)
	7	Tx-(-Data Send)	Data-
	8	Tx+(+Data Send)	Data+
PORT B (Speed Dome Control)	9	Rx+(+Data Receive)	Data+
	10	Rx-(-Data Receive)	Data-
	11	N/C (Not connected)	N/C (Not connected)
	12	N/C (Not connected)	N/C (Not connected)
	13	GND(Ground)	GND(Ground)
	14	N/C (Not connected)	N/C (Not connected)
	15	Tx-(-Data Send)	Data-
	16	Tx+(+Data Send)	Data+



**TERM 1 switch controls PORT A, TERM 2 Switch controls PORT B**  
**1, 2 : ON → RS-485 MODE, OFF → RS-422 MODE**  
**3, 4 : ON → Termination On, OFF → Termination Off**

**PORT A : SCC-3100A terminal**

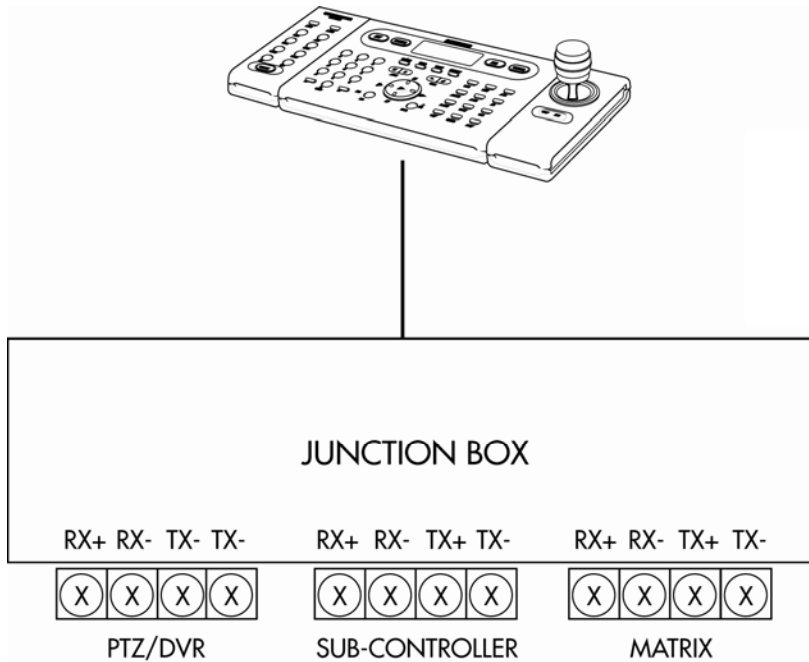


Controller Terminal ( PORT 1)	DVR PORT A	
	RS-485	RS-422
RX+	1 or 8	8
RX-	2 or 7	7
TX+		1
TX-		2

※ RS-422/485 connection can be selected from the SW1 switch.  
 To connect RS-485: SW1 switch 1, 2 are turned ON.  
 To connect RS-422: SW1 switch 1, 2 are turned OFF

**PORT B : SPD-2200 terminal**

**3**

Installation method

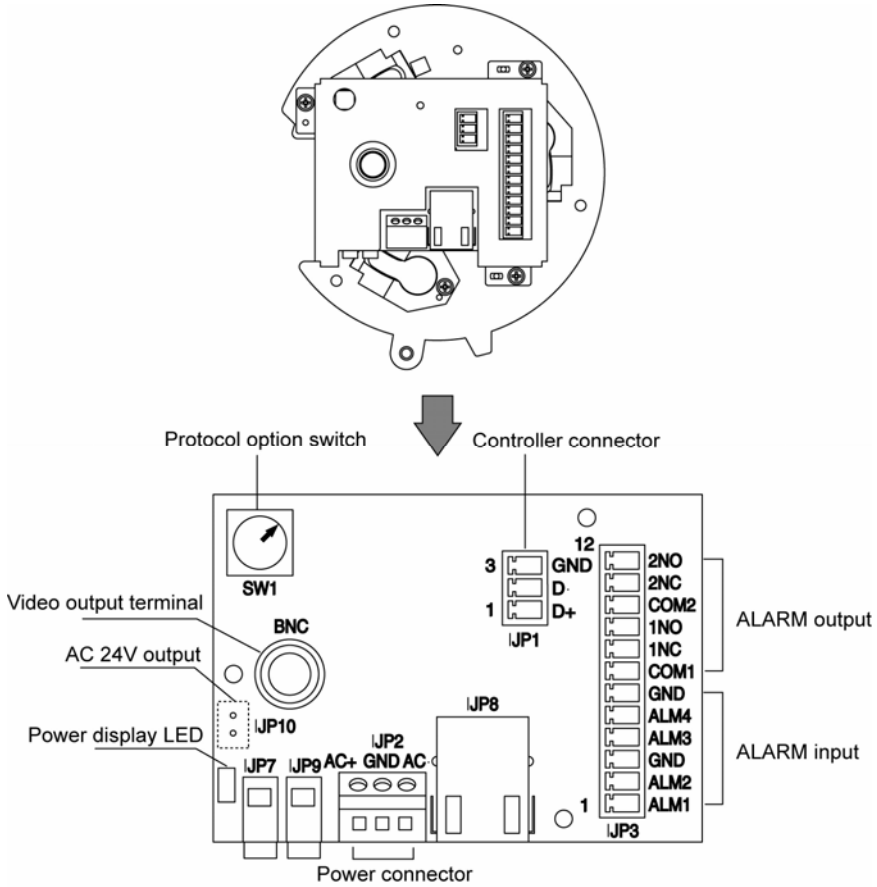


Speed dome terminal	DVR PORT B
D +	9 or 16
D -	10 or 15
GND	13

※ If GND is connected, a much sharper image quality can be seen.  
 TERM2 switch 1, 2 must be set to ON.

### SPD-2500 terminal

Interface connector

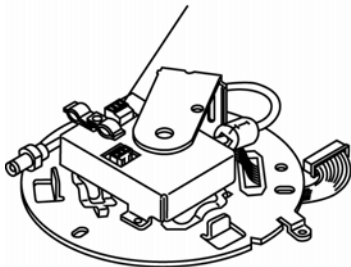


Interface connector

Terminal No.	Signal name
1	DATA(+)
2	DATA(-)
3	Signal GND

Speed dome terminal	DVR PORT B
D +	9 or 16
D -	10 or 15
GND	13

※ If GND is connected, a much sharper image quality can be seen.  
TERM2 switch 1, 2 must be set to ON.

### SPD-2300/3000/3300 terminal

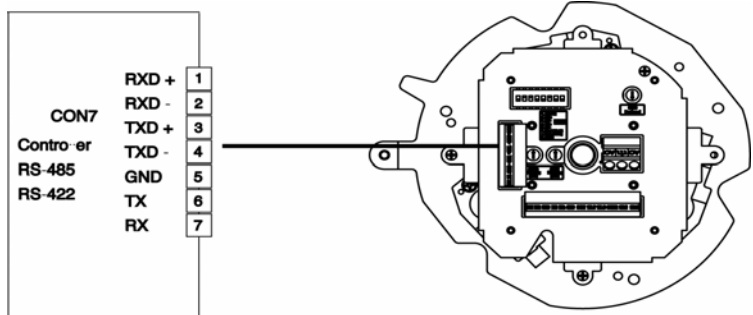

Speed dome terminal	DVR PORT B	
	RS-485	RS-422
RXD+	9 or 16	16
RXD-	10 or 15	15
TXD+		9
TXD-		10
GND	13	
TX	Terminal for RS-232 communication	
RX	Terminal for RS-232 communication	


※ If GND is connected, a much sharper image quality can be seen.  
RS-422/485 connection can be selected from the TERM2 switch.



#### 4. Communication port (RS-232C)

This is a port used to connect to the PC to control the product.

No.	Description	No.	Description
1	N/C(Not connected)	6	N/C(Not connected)
2	RxD(Data receive)	7	N/C(Not connected)
3	TxD(Data send)	8	N/C(Not connected)
4	N/C(Not connected)	9	N/C(Not connected)
5	GND(Ground)		

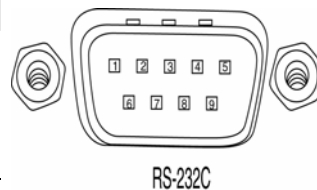

External devices ATM/POS may be connected and used.

#### 5. Monitor output (VGA)

This is an output connector for the VGA monitor.


No.	Description	No.	Description
1	Red signal(75Ω, 0.7Vp-p)	9	N/C(Not connected)
2	Green signal(75Ω, 0.7Vp-p)	10	GND
3	Blue signal(75Ω, 0.7Vp-p)	11	GND
4	N/C(Not connected)	12	N/C(Not connected)
5	GND	13	HSYNC(Horizontal synchronization)
6	GND	14	VSYNC(Vertical synchronization)
7	GND	15	N/C(Not connected)
8	GND		

#### 6. LAN connection (Ethernet)

This is a port to connect to the network.

No.	Description	No.	Description
1	TX+ (Data send)	5	N/C (Not connected)
2	TX- (Data send)	6	RX-(Data receive)
3	RX+(Data receive)	7	N/C (Not connected)
4	N/C (Not connected)	8	N/C (Not connected)

When connecting network cable, we recommend installation with the cable core as below to improve communication quality.

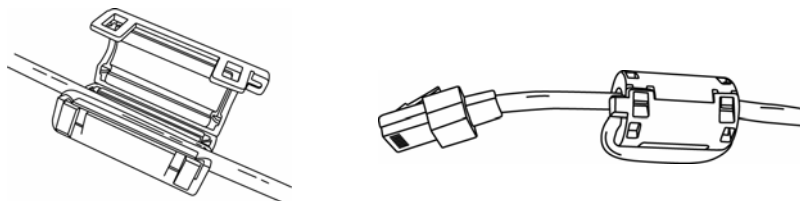

# Chapter 4. Operation method

## 4.1 Preoperation inspection items


- ❖ Make sure you verify the input power source voltage before turning on the power.
- ❖ If product used for NTSC is used with a PAL device, it may malfunction initially (recognize as a NTSC device). In this case, if power is turned OFF and ON again, it will recognize the PAL device properly.

## 4.2 Connection of power supply

- ❖ After connecting the product with other equipment including the power supply cable, turn ON the power by pressing the stand-by switch button in front of the product.
- ❖ When product is turned ON, video signal presence is recognized automatically.
- ❖ Even if there is a sudden power failure, all setup value will be maintained.
- ❖ If the product is setup to input a password when product is turned ON and OFF, enter the password. Product cannot be turned ON or OFF without entering the password in this case.


## 4.3 Live screen

When the product is turned ON, live screen, which is a surveillance screen, is displayed.

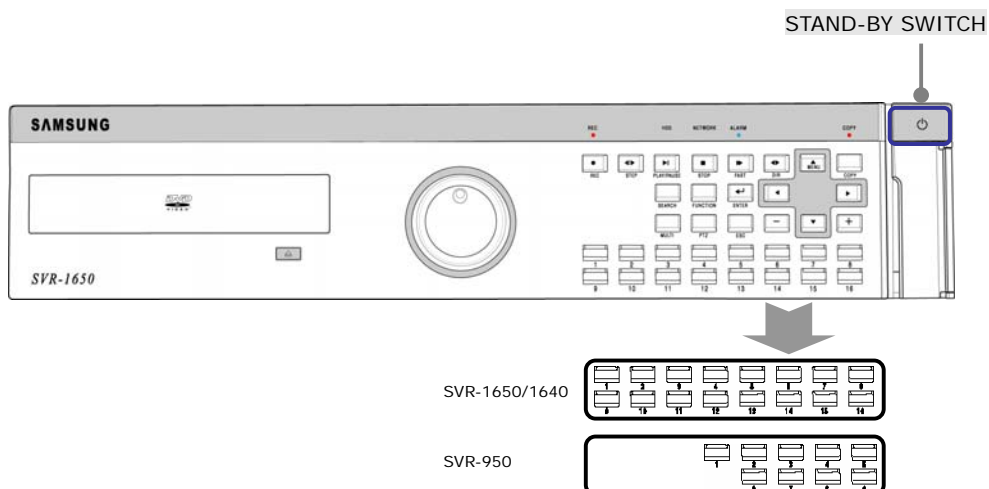

### 4.3.1 FUNCTION screen display

If Channel 1~16(SVR-950: Channel 1~9) is setup as screen mode and FUNCTION button is pressed, icons for FUNCTION-LIVE will be activated. FUNCTION icon can be used to setup SPOT, PTZ and PIP.

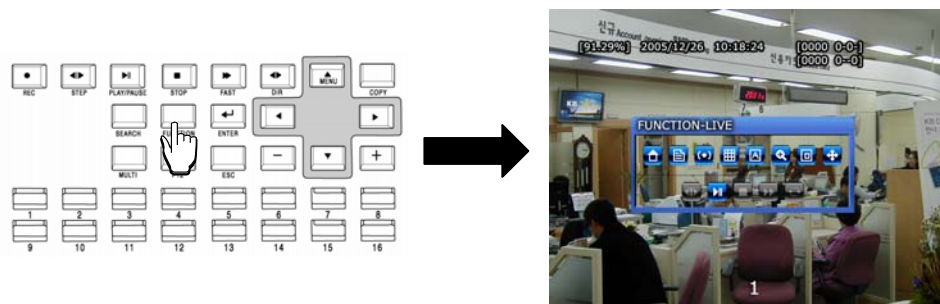


In the FUNCTION-PLAY screen, the following play screen will be displayed.




### 4.3.2 Single channel screen display

If Channel 1~16(SVR-950: Channel 1~9) button is pressed, each channel is displayed using the entire screen.

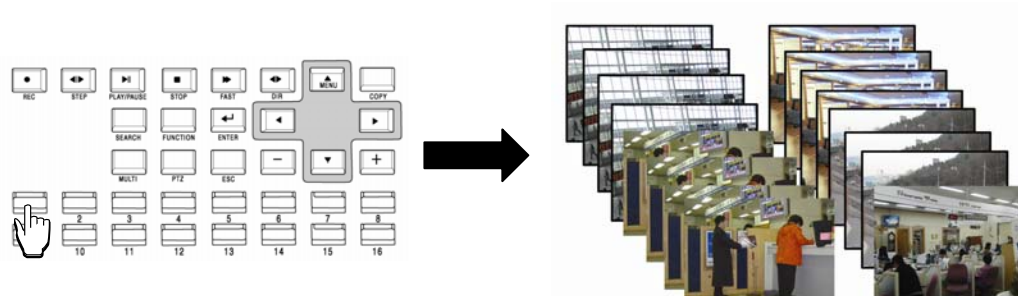

### 4.3.3 Multi screen display

If MULTI button is pressed, 16 channels are displayed as a 16 DIVISION screen (For SVR-950, channel 9 is partitioned into 9 segments on the screen.). If MULTI button is pressed once again, a 4 DIVISION screen is displayed. Each time MULTI button is pressed, a divided screen is displayed following the order for divided screen types setup in [Screen Setup]-[SEQUENCING].

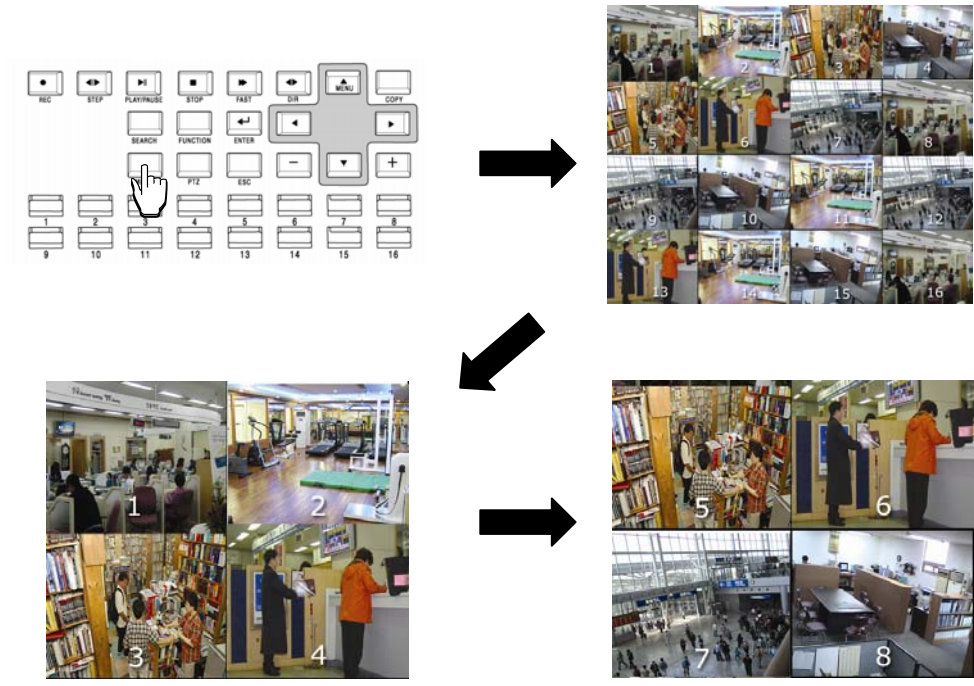


If Multi button is pressed in order, display is changed in the following order : 16 DIVISION→ 4 DIVISION→ 9 DIVISION screen.  
(SVR-950: 9 DIVISION→ 4 DIVISION)

## 4.4 Recording

### 4.4.1 General recording

If REC button is pressed, red LED is turned ON, N is displayed in the upper right corner and video recording is started. If REC is pressed again, video recording is stopped.

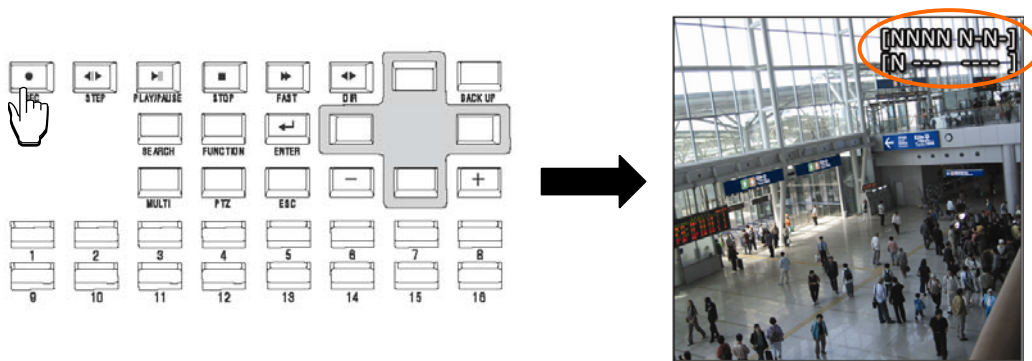

[RECORD-OFF] is set to ON in password function, password input is needed to stop REC.

### 4.4.2 Scheduled recording

If [Scheduled video recording] is setup for [Record Setup]-[RECORD]-[RECORD MODE] in the menu, scheduled video recording is carried out automatically according to the reservation setup. REC button is not operational during scheduled video recording.



Video recording status display ([NNNN]), shown on the screen, when the corresponding channel is not being recorded, "0" is displayed and if there are no images, "-" is displayed.

**N:** Normal video recording in progress

**S:** Scheduled video recording in progress


**E:** Event video recording in progress ( motion detection , video loss , sensor )



REC button is not operational during scheduled video recording.

## 4.5 Search

If SEARCH button is pressed, the following search menu is displayed. Video recorded items can be searched by time, by event and by date using the menu and played. Log file search is also possible.

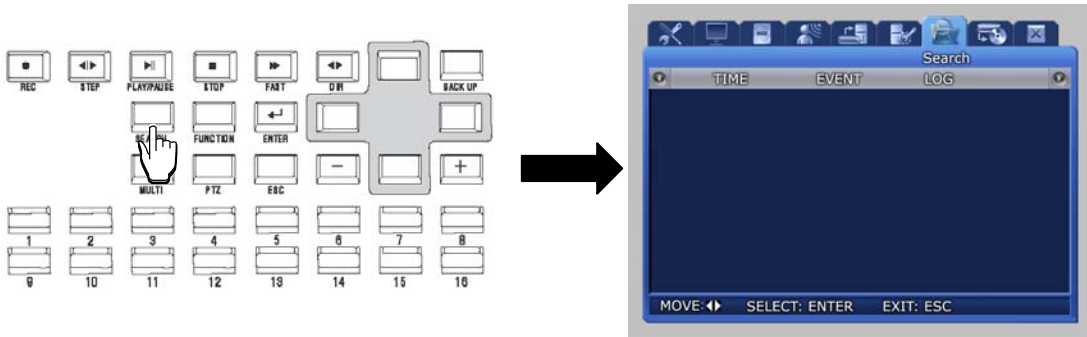

### 4.5.1 Time search

If [TIME] is selected after SEARCH button is pressed, images stored in the basic built-in HDD can be setup by time periods and played.

As shown below, date and time video recording was carried out is displayed. If the desired date and time is entered and [OK] button is pressed, images recorded for each channel during this time period can be viewed.



### 4.5.2 Event search

If [EVENT] is selected after SEARCH button is pressed, a screen for selecting the event to search for is displayed. User can search by event and play the result as needed.



Channel : Select a channel for event search.

- ✓ SVR-1650/1640 : CH1~16
- ✓ SVR-950 : CH1~9

Event type : Event type can be filtered for all events or [SENSOR/V-LOSS/MD/TEXT].

- ✓ SENSOR : Sensor events
- ✓ V-LOSS : Video loss events
- ✓ MD : Motion detection events
- ✓ TEXT : Text input events



If number of video recording items exceeds the number that can be displayed on one screen, use the (+)/(-) buttons on the remote controller or the main body to move between pages.

If a video recording item is selected and ENTER button is pressed, the corresponding video recording will be played.

To return to the EVENT LIST, press the ECS button again.

### 4.5.3 Log search


Log history can be searched to verify the time for video recording start and stop, power ON/OFF, system time change (CLOCK), menu setup change (SETUP).



- ❖ [LOG] only provides a list and does not play recordings.
- ❖ Press the ESC button to exit the list.

### 4.6 Recording file playback


Files found by video recording search can be view through the playback related buttons shown in the figure below. Function for each playback related button is as follows.

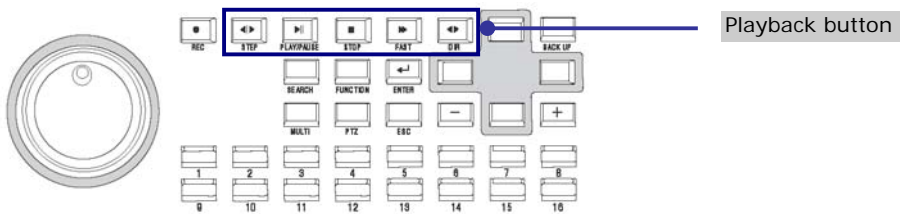

- ✓ STEP(Frame play) : Press the STEP button from the video recorded screen to play it in a frame. Each time the button is pressed, a small frame is played.
- ✓ PLAY/PAUSE : If PAUSE button is pressed from the PLAY screen, the PLAY screen is paused momentarily. If the button is pressed again, PLAY is resumed.
- ✓ STOP : Press the STOP button from the PLAY screen to exit the PLAY mode.
- ✓ FAST(FAST PLAY) : Press the FAST button from the PLAY screen to play at a faster speed than the normal speed (2x, 4x, 8x, MAX).
- ✓ DIR(Play direction conversion) : Press the DIR button from the PLAY screen to convert play direction to forward direction or reverse direction.



### 4.6.1 Jog dial / shuttle ring

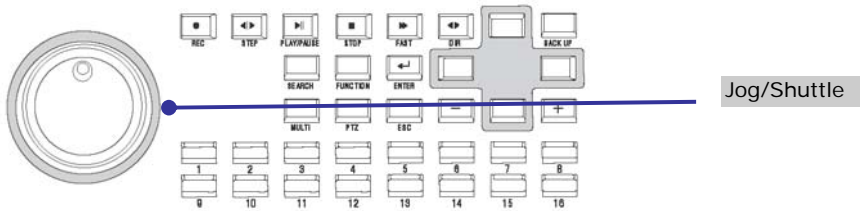


- ✓ Shuttle ring: Used to increase/decrease play speed and to change play direction, to move between menus
- ✓ Jog dial: Used to search still images in paused state.

# 4

### 4.7 Live / Playback screen conversion

If there is a video recording, press the PLAY/PAUSE button from the LIVE screen to get to the PLAY screen. Press the STOP button from the PLAY screen to return to the LIVE screen. Conversion from live to playback screen is only possible if a file for a video recording that occurred one minute ago, with respect to end time, exists. If such a file does not exist, a 'No Data' message is outputted.

Operation method

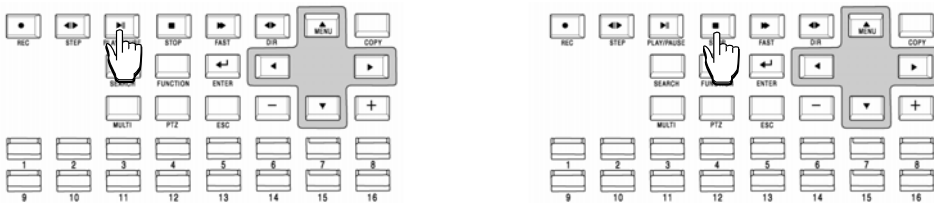

PLAY



LIVE



## 4.8 Digital zoom


If FUNCTION button is pressed and digital zoom  icon is clicked, zoom function can be used.



- ✓ To move in the expanded screen, use the up/down/left/right buttons.
- ✓ D-ZOOM button operates in the single screen mode for channel 1~16(SVR-950: channel1~9).
- ✓ To cancel, press the mouse right button or the ESC key.

## 4.9 Copy

If COPY button is pressed, HDD content can be stored in other storage medium including DVD+RW/CD-RW and USB memory stick. The device connected to the product will be automatically recognized and displayed on the menu.

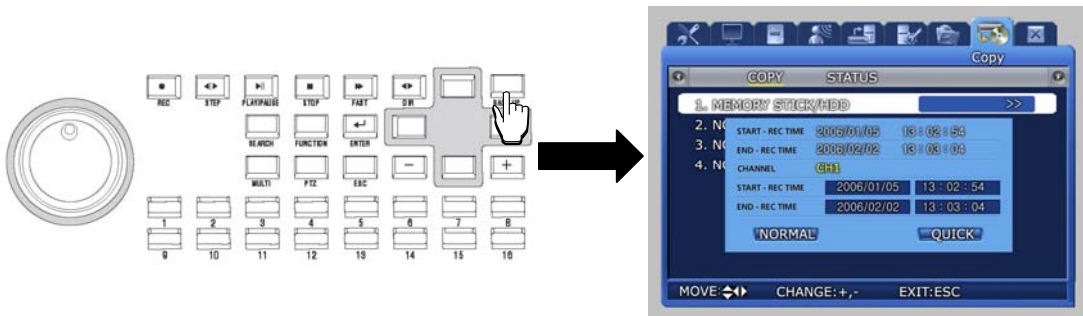

After selecting a storage medium, select the channel for which COPY will be carried out and the image information [START-REC TIME /END-REC TIME]. After a selection is made between NORMAL COPY and QUICK COPY, COPY is started.



### NORMAL COPY (Standard COPY)

- If a recording is in progress, it is continued even during the time COPY is carried out.
- Network backup and network playback function are not supported during the time COPY is carried out.
- If NORMAL COPY is carried out using a USB memory, the maximum amount that can be copied with one USB memory is 200MB.

**QUICK COPY (High speed COPY)**

- If a recording is in progress, it is paused while COPY is carried out.
- SVR-1650 : During COPY, none of the functions, except network live, are supported.
- SVR-1640/950 : During COPY, All functions are stopped.
- If a popup window verifying whether recording has been paused is displayed, select "Yes". If "No" is selected, COPY cannot be carried out.
- After COPY is completed, the product is rebooted automatically.




1. Before COPY, storage device formatting must be carried out first.
  - DVD+RW/CD-RW: Use after executing the DVR Format Menu
  - USB memory stick : Use after executing the Format Menu in FAT format from the PC. (FAT32 format may not operate normally.)
2. Recommended media
  - DVD+RW : Mitsubishi, TDK, Imation (1~4X recommended)
  - CD-RW : Mitsubishi, TDK, Imation (4~12X recommended)
  - USB memory stick : SanDisk, Transcend (512MB recommended)
3. If DVD+RW/CD-RW media are not detected, please install a UDF reader (RW CD detection program).  
UDF reader is a freeware that can be easily searched and downloaded from the internet
4. Please make sure only authentic products are used.  
If inauthentic products are used, problems may occur.  
Using new media products is recommended. If DVD+RW and CD-RW are used over a long period of time, error may occur.
5. If one of the messages below is displayed, COPY has not been completed normally. Please follow directions to complete the COPY operation normally.  
"Copy is terminated. Try it over again after formatting the media, or continue to copy from the termination time with new media."

### 4.9.1 SLiM Player

SLiM Player is a program that is automatically saved when making a backup copy of a movie file on a CD or USB using the copy function of the DVR. You may replay a backup copy of the data on a PC without installing a separate viewer program on a PC.

This function is only supported by firmware version 1.8 or higher. The firmware information may be viewed in the '4.13 system information'.

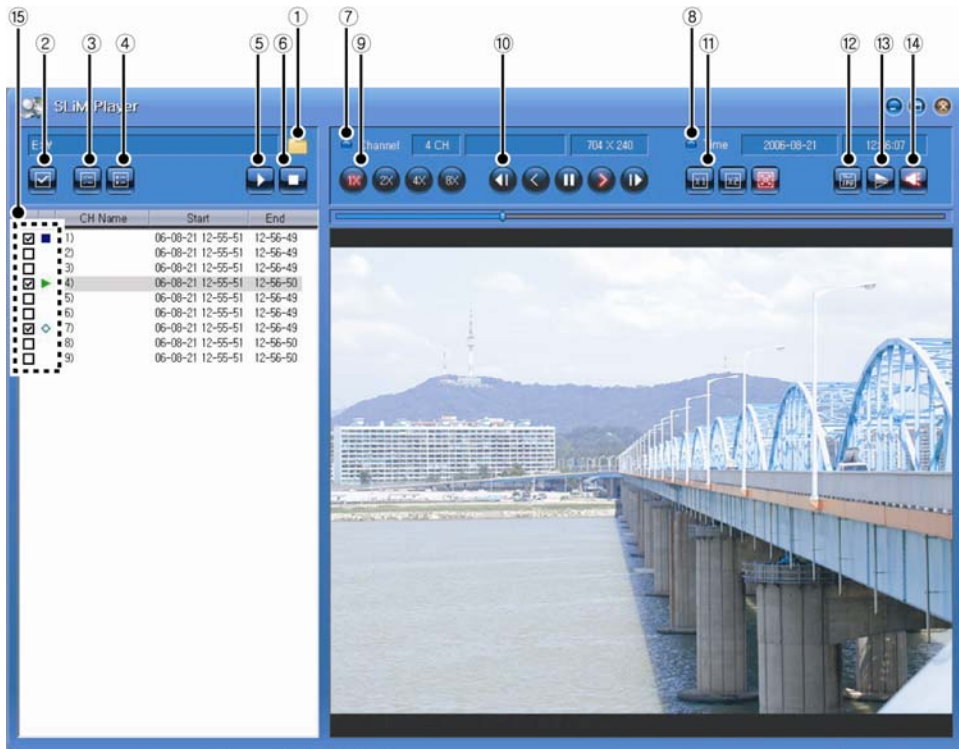

Button	Name	Function
1	Select Folder	Clicking on the button, the program will be executed and the folder will appear. At this moment, if you click on the folder where the recorded file is located, the list of recorded files in the folder will appear. The list of recorded files will be arranged and displayed in the order of channel or time.
2	All list check or not check	Select every file or cancel the selection.
3	Selected list check	Select a file.
4	Selected list not check	Cancel the selection of a file.
5	Play	Play the selected files in order.
6	Stop	Stop playing the file and canceling all the selections made.


Button	Name	Function
7	Channel Info	Display the information of the channel that is saved.
8	Time Info	Display the information on the recording time for the file being played.
9	Control of playback speed	Adjust the playing speed.(1x/2x/4x/8x)
10	Control of playback functions	These are functions related to 'play'. - Move to the previous frame. - Play in the reverse direction. - Temporary stop. - Play in the forward direction. - Move to the next frame.
11	Control of playback Image size	Adjusting the size of the screen for playing the content. - 1x zoom/2x zoom/Entire screen - Images with resolutions, 704x240 or 704x288 will not change its size even with 2x zooming.
12	Save as JPEG	Save the screen being played as a JPEG file.
13	Invert	Rotate the screen being played by 180°.
14	Audio ON/OFF	Turn the audio function ON/OFF.
15	Playback File List	◇ : Getting ready for playing ► : forward play ◀ : reverse play    : pause ■ : stop playing

4

Operation method

## 4.10 PTZ

From the selected LIVE entire screen SINGLE mode, press the PTZ button to adjust camera Pan, Tilt, Zoom or view the screen in preset (PTZ value for camera setup in advance) state. There are no PTZ related buttons on the remote controller.

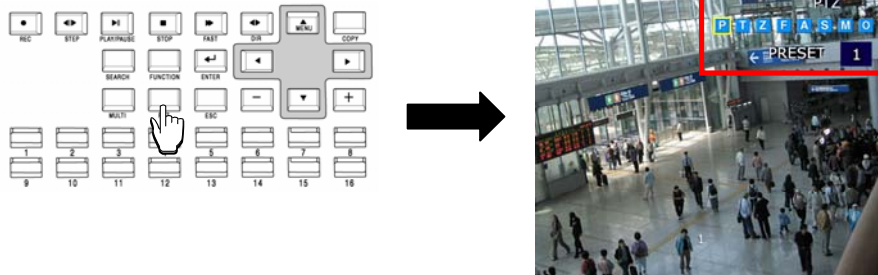

### 4.10.1 PTZ adjustment

- ✓ After pressing the PTZ button from the single screen, put the cursor on the **P** button and adjust using the shuttle.
- ✓ To adjust camera TILT, after pressing the PTZ button from the single screen, put the cursor on the **T** button and adjust using the shuttle.
- ✓ To adjust camera ZOOM, after pressing the PTZ button from the single screen, put the cursor on the **Z** button and adjust using the shuttle.
- ✓ To adjust camera focus, put the cursor on the **F** button and adjust using the shuttle.



**Jog dial can only cause movement in 1x speed. By increasing the shuttle ring rotation angle, movement in 2x, 4x, 8x speed is possible for the shuttle ring.**

- ✓ After adjusting, if the **A** button is pressed with the mouse or if the ENTER button, located on the front of DVR, is pressed after the A button is selected, focus is adjusted automatically.
- ✓ To exit the PTZ mode, press the mouse right button or the ESC key.



**PTZ mode can only be used in LIVE screen and cannot be setup in MULTI mode. It must be setup as SINGLE mode in the LIVE screen.**

### 4.10.2 Preset setup

- ✓ Select a desired channel from channel 1~16(SVR-950: channel 1~9) in the LIVE screen and select the entire screen mode.
- ✓ Press PTZ to select the PTZ mode (PTZ is displayed in the upper right corner of the screen.)

- ✓ Press (PAN) / (TILT) / (ZOOM) and use the mouse and jog/shuttle to take the screen to the desired PTZ state.
- ✓ Use PRESET located below PTZ and setup the value with the mouse (1~255).



1. If PTZ (P-Set) is displayed in the upper part of the screen, Channel 1~16 (SVR-950: channel1~9) displays the preset number to setup (1~255) rather than the corresponding channel.

2. Preset may be setup by pressing the 'ENTER' key, located in the front of DVR, or the mouse button after moving the cursor to **S**.

### 4.10.3 Preset utilization


- ✓ Select a desired channel from channel 1~16(SVR-950: channel 1~9) and select the entire screen mode.
- ✓ Press PTZ to select the PTZ mode (PTZ is displayed in the upper right corner of the screen.)
- ✓ Use the mouse on PRESET, located below PTZ on the screen, to setup the value (1~255).
- ✓ If the desired button between Channel 1~16(SVR-950: channel 1~9) is pressed, the cursor is moved to the **M** button and the ENTER key located on the front of DVR is pressed, the camera operates with preset values setup in advance.

### 4.10.4 Using OSD for the Speed Dome Camera

- ✓ After pressing the PTZ button from the single screen, if either the ENTER key in the front of the DVR or the mouse button is pressed after moving the cursor to **O**, OSD for the speed dome camera and the following message will be displayed: 'PTZ OSD'.
- ✓ OSD cursor for the speed dome camera may be moved up/down and left/right by using **▲▼◀▶** keys in the front of the DVR.
- ✓ Changes in OSD for the speed dome camera may be setup or cancelled by using ENTER and ESC keys in the front of the DVR.
- ✓ OSD function for the speed dome camera can be terminated by pressing the PTZ button in the front of the DVR.

## 4.11 Quick setup

Collection of frequently used menu items that can be used to modify setup values quickly. It can move to the [Quick Setup] screen by pressing the MENU button on the front of the product.

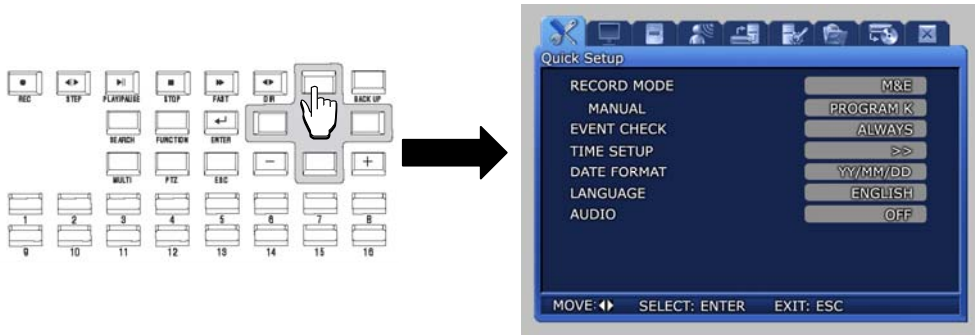


- ✓ RECORDE MODE : Manual & Event or Schedul & Event setup item.
- ✓ EVENT CHECK : Can be set to OFF, ALWAYS or TIMEZONE.
- ✓ TIME SETUP : Setup the system time.
- ✓ DATE FORMAT : Setup the date display format.
- ✓ LANGUAGE : Language can be selected.
- ✓ AUDIO : Select whether to store voice information along with images.

Press the ESC button after completing the setup to move to the completion screen. If [SAVE] is selected here, setup items are saved.



## 4.12 PIP

If FUNCTION button is pressed in entire screen mode, the FUNCTION screen is displayed. If the PIP  icon is pressed from here, another screen can be viewed together.



SVR-1650/1640



SVR-950


### ❖ Live PIP from Live screen

1. Press the FUNCTION button and select the PIP icon.
2. From the menu on the right side of the live screen, select the desired channel.
3. If the desired channel is selected with the mouse, a small screen is displayed inside the screen.
4. If mouse right button or the ESC button is pressed, PIP mode is cancelled.

### ❖ Play PIP from PLAY screen

Same as PIP setup item in live screen.

## 4.13 System information

If FUNCTION button is pressed, the FUNCTION screen is displayed. If the STATUS  icon is clicked from here, system related information is displayed as shown below.

SYSTEM INFORMATION 1					SYSTEM INFORMATION 2		
RECORD MODE		M&E	PROGRAM	K	IMAGE SIZE	704 X 240	
CH	M	Q	E	Q	VIDEO	AUDIO	
1	5	H	10	S	0.0 M/min	0 KB	
2	5	H	10	S	0.0 M/min	0 KB	
3	5	H	10	S	0.0 M/min	0 KB	
4	5	H	10	S	0.0 M/min	0 KB	
5	5	H	10	S	0.0 M/min		
6	5	H	10	S	0.0 M/min		
7	5	H	10	S	0.0 M/min		
8	5	H	10	S	0.0 M/min		
9	5	H	10	S	0.0 M/min		
10	5	H	10	S	0.0 M/min		
11	5	H	10	S	0.0 M/min		
12	5	H	10	S	0.0 M/min		
13	5	H	10	S	0.0 M/min		
14	5	H	10	S	0.0 M/min		
15	5	H	10	S	0.0 M/min		
16	5	H	10	S	0.0 M/min		

SVR-1650/1640


SYSTEM INFORMATION 1					SYSTEM INFORMATION 2		
RECORD MODE		M&E	PROGRAM	K	IMAGE SIZE	704 X 240	
CH	M	Q	E	Q	VIDEO	AUDIO	
1	5	H	10	S	2.2 M/min	0 KB	
2	5	H	10	S	2.3 M/min	0 KB	
3	5	H	10	S	0.0 M/min	0 KB	
4	5	H	10	S	0.0 M/min	0 KB	
5	5	H	10	S	0.0 M/min		
6	5	H	10	S	0.0 M/min		
7	5	H	10	S	0.0 M/min		
8	5	H	10	S	0.0 M/min		
9	5	H	10	S	0.0 M/min		


SVR-950

SYSTEM INFORMATION 1		SYSTEM INFORMATION 2	
FIRMWARE VERSION	v 1.2		
N/W FIRMWARE VERSION	v 1.0		
IP ADDRESS	000. 000. 000. 000		
MAC ADDRESS	00 09 18 00 2f 3d		
AUDIO	OFF		
TOTAL FREE	99323 MB		
AVERAGE DATA RATES	0.0 M/min		
RECORDABLE TIME	0 day	0 hour	0 minute


As shown on the screen above, video recording program information and version, IP address, MAC address, voice information can be verified. If mouse right button or ESC button is pressed, the information screen is closed.

## 4.14 SPOT

If FUNCTION button is pressed, the FUNCTION screen is displayed. If the SPOT icon  is clicked from here, the following screen is displayed. If SPOT monitor is used, it can be used like the MULTI function for the main monitor.

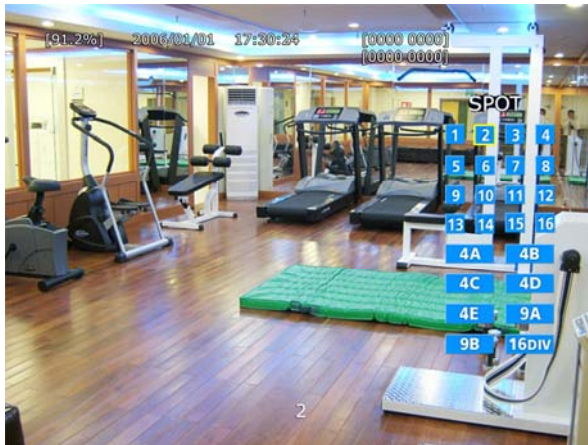

SVR-1650/1640

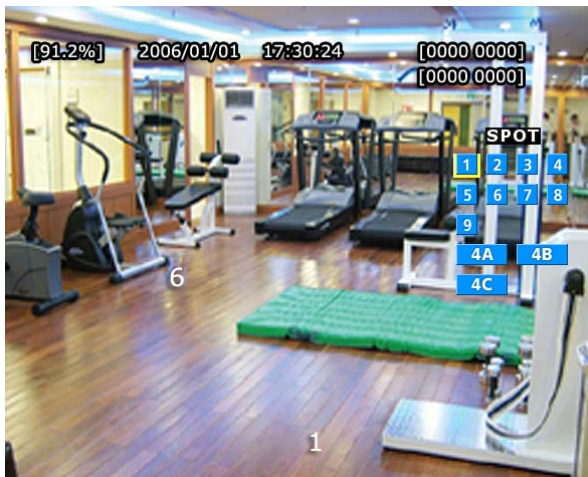


SVR-950


# Chapter 5. Setup method

## 5.1 Menu organization

Menu organization for DVR is as follows.

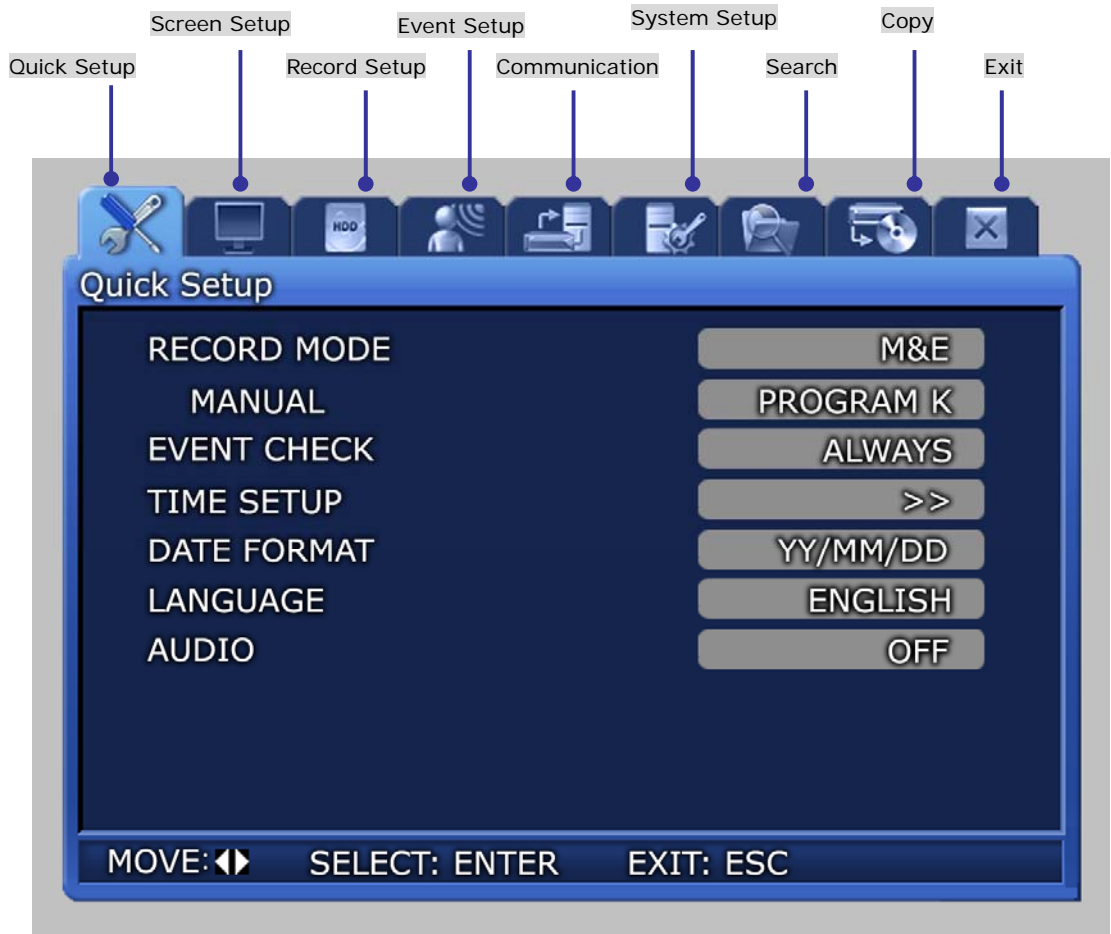

Menu organization is as follows. Refer to '5.5 ~ 5.10' for details.

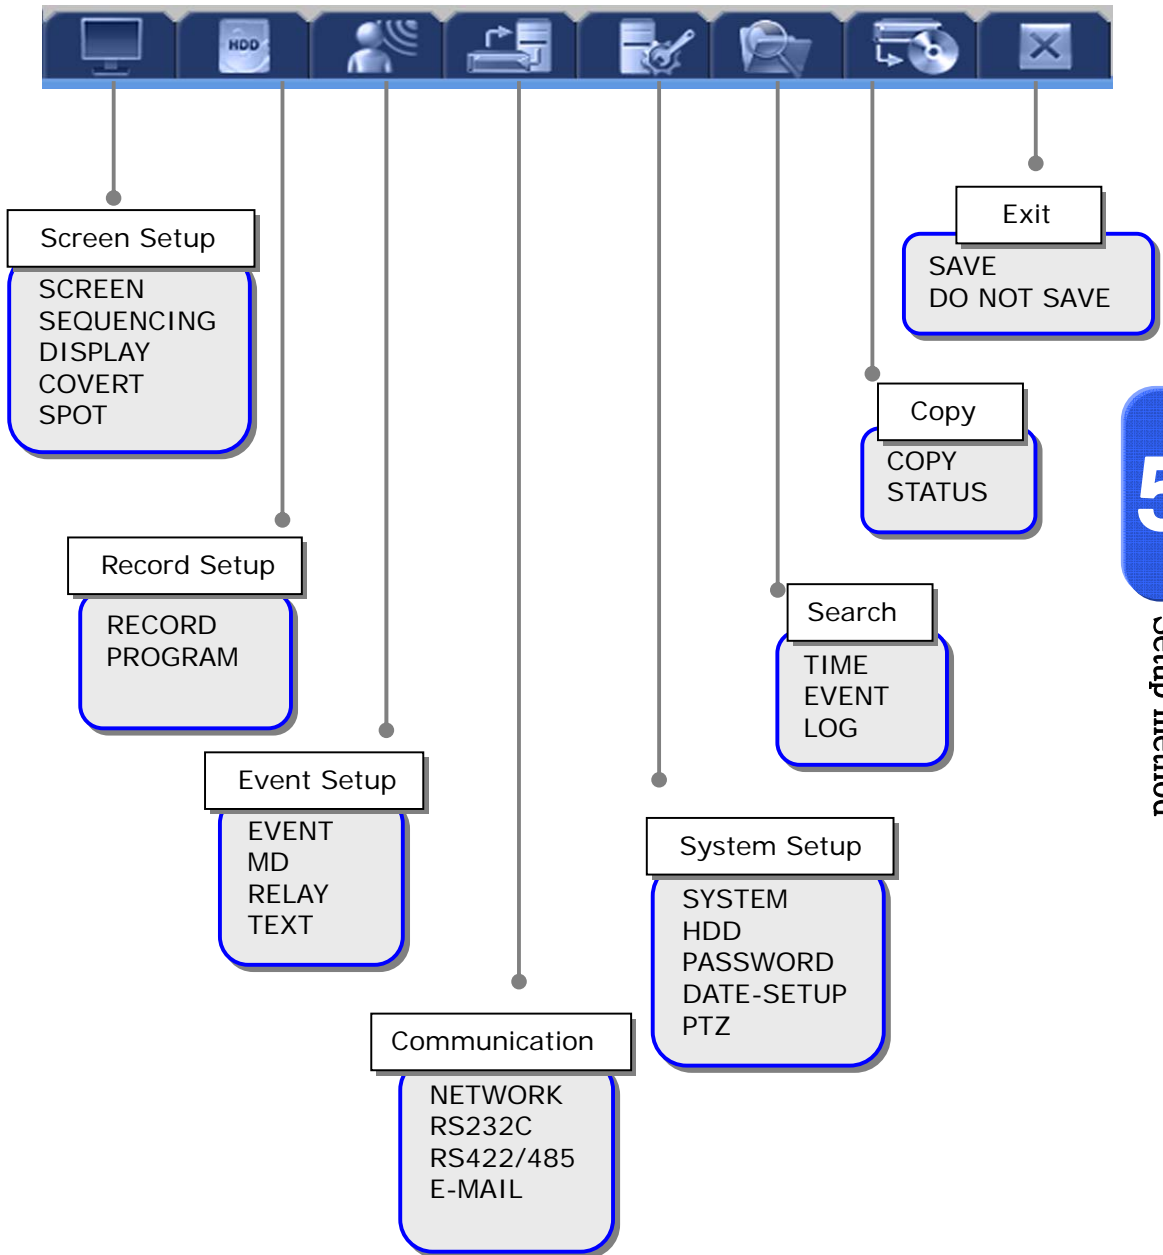

**5**  
Setup method

## 5.2 Initial value setup

DVR product is shipped with the initial value setup listed below. If the initial values have been changed and the user wants to get back the initial values the product was shipped with, click [System Setup]-[System] in the menu and set [DEFAULT] to [Yes].

### Screen setup

Main menu	Lower menu	Initial value	
		SVR-1650/1640	SVR-950
SCREEN	CH NUMBER	CH1~16	CH1~9
	TITLE	1~16	1~9
	BRIGHTNESS	0	0
	CONTRAST	0	0
	SHARPNESS	0	0
	VIDEO OUTPUT SELECT	Enhanced COMPOSITE	Enhanced COMPOSITE
SEQUENCING	DWEEL TIME ORDER	3 sec (CH1 ~ 16) CH1...→CH16→4DIV A...→ 4DIV E→9DIV A→9DIV B→ 16DIV	3 sec (CH1 ~9) CH1...→CH9→4DIV A→ 4DIV B→4DIV C→9DIV
	MULTI MODE	4DIV : CH1,CH5,CH9,CH13 9DIV : CH8 ~ CH16	4DIV : CH1,CH2,CH3,CH9
	VIDEO LOSS SKIP	OFF	OFF
DISPLAY	DATE & TIME	ON	ON
	HDD FREE SPACE	ON	ON
	RECORD STATUS	ON	ON
	TITLE	ON	ON
	REMOTE ID	ON	ON
COVERT	CH NUMBER	CH1~16	CH1~9
	LIVE COVERT	OFF	OFF
	PLAY COVERT	OFF	OFF
SPOT	TITLE DISPLAY	ON	No function available
	SPOT MODE	MANUAL	MANUAL
	SPOT EVENT	OFF	OFF
	SCREEN		

**Record setup**

Main menu	Lower menu	Initial value
RECORD	RECORD MODE PROGRAM PRE EVENT DURATION POST EVENT DURATION REPEAT RECORD MODE WARNING LEVEL AUDIO	M&E PROGRAM K 3 sec 10 sec ON 5% OFF
PROGRAM	PROGRAM K	IMAGE SIZE 704 x 240(NTSC) SVR-1650 : M=5, Q=H, E=10, Q=S SVR-1640 : M=1, Q=H, E=3, Q=S SVR-950 : M=2, Q=H, E=3, Q=S

## Record program(SVR-1650)

Order	NTSC					PAL				
	SIZE	MANUAL	QUALITY	EVENT	QUALITY	SIZE	MANUAL	QUALITY	EVENT	QUALITY
<b>A</b>	704 X 480	5	S	7	S	704 X 576	5	S	6	S
<b>B</b>	704 X 480	3	S	4	S	704 X 576	3	S	5	S
<b>C</b>	704 X 480	5	H	7	S	704 X 576	5	H	6	S
<b>D</b>	704 X 480	3	H	4	H	704 X 576	3	H	5	H
<b>E</b>	704 X 480	1	H	3	H	704 X 576	1	H	3	H
<b>F</b>	704 X 240	10	S	15	S	704 X 288	10	S	15	S
<b>G</b>	704 X 240	5	S	20	S	704 X 288	5	S	20	S
<b>H</b>	704 X 240	3	S	10	S	704 X 288	3	S	10	S
<b>I</b>	704 X 240	10	H	20	S	704 X 288	10	H	20	S
<b>J</b>	704 X 240	10	H	15	S	704 X 288	10	H	15	S
<b>K</b>	704 X 240	5	H	10	S	704 X 288	5	H	10	S
<b>L</b>	704 X 240	5	H	10	H	704 X 288	5	H	10	H
<b>M</b>	704 X 240	3	H	5	H	704 X 288	3	H	5	H
<b>N</b>	704 X 240	5	M	15	S	704 X 288	5	M	15	S
<b>O</b>	704 X 240	3	M	10	H	704 X 288	3	M	10	H
<b>P</b>	352 X 240	30	S	30	S	352 X 288	25	S	25	S
<b>Q</b>	352 X 240	20	H	20	S	352 X 288	15	H	15	S
<b>R</b>	352 X 240	10	H	15	H	352 X 288	10	H	15	H
<b>S</b>	352 X 240	25	M	25	S	352 X 288	20	M	20	S
<b>T</b>	352 X 240	10	M	10	H	352 X 288	10	M	10	H

### ■ Matters that require attention

- Initial value is currently set to K.
- Value that corresponds to the program above can be applied to all 16 channels.



**Record program(SVR-1640)**

Order	NTSC					PAL				
	SIZE	MANUAL	QUALITY	EVENT	QUALITY	SIZE	MANUAL	QUALITY	EVENT	QUALITY
<b>A</b>	704 X 480	1	H	5	S	704 X 576	1	H	5	S
<b>B</b>	704 X 480	1	H	3	H	704 X 576	1	H	3	H
<b>C</b>	704 X 480	1	H	1	H	704 X 576	1	H	1	H
<b>D</b>	704 X 240	3	S	9	S	704 X 288	3	S	4	S
<b>E</b>	704 X 240	3	H	5	S	704 X 288	3	H	3	S
<b>F</b>	704 X 240	3	H	3	H	704 X 288	3	H	3	H
<b>G</b>	704 X 240	1	H	3	S	704 X 288	1	H	3	S
<b>H</b>	704 X 240	3	M	9	S	704 X 288	3	M	4	S
<b>I</b>	704 X 240	3	M	5	H	704 X 288	3	M	3	H
<b>J</b>	704 X 240	1	M	3	S	704 X 288	1	M	3	S
<b>K</b>	704 X 240	1	H	3	S	704 X 288	1	H	3	S
<b>L</b>	352 X 240	7	S	9	S	352 X 288	6	S	7	S
<b>M</b>	352 X 240	5	H	10	S	352 X 288	4	H	5	S
<b>N</b>	352 X 240	3	H	5	S	352 X 288	3	H	5	S
<b>O</b>	352 X 240	7	H	9	H	352 X 288	5	H	10	H
<b>P</b>	352 X 240	3	H	5	H	352 X 288	3	H	5	H
<b>Q</b>	352 X 240	1	H	5	S	352 X 288	1	H	5	S
<b>R</b>	352 X 240	7	M	9	S	352 X 288	6	M	7	S
<b>S</b>	352 X 240	5	M	10	H	352 X 288	3	M	10	H
<b>T</b>	352 X 240	3	M	5	S	352 X 288	3	M	5	S

5

Setup method

■ Matters that require attention

- Initial value is currently set to K.
- Value that corresponds to the program above can be applied to all 16 channels.

## Record program(SVR-950)

Order	NTSC					PAL				
	SIZE	MANUAL	QUALITY	EVENT	QUALITY	SIZE	MANUAL	QUALITY	EVENT	QUALITY
<b>A</b>	704 X 480	2	H	5	S	704 X 576	2	H	5	S
<b>B</b>	704 X 480	1	H	3	H	704 X 576	1	H	3	H
<b>C</b>	704 X 480	1	H	2	H	704 X 576	1	H	2	H
<b>D</b>	704 X 240	5	S	9	S	704 X 288	5	S	5	S
<b>E</b>	704 X 240	3	H	5	S	704 X 288	3	H	5	S
<b>F</b>	704 X 240	3	H	3	H	704 X 288	3	H	3	H
<b>G</b>	704 X 240	1	H	3	S	704 X 288	1	H	3	S
<b>H</b>	704 X 240	5	M	9	S	704 X 288	5	M	5	S
<b>I</b>	704 X 240	3	M	5	H	704 X 288	3	M	5	H
<b>J</b>	704 X 240	1	M	3	S	704 X 288	1	M	3	S
<b>K</b>	704 X 240	2	H	3	S	704 X 288	2	H	3	S
<b>L</b>	352 X 240	10	S	12	S	352 X 288	7	S	10	S
<b>M</b>	352 X 240	5	H	10	S	352 X 288	5	H	10	S
<b>N</b>	352 X 240	3	H	5	S	352 X 288	3	H	5	S
<b>O</b>	352 X 240	10	H	12	H	352 X 288	7	H	10	H
<b>P</b>	352 X 240	5	H	10	H	352 X 288	5	H	10	H
<b>Q</b>	352 X 240	2	H	5	S	352 X 288	2	H	5	S
<b>R</b>	352 X 240	10	M	12	S	352 X 288	7	M	10	S
<b>S</b>	352 X 240	5	M	10	H	352 X 288	5	M	7	H
<b>T</b>	352 X 240	3	M	5	S	352 X 288	3	M	5	S

### ■ Matters that require attention

- Initial value is currently set to K.
- Value that corresponds to the program above can be applied to all 9 channels.

**Event setup**

Main menu	Lower menu	Initial value
EVENT	CHECK MESSAGE BUZZER	OFF ON OFF
	SWITCH TO EVENT SCREEN	OFF
	EVENT DISPLAY MIN TIME	3 sec
	EVENT DISPLAY MAX TIME	5 sec
	TEXT MONITORING	OFF
	SENSOR TYPE	NO
	- CH1~16(SVR-1650/1640) - CH1~9(SVR-950)	
MD	MD CHANNEL	CH1~16(SVR-1650/1640) / CH1~9(SVR-950), ALL
	ALL AREA SET	-
RELAY	SENSOR, MD, V-LOSS,POWER	OFF
TEXT	SYNC CHANNEL	CH1
	DEVICE	NORMAL
	CHECK PROTOCOL LINES	OFF 1

**Communication**

Main menu	Lower menu	Initial value
NETWORK	TYPE	Ethernet
	DHCP	OFF
	IP ADDRESS	000.000.000.000
	SUBNET MASK	255.255.255.000
	GATEWAY	000.000.000.000
	DNS	000.000.000.000
	PORT	4000
RS232	SWR	OFF
	BAUD RATE	9600
	DATA BIT	8
	PARITY BIT	NONE
RS422/ 485	STOP BIT	1
	SYSTEM ID	0
	PORT TYPE	PORT A
	BAUD RATE	9600
	DATA BIT	8
E-MAIL	PARITY BIT	NONE
	STOP BIT	1
	E-MAIL CHECK	OFF
	TO	-
SMTP SERVER	AUTHENTICATION	OFF
	ID, PW	-

## System setup

Main menu	Lower menu	Initial value
SYSTEM	LANGUAGE	ENGLISH
	KEY BUZZER	ON
	DEFAULT	-
	FIRMWARE DOWNLOAD	USER1 -
	REMOTE LIVE MODE (Function exclusively for SVR-1650)	SINGLE
	REMOTE SETUP	ENABLE
	DVR ALIAS	-
	REMOTE ID	ALL
LOAD/SAVE CONFIGURATION	LOAD	
HDD	HDD FORMAT	-
	HDD	HDD1
PASSWORD	USER PASSWORD	22222222
	ADMIN PASSWORD	11111111
	SETUP	OFF
	POWER-ON	OFF
	POWER-OFF	OFF
	RECORD-OFF	OFF
	PLAY	OFF
BUZZER IF CHECKING FAILS	OFF	
DATE-SETUP	TIME SETUP	-
	DATE FORMAT	YY/MM/DD
	DAYLIGHT SAVING	OFF
PTZ	CH NUMBER	CH1~16 (SVR-1650/1640) / CH1~9 (SVR-950)
	CAMERA ID	0
	MODEL	NONE

## Search

Main menu	Lower menu	Initial value
TIME	START-RECTIME	The first RECTIME in recording
	END-RECTIME	The latest RECTIME in recording
	SEARCH TIME	Same as END RECTIME
EVENT	CHANNEL	ALL
	EVENT TYPE	ALL
LOG	-	

**Copy**

Main menu	Lower menu	Initial value
COPY	COPY	1.NONE(GSA-H10N) 2.NONE 3.NONE 4.NONE
	STATUS	NO DATA

**Exit**

Main menu	Lower menu	Initial value
-	SAVE	-
	DO NOT SAVE	-




5

Setup method

## 5.3 Operation description

DVR can be setup easily using the USB mouse.

### ❖ Operation using the mouse

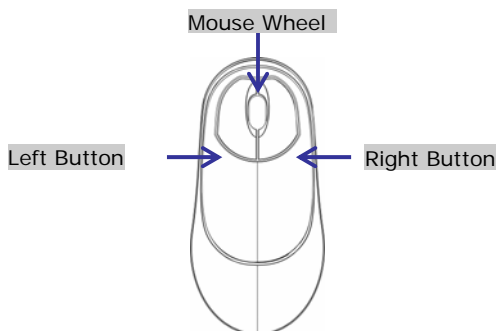

- ✓ Left button : Used to select menu, verify setup values and cancel the popup menu of main menu.
- ✓ Right button : Used to Function or cancel popup menu.
- ✓ Mouse wheel : Used to change setup values and display popup menu.

### ❖ Operation using the main body buttons

- ✓ ◀▶ : Move the cursor to the left and to the right.
- ✓ ▲▼ : Move the cursor up and down.
- ✓ +, - : Used to increase or decrease the value to be setup.
- ✓ Move the cursor and press the ENTER button to select the corresponding characters.
- ✓ Press the ESC button to exit the current menu being setup.
- ✓ To move between character rows, use the up/down arrow buttons.

### ❖ Operation using the remote controller

- ✓ Move left/right within the menu : Push the ◀ ▶ button.
- ✓ Menu selection : Press the ENTER button.
- ✓ Setup value modification : Press the (-) (+) button.




**DVR does not support double-click of left mouse button.**

## 5.4 FUNCTION menu

### 5.4.1 LIVE/PLAY mode

For SINGLE mode setup in the LIVE screen, all LIVE functions are activated and displayed. For MULTI mode setup in the LIVE screen, D-ZOOM, PIP, PTZ are inactivated and cannot be setup.

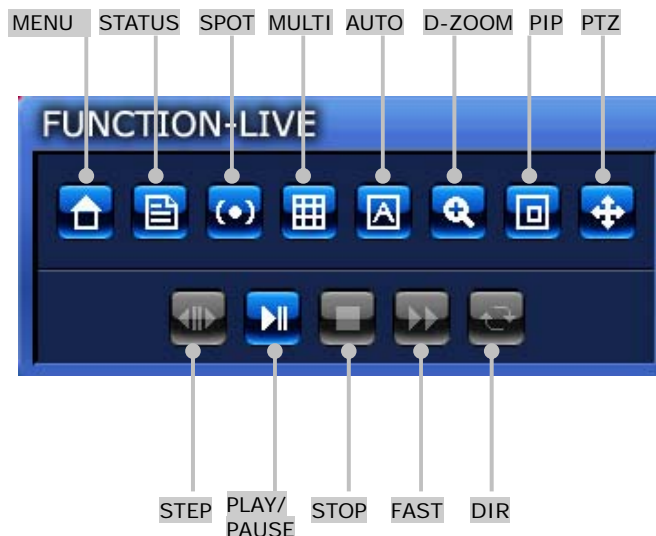

If PLAY/PAUSE button is pressed, conversion to the PLAY screen occurs. For single screen mode setup in the PLAY screen, PLAY functions SPOT, MULTI, D-ZOOM and PIP can be setup. If PLAY/PAUSE button is pressed while in MULTI mode, D-ZOOM function cannot be setup.

### 5.4.2 FUNCTION operation description

#### MAIN

If MAIN button is pressed from FUNCTION-LIVE, the convenient setup screen, shown below, is displayed. If MAIN Menu setup is desired, press the MAIN button.



## STATUS

If STATUS button is clicked, information related to the system is displayed.

- ✓ SYSTEM INFORMATION 1 : Displays video recording program status information.
- ✓ SYSTEM INFORMATION 2 : Displays VERSION, IP ADDRESS, MAC ADDRESS and AUDIO information.

SYSTEM INFORMATION 1					SYSTEM INFORMATION 2	
RECORD MODE	M&E	PROGRAM	K	IMAGE SIZE	704 X 240	
CH	M	Q	E	Q	VIDEO	AUDIO
1	5	H	10	S	0.0 M/min	0 KB
2	5	H	10	S	0.0 M/min	0 KB
3	5	H	10	S	0.0 M/min	0 KB
4	5	H	10	S	0.0 M/min	0 KB
5	5	H	10	S	0.0 M/min	
6	5	H	10	S	0.0 M/min	
7	5	H	10	S	0.0 M/min	
8	5	H	10	S	0.0 M/min	
9	5	H	10	S	0.0 M/min	
10	5	H	10	S	0.0 M/min	
11	5	H	10	S	0.0 M/min	
12	5	H	10	S	0.0 M/min	
13	5	H	10	S	0.0 M/min	
14	5	H	10	S	0.0 M/min	
15	5	H	10	S	0.0 M/min	
16	5	H	10	S	0.0 M/min	


SVR-1650/1640

SYSTEM INFORMATION 1					SYSTEM INFORMATION 2	
RECORD MODE	M&E	PROGRAM	K	IMAGE SIZE	704 X 240	
CH	M	Q	E	Q	VIDEO	AUDIO
1	5	H	10	S	2.2 M/min	0 KB
2	5	H	10	S	2.3 M/min	0 KB
3	5	H	10	S	0.0 M/min	0 KB
4	5	H	10	S	0.0 M/min	0 KB
5	5	H	10	S	0.0 M/min	
6	5	H	10	S	0.0 M/min	
7	5	H	10	S	0.0 M/min	
8	5	H	10	S	0.0 M/min	
9	5	H	10	S	0.0 M/min	


SVR-950

SYSTEM INFORMATION 1		SYSTEM INFORMATION 2	
FIRMWARE VERSION		v 1.2	
N/W FIRMWARE VERSION		v 1.0	
IP ADDRESS		000. 000. 000. 000	
MAC ADDRESS		00 09 18 00 2f 3d	
AUDIO		OFF	
TOTAL FREE		99323 MB	
AVERAGE DATA RATES		0.0 M/min	
RECORDABLE TIME		0 day	0 hour 0 minute



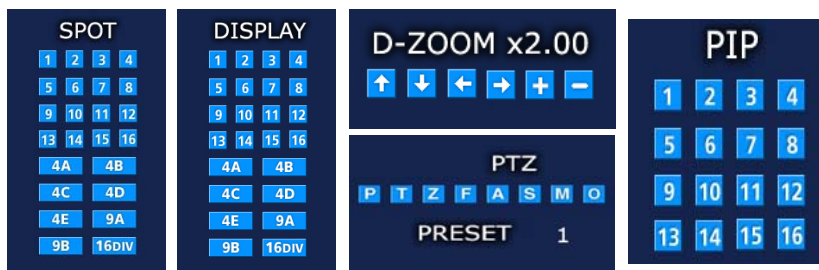

SVR-1650/1640

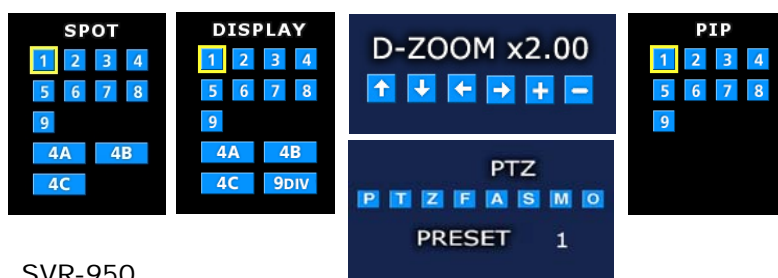

SVR-950

5

Setup method

**SPOT** 

If SPOT button is clicked, the SPOT setup screen is displayed. SPOT monitor can be used to view SINGLE or divided screen.

**DISPLAY** 

If MULTI button is clicked, the MULTI setup screen is displayed. Main monitor can be used for live observation in SINGLE screen or divided screen.

## AUTO

If AUTO button is pressed, each channel and 4 DIVISION screen, 9 DIVISION screen and 16 DIVISION screen(SVR-950: 4 DIVISION screen, 9 DIVISION screen) are automatically converted and displayed in time interval which was setup in [Screen Setup]–[SEQUENCING] in the conversion menu.



**In automatic screen conversion state, input from other buttons is not recognized. Push the AUTO button and cancel the Automatic screen conversion function before using other function buttons.**

**If an Event is generated and [EVENT]–[SWITCH TO EVENT SCREEN] is [ON] for [Event Setup], Automatic screen conversion function is halted for [EVENT DISPLAY MAX TIME] before resuming operation.**

## D-ZOOM

If D-ZOOM button is clicked, zoom function for the installed camera can be used.

## PIP


If PIP button is clicked, screen within a screen can be viewed in SINGLE mode. PIP function can be setup for every 16 channels(SVR-950: 9 channels).

## PTZ

If PTZ button is clicked, detailed PRESET setup and PAN, TILT, ZOOM function for the dome camera that has already been installed can be used.

## 5.5 Menu screen description

Organization of the menu screen is as follows.

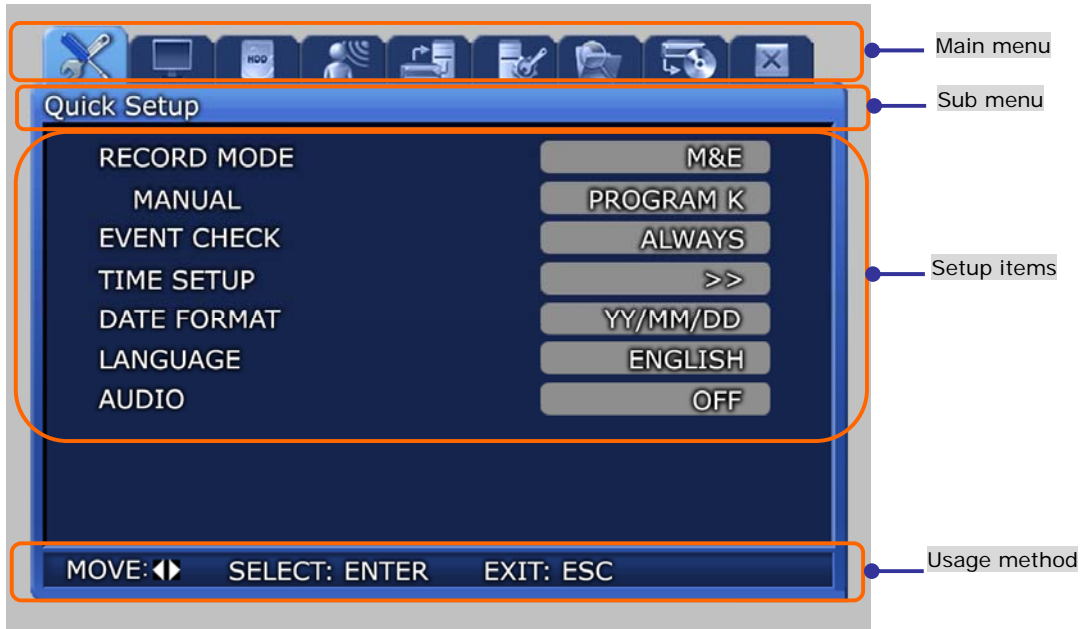


Description of all menu screen setup value selection and modification is based on the assumption that the mouse is used.

- ✓ Main menu : Main menu corresponding to each tab can be selected.
- ✓ Sub menu : Lower menu that can be setup from the main menu can be selected.
- ✓ Setup items : Setup items for the lower menu can be modified.
- ✓ Usage method : Usage method for the selected menu.
- ✓ Record setup may take some time. Please wait until it is completed.


## 5.6 Screen setup

If [Screen Setup] tab is clicked, lower menu related to [Screen Setup] is displayed as shown below. In screen setup, [SCREEN], [SEQUENCING], [DISPLAY], [COVERT], [SPOT] related setup values may be modified.

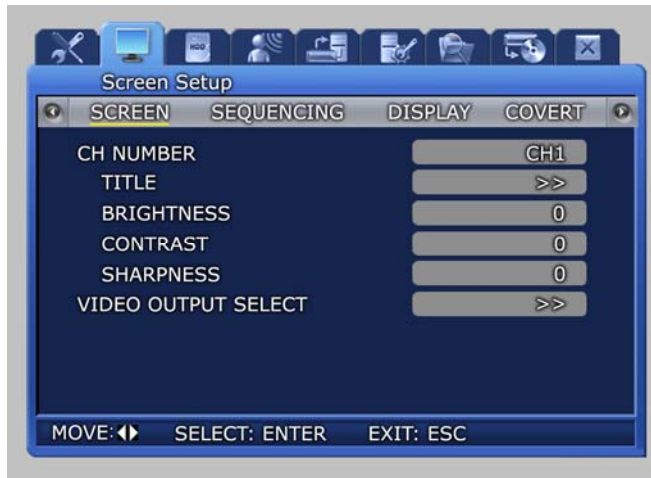


### 5.6.1 Screen

Select a channel among the 16 available(SVR-950: select a channel among the 9 available) and setup the channel name, brightness and contrast for that channel. Each channel can be setup separately like this.

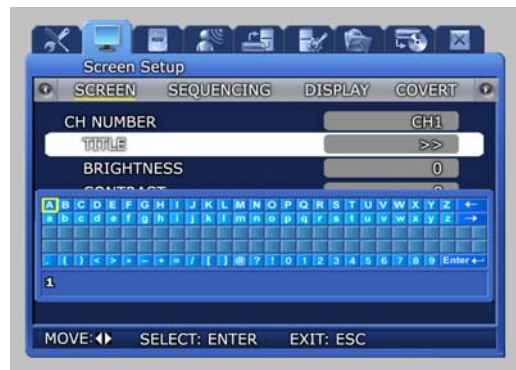

- ✓ TITLE : User can setup a title for each channel. A channel name consists of 8 characters including the channel number.

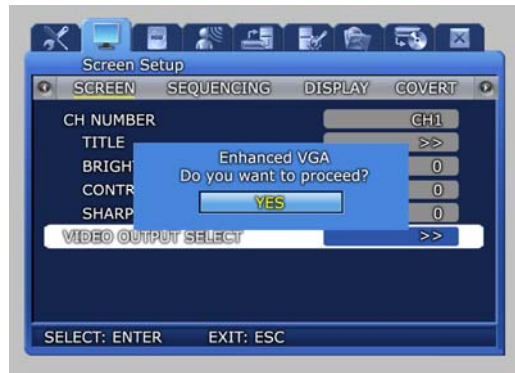

### VIDEO OUTPUT SELECT

- ✓ Enhanced COMPOSITE: May be selected when current mode is 'Enhanced VGA'. Both COMPOSITE output and VGA output is possible and values from -9 to 9 may be setup for 'CONTRAST'. In 'Enhanced COMPOSITE', image quality for VGA output may degrade slightly.
- ✓ Enhanced VGA : May be selected when current mode is 'Enhanced COMPOSITE'. Only VGA output is possible and values from -7 to 7 may be setup for 'CONTRAST'. Better image quality than that for VGA output in 'Enhanced COMPOSITE' may be obtained.




When 'Enhanced VGA' is selected and VGA output cannot be viewed, press the following keys in order from the DVR front panel to change to 'Enhanced COMPOSITE': '+', '1', '2', '3', '4', '2', '3', '4', '1', 'ENTER'


## 5.6.2 Sequencing

Automatic screen conversion function for the live screen can be setup.

Channels are displayed after every set time interval, after automatic conversion, in the following order:  
[MULTI MODE]

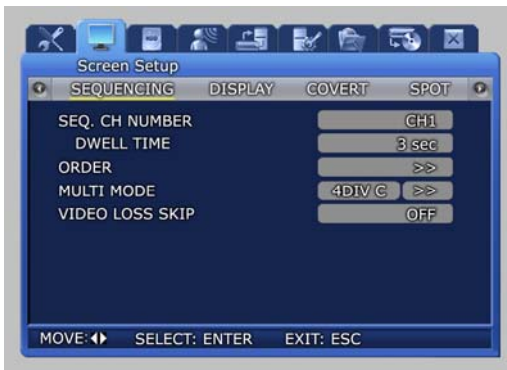

- ✓ SEQ. CH NUMBER : Setup the screen display duration for each channel. Setup range is Channel 1~16(SVR-950: channel 1~9), ALL.
- ✓ DWELL TIME : Setup the conversion display duration. Setup range is SKIP, 1~99 sec.

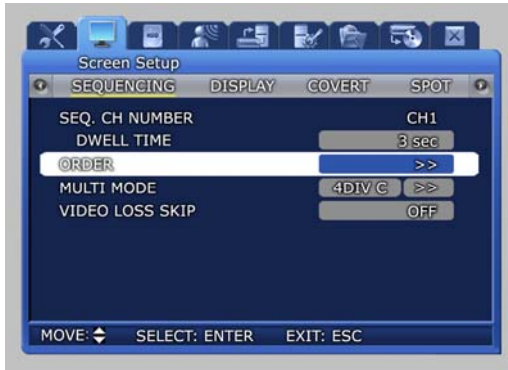

SVR-1650/1640



SVR-950

- ✓ ORDER : Setup whole channels that will be converted.
- ✓ User defined screen
  - 4DIV C : SVR-950
  - 4DIV E : SVR-1650/1640
    - It sets the user defined screen with 4-partitioned segments for 4 channels.
  - 9DIV B : It sets the user defined screen with 9-partitioned segments for 9 channels. (This function is not supported by a SVR-950 series.)




**VIDEO LOSS SKIP [ON/OFF]** : If setup as[ON], channels without image signals will be skipped automatically and only channels with image signals will be displayed in the screen.

5

Setup method

### 5.6.3 Display

Information to be displayed on the live screen can be selected.

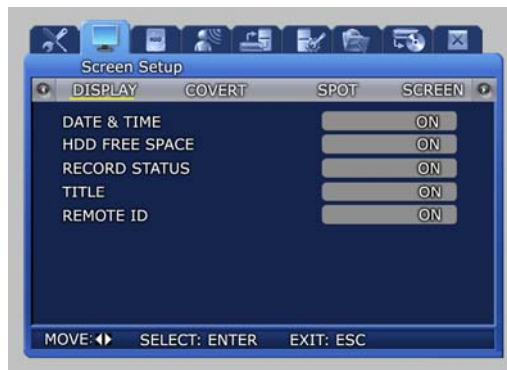

- ✓ DATE & TIME [ON/OFF] : If setup as [ON], current time is displayed in the live screen.
- ✓ HDD FREE SPACE [ON/OFF] : If setup as [ON], remaining capacity for the mounted hard disk drive is displayed.
- ✓ RECORD STATUS [ON/OFF] : If setup as [ON], video recording status display([NNNN]) is displayed in the upper right area of the screen during video recording.
- ✓ TITLE [ON/OFF] : If setup as [ON], titles for Channel 1~16(SVR-950: channel 1~9), set by the user in the channel name lower menu, is displayed in the live screen.
- ✓ REMOTE ID [ON/OFF] : If setup as [ON], ID number of the remote controller is displayed on the screen.



For details on video recording status display, refer to '5.4 Record setup'.



### 5.6.4 Covert


One channel among the 16 available(SVR-950: among the 9channel) may be selected to setup the image hiding function.



- ✓ LIVE COVERT : If image hiding is turned ON, image is not shown for live screen as in V-LOSS and privacy can be protected.
- ✓ PLAYBACK COVERT : If Playback Covert is turned ON, recorded images stored in HDD cannot be played back.
- ✓

### 5.6.5 SPOT

Setup items for the SPOT monitor.

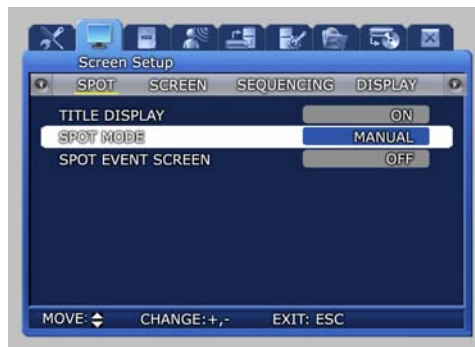

- ✓ TITLE DISPLAY : Determines if title is to be displayed in the SPOT monitor. (This function is not supported by a SVR-950 series.)
- ✓ SPOT MODE : For MANUAL setup, screen channel is converted by the button located in front of the product. For SEQUENCE setup, screen is converted automatically in setup order to the SPOT monitor.
- ✓ SPOT EVENT SCREEN : If setup as ON and an event is generated, it is converted to that screen.

## 5.7 Record setup

If the mouse is moved over the [Record Setup] tab, a video recording related lower menu is displayed as shown below. If 'ENTER' key, located in the front of DVR, is pressed or if lower level menu is selected with the mouse, detailed items may be viewed.



### 5.7.1 Record mode

Record mode setups manual and scheduled recording mode.



- ✓ M & E : Manual setup. If REC button is pressed, video recording is carried out.
- ✓ S & E : Video recording is carried out automatically according to the setup reserved schedule.
- ✓ PRE EVENT DURATION : The amount of time before an event is setup and automatic video recording is carried out for this amount of time.
- ✓ POST EVENT DURATION : The amount of time after an event is setup and automatic video recording is carried out for this amount of time.

- ✓ REPEAT RECORD MODE : If HDD capacity is used up during video recording, recording will be continued by overwriting the data at the front of the HDD.



**ON:** If there is no more space left in the HDD, repetitive video recording will be carried out by over writing the oldest data.

**OFF:** If there is no more space left in the HDD, video recording will be halted.

- ✓ WARNING LEVEL : If available space in the hard disk drive reaches the setup percentage, a warning message will be displayed to the user. Possible setup range is 1 ~ 10% and 5 ~ 10% is generally used.
- ✓ AUDIO : Select whether to store voice information.

Scheduled video recording mode can be used to setup the date and time when video recording will be carried out automatically.



5 Setup method

## 5.7.2 Record program



SVR-1650/1640



SVR-950

[PROGRAM] can be used to adjust the FRAME RATE, QUALITY and RESOLUTION to setup video recording for M&E and S&E.

A program may be selected or directly setup depending on the desired number of frames and resolution. For event recording, setup is possible for up to the maximum number of frames that can be stored in one channel.

If events occur in more than two channels, the number of frames recorded can be adjusted automatically.



**Video recording quality can be setup as Low, Middle, High or Super. When an event occurs, an image quality above High is recommended.**

**M : Manual, Q : Quality, E : Event, Q : Quality**

**Program : Each video recording quality and channel values have A~T program.**

### 5.7.3 Recording time table

Installed Hard disk : 250G

**<NTSC>**                      **unit:(days)**

704×480	SUPER	HIGH	MID	LOW
fps	15.0	9.0	6.0	3.0
120	2	3	4	8
80	3	4	6	13
64	3	5	8	16
30	7	11	17	34
16	13	21	32	63
8	25	42	63	126
4	51	84	126	253

**<PAL>**                      **unit:(days)**

704×576	SUPER	HIGH	MID	LOW
fps	17.5KB	10.5KB	7.0KB	3.5KB
100	2	3	4	9
50	3	6	9	17
25	7	12	17	35
16	11	18	27	54
8	22	36	54	108
4	43	72	108	217

704×240	SUPER	HIGH	MID	LOW
fps	7.5	4.5	3.0	1.5
240	2	3	4	8
180	2	4	6	11
120	3	6	8	17
60	7	11	17	34
32	13	21	32	63
16	25	42	63	126
8	51	84	126	253
4	101	169	253	506

640×288	SUPER	HIGH	MID	LOW
fps	8.8KB	5.3KB	3.5KB	1.8KB
200	2	3	4	9
100	3	6	9	17
50	7	12	17	35
32	11	18	27	54
16	22	36	54	108
8	43	72	108	217
4	87	144	217	433

352×240	SUPER	HIGH	MID	LOW
fps	3.8	2.3	1.5	0.8
480	2	3	4	8
320	3	4	6	13
240	3	6	8	17
120	7	11	17	34
64	13	21	32	63
32	25	42	63	126
16	51	84	126	253
8	101	169	253	506
4	202	337	506	1011

320×288	SUPER	HIGH	MID	LOW
fps	5.0KB	2.6KB	1.8KB	0.9KB
400	2	3	4	9
200	3	6	9	17
100	6	12	17	35
48	13	24	36	72
32	19	36	54	108
16	38	72	108	217
8	76	144	217	433
4	152	289	433	867



This 'Recording time table' is about SVR-1650.  
 Maximum video recording frame rate of SVR-1640/950 is  
 704x480 : 30fps, 704x240 : 60fps, 352x240 : 120fps



Setup method

## 5.8 Event setup

For event video recording, a lower menu like the one shown below can be setup. If 'ENTER' key, located in the front of DVR, is pressed or if lower level menu is selected with the mouse, detailed items may be viewed.



### 5.8.1 Event



- ✓ CHECK : Setup whether to check and store events. [Application time setup] will be activated only if [Event application time] is setup as [Time application].
- ✓ MESSAGE [ON/OFF] : Select whether to display event items on screen with text.
- ✓ BUZZER : Select whether to sound the buzzer when an alarm is generated.
- ✓ SWITCH TO EVENT SCREEN : Setup whether to convert the screen to the

corresponding channel when an event occurs.

- ✓ EVENT DISPLAY MIN TIME : Min. retention time for the screen when an event occurs (Amount of time to ignore an event if consecutive events are generated) is set within 0 ~ 5 seconds.
- ✓ EVENT DISPLAY MAX TIME : Max. retention time for the screen when an event occurs is set within 0 ~ 99 seconds or allways. [Maintain current state] During setup, display the screen in which the event was generated continuously.
- ✓ TEXT MONITORING : Determine whether to save characters input from external devices through RS-232.
- ✓ SENSOR TYPE : Setup the sensor type for the channel.(NO/NC)





**NO : Open type (Normal Open) sensor.**

**NC : Closed type (Normal Close) sensor.**

**[Max. retention time] cannot be setup with a smaller value than [Min. retention time].**

## 5.8.2 Motion detection

Analyze the image input by the camera to detect motion. If any change is detected, it is counted as an event.

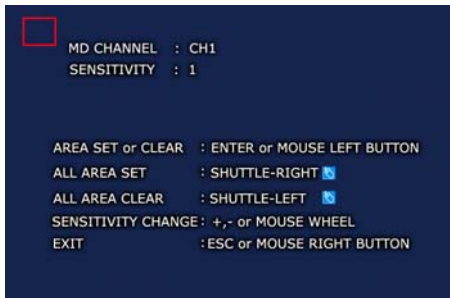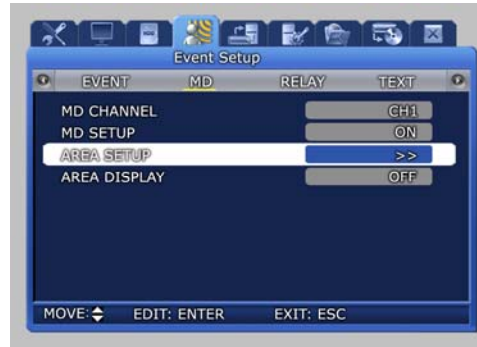

Area selection can be carried out by clicking the mouse icon on the screen or by turning the shuttle ring on the product to the right. To cancel, rotate the shuttle ring to the left.

Press the right button of mouse or ESC button on the front panel to go back to the main menu

- ✓ MD CHANNER : Setup the channel for which motion detection will be carried out.
- ✓ MD SETUP : Setup whether to detect motion for channel that will be used for motion detection.
- ✓ AREA SETUP : Setup motion detection for each channel and specify the sensitivity and area with the mouse.
- ✓ AREA DISPLAY : If motion is detected, area related to motion can be displayed.

5

Setup method

### 5.8.3 Relay

If an event occurs, alarm for sensor, motion detection, loss video and power supply can be generated through the output device connected to the RELAY OUT terminal in the back of the product.



**Blinking green box indicates the state before selection. After selection, it turns yellow.**

### 5.8.4 TEXT


This setup allows material input with equipment like a POS System to be viewed with DVR equipment. To match protocol with the input equipment, HEADER and DELIMITER are assigned and line to output to the screen is setup.





## 5.9 Communication setup

Setup items needed to connect a computer to a network. Communication setup screen is as shown below. If 'ENTER' key, located in the front of DVR, is pressed or if lower level menu is selected with the mouse, detailed items may be viewed.

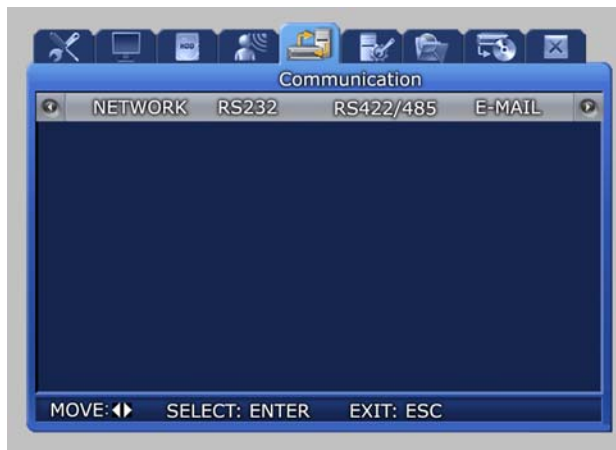

### 5.9.1 NETWORK



- ✓ IP ADDRESS : Input the [IP address ] obtained from the internet service company of the user.
- ✓ DHCP [ON/OFF] : Select whether to get the IP address automatically using the Dynamic Host Configuration Protocol.
- ✓ TYPE [Ethernet/xDSL] : Select the network type connected to the DVR.



**You are recommended to reboot your DVR when changing the type of communication line.**

**Especially, when switching to Ethernet from xDSL or DHCP, first switch the line type to Ethernet and the save the changes.**

**Then, reboot your DVR. When rebooting is completed, make sure to check whether the line has been successfully switched to an Ethernet-type. After that, enter the IP Address that you want to use.**

- ✓ SUBNET MASK : Input the [SUBNET MASK] address obtained from the internet service company of the user.
- ✓ GATEWAY : Input the [GATEWAY] address obtained from the internet service company of the user.
- ✓ DNS : Input the [DNS] address obtained from the internet service company of the user.
- ✓ PORT : [PORT] assigned when connecting to a computer can be changed. If port is changed in the DVR, When the network setup is changed, it takes time to setup the network module again. Connect after 1~2 minutes. Port number can be setup depending on network conditions (firewall etc).  
DEFAULT PORT : 4000
- ✓ SWR : If the product is connected to a cable modem or a xDSL modem, IP address will change each time connection to ISP (User's communication company server) is attempted. In this case, the user will not know the changed IP address. If a product using a floating IP is registered on the SWR server, the changed IP can be found when attempting connection with the product. To register an IP address on the SWR, setup [SWR] item to ON. Changed IP address can be verified from FUNCTION-STATUS (SYSTEM INFORMATION 2).

### 5.9.2 RS-232

Setup items needed to connect with the computer connected to the product through the serial port.



- ✓ BAUD RATE : Setup the data transmission speed per second.
- ✓ DATA BIT : Setup the data transmission bit.
- ✓ PARITY BIT : Setup the error check method for data transmission.
- ✓ STOP BIT : Setup bit to include when data transmission has been completed.

### 5.9.3 RS-422/485


Setup items needed to connect the product with surveillance equipment like camera and CCTV.



- ✓ SYSTEM ID : Setup ID for DVR main body when connecting the product with equipment like a controller.
- ✓ PORT TYPE: Setup type of port to use.
  - PORT A: Connect the SCC-3100A controller.
  - PORT B: Connect the speed dome.
  - Control method
    - Controller : Connect PORT A and controller with RS422/485..  
Setup the SYSTEM ID corresponding to the connected SCC-3100A.  
(Refer to page 28)
    - Speed dome : Connect PORT B and speed dome with RS422/485.  
After moving SYSTEM → PTZ, setup protocol for each channel and the ID for the speed dome. (Refer to page 89)
- ✓ BAUD RATE : Setup the data transmission speed per second.
- ✓ DATA BIT : Setup the data transmission bit.
- ✓ PARITY BIT : Setup the error check method for data transmission.
- ✓ STOP BIT : Setup bit to include when data transmission has been completed.

## 5.9.4 E-MAIL


The manager can verify details related to the generated event through the email.

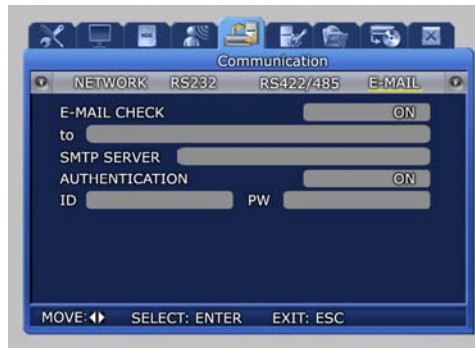

- ✓ E-MAIL CHECK : If turned [ON], E-MAIL notice function is activated.
- ✓ to : Setup the E-MAIL address to receive a transmission if an event occurs.  
Ex) to : user@yahoo.com
- ✓ SMTP SERVER : This is a standard protocol for transmitting e-mail and used to prevent e-mail from spam mail. You must have a User ID for using e-mail.  
Ex) SMTP SERVER : kornet.net
- ✓ AUTHENTICATION: Used during user account registration.

## 5.10 System setup

System setup screen is as shown below. If 'ENTER' key, located in the front of DVR, is pressed or if lower level menu is selected with the mouse, detailed items may be viewed.

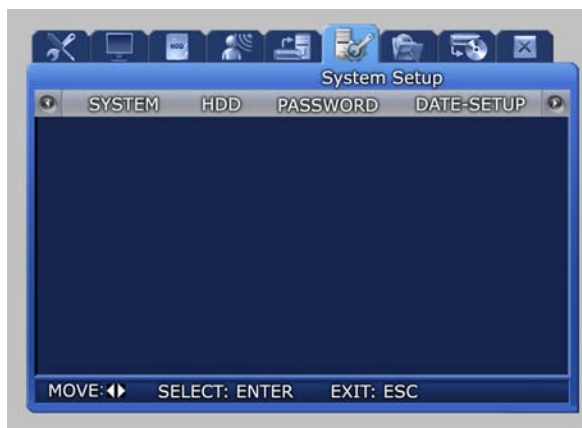

### 5.10.1 System



- ✓ LANGUAGE : Select a language for the menu screen.
- ✓ KEY BUZZER [ON/OFF] : Select whether to generate sound for key strokes when using the remote controller or when manipulating keys.



- ✓ DEFAULT : Use to get back the initial setup values the product was shipped with.
- ✓ If [Yes] is selected from the following screen, it will be initialized.

5

Setup method




- ✓ LOAD/SAVE CONFIGURATION
- ✓ LOAD: Call the setup file stored in the USB Memory Stick and change the DVR setup value.
- ✓ SAVE: Store the DVR setup value in the USB Memory Stick



**This function is not compatible between SVR-1650, SVR-1640 and SVR-950. May not be compatible with other firmware versions. Firmware version may be verified by pressing the "FUNC" button in front of the DVR. USB Memory Stick formatted in FAT32 format may not work.**

- ✓ FIRMWARE DOWNLOAD : Setup the location to download firmware for upgrading the product software.
- ✓ If [Yes] is selected from the following screen, it will be upgraded.



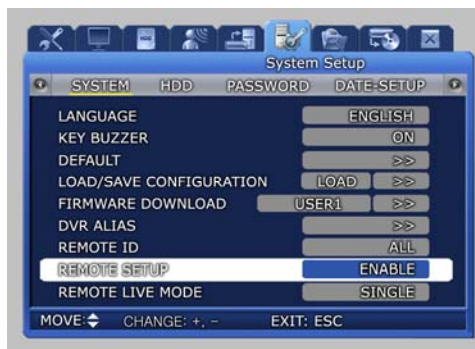

- ✓ REMOTE LIVE MODE : Used to determine the resolution of each channel on network board.(This mode is supported in only SVR-1650.)
- ✓ REMOTE SETUP[ON/OFF] : Used to determine remote setup mode.
- ✓ DVR ALIAS : Used to identify network name.
- ✓ REMOTE ID : Used to setup REMOTE ID numbers.



**In general a user cannot upgrade. Upgrade must be carried out by a certified expert.**



**The resolution and framerate of REMOTE LIVE MODE is different according to Recording Setup (SVR-1640/950)**

## 5.10.2 HDD

HDD setups information for the mounted hard disk drive. Basic information related to HDD is displayed on the screen. Information for up to 4 hard disk drives can be viewed.



- ✓ HDD FORMAT : Select whether to format the built-in, fixed HDD. If 'YES' is clicked in the confirmation dialog window, formatting is carried out.
- ✓ HDD : Setup can be for HDD1~HDD4 or ALL. Selection of HDD for format and information for the selected item will be displayed.



- ✓ If HDD FORMAT button is pressed, a dialog box verifying whether to format is displayed.



**HDD is initialized (formatted), all information stored in the disk is deleted. (Initialization is not possible during video recording.)**



### 5.10.3 Password

Setup password for user and manager to give authorization needed to use the product and to modify the setup. If 'ENTER' key, located in the front of DVR, is pressed or if lower level menu is selected with the mouse, detailed items may be viewed.



- ✓ **USER PASSWORD** : Setup the user password. Passwords can only be setup using the buttons on DVR. Mouse cannot be used to setup passwords.
- ✓ **ADMIN PASSWORD** : Setup the manager password (Mouse cannot be used)
- ✓ **SETUP [ON/OFF]** : Select whether to input the password during setup..
- ✓ **POWER-ON [ON/OFF]** : Select whether to input the password when product is turned ON.
- ✓ **POWER-OFF [ON/OFF]** : Select whether to input the password when product is turned OFF.
- ✓ **RECORD-OFF** : Select whether remote setup on the network is possible.
- ✓ **BUZZER IF CHECKING FAILS** : If wrong password is entered three times, the buzzer will go off.



#### System user authorization

- **Manager** : All system setup is allowed.
- **User** : Only access through the network is allowed.


#### Password at the time of factory shipping

- **Manager** : Modification is possible after entering the number 1 eight times.
- **User** : Modification is possible after entering the number 2 eight times.

## 5.10.4 Date setup

It is used to setup date and time for the product.




When setup is completed and stored, it is displayed on the live screen.

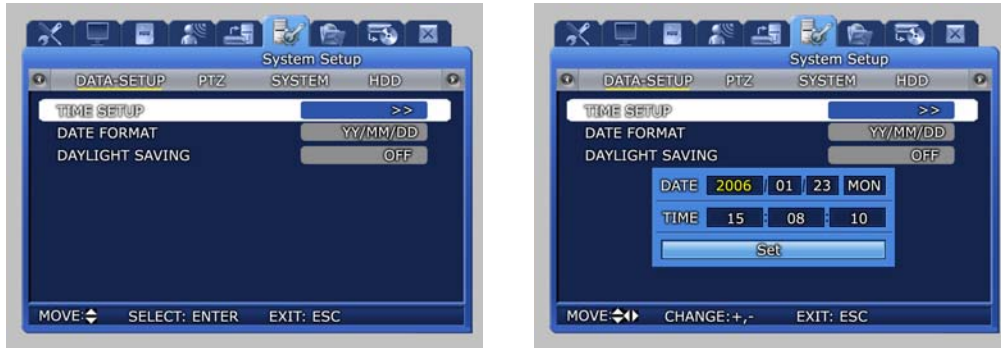

- ✓ **TIME SETUP** : Setup the time. From the dialog box shown above, use the mouse wheel or the buttons on the front of the product to modify the setup value. Then select [SET] to make the assignment.
- ✓ **DATE FORMAT** : Setup format to use for date notation. Select from [year/month/day], [month/day/year], [day/month/year].
- ✓ **DAYLIGHT SAVING** : Setup whether to apply daylight savings time.

### 5.10.5 PTZ

If dome camera has been installed, camera ID can be assigned and setup for each channel to use the PAN, TILT, ZOOM functions.

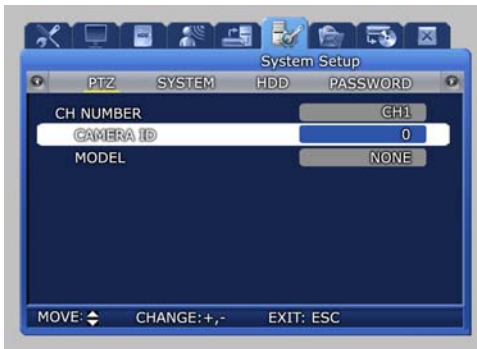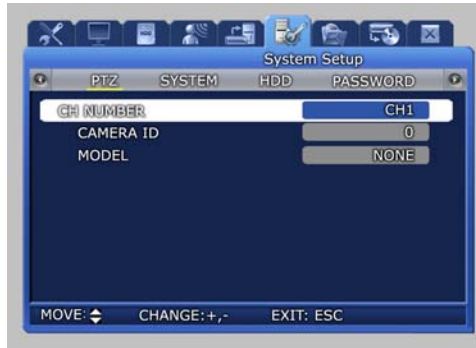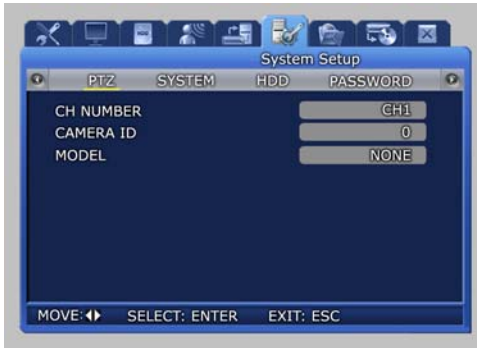

- ✓ CH NUMBER : For camera connected to each channel, assign an ID and setup the camera model.
- ✓ CAMERA ID : User can assign an ID between 0 ~ 255 for each camera.
- ✓ MODEL[None/SPD/PELCO(D)/PANASONIC/SCC/SRX] : Select the manufacturer for the connected camera. Signal input from a camera is different for each manufacturer. Please setup accurately for the corresponding model.



#### Models that can be used.


- Samsung : SPD(SPD-2200, 2300, 2500, 3000, 3300), SRX-100B
- Pelco(D) : Speed dome using Pelco 'D' protocol
- Panasonic : WV-CS854
- SCC : SCC-641/643

5

Setup method

## 5.11 Video recording search

For video recording search, time, event and log file retrieval functions are provided. If 'ENTER' key, located in the front of DVR, is pressed or if lower level menu is selected with the mouse, detailed items may be viewed.

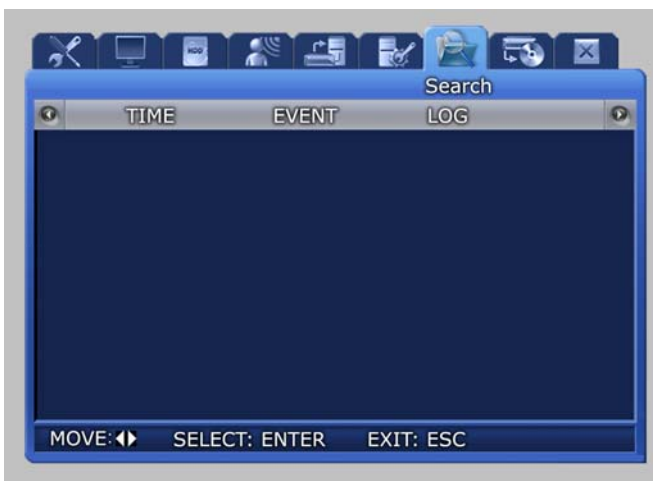

### 5.11.1 Time search

If a desired date and time that is within the range for dates and times the recordings were made is setup and [OK] button is pressed, the video recording can be reproduced and viewed.



### 5.11.2 Event search

Retrieval by event types including loss video, sensor and motion detection is possible.



Items selected during event search can be played back. If ESC key is pressed during playback, returns to the event search window.


### 5.11.3 Log search

Log history for generated events can be verified.



## 5.12 Copy

If a storage medium is connected, video recorded images may be copied to the storage devices. If 'ENTER' key, located in the front of DVR, is pressed or if lower level menu is selected with the mouse, detailed items may be viewed.

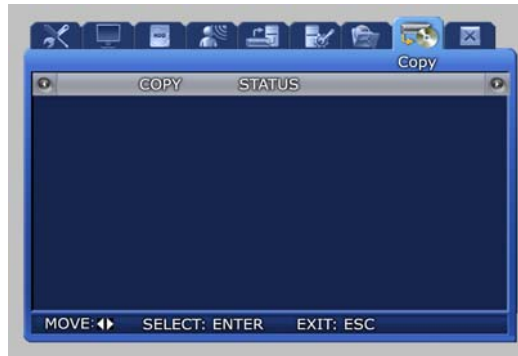

If USB and DVD+RW/CD-RW storage is inserted, a screen like the one shown below is displayed.



- ✓ STATUS : Progress status for the current copy operation is displayed.



Please use recommended media. Refer to page 41 for details.

## 5.13 Exit

Modified setup values are applied when they are verified after the Save button is pressed.



- ✓ As shown in the screen below, when setup has been modified and [SAVE] is pressed, the setup functions are applied. The setup functions can be cancelled by pressing “Do NOT SAVE”.

# Chapter 6. Network viewer program

## 6.1 Introduction

DVR network viewer is integrated management software. DVR network viewer can monitor multiple DVRs installed in remote areas in real time.

Characteristics of DVR network viewer are as follows.

- ❖ Management of multiple number of DVRs is possible
- ❖ Function to monitor and record images of up to 5 DVRs in real time .
- ❖ Provides a wide variety of search methods for recorded content
- ❖ GUI screen automatic change depending on user PC resolution
- ❖ Provides separate Manager/Backup program for the viewer
- ❖ Single and 4, 9, 16 divided screen function
- ❖ Provides PTZ camera control and event real time sensing function

### 6.1.1 System requirements

- ❖ Pentium IV 3.0Ghz or higher (Hyper threading recommended)
- ❖ HDD capacity: Minimum of 120G recommended
- ❖ O/S: Microsoft Windows 2000/XP or higher
- ❖ RAM: Over 512MB recommended
- ❖ Video card: Memory over 128M
- ❖ Monitor: Resolution higher than 1,024×768 (1,280×1,024 recommended)
- ❖ LAN card: 10/100 Base-T network card
- ❖ Sound Card




## 6.1.2 Program installation

### Program installation from the CD

Insert the CD provided with the DVR in the CD-ROM drive and execute 'DVR ViewSetup.exe' in the DVR Viewer folder. DVR Viewer will be installed automatically in the PC.

Basic path to the execution file is as follows.

C:\Program File\SAMSUNG TECHWIN\DVR Viewer\W

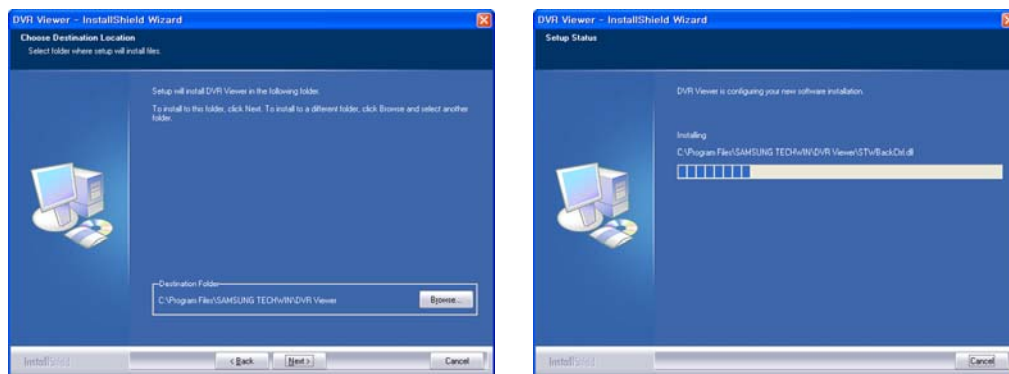

### Program installation from the website

Viewer program can be downloaded by connecting to <http://www.samsungcctv.com> and going to 'SUPPORT-DOWNLOAD-CCTV'.


Copy the automatic compressed file Setup.exe in My computer desktop screen and double click the Setup.exe file to uncompress the file to the desired directory.

## 6.2 DVR MANAGER Function

To monitor local and remotely connected DVR images from the client PC, through the DVR Viewer, values must be properly setup from the SVR main body.


### DVR server addition

Click the DVR Manager.exe file and enter the password. For Group item, adding a new group from the local network, modifying the name for an existing group and deleting a group is possible.

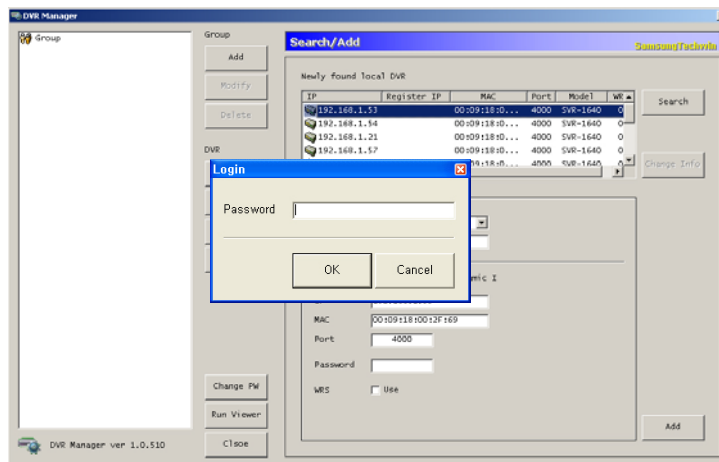


**Password for initial execution is setup as admin. To change the password, press the Password Change button, enter the current password and change to a new password.**

- ✓ Click the Add button in the DVR.
- ✓ If the Search button is pressed, a list of DVR newly connected to the Local network or DVR that has changed the IP can be viewed.

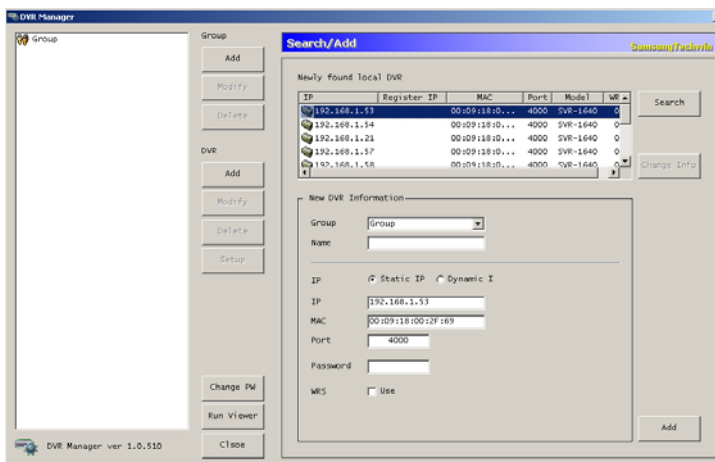

- ✓ If newly connected DVR is selected, server information is displayed in the new DVR information.
- ✓ Group, name and password are setup. As in remote location DVR installation, if DVR search is not possible, IP and MAC setup in the DVR main body must be entered accurately.
- ✓ If Append button is selected, it is appended to the tree on the left side.

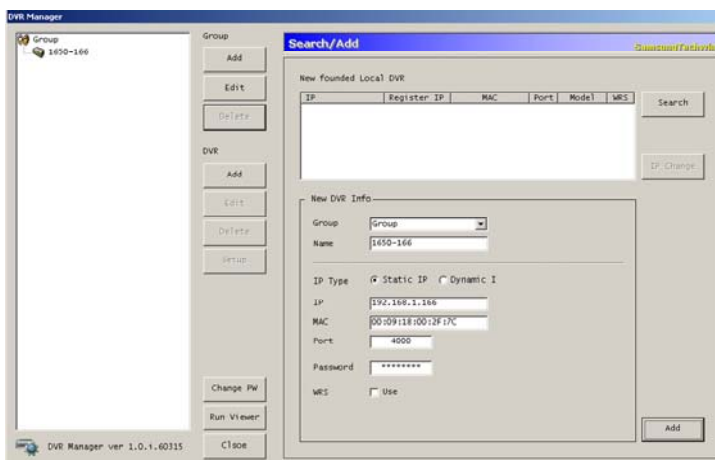


- ✓ If IP for a registered DVR is changed, a list is later displayed if the Find button is clicked.
- ✓ If list for modified IPs is selected, the Information Modify button is activated.
- ✓ If Search button is clicked, registered IPs are changed to new IPs.



**Port is fixed to 4000 since current modified values are not reflected.**

## Added DVR server validation


- ✓ After selecting the DVR which has been added from the left tree, press Modify in the DVR.
- ✓ Information receive/apply/delete button is displayed.
- ✓ If the function is successfully executed after clicking the Get Info button, the authorization content changes from 'Not validated' to 'Admin' or 'Guest'.
- ✓ If Apply is selected after information receive is carried out, the content is saved.
- ✓ List that has not been validated cannot be connected from the viewer.
- ✓ If the viewer is executed and the DVR is selected and then connected, an image is displayed.

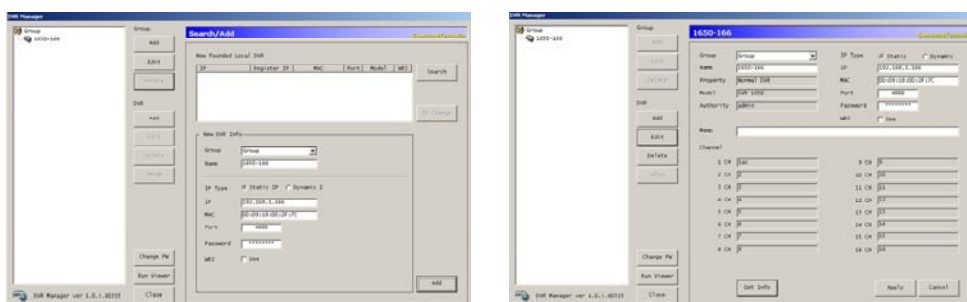

**DVR main body ADMIN PASSWORD and USER PASSWORD must match.**

## DVR server setup


Some of the functions in the menu that can be setup from the DVR main body can be setup through the 'DVR Manager'. Items setup here are reflected in the main body and operated.

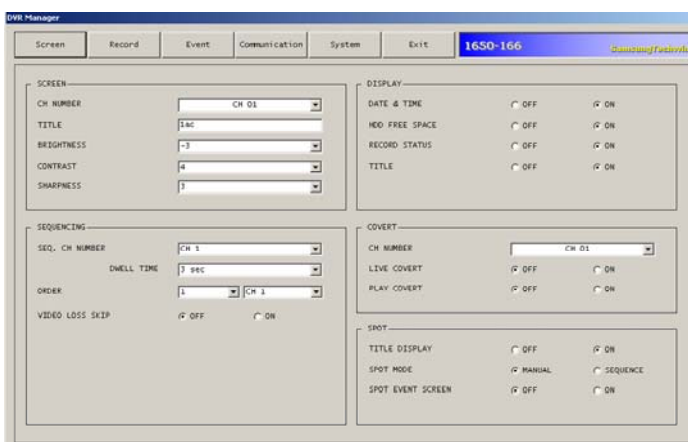

**During menu setup from the DVR main body, the DVR server setup function cannot be used through the viewer.**

## 6.3 VIEWER screen function


After setup has been completed without any problem, if DVR Viewer.exe file is clicked or [VIEWER] is clicked from the DVR Manager, images connected to the DVR can be monitored from the client PC.

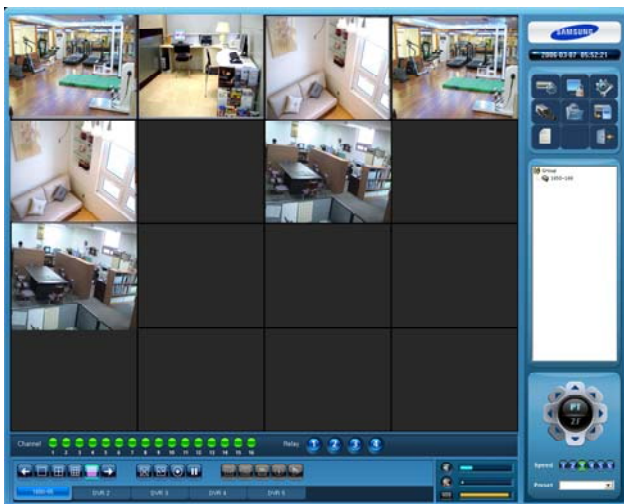

UI is changed to match user PC resolution. The screen above shows a 1280 x 1024 image. If no camera is connected, the screen displays a black box.

### 6.3.1 Name for each function

Name for each DVR network viewer program function is as follows.

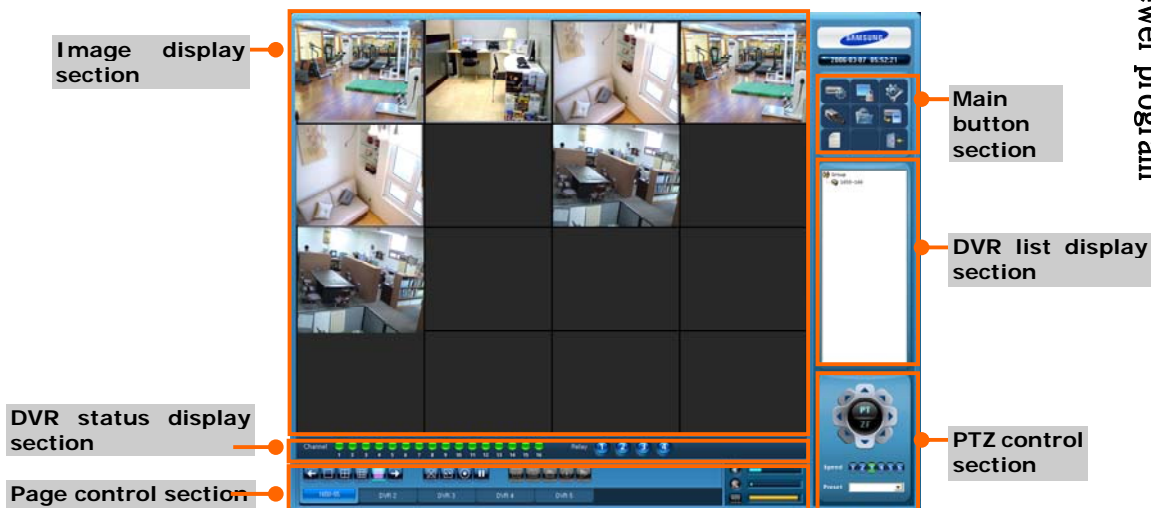

### 6.3.2 Image display section

Image display section shows live images or images retrieved from searches. 1 channel, 4 channel, 9 channel and 16 channel images can be selectively viewed.

### 6.3.3 Page control section

#### Page conversion



- ✓ Up to 5 (Live, Search) DVRs can be connected.
- ✓ Page title is displayed as DVR name. If not connected, they are displayed as DVR 1, DVR 2, DVR 3, DVR 4, DVR 5.
- ✓ In the screen above, DVR2~DVR5 display parts that are not connected.

#### Image display control



- ✓ If square 1, 4, 9, 16 channel buttons are selected, image arrangement for each is displayed.




1 channel





4 channel

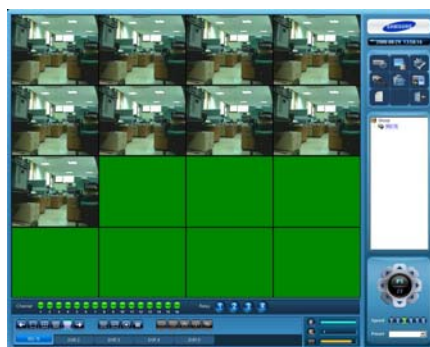


9 channel




16 channel


- ✓ If less than 16 channels are selected from the  and  image display control, front channel and back channel that cannot be seen in the image display section can be seen.




- ✓  : Hides various buttons and status information and only displays images whose size is adjusted to match the user computer resolution. Press ESC key to cancel.




- ✓  : If less than 16 channels are selected, DVR image in another page is automatically shown at the designated time.

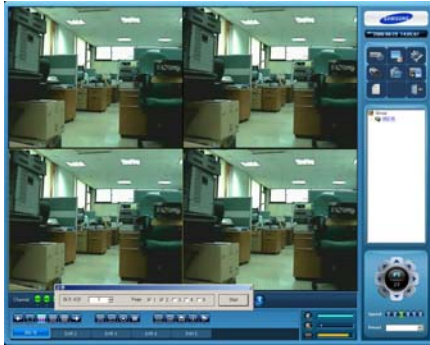

- ✓  : Record button records the live images for all channels for the DVR for the page being viewed.






- ✓  : Button halts the images momentarily for all channels of the page DVR being viewed.






## Channel control



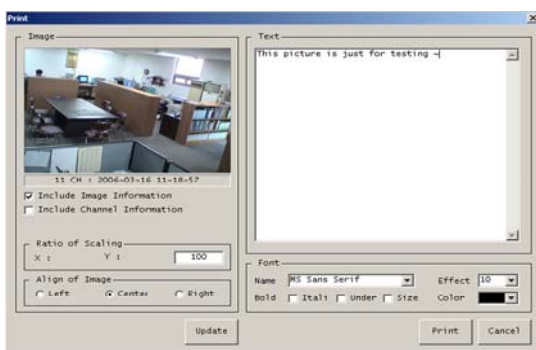

- ✓  : X2 button expands the image to twice the size for the selected channel and toggles it back to the original size.
- ✓  : JPEG button saves the image for the selected channel as a JPEG file.
- ✓  : Print button outputs the image for the selected channel.




7CH : 2006-02-05 13-53-23

### <Print option for printing>

- ✓  : If the Channel Information button is selected, information about the channel is displayed.
- ✓  : Screen 180 degrees rotation button rotates the image for the selected channel by 180 degrees.

## Audio control and HDD display

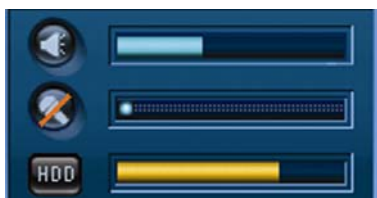

- ✓ Speaker volume is adjusted and if button is clicked, speaker sound is muted.
- ✓ Microphone volume is adjusted and if button is clicked, microphone sound is muted.
- ✓ For HDD display, the yellow portion indicates the amount used.

### 6.3.4 DVR status display section

#### LIVE status display



- ✓ Channel : Displays whether connection between server and network has succeeded and whether an 'event' for the corresponding channel has occurred. If the green icon is clicked, the corresponding channel is selected.  
Green : Network connection succeeded, yellow : network connection failed, red : event occurred.
- ✓ Relay : If the 4 buttons are clicked, specific signals are sent to the DVR.

#### Search control



- ✓ : Assigns the play direction for the video recorded image.
- ✓ : Moves to the front and back frame in the paused state.
- ✓ : Move to the start/end of the time period (in 10 minute units) in the paused state.



**Example :** 12:35:15 → 12:30:00, 12:35:15 → 12:39:59

- ✓ Speed button : Assigns speed for playing. 1X, 2X, 4X, 8X, 16X can be assigned. For speeds greater than 1X, audio play back is not possible. For reverse direction, only one frame is played back at speeds over 2X.
- ✓ Slider : Indicates the status of the current image in progress.

### 6.3.5 Main button section



Main button section is used to assign setup items like DVR maintenance and registration, search and backup. Main button section is identical to the one in the screen shown below.



**DVR Manager**



**Program lock**

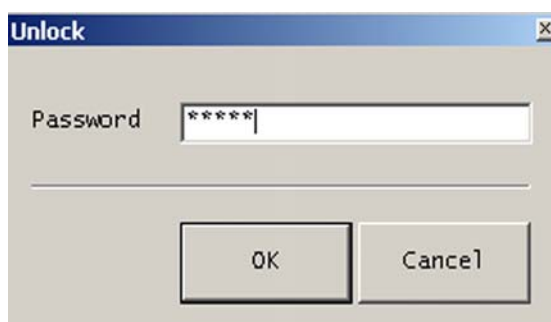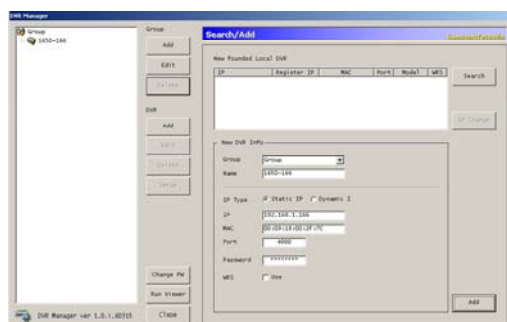


- ✓ Call the DVR Manager program.
- ✓ To prevent others from using the program when the program user leaves the computer unattended, the screen that was being used is minimized as an icon in the lower right corner.
- ✓ To use the program again, click the minimized DVR viewer program in the lower right corner and enter the password that was setup.


## Program setup



Set the environment related to [Indicate image status], [Storage folder] and [Delete Recoded Data] to be used in the program.

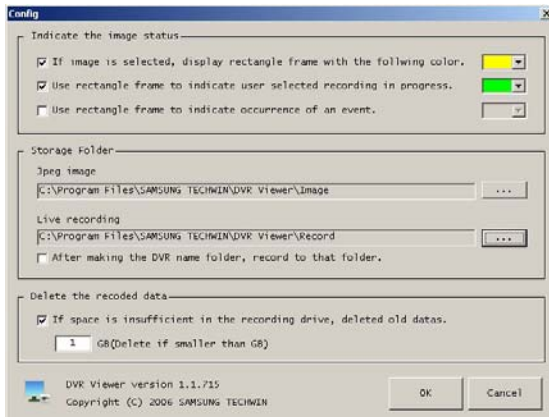

program setup

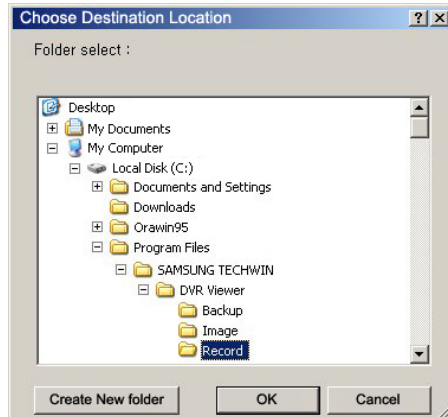

folder select

## Live connect/disconnect





- ✓ Connect the DVR selected by the user from the DVR list so that it can be viewed in real time.
- ✓ To halt the live screen coming in to the DVR, press the icon above again.



**Video recording search**





Searches the recorded content for DVR, backup, live video recording and file and plays it to the user.

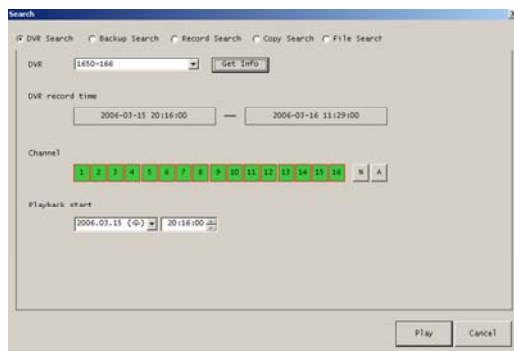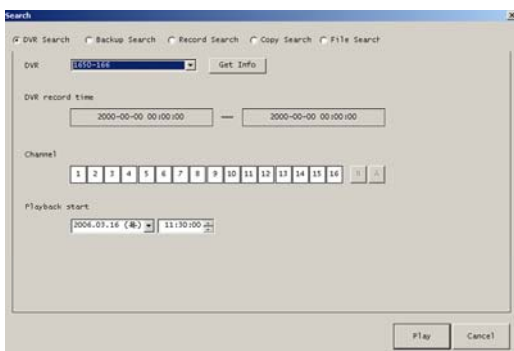

✓ Description of functions

Classification	Location of the backup file	Moving the backup data	Function
DVR Search	Main body of the DVR	Main body of the DVR → User's PC	Search for backup files on the main body of your DVR through the network.
Backup Search	User's PC	Main body of the DVR → User's PC	Download the backup files save on the main body of you DVR onto your PC by using the backup program and search for the file that you want.
Record Search	User's PC	User's PC	Search for the backup files save on a user's PC through the viewer program.
Copy Search	User's PC	User's PC (DVD,CD,USB)	Search for the media where the backup file of the DVR is saved.
File Search	User's PC	User's PC	Search for a file in the backup folder specified a user on a user's PC.

- ✓ If DVR is selected and 'Get Info' button is clicked, time and channel information for the selected DVR is displayed.
- ✓ If desired time and channel for playback is selected and the button is pressed, images recorded during that time frame are displayed.

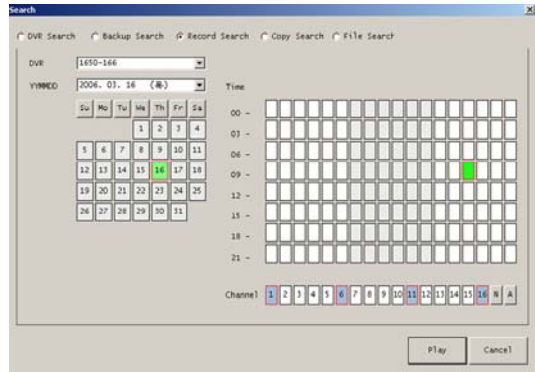
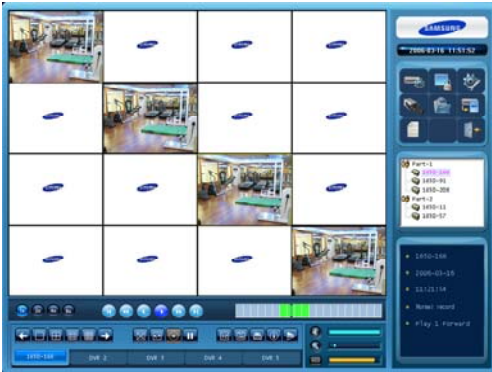


- ✓ Even for video recording search and file search, if a related setup item is displayed, it can be selected and played.

## Backup program



If there is a video recorded image in the time period assigned by the user, DVR data can be backed up in the user PC.

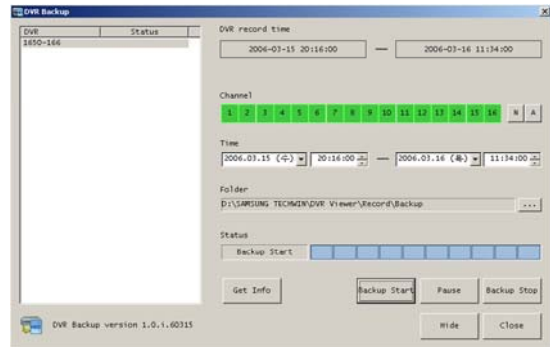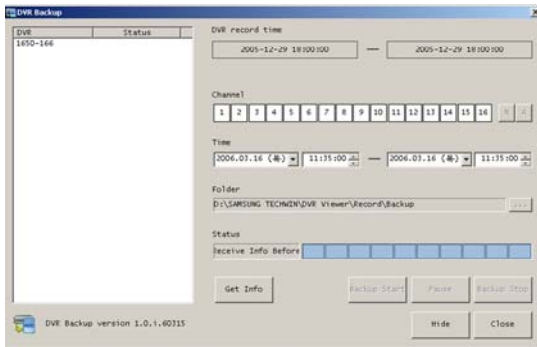

After DVR server is selected in DVR list on the left side, if 'Get Info' button is clicked, the channel and the time period are displayed and then users can select a category for backup.

**Log**

Functions used in the program are shown as a list.  
If the Delete All button is clicked, all logs in the list are deleted.

Order	Time	Kind	Content
1	03/16 11:17:11	Program	Program Start
2	03/16 11:17:18	1650-166	DVR Live Connecting
3	03/16 11:29:21	1650-166	DVR Live Connecting
4	03/16 11:35:40	Program	Exit
5	03/16 11:39:13	Program	Program Start

Buttons: Delete All, OK

**Termination**

Terminate the network viewer program that was being used.

**6.3.6 List display section**

Show the list for group and DVR registered in DVR Manager.  
If mouse is placed on the setup DVR list and double clicked, image for live screen is searched and displayed.



From setup DVR list, select one and double click the mouse. If there is no problem in the setup, the live screen will be displayed and the title for DVR list will be activated in light green color.

### 6.3.7 PTZ control section

- ✓ Pan, Tilt, Zoom, Focus for the speed dome camera is adjusted.
- ✓ When Pan, Tilt, Zoom, Focus is adjusted, speed can be specified up to 6 steps.



- ✓ Zoom/Focus(expand/focus) : Expand/reduce, focus adjustment can be carried out for the selected channel.
- ✓ The arrow keys for position control button controls the up/down angle and left/right rotation for the camera.
- ✓ Preset(setup in advance) : Up to 64 camera positions can be setup in advance and saved for easy use later on.



### 6.3.8 Additional functions

DVR network viewer program has the following additional functions.

#### Clock function




2006-01-26 23:31:24

#### Popup menu

I-Frame viewing for the selected channel and a variety of other menu items may be used easily by using the popup menu.

- ✓ Selected channel is a function to control only the channel selected by the user and All channels is a function to control all 16 channels.
- ✓ View only the I-Frame is a function which shows only the reference images among the images transmitted from the DVR server main body.

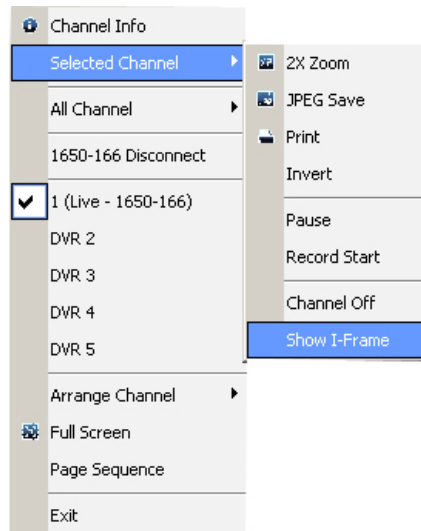

For SVR-1640/950, the default setting is "View I-Frame only." When "View I-Frame only" is selected, the network transmission speed is 1 frame/sec, and when "View All-Frame" is selected, the network transmission is achieved at the speed set by the user in the recording program in the main body of the DVR. (Refer to program 5.7.2)

## Chapter 7. Troubleshooting

DVR is an intricate mechanical device and it can malfunction. For such cases, take the following measures.

### **Product is not turned ON when stand-by switch is pressed.**

Verify if the power supply cable is connected properly.

### **Screen is not displayed when product is turned ON.**

Verify if video output terminal is properly connected to the CCTV monitor.

Verify if the camera is properly connected to the input terminal.

Verify if CCTV monitor brightness is appropriate.

### **Video recorded image does not emit any sound.**

Check whether [Voice recording] is set to [ON] for [Video recording setup] in the menu.

Check the volume for the TV or the product in the menu.

### **The IR remote controller is not operating.**

Check the batteries and replace them if needed.

Aim the remote controller properly at the product remote controller receiver section during operation.

If product and remote controller ID is different, make them the same.

### **Video is not recorded in the HDD.**

Video recording may not be possible if HDD is at the end of its lifespan or if there are bad sectors. Such HDD must be replaced. Refer to the description of error messages in the next page.

### **Reserved video recording is not carried out.**

Verify whether current time and recording reservation time is setup accurately.

### **Monitor screen is not clear.**

Check if the camera is focused properly.

### **Cases for which the point of purchase must be contacted**

For the following cases, stop using the product immediately, cut the power supply and ask the point of purchase to fix the damage.

- ❖ If an abnormal behavior occurs in the product during use (Example: Strange noise, odor or smoke)

- ❖ If the power cable connector has been damaged
- ❖ If rain or water has entered the product
- ❖ If a liquid has been spilled on the product or if a foreign substance has entered the product
- ❖ If the product does not operate as described in this manual
- ❖ If the product has been seriously damaged after being dropped
- ❖ If there is a clear difference in performance


# Product Specifications



Model		NTSC		
		SVR-1650	SVR-1640	SVR-950
Power Source		AC 100V~240V,(50/60Hz), Max. 2A		
Power Consumption		Max. 75W(1 HDD)		
Video Input		16Ch		9Ch
Video Output	Monitor A	2 BNC, 1 VGA, 1 RCA(Front)		
	Monitor B	1 BNC(Single/Multi)		
Compression		MPEG-4		
Display	Speed	480fps		270fps
	Resolution	720 x 480		
	Multi Screen	1 / 4 / 9 / 16		1 / 4 / 9
Recording	Speed/ Resolution	120 fps (D1, 704 x 480)	30 fps (D1, 704 x 480)	
		240 fps (Half D1, 704 x 240)	60 fps (Half D1, 704 x 240)	
		480 fps (CIF, 352 x 240)	120 fps (CIF, 352 x 240)	
	Mode	Manual & Event, Schedule & Event		
HDD		250GB 1HDD(Up to 4HDD)		160GB 1HDD (Up to 4HDD)
Backup		DVD+RW, 3 USB(2 Front) / USB Flash Memory Drive		
Serial Interface		RS-232C, RS-485/422(RJ-45)		
Sensor Input/Relay Output		16/4		9/4
Audio	Input/Output	4/2(1 Front)		
	Interface	RCA		
Network	Protocol	TCP/IP, DHCP, SMTP		
	Software	Network viewer		
	Transport speed	Max 480 fps	Max 120 fps	
Control		Mouse, Remote control(Controllable up to 16 DVRs ) Keyboard controller(SCC-3100A) Password : 2 level (Admin, User) Image quality adjustment : 4 level (Super, High, Middle, Low) support Screen SMS : ATM/POS support		
OSD(On Screen Display)		GUI, Multi-language		
Temperature	Operation	5℃ ~ 40℃		
	Storage	-10℃ ~ 60℃		
Dimensions		430(W) x 88(H) x 465(D)mm		
Weight		Approximately 8.9kg		

Model	PAL		
	SVR-1650	SVR-1640	SVR-950
Power Source	AC 100V~240V,(50/60Hz), Max. 2A		
Power Consumption	Max. 75W(1 HDD)		
Video Input	16Ch		9Ch
Video Output	Monitor A	2 BNC, 1 VGA, 1 RCA(Front)	
	Monitor B	1 BNC(Single/Multi)	
Compression	MPEG-4		
Display	Speed	400fps	225fps
	Resolution	720 x 576	
	Multi Screen	1 / 4 / 9 / 16	1 / 4 / 9
Recording	Speed/ Resolution	100 fps (D1, 704 x 576)	25 fps (D1, 704 x 576)
		200 fps (Half D1, 704 x 288)	50 fps (Half D1, 704 x 288)
		400 fps (CIF, 352 x 288)	100 fps (CIF, 352 x 288)
	Mode	Manual & Event, Schedule & Event	
HDD	250GB 1HDD(Up to 4HDD)		160GB 1HDD (Up to 4HDD)
Backup	DVD+RW, 3 USB(2 Front) / USB Flash Memory Drive		
Serial Interface	RS-232C, RS-485/422(RJ-45)		
Sensor Input/Relay Output	16/4		9/4
Audio	Input/Output	4/2(1 Front)	
	Interface	RCA	
Network	Protocol	TCP/IP, DHCP, SMTP	
	Software	Network viewer	
	Transport speed	Max 400 fps	Max 100 fps
Control	Mouse, Remote control(Controllable up to 16 DVRs ) Keyboard controller(SCC-3100A) Password : 2 level (Admin, User) Image quality adjustment : 4 level (Super, High, Middle, Low) support Screen SMS : ATM/POS support		
OSD(On Screen Display)	GUI, Multi-language		
Temperature	Operation	5℃ ~ 40℃	
	Storage	-10℃ ~ 60℃	
Dimensions	430(W) x 88(H) x 465(D)mm		
Weight	Approximately 8.9kg		

# Dimensions

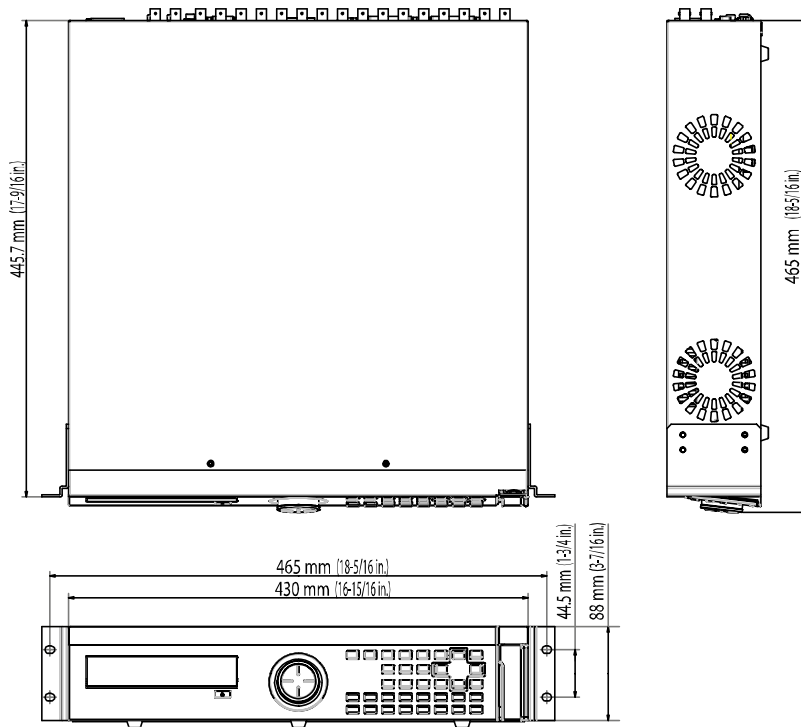



**SAMSUNG TECHWIN**

**SAMSUNG**

## SALES NETWORK

---

**SAMSUNG TECHWIN CO., LTD.**

145-3, Sangdaewon 1-dong, Jungwon-gu  
Seongnam-si Gyeonggi-do 462-121, Korea  
Tel: +82-31-740-8137~8139 Fax:+82-31-740-8145

**TIANJIN SAMSUNG OPTO-ELECTRONICS CO., LTD.**

7 Pingchang Rd., Nankai Dist. Tianjin 300190, P.R China  
Tel: +86-22-2761-4724(33821) Fax: +86-22-2761-6514

**SAMSUNG OPTO-ELECTRONICS UK, LTD.**

Samsung House, 1000 Hillswood Drive,  
Hillswood Business Park Chertsey, Surrey KT16 OPS  
Tel: +44-1932-45-5308 Fax: +44-1932-45-5325

<http://www.samsungtechwin.com>  
<http://www.samsungcctv.com>

P/No. : Z6806075902B

**September. A. 06**



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>