



SAMSUNG

USER MANUAL

DV50/DV90/DV100/DV101

This user manual includes detailed usage instructions for your camera. Please read this manual thoroughly.

Click a topic

Basic troubleshooting

Quick reference

Contents

Basic functions

Extended functions

Shooting options

Playback/Editing

Settings

Appendixes

Index

Health and safety information

Always comply with the following precautions and usage tips to avoid dangerous situations and ensure peak performance of your camera.



Warning—situations that could cause injury to yourself or others

Do not disassemble or attempt to repair your camera.

This may result in electric shock or damage to the camera.

Do not use your camera near flammable or explosive gases and liquids.

This may cause a fire or explosion.

Do not insert flammable materials into the camera or store these materials near the camera.

This may cause a fire or electric shock.

Do not handle your camera with wet hands.

This may result in electric shock.

Prevent damage to subjects' eyesight.

Do not use the flash in close proximity (closer than 1 m/3 ft) to people or animals. If you use the flash too close to your subject's eyes, this can cause temporary or permanent eyesight damage.

Keep your camera away from small children and pets.

Keep your camera and all accessories out of the reach of small children and animals. Small parts may cause choking or serious injury if swallowed. Moving parts and accessories may present physical dangers as well.

Do not expose the camera to direct sunlight or high temperatures for an extended period of time.

Prolonged exposure to sunlight or extreme temperatures can cause permanent damage to your camera's internal components.

Avoid covering the camera or charger with blankets or clothes.

The camera may over-heat, which may distort the camera or cause a fire.

Do not handle the power supply cord or go near the charger during a thunderstorm.

This may result in electric shock.

If liquid or foreign objects enter your camera, immediately disconnect all power sources such as the battery or charger, and then contact a Samsung service center.



Caution—situations that could cause damage to your camera or other equipment

Remove the batteries from your camera when storing it for an extended period of time.

Installed batteries may leak or corrode over time and cause serious damage to your camera.

Use only authentic, manufacturer-recommended, Lithium-ion replacement batteries. Do not damage or heat the battery.

This may cause a fire or personal injuries.

Use only Samsung-approved batteries, chargers, cables and accessories.

- Unauthorized batteries, chargers, cables or accessories can cause batteries to explode, damage your camera, or cause injury.
- Samsung is not responsible for damages or injuries caused by unapproved batteries, chargers, cables or accessories.

Do not use batteries for unintended purposes.

This may cause a fire or electric shock.

Do not touch the flash while it fires.

The flash is very hot when fired and may burn your skin.

When you use AC charger, turn off the camera before you disconnect the power to the AC charger.

Failing to do so may result in fire or electric shock.

Disconnect chargers from power sources when not in use.

Failing to do so may result in fire or electric shock.

Do not use a damaged power supply cord, plug, or loose outlet when you charge batteries.

This may cause a fire or electric shock.

Do not allow the AC charger to come in contact with the +/- terminals on the battery.

This may cause a fire or electric shock.

Do not force the camera's parts or apply pressure to the camera.

This may cause your camera to malfunction.

Exercise caution when you connect cables or adapters and install batteries and memory cards.

If you force the connectors, improperly connect cables, or improperly install batteries and memory cards, you can damage ports, connectors, and accessories.

Keep cards with magnetic strips away from the camera case.

Information stored on the card may be damaged or erased.

Never use a damaged charger, battery, or memory card.

This may result in electric shock or camera malfunction or cause a fire.

Check that the camera is operating properly before use.

The manufacturer takes no responsibility for any loss of files or damages that may result from camera malfunction or improper use.

When connecting the USB cable to the camera, be sure to insert the correct USB cable connector into the camera.

If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.

Copyright information

- Microsoft Windows and the Windows logo are registered trademarks of the Microsoft Corporation.
- micro SD™, micro SDHC™ are registered trademarks of the SD Association.
- Mac is a registered trademark of the Apple Corporation.
- Trademarks and trade names used in this manual are the property of their respective owners.

- Camera specifications or contents of this manual may be changed without prior notice due to upgrade of camera functions.
- You are not allowed to reuse or distribute any part of this manual without prior permission.
- Use this camera responsibly and adhere to all laws and regulations concerning its use.

Organization of the user manual

Basic functions 12

Learn about your camera's layout, icons, and basic functions for shooting.

Extended functions 31

Learn how to take a photo by selecting a mode and how to record a video.

Shooting options 45

Learn about the options you can set in shooting mode.

Playback/Editing 67

Learn how to play back photos or videos, and edit photos or videos. Also, learn how to connect your camera to your computer, photo printer, or TV.





Settings 90

Refer to options to configure your camera's settings.

Appendixes 96

Refer to error messages, specifications, and maintenance tips.




Indications used in this manual

Shooting mode	Indication
Smart Auto	
Program	
Scene	
Movie	




Shooting mode icons

These icons indicate that a function is available in the corresponding modes. The  mode may not support functions for all scenes.

e.g.)

Adjusting the exposure manually (EV)   



Depending on the intensity of the ambient light, your photos may be too bright or dark. In these cases, you can adjust the exposure to get a better photo.



Darker (-) Neutral (0) Brighter (+)

Available in Program and Movie modes


Icons used in this manual

Icon	Function
	Additional information
	Safety warnings and precautions
[]	Camera buttons; for example: [Shutter] represents the shutter button.
()	Page number of related information
→	The order of options or menus you must select to perform a step. For example: Select Shooting → Photo Size represents select Shooting , and then select Photo Size .
*	Annotation

Expressions used in this manual

Pressing the shutter

- Half-press [**Shutter**]: Press the shutter halfway down.
- Press [**Shutter**]: Press the shutter all the way down.

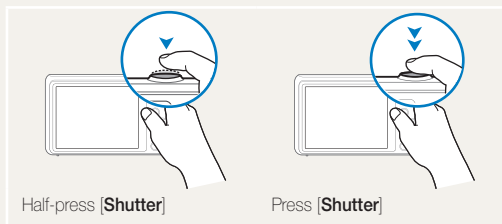

Exposure (Brightness)

The amount of light that enters your camera determines the exposure. You can alter the exposure with shutter speed, aperture value, and ISO speed. By altering the exposure, your photos will be darker or lighter.




Normal exposure



Overexposure (too bright)





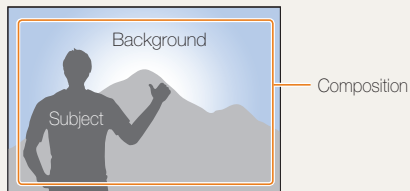









Subject, background, and composition

- **Subject:** The main object of a scene, such as a person, animal, or still life.
- **Background:** The objects around the subject.
- **Composition:** The combination of a subject and background.



Basic troubleshooting


You can get answers to common questions. Solve problems easily by setting shooting options.

	The subject's eyes appear red.	<p>This is caused by a reflection from the camera flash.</p> <ul style="list-style-type: none">• Set the flash option to  Red-eye or  Red-eye Fix. (p. 49)• If the photo has already been taken, select  Red-eye Fix in the edit menu. (p. 79)
	Photos have dust spots.	<p>Dust particles floating in the air may be captured in photos when using the flash.</p> <ul style="list-style-type: none">• Turn off the flash or avoid taking photos in a dusty place.• Set ISO speed options. (p. 50)
	Photos are blurred.	<p>Blurring can occur if may be caused if you capture photos in low light conditions or hold the camera incorrectly. Use the DIS function or half-press [Shutter] to ensure the subject is focused. (p. 29)</p>
	Photos are blurred when shooting at night.	<p>As the camera tries to let in more light, the shutter speed slows. This can make it difficult to steady the camera and may result in camera shake.</p> <ul style="list-style-type: none">• Select  Night in the  mode. (p. 36)• Turn on the flash. (p. 49)• Set ISO speed options. (p. 50)• Use a tripod to prevent your camera from shaking.
	Subjects come out too dark because of backlighting.	<p>When the light source is behind the subject or when there is a high contrast between the light and dark areas, the subject may come out shaded.</p> <ul style="list-style-type: none">• Avoid shooting with the sun behind your subject.• Select  Backlight in the  mode. (p. 34)• Set the flash option to  Fill in. (p. 49)• Set the Auto Contrast Balance (ACB) option. (p. 59)• Adjust the exposure. (p. 58)• Set the metering option to  Spot if a subject is in the center of the frame. (p. 59)

Quick reference




Taking photos of people

-  mode > Beauty Shot ▶ 35
- Self Shot ▶ 42
- Children ▶ 43
- Red-eye, Red-eye Fix (to prevent or correct red-eye) ▶ 49
- Face Detection ▶ 54



Taking photos at night or in the dark

-  mode > Night ▶ 36
-  mode > Sunset, Dawn ▶ 34
- Flash options ▶ 49
- ISO speed (to adjust the sensitivity to light) ▶ 50



Taking action photos

- Continuous, Motion Capture ▶ 62



Taking photos of text, insects, or flowers

-  mode > Text ▶ 34
- Macro ▶ 51



Adjusting the exposure (brightness)

- ISO speed (to adjust the sensitivity to light) ▶ 50
- EV (to adjust exposure) ▶ 58
- ACB (to compensate for subjects against bright backgrounds) ▶ 59
- Metering ▶ 59
- AEB (to take three photos of the same scene with different exposures) ▶ 62



Applying a different effect

-  mode > Magic Frame ▶ 34
- Smart filter effects ▶ 63
- Image adjustment (to adjust saturation, sharpness, or contrast) ▶ 66



Reducing camera shake

- Digital Imaging Stabilization (DIS) ▶ 28

- Viewing files by category in Smart Album ▶ 70
- Viewing files as thumbnails ▶ 71
- Deleting all files on the memory card ▶ 72
- Viewing files as a slide show ▶ 74
- Viewing files on a TV ▶ 82
- Connecting your camera to a computer ▶ 83
- Adjusting sound and volume ▶ 92
- Adjusting the brightness of the display ▶ 93
- Changing the display language ▶ 94
- Setting the date and time ▶ 94
- Formatting the memory card ▶ 94
- Troubleshooting ▶ 106

Contents

Basic functions	12
Unpacking	13
Camera layout	14
Inserting the battery and memory card	16
Charging the battery and turning your camera on	17
Charging the battery	17
Turning on your camera	17
Performing the initial setup	18
Learning icons	20
Selecting options or menus	21
Setting the display and sound	23
Changing the display type	23
Setting the sound	23
Taking photos	24
Turning on the front display	25
Zooming	26
Reducing camera shake (DIS)	28
Tips for getting a clearer photo	29

Extended functions	31
Using the Smart Auto mode	32
Using the Scene mode	34
Using the Magic Frame mode	34
Using the Beauty Shot mode	35
Using the Night mode	36
Using the Program mode	38
Using the Movie mode	39
Using the Smart Scene Detection mode	40
Capturing photos with the front display	42
Using the Self-portrait mode	42
Using the Children mode	43
Using the Jump Shot Timer	43
Recording a video with the front display	44

Shooting options	45	Using face detection	54
Selecting a resolution and quality	46	Detecting faces	54
Selecting a resolution	46	Taking a smile shot	55
Selecting image quality	47	Detecting eye blinking	55
Using the timer	48	Using smart face recognition	56
Shooting in the dark	49	Registering faces as your favorites (My Star)	57
Preventing red-eye	49	Adjusting brightness and color	58
Using the flash	49	Adjusting the exposure manually (EV)	58
Adjusting the ISO speed	50	Compensating for backlighting (ACB)	59
Changing the camera's focus	51	Changing the metering option	59
Using macro	51	Selecting a light source (White balance)	60
Using auto focus	51	Using burst modes	62
Using tracking auto focus	52	Improving your photos	63
Adjusting the focus area	53	Applying smart filter effects	63
		Adjusting your photos	66

Playback/Editing	67	Settings	90
Playing back	68	Camera settings menu	91
Starting Playback mode	68	Accessing the settings menu	91
Viewing photos	73	Sound	92
Playing a video	75	Front Display Settings	92
Editing a photo	77	Display	93
Resizing photos	77	Settings	94
Rotating a photo	77	Appendixes	96
Applying smart filter effects	78	Error messages	97
Correcting exposure problems	79	Camera maintenance	98
Creating a print order (DPOF)	81	Cleaning your camera	98
Viewing files on a TV	82	Using or storing the camera	99
Transferring files to your Windows computer	83	About memory cards	100
Transferring files using Intelli-studio	84	About the battery	102
Transferring files by connecting the camera as a		Before contacting a service center	106
removable disk	86	Camera specifications	109
Disconnecting the camera (for Windows XP)	87	Glossary	113
Transferring files to your Mac computer	88	FCC notice	117
Printing photos with a PictBridge photo printer	89	Index	118

Basic functions

Learn about your camera's layout, icons, and basic functions for shooting.

Unpacking	13	Setting the display and sound	23
Camera layout	14	Changing the display type	23
Inserting the battery and memory card ...	16	Setting the sound	23
Charging the battery and turning your camera on	17	Taking photos	24
Charging the battery	17	Turning on the front display	25
Turning on your camera	17	Zooming	26
Performing the initial setup	18	Reducing camera shake (DIS)	28
Learning icons	20	Tips for getting a clearer photo	29
Selecting options or menus	21		

Unpacking

 
Check your product box for the following items.



Camera




AC adapter/USB cable



Rechargeable battery



 Strap



Quick Start Guide

 


- The illustrations may differ from your actual items.
- Purchase Samsung-approved optional items that are compatible with your camera at the service center or the store where you purchased your camera. We are not responsible for any damages caused by using items from other manufacturers.


Optional accessories




Camera case



Memory card/
Memory card adapter

 


AV cable

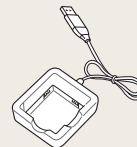






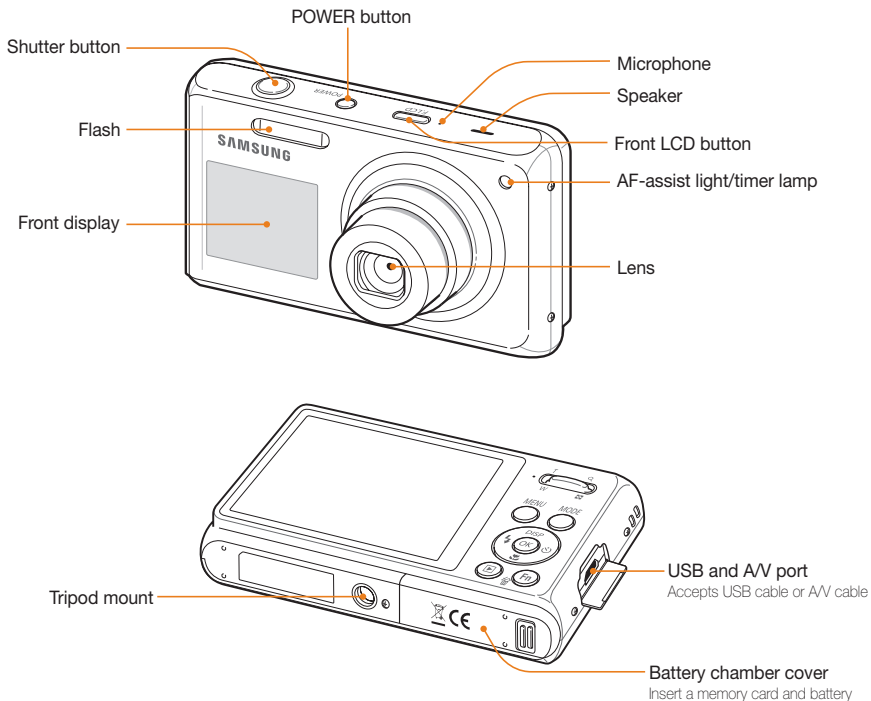

Battery charger

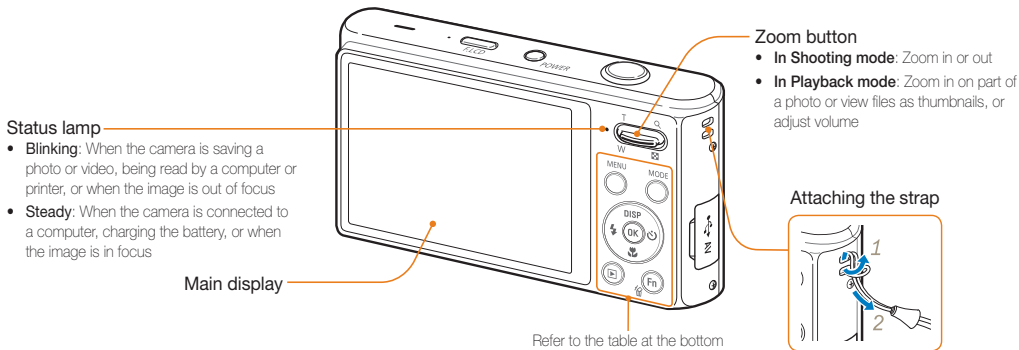







Camera layout

Before you start, familiarize yourself with your camera's parts and their functions.







Button	Description
	Access options or menus
	Select a shooting mode.
MODE	Description
	Smart Auto: Capture a photo with a scene mode setting selected automatically by the camera.
	Program: Capture a photo with settings you have set manually.
	Scene: Capture a photo with options preset for a specific scene.
	Movie: Record a video.

Button	Description	
	In Shooting mode	Other functions
	Change the display option	Move up
	Change the macro option	Move down
	Change the flash option	Move left
	Change the timer option	Move right
	Confirm the highlighted option or menu	
	Enter Playback mode	
	<ul style="list-style-type: none"> • Access options in Shooting mode • Delete files in Playback mode 	


Inserting the battery and memory card

Learn to insert the battery and an optional memory card into the camera.

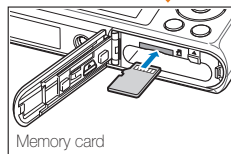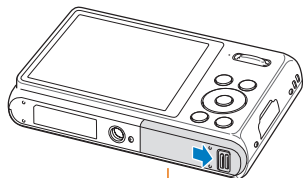



Memory card

Insert a memory card with the gold-colored contacts facing up.

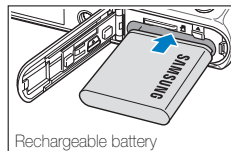


Rechargeable battery

Insert the battery with the Samsung logo facing up.

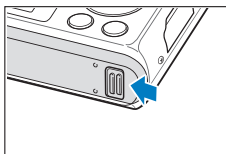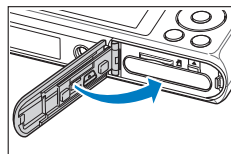


Removing the battery and memory card

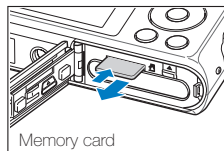

Memory card

Push the card gently until the card disengages from the camera, and then pull it out of the slot.

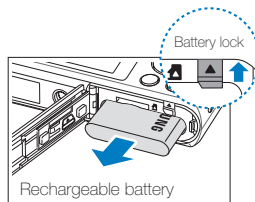

Battery lock

Rechargeable battery

Push the lock up to release the battery.




You can use the internal memory as a temporary storage device when the memory card is not inserted.

Charging the battery and turning your camera on

Charging the battery

Before using the camera for the first time, you must charge the battery. When connecting the USB cable to the camera, insert the smaller connector into the camera and the other connector into the power adapter.

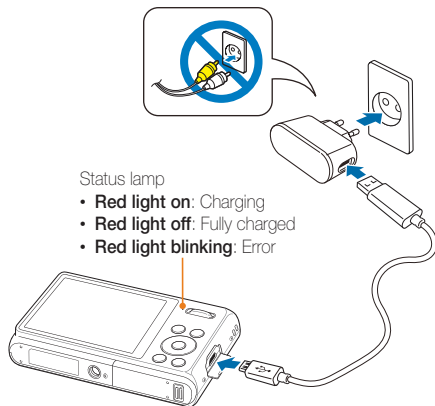


Use only the AC adapter and USB cable supplied with your camera. If you use another AC adapter (such as SAC-48), the camera battery may not charge or work properly.

Turning on your camera


Press **[POWER]** to turn your camera on or off.

- The initial setup screen appears when you turn on the camera for the first time. (p. 18)

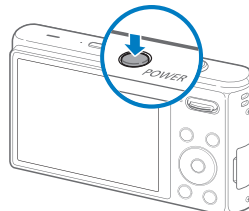

Turning on your camera in Playback mode

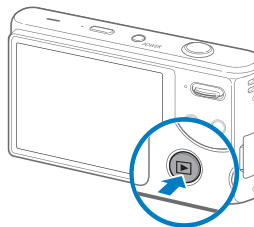

Press **[▶]**. The camera turns on and accesses Playback mode immediately.







If you turn on your camera by pressing and holding **[▶]** until the status lamp blinks, the camera does not emit any sounds.



Performing the initial setup

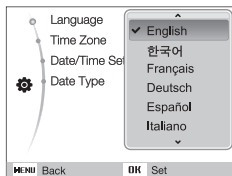
The initial setup screen appears to allow you to configure the camera's basic settings.





- 1 Press **[POWER]**.
 - The initial setup screen appears when you turn on the camera for the first time.
- 2 Press **[**] to select **Language** and press **[**] or **[OK]**.

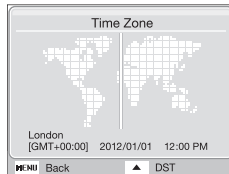


- 3 Press **[DISP]** or **[**] to select a language and press **[OK]**.
- 4 Press **[DISP]** or **[**] to scroll to **Time Zone** and press **[**] or **[OK]**.

- 5 Press **[**] or **[**] to select a time zone and press **[OK]**.
 - To set the daylight-saving time, press **[DISP]**.




- The screen may differ depending on the language selected.
- 6 Press **[DISP]** or **[**] to select **Date/Time Set** and press **[**] or **[OK]**.
 - 7 Press **[**] or **[**] to select an item.

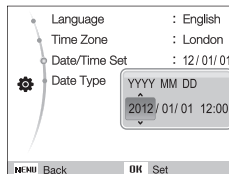

- The screen may differ depending on the language selected.

- 8 Press **[DISP]** or **[👉]** to set the date and time and press **[OK]**.
- 9 Press **[DISP]** or **[👉]** to select **Date Type** and press **[👉]** or **[OK]**.

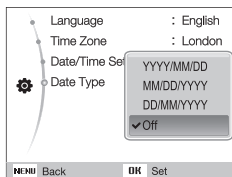


- 10 Press **[DISP]** or **[👉]** to select a date format and press **[OK]**.
- 11 Press **[MENU]** to switch to the Shooting mode.



Learning icons

The icons displayed will change according to the mode you select or the options you set.

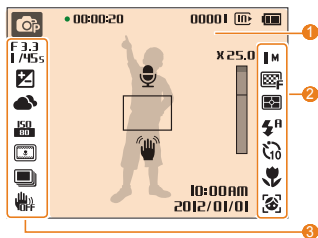

1 Information

Icon	Description
	Selected shooting mode
00001	Available number of photos
00:00:20	Available recording time
	Internal memory
	Memory card inserted
	<ul style="list-style-type: none"> : Fully charged : Partially charged : Charging needed

Icon	Description
	Auto focus frame
	Camera shake
	Zoom indicator
X 25.0	Zoom ratio
10:00AM 2012/01/01	Current date and time
I M	Photo resolution when Intelli zoom is on

2 Icons on the right

Icon	Description
I M	Photo resolution
640	Video resolution
	Photo quality
30	Frame rate
	Metering option
	Flash option
	Timer option

Icon	Description
	Auto focus option
	Face detection
	Voice muted

3 Icons on the left




Icon	Description
F3.3 1/45s	Aperture and shutter speed
LT	Long time shutter
	Exposure value
	White balance
	Face tone
	Face retouch
	ISO speed
	Smart filter effect
	Image adjustment (contrast, sharpness, saturation)
	Burst type
	Digital Image Stabilization (DIS)


Selecting options or menus

You can select options by pressing [**MENU**], and then using the navigation buttons ([**DISP**], [, [, []). Press [**OK**] to confirm.



You can also access shooting options by pressing [**Fn**], but some options are not available.

- 1 In Shooting mode, press [**MENU**].
- 2 Use the navigation buttons to scroll to an option or menu.
 - To move up or down, press [**DISP**] or [].
 - To move left or right, press [] or [].

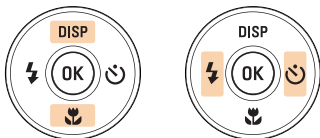

Going back to the previous menu

Press [**MENU**] again to go back to the previous menu.




Half-press [**Shutter**] to return to the Shooting mode.

- 3 Press [**OK**] to confirm the highlighted option or menu.


Example: Selecting a White Balance option in the P mode

- 1 In Shooting mode, press [MODE].
- 2 Press [DISP] or [📷] to scroll to **Op**, and then press [OK].
- 3 Press [MENU].

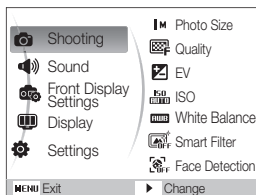


- 4 Press [DISP] or [📷] to scroll to **Shooting**, and then press [☺] or [OK].

- 5 Press [DISP] or [📷] to scroll to **White Balance**, and then press [☺] or [OK].

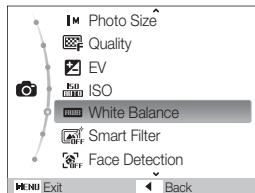

- 6 Press [⚡] or [☺] to scroll to a White Balance option.

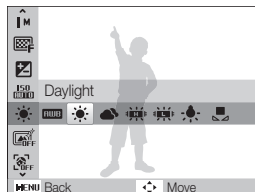


- 7 Press [OK].

Setting the display and sound

Learn how to change the basic display and sound settings.

Changing the display type

Select a display type for Shooting or Playback mode. Each type displays different shooting or playback information.

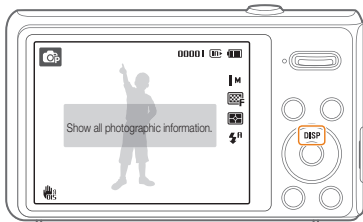

Press **[DISP]** repeatedly to change the display type.

Modes	Display Type Choices
Shooting	<ul style="list-style-type: none">• Display all information about shooting• Hide information about shooting, except the available number of photos (or available recording time) and the battery icon
Playback	<ul style="list-style-type: none">• Display all information about the current photo• Hide all information about the current file• Display information about the current file, except the shooting settings and captured date

Setting the sound



Set whether your camera emits a specified sound when you operate your camera.


- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select **Sound** → **Beep Sound** → an option.

Options	Description
Off	The camera does not emit any sounds.
1/2/3	The camera emits one of three sounds, depending on the option you select.


Taking photos

Learn basic actions to take photos easily and quickly in the Smart Auto mode.

- 1 In Shooting mode, press **[MODE]**.
- 2 Press **[DISP]** or  to scroll to , and then press **[OK]**.
- 3 Align your subject in the frame.

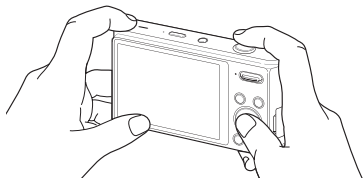

- 4 Half-press **[Shutter]** to focus.
 - A green frame means the subject in focus.
 - A red frame means the subject is out of focus.

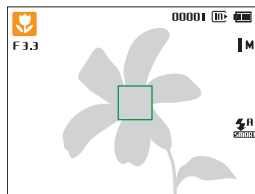

- 5 Press **[Shutter]** to take a photo.




See page 29 for tips to get clearer photos.


Turning on the front display

The front display helps you capture self-portraits, or photos of children, or photos of people jumping. If you use the Children mode, you can play a short animation on the front display to attract a child's attention. (p. 43)

1 In Shooting mode, press the front LCD button.

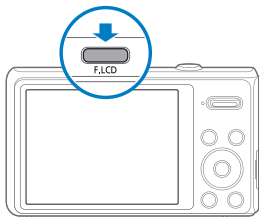

2 Select a shooting option.

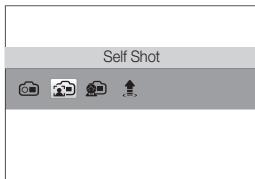


Icon	Description
	Front On: Turn on the front display.
	Self Shot: View yourself on the front display while you capture a self-portrait. (p. 42)
	Children: Show a short animation on the front display to attract the attention of children. (p. 43)
	Jump Shot: Show a visual cue on the front display, so subjects can time their jumps for the photo. (p. 43)




- When you set timer options, the front display will remain active. (p. 48)
- When you use the camera in brightly lit or sunny areas, you may not be able to see the front display clearly.
- When you play slide shows or movies, the front display may not activate even if you press the front LCD button.
- **Self Shot** is automatically selected if you do not select an option within 3 seconds.
- You can set the camera to automatically release the shutter when it detects a smiling face in Self Shot or Children mode. (p. 92)

Zooming

You can shoot close-up photos by adjusting the zoom. Your camera has a 5X optical zoom, 2X Intelli zoom, and 5X digital zoom. Intelli zoom and digital zoom cannot be used at the same time.

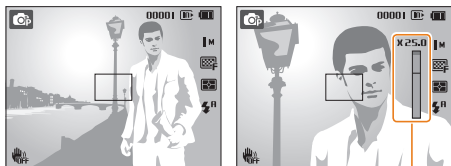

Zoom ratio

 


The zoom ratio appearing on the screen changes nonlinearly and may differ slightly from the actual zoom ratio.

Digital zoom



If the zoom indicator is in the digital range, your camera is using the digital zoom. By using both the optical and digital zoom, you can zoom in up to 25 times.

x25.0

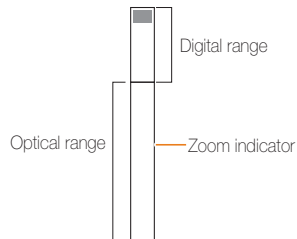


- The Digital zoom is not available with the Smart Filter effect or Tracking AF option.
- If you capture a photo with the Digital zoom, the photo quality may deteriorate.

Intelli zoom



If the zoom indicator is in the Intelli range, your camera is using the Intelli zoom. Photo resolution varies according to the zoom rate if you use the Intelli zoom. By using both the optical zoom and Intelli zoom, you can zoom in up to 10 times.

Photo resolution when
Intelli zoom is on

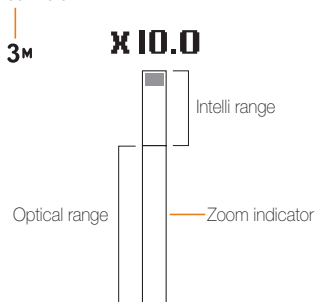

- The Intelli zoom is not available with a Smart Filter effect or Tracking AF option.
- The Intelli zoom is available only when you set a 4:3 ratio resolution. If you set another resolution ratio with Intelli zoom on, the Intelli zoom will be turned off automatically.
- Intelli zoom helps you capture a photo with less quality deterioration than the digital zoom. However, the photo quality may be lower than when you use the optical zoom.

Setting Intelli zoom

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Intelli Zoom** → an option.

Options	Description
	Off: Deactivate the Intelli zoom.
	On: Activate the Intelli zoom.

Reducing camera shake (DIS)



Reduce camera shake digitally in Shooting mode.



Before correction

After correction

1 In Shooting mode, press **[MENU]**.

2 Select **Shooting** → **DIS** → an option.


Options	Description
	Off: DIS is deactivated.
	On: DIS is activated.



- DIS may not function properly when:
 - you move your camera to follow a moving subject
 - you use digital zoom
 - there is too much camera shake
 - the shutter speed is slow (for example, when you capture night scenes)
 - the battery is low
 - you take a close-up shot
- If the camera is hit or dropped, the display will be blurry. If this occurs, turn off the camera, and then turn it on again.
- In some scene modes, the DIS function is unavailable.


Tips for getting a clearer photo

Holding your camera correctly

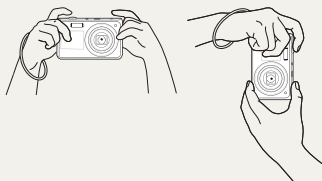

Make sure nothing is blocking the lens.

Half-pressing the shutter button

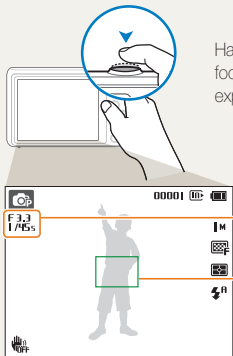

Half-press **[Shutter]** and adjust the focus. The camera adjusts the focus and exposure automatically.

The camera sets the aperture value and shutter speed automatically.

Focus frame


- Press **[Shutter]** to take the photo if the focus frame appears in green.
- Change the composition and half-press **[Shutter]** again if the focus frame appears in red.

Reducing camera shake



Set the Digital Image Stabilization option to reduce camera shake. (p. 28)

When is displayed

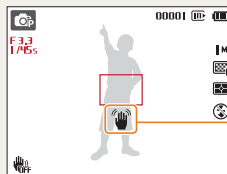

Camera shake


When shooting in the dark, avoid setting the flash option to **Slow Sync** or **Off**. The aperture remains open longer and it may be harder to hold the camera still.

- Use a tripod or set the flash option to **Fill in**. (p. 49)
- Set ISO speed options. (p. 50)

Preventing your subject from being out of focus

It may be difficult to get your subject in focus when:


- there is little contrast between the subject and background (for example, when your subject is wearing clothing that is similar in color to the background)
- the light source behind the subject is too bright
- the subject is shiny or reflective
- the subject includes horizontal patterns, such as blinds
- the subject is not positioned in the center of the frame

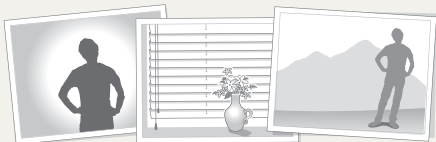

Use the focus lock

Half-press **[Shutter]** to focus. When the subject is in focus, you can reposition the frame to change the composition.

When you are ready, press **[Shutter]** to take your photo.

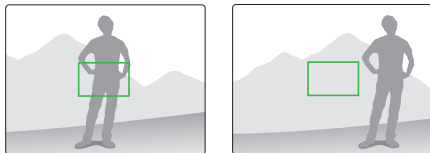


- When you take photos in low light



Turn on the flash.
(p. 49)

- When subjects are moving fast

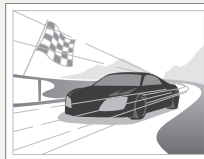

Use the continuous
or motion capture
function. (p. 62)


Extended functions


Learn how to take a photo by selecting a mode and how to record a video.

Using the Smart Auto mode	32	Capturing photos with the front display ...	42
Using the Scene mode	34	Using the Self-portrait mode	42
Using the Magic Frame mode	34	Using the Children mode	43
Using the Beauty Shot mode	35	Using the Jump Shot Timer	43
Using the Night mode	36	Recording a video with the front display ...	44
Using the Program mode	38		
Using the Movie mode	39		
Using the Smart Scene Detection mode ...	40		







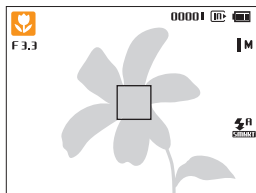



Using the Smart Auto mode

In Smart Auto mode, your camera automatically chooses the appropriate camera settings based on the type of scene it detects. The Smart Auto mode is helpful if you are not familiar with the camera settings for various scenes.

- 1 In Shooting mode, press [MODE].
- 2 Select .
- 3 Align your subject in the frame.
 - The camera selects a scene automatically. An appropriate scene mode icon appears at the top left of the screen. The icons are listed below.



Icon	Description
	Landscapes
	Scenes with bright white backgrounds
	Landscapes at night
	Portraits at night
	Landscapes with backlighting
	Portraits with backlighting




Icon	Description
	Portraits
	Close-up photos of objects
	Close-up photos of text
	Sunsets
	Clear skies
	Forested areas
	Close-up photos of colorful subjects
	Camera is stabilized or on a tripod (when shooting in the dark)
	Actively moving subjects
	Fireworks (when using a tripod)

4 Half-press **[Shutter]** to focus.

- In several scenes, the camera automatically captures a photo when you half-press **[Shutter]**.

5 Press **[Shutter]** to take the photo.




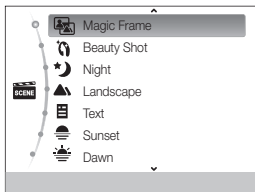
- If the camera does not recognize a proper scene mode,  appears and the camera uses default settings.
- Even if it detects a face, the camera may not select a portrait mode depending on the subject's position or lighting.
- The camera may not select the correct scene depending on the shooting conditions, such as camera shake, lighting, and distance to the subject.
- Even if you use a tripod, the camera may not detect the  mode depending on the subject's movement.
- In  mode, the camera consumes more battery power, because it changes settings often to select appropriate scenes.



Using the Scene mode

In Scene mode, you can capture a photo with options that are preset for a specific scene.

- 1 In Shooting mode, press [**MODE**].
- 2 Select  → a scene.




- To change the scene mode, press [**MODE**], and then select **Scene** → a scene.
- For the Magic Frame mode, see "Using the Magic Frame mode" on page 34.
- For the Beauty Shot mode, see "Using the Beauty Shot mode" on page 35.
- For the Night mode, see "Using the Night mode" on page 36.

- 3 Align your subject in the frame, and then half-press [**Shutter**] to focus.
- 4 Press [**Shutter**] to take the photo.

Using the Magic Frame mode


In Magic Frame mode, you can apply various frame effects to your photos. The shape and the feel of the photos will change according to the frame you select.

- 1 In Shooting mode, press [**MODE**].
- 2 Select  → **Magic Frame**.
- 3 Press [**MENU**].
- 4 Select **Shooting** → **Frame** → an option.

5 Align your subject in the frame, and then half-press **[Shutter]** to focus.

6 Press **[Shutter]** to take the photo.



- In Magic Frame mode, the resolution is automatically set to .
- When you connect the camera to a TV in Magic Frame mode, you cannot capture photos.

Using the Beauty Shot mode

In Beauty Shot mode, you can capture a portrait with options to hide facial imperfections.

1 In Shooting mode, press **[MODE]**.


2 Select  → **Beauty Shot**.

3 Press **[MENU]**.


4 Select **Shooting** → **Face Tone**.

5 Select an option.

- For example, increase the face tone setting to make skin appear lighter.

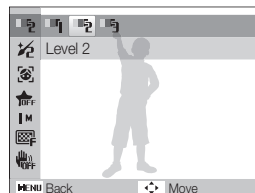

- 6 Press **[MENU]**.
- 7 Select **Shooting** → **Face Retouch**.
- 8 Select an option.
 - For example, increase the Face Retouch setting to hide more imperfections.

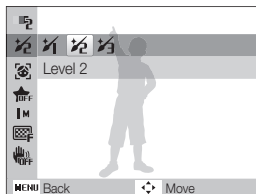

- 9 Align your subject in the frame, and then half-press **[Shutter]** to focus.
- 10 Press **[Shutter]** to take the photo.




When using the Beauty Shot mode, the focus distance will be set to **Auto Macro**.

Using the Night mode

In Night mode, you can use a slow shutter speed to extend the time until the shutter closes. Increase the aperture value to prevent overexposure.

- 1 In Shooting mode, press **[MODE]**.
- 2 Select **SCENE** → **Night**.
- 3 Press **[MENU]**.
- 4 Select **Shooting** → **Long Time Shutter**.
- 5 Select the aperture value or shutter speed.

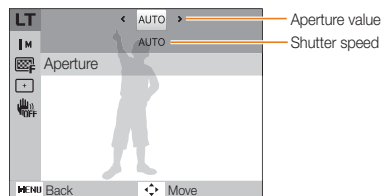

- 6 Select an option.
 - If you select **AUTO**, the camera adjusts the aperture value or shutter speed automatically.
- 7 Align your subject in the frame, and then half-press **[Shutter]** to focus.
- 8 Press **[Shutter]** to take the photo.




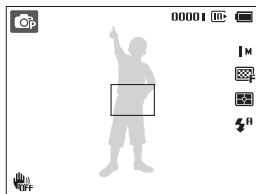
Use a tripod to prevent your photos from blurring.



Using the Program mode

In the Program mode, you can set various options except the shutter speed and aperture value, which the camera sets automatically.

- 1 In Shooting mode, press [**MODE**].
- 2 Select  .
- 3 Set options.
(For a list of options, refer to "Shooting options".)



- 4 Align your subject in the frame, and then half-press [**Shutter**] to focus.
- 5 Press [**Shutter**] to take the photo.




Using the Movie mode

In Movie mode, you can record high-definition videos in 1280 X 720 HQ resolution. You can record up to 4 GB (approximately 15 minutes) at 1280 X 720 HQ resolution and the camera saves recorded videos as MJPEG files.






- Some memory cards may not support high definition recording. If your card does not, set a lower resolution. (p. 46)
- Memory cards with slow writing speeds will not support high-resolution videos. To record high-resolution videos, use memory cards with faster write speeds.

- 1 In Shooting mode, press [**MODE**].
- 2 Select .
- 3 Press [**MENU**].
- 4 Select **Movie** → **Frame Rate** → a frame rate (the number of frames per second).
 - As the frame rate increases, action appears more natural, but the file size also increases.



Depending on the resolution and frame rate, the movie may appear smaller than the original size shown on the main display.

- 5 Press [**MENU**].
- 6 Select **Movie** → **Sound Alive** → a sound option.

Option	Description
	Sound Alive On: Turn on the Sound Alive function.
	Sound Alive Off: Turn off the Sound Alive function.
	Mute: Do not record sounds.



- Do not block the microphone when you use the Sound Alive function.
- Recordings made with Sound Alive may differ from actual sounds.

- 7 Set other options as desired.
(For options, refer to “Shooting options”.)
- 8 Press [**Shutter**] to start recording.
- 9 Press [**Shutter**] again to stop recording.

To pause recording


The camera allows you to pause a video temporarily while recording. With this function, you can record several scenes as a single video.




- Press [**OK**] to pause while recording.
- Press [**OK**] to resume.



Using the Smart Scene Detection mode

In this mode, your camera automatically chooses the appropriate camera settings based on a detected type of scene.

- 1 In Shooting mode, press [**MODE**].
- 2 Select .
- 3 Press [**MENU**].
- 4 Select **Movie** → **Smart Scene Detection** → **On**.
- 5 Align your subject in the frame.
 - The camera selects a scene automatically. An appropriate mode icon will appear at the top left of the screen.




Icon	Description
	Appears when recording videos of landscapes.
	Appears when recording videos of clear skies.

Icon	Description
	Appears when recording videos of forested areas.
	Appears when recording videos of sunsets.

6 Press [**Shutter**] to start recording.

7 Press [**Shutter**] again to stop recording.



- If the camera does not recognize a proper scene mode,  will not change and the default settings will be used.
- The camera may not select the correct scene depending on shooting environments, such as camera shake, lighting and distance to the subject.
- In Smart Scene Detection mode, you cannot set smart filter effects.



Capturing photos with the front display


The front display helps you capture self-portraits or photos of children. You can also use the Jump Shot Timer with the front display.

Using the Self-portrait mode



Conveniently capture photos of yourself with the front display.

- 1 In Shooting mode, press the front LCD button.
- 2 Select **Self Shot**.
 - Your camera will automatically detect your face and display a frame to indicate the detected face.

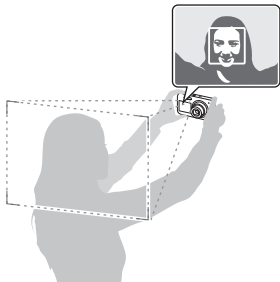

- 3 Half-press [**Shutter**] to focus.
- 4 Press [**Shutter**] to capture the photo.

Capturing an Easy Self Shot

If you press the front LCD button when the power is off, the front display turns on for an Easy Self Shot. Because the main display is off, the camera consumes less battery power and you can prevent others from viewing the main display.

- The camera will turn off when you press the front LCD button again or press [**POWER**].
- The front display will turn off and the main display will turn on when you press [**OK**].

Using the Children mode

The Children mode attracts children by showing a short animation on the front display.

- 1 In Shooting mode, press the front LCD button.
- 2 Select **Children**.
 - The camera will display an animation.
- 3 Half-press [**Shutter**] to focus.
- 4 Press [**Shutter**] to capture the photo.



- You can download animations for the front display from Intelli-studio. (p. 85)
- You can add sounds to animations to draw children's attention. (p. 92)


Using the Jump Shot Timer

Capture a photo of people jumping. An icon will appear on the front display to tell your subjects when to jump.



- 1 In Shooting mode, press the front LCD button.
- 2 Select **Jump Shot**.
- 3 Press [**Shutter**].
 - The front display will start a countdown a few seconds before shooting.

- 4 Jump when the jump icon appears on the front display.
- The camera will capture 2 photos in succession.

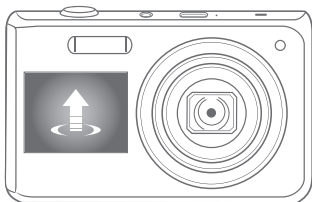

If you are capturing photos using the jump shot timer in low light conditions or indoors, photos may appear dark.

Recording a video with the front display

Recording a video in Self-portrait mode

- 1 In Shooting mode, press the front LCD button.
- 2 Select **Front On**.
- 3 Press [**Shutter**] to start recording.
- 4 Press [**Shutter**] again to stop recording.

Recording a video in Children mode

- 1 In Shooting mode, press the front LCD button.
- 2 Select **Children**.
- 3 Press [**Shutter**] to start recording.
- 4 Press [**Shutter**] again to stop recording.

Shooting options

Learn about the options you can set in shooting mode.

Selecting a resolution and quality	46	Adjusting brightness and color	58
Selecting a resolution	46	Adjusting the exposure manually (EV)	58
Selecting image quality	47	Compensating for backlighting (ACB)	59
Using the timer	48	Changing the metering option	59
Shooting in the dark	49	Selecting a light source (White balance) ...	60
Preventing red-eye	49	Using burst modes	62
Using the flash	49	Improving your photos	63
Adjusting the ISO speed	50	Applying smart filter effects	63
Changing the camera's focus	51	Adjusting your photos	66
Using macro	51		
Using auto focus	51		
Using tracking auto focus	52		
Adjusting the focus area	53		
Using face detection	54		
Detecting faces	54		
Taking a smile shot	55		
Detecting eye blinking	55		
Using smart face recognition	56		
Registering faces as your favorites (My Star)	57		

Selecting a resolution and quality

Learn how to change the image resolution and quality settings.




Selecting a resolution

As you increase the resolution, your photo or video will include more pixels, so it can be printed on larger paper or displayed on a larger screen. When you use a high resolution, the file size also increases.

When taking a photo



- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Photo Size** → an option.

Option	Description
16M	4608 X 3456: Print on A1 paper (23" x 34").
	4608 X 3072: Print on A1 paper (23" x 34") in wide ratio (3:2).
	4608 X 2592: Print on A2 paper (17" x 22") in panorama ratio (16:9) or play back on an HDTV.
10M	3648 X 2736: Print on A3 paper (12" x 17").
5M	2592 X 1944: Print on A4 paper (8 1/2" x 11").
3M	1984 X 1488: Print on A5 paper (5 3/4" x 8 1/2").
	1920 X 1080: Print on A5 paper in panorama ratio (16:9) or play back on an HDTV (5 3/4" x 8 1/2").
1M	1024 X 768: Attach to email.

The paper sizes in inches are approximate.

When recording a video






- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Movie** → **Movie Size** → an option.

Option	Description
	1280 X 720 HQ: For high-quality play back on an HDTV.
640	640 X 480: For play back on a standard, analog TV.
320	320 X 240: To post on a web page.

Selecting image quality

The camera compresses and saves the photos you take in JPEG format. Higher quality images result in larger file sizes.

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Quality** → an option.

Option	Description
	Super Fine: Capture photos in super high quality.
	Fine: Capture photos in high quality.
	Normal: Capture photos in normal quality.

The options may differ depending on the shooting mode.




Using the timer



Learn how to set the timer to delay shooting.

1 In Shooting mode, press [ON].

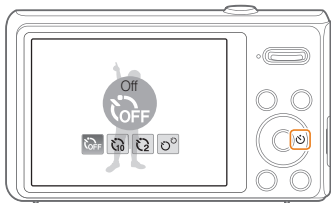


2 Select an option.

Option	Description
	Off: The timer is not active.
	10 Sec: Takes a photo in 10 seconds.
	2 Sec: Takes a photo in 2 seconds.
	Double: Takes a photo in 10 seconds, and then takes another 2 seconds later.

The options may differ depending on the shooting mode.

3 Press [Shutter] to start the timer.

- The AF-assist light/timer lamp blinks. The camera automatically takes a photo at the specified time.
- The front display will start a countdown a few seconds before shooting.

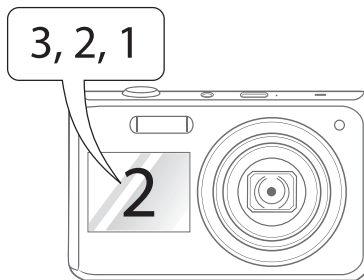

- Press [Shutter] or [ON] to cancel the timer.
- Depending on the face detection option you have selected, the timer function or some timer options may not be available.
- When you set burst options, you cannot use the timer function.

Shooting in the dark

Learn how to take photos at night or in low light conditions.

Preventing red-eye



If the flash fires when you take a photo of a person in the dark, a red glow may appear in the person's eyes. To prevent this, select **Red-eye** or **Red-eye Fix**. Refer to flash options in "Using the flash".




Using the flash







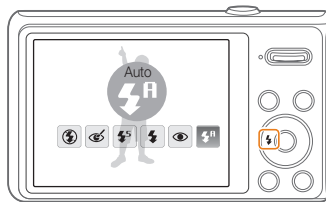


Use the flash when taking photos in the dark or when you need more light in your photos.

1 In Shooting mode, press [⚡].



2 Select an option.

Option	Description
	Off: <ul style="list-style-type: none">The flash does not fire.The camera displays the camera shake warning (👉) when you are shooting in low light.
	Red-eye Fix*: <ul style="list-style-type: none">The flash fires twice when the subject or background is dark.The camera corrects red-eyes through its advanced software analysis.

Option	Description
	<p>Slow Sync:</p> <ul style="list-style-type: none"> The flash fires and the shutter stays open longer. This option is recommended when you want to capture ambient light to reveal more details in the background. Use a tripod to prevent your photos from blurring. The camera will display the shake warning () when you are shooting in low light.
	<p>Fill in:</p> <ul style="list-style-type: none"> The flash always fires. The camera adjusts light intensity automatically.
	<p>Red-eye*:</p> <ul style="list-style-type: none"> The flash fires when the subject or background is dark. The camera reduces red-eyes.
	<p>Auto: The flash fires automatically when the subject or background is dark.</p>
	<p>Auto: The camera selects a proper flash setting for the scene it detects in the  mode.</p>

The options may differ depending on the shooting mode.

* There is an interval between two bursts of the flash. Do not move until the flash fires a second time.




- Flash options are not available if you set **Continuous**, **Motion Capture**, **AEB** options or select **Blink Detection**.
- Make sure that your subjects are within the recommended distance from the flash. (p. 109)
- If light from the flash is reflected or there is a large amount of dust in the air, tiny spots may appear in your photo.


Adjusting the ISO speed

The ISO speed is the measure of a film's sensitivity to light as defined by the International Organization for Standardization (ISO). The higher ISO speed you select, the more sensitive to light your camera becomes. With a higher ISO speed, you can get a better photo without using the flash.

- In Shooting mode, press [**MENU**].
- Select **Shooting** → **ISO** → an option.

- Select  to use an appropriate ISO speed based on the brightness of the subject and lighting.



- The higher ISO speed you select, the more image noise you may get.
- When you select **Motion Capture**, the camera sets the ISO speed to **Auto**.
- When the  is selected, the image size is fixed to under 3M.

Changing the camera's focus

Learn how to adjust the camera's focus.

Using macro


Use macro to take close-up photos of subjects, such as flowers or insects. Refer to macro options in "Using auto focus".




- Try to hold the camera very still to prevent blurry photos.
- Turn off the flash if the distance to the subject is less than 16 in. (40 cm.)




Using auto focus

To take sharp photos, select the appropriate focus according to your distance from the subject.

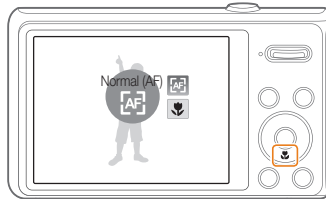1 In Shooting mode, press .



2 Select an option.

Option	Description
	Normal (AF): Focus on a subject farther than 31.5 in. (80 cm) from the camera. Farther than 39 in. (100 cm) when using the zoom.
	Macro: Focus on a subject 2 in. to 31.5 in. (5 - 80 cm) from the camera.
	Auto Macro: <ul style="list-style-type: none">• Automatically focus on a subject farther than 2 in. (5 cm) away. Farther than 39 in. (100 cm) away when you use the zoom.• It is set automatically in some shooting modes.

The options may differ depending on the shooting mode.


Using tracking auto focus

Tracking AF allows you to track and auto focus on your subject, even when you are moving.

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Focus Area** → **Tracking AF**.

- 3 Focus on the subject you want to track, and then press [**OK**].

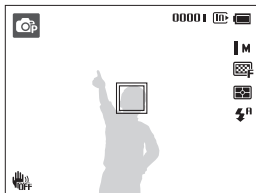

- A focus frame appears on the subject and follows the subject as you move the camera.



- The white frame means that your camera is tracking the subject.
- The green frame means that your subject is in focus when you half-press [**Shutter**].

- 4 Press [**Shutter**] to capture the photo.






- If you do not select a focus area, the focus frame will appear in the center of the screen.
- Tracking a subject may fail when:
 - the subject is too small or the subject moves excessively
 - the subject is backlit or you are shooting in a dark place
 - colors or patterns on the subject and the background are the same
 - the camera shakes excessively
- When tracking a subject fails, the focus frame will appear as a white single-line frame ().
- If the camera fails to track the subject, you must reselect the subject to track.
- If the camera fails to fix the focus, the focus frame changes to a red, single-line frame ().
- If you use this function, you cannot set self timer options, Face Detection options and Smart Filter options.

Adjusting the focus area

You can get clearer photos by selecting an appropriate focus area according to your subject's location in the scene.

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Focus Area** → an option.

Option	Description
	Center AF: Focus on the center. Suitable when subjects are located in the center.
	Multi AF: Focus on one or more of 9 possible areas.
	Tracking AF: Focus on and track the subject. (p. 52)

The options may differ depending on the shooting mode.



Using face detection


If you use Face Detection options, your camera can automatically detect a human face. When you focus on a human face, the camera adjusts the exposure automatically. Take photos quickly and easily by using **Blink Detection** to detect closed eyes or **Smile Shot** to capture a smiling face. You can also use **Smart Face Recognition** to register faces and prioritize the focus on them.



- The camera automatically tracks the registered face.
- Face detection may not be effective when:
 - the subject is far from the camera
 - it is too bright or too dark
 - the subject is not facing the camera
 - the subject is wearing sunglasses or a mask
 - the subject is in backlit or the lighting condition is unstable
 - the subject's facial expression changes remarkably
- Face detection is not available when using a smart filter effect, or image adjustment option or when used with **Tracking AF**.
- Depending on the shooting options you selected, available Face Detection options may differ.
- Depending on the Face Detection options you selected, the timer function may not be available.
- When you set Face Detection options, the AF area is automatically set to Multi AF.
- Depending on the Face Detection options you selected, Burst options may not be available.
- When you set Smart Face Recognition option and capture photos of detected faces, they will be registered in the face list.
- You can view registered faces in order of priority in Playback mode. (p. 69) Even though faces are registered successfully, they may not be classified in Playback mode.
- A face detected with Smart Face Recognition option may not appear in the face list or Smart Album.

Detecting faces

Your camera automatically detects human faces (up to 10 faces in one scene).

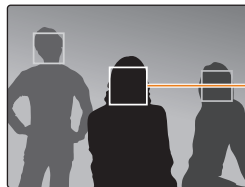

The nearest face appears in a white focus frame and the rest of the faces appear in gray focus frames.


- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Face Detection** → **Normal**.



- The closer you are to the subject, the quicker your camera detects faces.
- If you have set Burst options, the camera may not register detected faces.

Taking a smile shot

The camera automatically releases the shutter when it detects a smiling face.

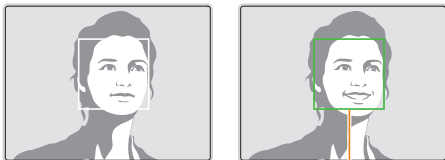


When your subject smiles broadly, your camera can detect the smile more easily.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Face Detection** → **Smile Shot**.
- 3 Compose your shot.
 - The camera automatically releases the shutter when it detects a smiling face.

Detecting eye blinking


If your camera detects closed eyes, it automatically takes two photos in succession.

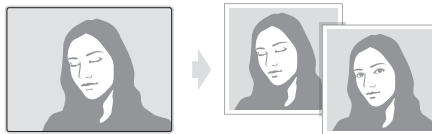



- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Face Detection** → **Blink Detection**.

Using smart face recognition

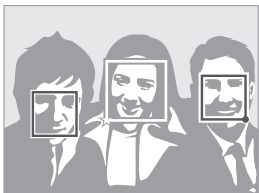The camera automatically registers faces that you frequently photograph (up to 10 people). This feature will automatically prioritize the focus on those faces. This feature is available only when you use a memory card.



- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Face Detection** → **Smart Face Recognition**.

- The nearest face appears in a white focus frame and the rest of the faces appear in gray focus frames.
-  : Indicate favorite faces (To register favorite faces, see page 57).
-  : Indicate faces that the camera automatically registers.




- The camera may recognize and register faces incorrectly depending on lighting conditions, remarkable changes in the subject's pose or face, and whether or not the subject is wearing glasses.
- The camera can automatically register up to 12 faces. If the camera recognizes a new face when there are 12 registered faces, it will replace the face in the lowest priority with the new one.
- The camera can detect up to 5 faces in one scene.

Registering faces as your favorites (My Star)

You can register your favorite faces to prioritize the focus and exposure on those faces. This feature is available only when you use a memory card.

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Smart FR Edit** → **My Star**.
- 3 Align your subject's face with the oval guideline and press **[Shutter]** to register the face.

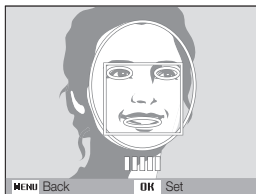

- Capture photos of one person at a time when registering faces.
- Capture 5 photos the subject's face for best results: one each from the front, left, right, above, and below.
- When capturing photos from the left, right, above, and below, instruct the subject not to turn his or her face more than 30 degrees.
- You can register a face even if you capture only one photo of the subject's face.

- 4 When you are finished taking the photos, the face list appears.

- Your favorite faces are indicated with a ★ on the face list.



- You can register up to 8 favorite faces.
- The flash option will be set to **Off**.
- If you register the same face twice, you can delete one of the faces in the face list.

Viewing your favorite faces

- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Smart FR Edit** → **Face List**.



- To change the ranking of the favorite faces, press **[Fn]** and select **Edit Ranking**. (p. 69)
- To cancel the favorite faces, press **[Fn]** and select **Delete**. (p. 70)

Adjusting brightness and color

Learn how to adjust the brightness and color for better image quality.

Adjusting the exposure manually

(EV)  

Depending on the intensity of the ambient light, your photos may be too bright or dark. In these cases, you can adjust the exposure to get a better photo.



Darker (-)



Neutral (0)




Brighter (+)

1 In Shooting mode, press **[MENU]**.

2 Select **Shooting** or **Movie** → **EV**.

3 Select a value to adjust the exposure.

- The photo will be brighter as exposure increases.
- When you adjust the exposure value, the icon will appear as shown below.

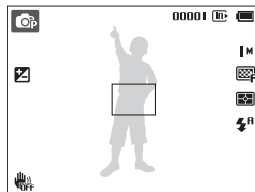

- Once you adjust the exposure, the setting will remain the same. You may need to change the exposure value later to avoid overexposure or underexposure.
- If you cannot decide on an appropriate exposure, select **AEB** (Auto Exposure Bracket). The camera takes three photos, each with a different exposure: normal, underexposed, and overexposed. (p. 62)

Compensating for backlighting (ACB)

When the light source is behind your subject or there is high contrast between your subject and the background, your subject is likely to appear dark in the photo. If this occurs, turn the Auto Contrast Balance (ACB) option on.



Without ACB



With ACB

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **ACB** → an option.

Option	Description
 Off:	ACB is off.
 On:	ACB is on.






The ACB feature is not available when you set **Continuous, Motion Capture, AEB** options.

Changing the metering option

The metering mode refers to the way in which a camera measures the quantity of light. The brightness and lighting of your photos will vary depending on the metering mode you select.

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** or **Movie** → **Metering** → an option.

Option	Description
	Multi: <ul style="list-style-type: none">• Your camera divides the scene into several areas, and then measures the light intensity of each area.• Suitable for general photos.
	Spot: <ul style="list-style-type: none">• Your camera measures only the light intensity of the very center of the frame.• If a subject is not in the center of the scene, your photo may be improperly exposed.• Suitable for a subject with backlighting.
	Center-weighted: <ul style="list-style-type: none">• Your camera averages the meter reading of the entire frame with emphasis placed on the center.• Suitable for photos with subjects in the center of the frame.

Selecting a light source (White balance)

The color of your photo depends on the type and quality of the light source. If you want the color of your photo to be realistic, select a white balance setting that matches the lighting conditions, such as Auto WB, Daylight, Cloudy, or Tungsten.



 (Auto WB)



 (Daylight)










 (Cloudy)




 (Tungsten)

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** or **Movie** → **White Balance** → an option.

Icon	Description
	Auto WB: Automatically sets the white balance based on the lighting conditions.
	Daylight: Select when taking outdoor photos on a sunny day.
	Cloudy: Select when taking outdoor photos on a cloudy day or in shadows.
	Fluorescent_H: Select when shooting under a daylight fluorescent or three-way fluorescent light.
	Fluorescent_L: Select when shooting under white fluorescent light.
	Tungsten: Select when taking indoor photos under incandescent bulbs or halogen lamps.
	Measure: Shutter (Custom Set): Use white balance settings you defined. (p. 61)

Defining your own white balance

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** or **Movie** → **White Balance** → **Measure: Shutter (Custom Set)**.
- 3 Aim the lens at a piece of white paper.

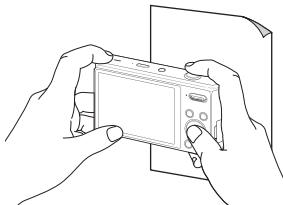

- 4 Press [**Shutter**].



Using burst modes

It can be difficult to take photos of fast-moving subjects or capture natural facial expressions and gestures of your subjects in photos. In these cases, select one of the burst modes to take multiple pictures rapidly.




- 1 In Shooting mode, press **[MENU]**.
- 2 Select **Shooting** → **Drive** → an option.

Option	Description
	Single: Take a single photo.
	Continuous: <ul style="list-style-type: none">• While you are pressing [Shutter], the camera takes photos continuously.• The maximum number of photos depends on the capacity of your memory card.

Option	Description
	Motion Capture: <ul style="list-style-type: none">• While you are pressing [Shutter], the camera takes VGA photos (6 photos per second; maximum of 30 photos).
	AEB: <ul style="list-style-type: none">• Take 3 photos with different exposures: normal, underexposed, and overexposed.• Use a tripod to prevent blurry photos.

The options may differ depending on the shooting mode.

-  You can use the flash, timer, ACB, and Smart Filter only when you select **Single**.
- When you select **Motion Capture**, the resolution is set to VGA and the ISO speed is set to **Auto**.
- Depending on the face detection option you selected, some burst options are not available.

Improving your photos

Learn how to improve your photos by applying smart filter effects, or make some adjustments.

Applying smart filter effects

Apply various filter effects to your photos to create unique images.



Miniature



Vignetting














Fish-eye











Sketch






- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** or **Movie** → **Smart Filter**.
- 3 Select an effect.

Available filters in Program mode

Icon	Description
	Normal: No effect.
	Miniature: Apply a tilt-shift effect to make the subject appear in miniature.
	Vignetting: Apply the retro-looking colors, high contrast, and strong vignette effect of Lomo cameras.
	Half Tone Dot: Apply a halftone effect.
	Sketch: Apply a pen sketch effect.
	Fish-eye: Blacken the edges of the frame and distort objects to imitate the visual effect of a fisheye lens.
	Defog: Make a photo clearer.
	Classic: Apply a black and white effect.
	Retro: Apply a sepia tone effect.
	Negative: Apply a negative film effect.
	Custom RGB: Customize a color value.


Available filters in Movie mode

Icon	Description
	Normal: No effect.
	Palette Effect 1: Create a vivid look with sharp contrast and red color.
	Palette Effect 2: Making scenes clean and clear by applying a soft blue tone.
	Palette Effect 3: Apply a soft brown tone.
	Palette Effect 4: Create a cold and monotone effect.
	Miniature: Apply a tilt-shift effect to make the subject appear in miniature.
	Vignetting: Apply the retro-looking colors, high contrast, and strong vignette effect of Lomo cameras.
	Fish-eye: Distort close objects to imitate the visual effect of a fisheye lens.

Icon	Description
	Defog: Make a photo clearer.
	Classic: Apply a black and white effect.
	Retro: Apply a sepia tone effect.
	Negative: Apply a negative film effect.
	Custom RGB: Customize a color value.

Defining your own RGB tone

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** or **Movie** → **Smart Filter** → **Custom RGB**.
- 3 Select a color (R: Red, G: Green, B: Blue).

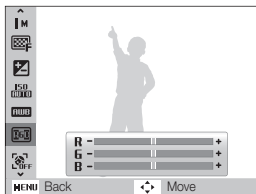

- 4 Adjust the amount of the selected color.
(-: less or +: more)
- 5 Select [**OK**].



- If you select **Miniature** when you are recording a video, the speed of the video playing time will increase.
- If you select **Miniature** when you are recording a video, the camera will not record sound.
- If you select **Miniature**, **Vignetting**, **Fish-eye** or **Defog** while recording a video, the recording speed will be set to $\frac{15}{1}$ and the recording resolution will be set to less than **640**.
- If you set Smart Filter effects, you cannot use the Face Recognition options, ACB, burst options, Image Adjustment options, Intelli zoom or Tracking AF.
- When you select **Sketch**, the resolution will change to **5M** and below.

Adjusting your photos

Adjust the contrast, sharpness, and saturation of your photos.

- 1 In Shooting mode, press [**MENU**].
- 2 Select **Shooting** → **Image Adjust**.
- 3 Select an adjustment option.
 - Contrast
 - Sharpness
 - Saturation
- 4 Select a value to adjust the selected item.

Contrast option	Description
-	Decrease the color and brightness.
+	Increase the color and brightness.

Sharpness option	Description
-	Soften the edges on your photos. Suitable for editing the photos on your computer.
+	Sharpen the edges to improve the clarity of your photos. This may also increase the noise on your photos.

Saturation option	Description
-	Decrease the saturation.
+	Increase the saturation.



- Select **0** if you do not want to apply any effects (suitable for printing).
- If you use this function, you cannot set the face recognition and smart filter options.

Playback/Editing

Learn how to play back photos or videos, and edit photos or videos. Also, learn how to connect your camera to your computer, photo printer, or TV.

Playing back	68	Transferring files to your Windows	
Starting Playback mode	68	computer	83
Viewing photos	73	Transferring files using Intelli-studio	84
Playing a video	75	Transferring files by connecting the camera	
Editing a photo	77	as a removable disk	86
Resizing photos	77	Disconnecting the camera	
Rotating a photo	77	(for Windows XP)	87
Applying smart filter effects	78	Transferring files to your Mac computer ...	88
Correcting exposure problems	79	Printing photos with a PictBridge photo	
Creating a print order (DPOF)	81	printer	89
Viewing files on a TV	82		

Playing back

Learn how to play back photos or videos and how to manage files.

Starting Playback mode


View photos or play videos stored in your camera.

- 1 Press [▶].
 - The most recent file will be displayed.
 - If the camera is off, it will turn on and display the most recent file.
- 2 Press [⚡] or [☺] to scroll through files.
 - Press and hold to scroll through files quickly.



- If you want to view files stored in the internal memory, remove your memory card.
- You may not be able to edit or play back files that were captured with other cameras, due to unsupported sizes (image size, etc) or codecs. Use a computer or another device to edit or play back these files.

Display in Playback mode

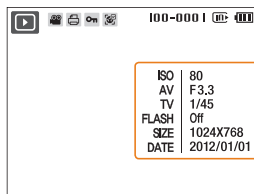

Information

Icon	Description
	Video file
	Print order has been set (DPOF)
	Protected file
	Photo includes a registered face; Available only when you use a memory card
100-0001	Folder name – File name



To display file information on the screen, press [DISP].

Video file information




Icon	Description
	Video file
00:00:20	Video length

Ranking your favorite faces

You can rank your favorite faces. This feature is available only when you use a memory card.

- 1 In Playback mode, press [**MENU**].
- 2 Select **File Options** → **Face List Edit** → **Edit Ranking**.
- 3 Select a face from the list and press [**OK**].

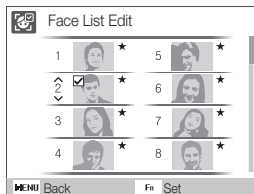

- 4 Press [**DISP**] or [] to change the ranking of the face, and press [**Fn**].

Canceling your favorite faces


You can delete your favorite faces. This feature is available only when you use a memory card.

- 1 In Playback mode, press **[MENU]**.
- 2 Select **File Options** → **Face List Edit** → **Delete**.
- 3 Select a face and press **[OK]**.
- 4 Press **[Fn]**.
- 5 Select **Yes**.

Viewing files by category in Smart Album

View and manage files by categories, such as date, file type, or week.

- 1 In Playback mode, push **[Zoom]** down.
- 2 Press **[MENU]**.
- 3 Select a category.

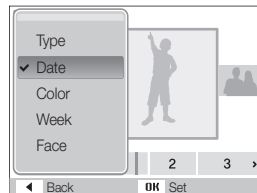

Option	Description
Type	View files by file type.
Date	View files by the date they were saved.
Color	View files by the dominant color of the image.
Week	View files by the weekday they were saved.
Face	View files by recognized faces and favorite faces. (Up to 20 people)

- 4 Press [**W**] or [**Q**] to scroll through files.
- Press and hold to scroll through files quickly.
- 5 Press [**OK**] to return to the normal view.




- When selecting **Color, Etc** is shown if color is not extracted.
- It may take some time for the camera to open Smart Album or to change the category and recognize files.
- The front display may not activate after you access Smart Album.

Viewing files as thumbnails

Scan thumbnails of files.



In Playback mode, push [**Zoom**] down to view thumbnails (9 at a time). Push [**Zoom**] down once or twice more to display more thumbnails (20 at a time). Push [**Zoom**] up to return to the previous view.

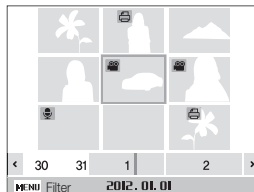


To	Do this
Scroll through files	Press [DISP], [W], [Q] or [Q].
Delete files	Press [Fn], and then select Yes .

Protecting files

Protect your files from accidental deletion.

- 1 In Playback mode, press [**MENU**].
- 2 Select **File Options** → **Protect** → **Select**.
 - To protect all files, select **All** → **Lock**.
- 3 Select the file you want to protect, and then press [**OK**].
 - Press [**OK**] again to cancel your selection.

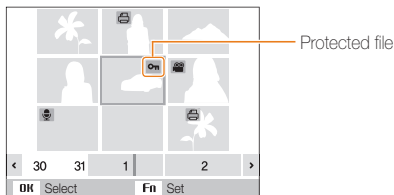

- 4 Press [**Fn**].



You cannot delete or rotate a protected file.

Deleting files

Delete single files or all files at once.

Deleting a single file

You can select one file, and then delete it.

- 1 In Playback mode, select a file, and then press [**Fn**].
- 2 When the pop-up message appears, select **Yes**.

Deleting multiple files

You can select multiple files, and then delete them at once.

- 1 In Playback mode, press [**Fn**].
- 2 When the pop-up message appears, select **Multiple Delete**.
- 3 Select the files you want to delete, and then press [**OK**].
 - Press [**OK**] again to cancel your selection.
- 4 Press [**Fn**].
- 5 When the pop-up message appears, select **Yes**.

Deleting all files

You can select all files, and then delete them at once.

- 1 In Playback mode, press [**MENU**].
- 2 Select **File Options** → **Delete** → **All**.
- 3 When the pop-up message appears, select **Yes**.

Copying files to the memory card

You can copy files from the internal memory to a memory card.

- 1 In Playback mode, press [**MENU**].
- 2 Select **File Options** → **Copy to Card**.
- 3 Select **Yes** to copy files.

Viewing photos


Zoom in on part of a photo or view photos in a slide show.

Enlarging a photo



In Playback mode, push [**Zoom**] up to enlarge a portion of the photo. Push [**Zoom**] down to zoom out.

The enlarged area and zoom ratio are indicated on the top of the screen. The maximum zoom ratio may vary depending on the resolution.

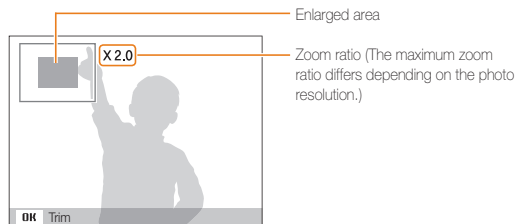

To	Do this
Move the enlarged area	Press [DISP], [ , [] or [].
Trim the enlarged photo	Press [OK]. The trimmed photo is saved as a new file.



When you view photos that were captured by another camera, the zoom ratio may differ.

Starting a slide show

Apply effects and audio to a slide show of your photos. The slide show function does not work for videos or voice memos.

- 1 In Playback mode, press [**MENU**].
- 2 Select **Multi Slide Show**.

3 Select a slide show effect option.

- Skip to step 4 to start a slide show with no effects.

Option	Description
Start	Set whether or not to repeat the slide show. (Play, Repeat)
Images	Select the photos you want to view as a slide show. <ul style="list-style-type: none"> • All: View all photos in a slide show. • Date: View photos captured on a specific date in a slide show. • Select: View selected photos in a slide show.
Interval	<ul style="list-style-type: none"> • Set the interval between photos. • This is available when you select Off in the Effect option. See below.
Music	Select a background audio.
Effect	<ul style="list-style-type: none"> • Select a transition effect. • Select Off for no effects. • When you use the Effect option, the interval between photos will be set to 1 second.

4 Select **Start** → **Play**.

- To loop the slide show, select **Repeat**.

5 View the slide show.

- Press [**OK**] to pause the slide show.
- Press [**OK**] again to resume the slide show.



To stop the slide show and switch to Playback mode, press [**OK**], and then [**⏮**] or [**⏭**].

Playing a video

You can play a video, capture an image from a video.

1 In Playback mode, select a video, and then press [**OK**].




Current playback time

2 Use the following buttons to control playback.

To	Description
Scan backward	Press [⏮].
Pause or resume playback	Press [OK].
Scan forward	Press [⏭].
Adjust the volume level	Push [Zoom] up or down.

Capturing an image during playback

- 1 Press [**OK**] at the point where you want to save a still image.
- 2 Press [.



A captured image has the same resolution as the original video file and is saved as a new file.




Editing a photo


Perform photo editing tasks, such as resizing, rotating, eliminating red-eyes, and adjusting brightness, contrast, or saturation.

- The camera saves edited photos as new files.
- When you edit photos, the camera will automatically convert them to a lower resolution. Photos that you rotate or resize manually are not automatically converted to a lower resolution. Rotated photos overwrite the original files.

Resizing photos

Change the size of a photo and save it as a new file. You can set a photo to be displayed when the camera turns on.


- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Resize** → an option.
 - Select  to save the photo as a start image. (p. 93)

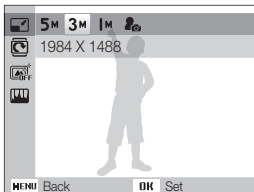

- Available options differ depending on the size of the selected photo.

Rotating a photo

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Rotate** → an option.

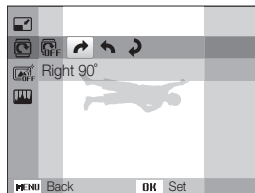


- The rotated photo will be saved as the same file, not a new file.

Applying smart filter effects

Apply various filter effects to your photos to create unique images.

- 1 In Playback mode, select a photo and press [MENU].
- 2 Select **Edit** → **Smart Filter**.
- 3 Select an effect.

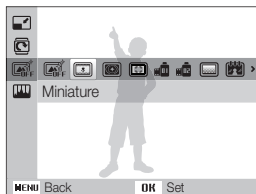


Icon	Description
	Normal: No effect.
	Miniature: Apply a tilt-shift effect to make the subject appear in miniature.
	Vignetting: Apply the retro-looking colors, high contrast, and strong vignette effect of Lomo cameras.
	Soft Focus: Hide facial imperfections or apply dreamy effects.

Icon	Description
	Old Film 1: Apply a vintage film effect 1.
	Old Film 2: Apply a vintage film effect 2.
	Half Tone Dot: Apply a halftone effect.
	Sketch: Apply a pen sketch effect.
	Fish-eye: Blacken the edges of the frame and distort objects to imitate the visual effect of a fisheye lens.
	Defog: Make a photo clearer.
	Classic: Apply a black and white effect.
	Retro: Apply a sepia tone effect.
	Negative: Apply a negative film effect.
	Custom RGB: Customize a color value.

Defining your own RGB tone

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Smart Filter** → **Custom RGB**.
- 3 Select a color (R: Red, G: Green, B: Blue).

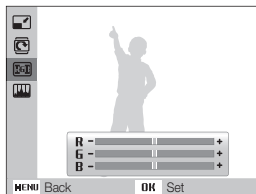

- 4 Adjust the amount of the selected color.
(-: less or +: more)
- 5 Press **[OK]** to save.

Correcting exposure problems

Adjust ACB (Auto Contrast Balance), brightness, contrast, or saturation; remove red-eye; hide facial imperfections; or add noise to the photo. The camera will save an edited photo as a new file, but may convert it to a lower resolution.

Adjusting ACB (Auto Contrast Balance)

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Image Adjust** → **ACB**.
- 3 Press **[OK]** to save.

Removing red-eye




- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Image Adjust** → **Red-eye Fix**.
- 3 Press **[OK]** to save.

Hiding facial imperfections

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Image Adjust** → **Face Retouch**.
- 3 Select a level.
 - As the number increases, the skin tone becomes brighter and smoother.
- 4 Press **[OK]** to save.

Adjusting brightness/contrast/saturation

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Image Adjust**.
- 3 Select an adjustment option.

Icon	Description
	Brightness
	Contrast
	Saturation



- 4 Select a value to adjust the selected item.
(-: less or +: more)
- 5 Press **[OK]** to save.

Adding noise to the photo

- 1 In Playback mode, select a photo, and then press **[MENU]**.
- 2 Select **Edit** → **Image Adjust** → **Add Noise**.
- 3 Press **[OK]** to save.

Creating a print order (DPOF)

Select photos to print and save print options in the Digital Print Order Format (DPOF). This information is saved in the MISC folder on your memory card for convenient printing on DPOF-compatible printers.

- 1 In Playback mode, press [**MENU**].
- 2 Select **File Options** → **DPOF** → **Standard** → **Select**.
 - Select **All** to print all photos.
- 3 Select a photo to print, push [**Zoom**] up or down to select the number of copies, and then press [**Fn**].
 - If you select **All**, press [**DISP**] or [] to select the number of copies, and then press [**OK**].
- 4 Press [**MENU**].
- 5 Select **File Options** → **DPOF** → **Size** → **Select**.
 - Select **All** to choose the print size for all photos.
- 6 Select a photo to print, push [**Zoom**] up or down to select the print size, and then press [**Fn**].
 - If you select **All**, press [**DISP**] or [] to select the print size, and then press [**OK**].

Printing photos as thumbnails

Print photos as thumbnails to check all the photos at once.

- 1 In Playback mode, press [**MENU**].
- 2 Select **File Options** → **DPOF** → **Index**.
- 3 When the pop-up message appears, select **Yes**.




- You can take the memory card to a print shop that supports DPOF (Digital Print Order Format) or you can print photos directly through a DPOF-compatible printer at home.
- Photos with dimensions that are wider than the paper may be cut off on the left and right edges. Ensure that your photo dimensions are compatible with the paper you select.
- You cannot set the DPOF for the photos stored in the internal memory.
- If you specify the print size, you can print photos only with DPOF 1.1-compatible printers.

Viewing files on a TV

Play back photos or videos by connecting your camera to a TV using the A/V cable.

- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select **Settings** → **Video Out**.
- 3 Select a video signal output according to your country or region. (p. 95)
- 4 Turn off your camera and TV.
- 5 Connect your camera to your TV using the A/V cable.
- 6 Turn on your TV, and then select the video output mode using the TV remote control.
- 7 Turn on your camera.
 - The camera automatically enters into Playback mode when you connect it to a TV.
- 8 View photos or play videos using the buttons on your camera.

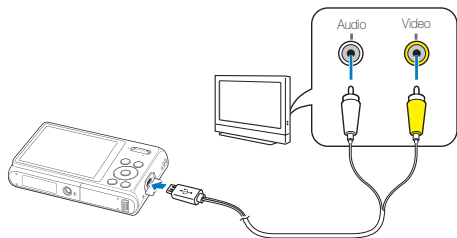

- On some TVs, digital noise may occur or part of an image may not appear.
- Images may not appear centered on the TV screen depending on your TV settings.

Transferring files to your Windows computer

Transfer files to your Windows computer, edit them with Intelli-studio, and upload them to the web.

Requirements for Intelli-studio

Item	Requirements
CPU	Intel Pentium 4, 3.2 GHz or higher/ AMD Athlon™ FX 2.6 GHz or higher
RAM	Minimum 512 MB RAM (1 GB and above recommended)
OS	Windows XP SP2/Vista/7
Hard disk capacity	250 MB or more (1 GB or more recommended)
Others	<ul style="list-style-type: none">• nVIDIA Geforce 7600GT or higher/ATI X1600 series or higher• 1024 x 768 pixels, 16-bit color display compatible monitor (1280 x 1024 pixels, 32-bit color display recommended)• USB 2.0 port, Microsoft DirectX 9.0c or later

* A 32-bit version of Intelli-studio will be installed—even on 64-bit editions of Windows XP, Windows Vista, and Windows 7.



- The requirements are recommendation only. It may not work properly even when the computer meets the requirements, depending on the condition of your computer.
- If your computer does not meet the requirements, videos may not play correctly or it may take longer to edit videos.
- Install DirectX 9.0c or above before you use the program.
- Your computer must have Windows XP/Vista/7 or Mac OS 10.4 or later for you to connect the camera to the computer as a removable disk.



Using a self-assembled PC or a PC and OS that are not supported may void your warranty.

Transferring files using Intelli-studio

You can download Intelli-studio from the linked webpage and install it on your computer. When you connect the camera to a computer with Intelli-studio installed, the program will launch automatically.




The battery charges while the camera is connected to a computer with the USB cable.

- 1 In Shooting or Playback mode, press [**MENU**].
- 2 Select **Settings** → **PC Software** → **On**.
- 3 Turn off the camera.
- 4 Connect the camera to your computer with the USB cable.



When connecting the USB cable to the camera, be sure to insert the correct USB cable connector into the camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.

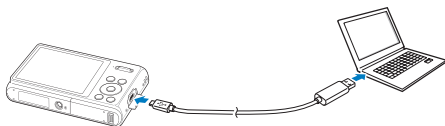

5 Turn on the camera.

- When the Intelli-studio installation pop-up appears on the computer screen, follow the on-screen instructions to complete the installation.
- Once the Intelli-studio is installed on your computer, the computer recognizes the camera and launches the Intelli-studio automatically.




If you set the USB option to **Select Mode**, select **Computer** in the pop-up window.

6 Select a destination folder on your computer, and then select **Yes**.

- New files stored on the camera will automatically transfer to the selected folder.
- If your camera has no new files, the pop-up window for saving new files will not appear.




For Windows Vista and Windows 7, select **Run iLinker.exe** from the Auto Play window to start Intelli-studio. If **Run iLinker.exe** does not appear on the computer, click  → **Computer** → **Intelli-studio**, and then follow the on-screen instructions to complete the Intelli-studio installation.

Using Intelli-studio

Intelli-studio allows you to play back and edit files. For details, select **Help** → **Help** from the program toolbar.



- You can update the firmware of your camera by selecting **Web Support** → **Upgrade firmware for the connected device** from the program toolbar.
- You can download short animations for use in Children mode.
- You cannot edit files directly on the camera. Transfer files to a folder on your computer before editing.
- Intelli-studio supports the following formats:
 - Videos: MP4 (Video: H.264, Audio: AAC), WMV (WMV 7/8/9), AVI (MJPEG)
 - Photos: JPG, GIF, BMP, PNG, TIFF

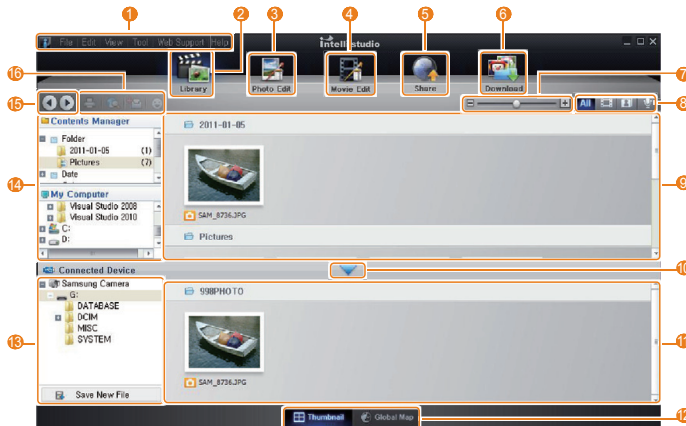

No.	Description
1	Open menus
2	Display files in the selected folder
3	Change to the Photo edit mode
4	Change to the Video edit mode
5	Change to the Sharing mode (You can send files by email or upload files to websites, such as Flickr or YouTube.)
6	Download short animations for use in Children mode
7	Enlarge or reduce the thumbnails in the list
8	Select a file type
9	View files of the selected folder on your computer
10	Show or hide files of the connected camera
11	View files of the selected folder on the camera
12	View files as thumbnails or on a map
13	Browse folders in the connected device
14	Browse folders in your computer
15	Move to the previous or next folder
16	Print files, view files on a map, store files in My Folder, or register faces


Transferring files by connecting the camera as a removable disk

Connect the camera to your computer as a removable disk.

- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select **Settings** → **PC Software** → **Off**.
- 3 Turn off the camera.
- 4 Connect the camera to your computer with the USB cable.



When connecting the USB cable to the camera, be sure to insert the correct USB cable connector into the camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.

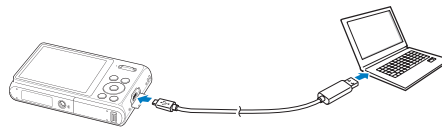

5 Turn on the camera.

- The computer recognizes the camera automatically.




If you set the USB option to **Select Mode**, select **Computer** in the pop-up window.

6 On your computer, select **My Computer** → **Removable Disk** → **DCIM** → **100PHOTO**.

7 Select the files you want and drag or save them to your computer.

Disconnecting the camera (for Windows XP)

The way to disconnect the USB cable for Windows Vista/7 is similar.

- 1 If the status lamp on your camera is blinking, wait until it stops.
- 2 Click  on the tool bar at the bottom right of your PC screen.



- 3 Click the pop-up message.
- 4 Click the message box indicating safely removed.
- 5 Remove the USB cable.



The camera may not be removed safely when Intelli-studio is running. End the program before disconnecting the camera.

Transferring files to your Mac computer

When you connect the camera to a Macintosh computer, the computer recognizes the camera automatically. You can transfer files directly from the camera to the computer without installing any programs.




Mac OS 10.4 or later is supported.

1 Connect your camera to a Macintosh computer with the USB cable.



When connecting the USB cable to the camera, be sure to insert the correct USB cable connector into the camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.

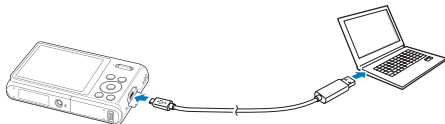

2 Turn on the camera.

- The computer recognizes the camera automatically and displays a removable disk icon.



If you set the USB option to **Select Mode**, select **Computer** in the pop-up window.


3 Double-click the removable disk icon.

4 Transfer photos or videos to the computer.

Printing photos with a PictBridge photo printer


Print photos with a PictBridge-compatible printer by connecting your camera directly to the printer.



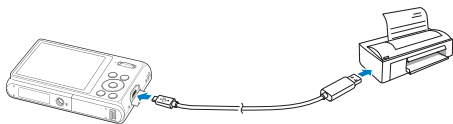



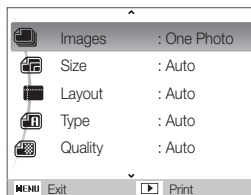

- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select **Settings** → **USB** → **Printer**.
- 3 With the printer on, connect your camera to the printer with the USB cable.



- 4 Turn on your camera.
 - The printer recognizes the camera automatically.
- 5 Press [**⚡**] or [**☺**] to select a photo.
 - Press **[MENU]** to set printing options. See "Configuring print settings".
- 6 Press **[OK]** to print.
 - Printing starts. Press [**⚡**] to cancel printing.

Configuring print settings



Option	Description
	Images: Select whether to print the current photo or all photos.
	Size: Specify the size of the print.
	Layout: Create thumbnail prints.
	Type: Select the type of paper.
	Quality: Set the printing quality.
	Date: Set to print the date.
	File Name: Set to print the name of the file.
	Reset: Reset the print options.



Some options are not supported by some printers.

Settings

Refer to options to configure your camera's settings.


Camera settings menu	91
Accessing the settings menu	91
Sound	92
Front Display Settings	92
Display	93
Settings	94

Camera settings menu

Learn about various options to configure your camera's settings.

Accessing the settings menu

- 1 In Shooting or Playback mode, press **[MENU]**.
- 2 Select a menu.

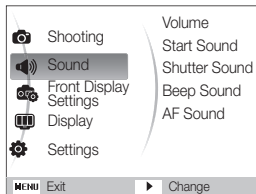


Option	Description
Sound	Set various camera sounds and the volume. (p. 92)
Front Display Settings	Customize the front display settings. (p. 92)
Display	Customize the main display settings. (p. 93)
Settings	Customize the settings for the camera system, such as memory format, default file name, and USB mode. (p. 94)




You can customize the front display settings only when you access the settings menu from the Shooting mode.

- 3 Select an item.

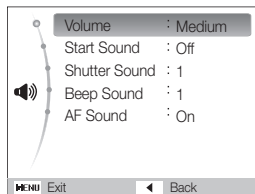

- 4 Select an option.

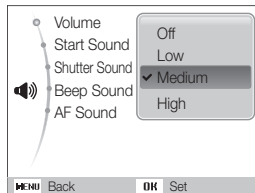

- 5 Press **[MENU]** to return to the previous screen.


Sound

* Default

Item	Description
Volume	Adjust the volume of any sound. (Off, Low, Medium*, High)
Start Sound	Select the sound the camera emits when you turn it on. (Off*, 1, 2, 3)
Shutter Sound	Select the sound the camera emits when you press the shutter button. (Off, 1*, 2, 3)
Beep Sound	Select the sound the camera emits when you press buttons or switch modes. (Off, 1*, 2, 3)
AF Sound	Select the sound the camera emits when you half-press the shutter button. (Off, On*)



Front Display Settings

* Default


Item	Description
Front Smile Shot	Set the camera to automatically release the shutter when it detects a smiling face in Self Shot mode. (Off*, On)
Children Smile Shot	Set the camera to automatically release the shutter when it detects a smiling face in Children mode. (Off*, On)
Children Sound	Set a sound the camera emits in Children mode. (Off, 1*, 2, 3, 4, 5)
Front Display Demo	Set the camera to play the animation with sound through the front display when you turn it on (for shop display). (Off*, On)  <ul style="list-style-type: none"> In Demo mode, you cannot capture photos or record videos. Press [Shutter] to switch to Shooting mode. The Demo mode is not available if you turn on the camera in Playback mode or when the camera is connected to another device.

Display

* Default


Item	Description
Function Description	Display a brief description of an option or menu. (Off , On *)
Start Image	<p>Set a start image to display when the camera turns on.</p> <ul style="list-style-type: none"> • Off*: Display no start image. • Logo: Display a default image stored in the internal memory. • User Image: Display the image you want. (p. 77) <p> Only one user image will be saved in the memory.</p> <ul style="list-style-type: none"> • if you select a new photo as a user image or reset your camera, the current image will be deleted.
Display Brightness	<p>Adjust the brightness of the screen. (Auto*, Dark, Normal, Bright)</p> <p> Normal is fixed in Playback mode even if you have selected Auto.</p>
Quick View	Set the duration for reviewing a captured image before returning to the Shooting mode. (Off , On *)

* Default


Item	Description
Power Save	<p>If you perform no operations for 30 seconds, the camera automatically switches to Power save mode. (Off*, On)</p> <p> In Power save mode, press any button other than [POWER] to resume using the camera.</p> <ul style="list-style-type: none"> • Even if you do not set the Power save mode, the screen will dim 30 seconds after the last operation to save power.

Settings



* Default

Item	Description
Format	<p>Format the internal memory and the memory card. Format deletes all files, including protected files. (Yes, No)</p> <p> If you use a memory card used with cameras from different manufacturers or a memory card reader, or one formatted on a computer, your camera may read the card incorrectly. Format the card before using it.</p>
Reset	<p>Reset menus and shooting options. Date and time, language, and video output settings are not reset. (Yes, No)</p>
Language	Select a language for the display text.
Time Zone	Select a region and set the daylight-saving time (DST).
Date/Time Set	Set the date and time.
Date Type	Select a date format. (YYYY/MM/DD, MM/DD/YYYY, DD/MM/YYYY, Off*)

* Default

Item	Description
File No.	<p>Specify how to name files.</p> <ul style="list-style-type: none"> • Reset: Set the file number to start from 0001 when inserting a new memory card, formatting a memory card, or deleting all files. • Series*: Set the file number to follow the previous file number when inserting a new memory card, formatting a memory card, or deleting all files. <p> • The default name of the first folder is 100PHOTO and the default name of the first file is SAM_0001.</p> <ul style="list-style-type: none"> • The file number increases one at a time from SAM_0001 to SAM_9999. • The folder number increases one at a time from 100PHOTO to 999PHOTO. • The maximum number of files that can be stored in one folder is 9999. • The camera defines file names according to the Digital rule for Camera File system (DCF) standard. If you change the names of files intentionally, the camera may not play back the files.

* Default

Item	Description
Imprint	<p>Select whether to display the date and time on your photos when printing. (Off*, Date, Date & Time)</p> <p> <ul style="list-style-type: none"> The date and time is displayed on the bottom-right corner of the photo in yellow. Some printer models may not print the date and time. If you select Text in SCENE mode or capture a photo with the front display, the camera will not display the date and time. </p>
Auto Power Off	<p>Set the camera to turn off automatically when you are not using it. (Off, 1 min, 3 min*, 5 min, 10 min)</p> <p> <ul style="list-style-type: none"> Your settings will not change after replacing the battery. The camera will not automatically turn off when: <ul style="list-style-type: none"> it is connected to a computer or printer you are playing a slide show or videos you are recording a voice memo </p>
Video Out	<p>Set the video signal output according to your region.</p> <ul style="list-style-type: none"> NTSC*: USA, Canada, Japan, Korea, Taiwan, Mexico, Etc. PAL (supports only BDGH1): Australia, Austria, Belgium, China, Denmark, Finland, Germany, England, Netherlands, Italy, Kuwait, Malaysia, New Zealand, Singapore, Spain, Sweden, Switzerland, Thailand, Norway, France, Etc.

* Default

Item	Description
AF Lamp	<p>Turn on an assistant light to help you focus in dark places. (Off, On*)</p>
USB	<p>Select the function to use when you connect the camera to a computer or printer via USB.</p> <ul style="list-style-type: none"> Computer*: Connect your camera to a computer for transferring files. Printer: Connect your camera to a printer for printing files. Select Mode: Set your camera to select a USB mode automatically.
PC Software	<p>Set Intelli-studio to launch automatically when you connect your camera to your computer. (Off, On*)</p>
Open source licenses	<p>Show information related to the open source license.</p>

Appendixes

Refer to error messages, specifications, and maintenance tips.

Error messages	97
Camera maintenance	98
Cleaning your camera	98
Using or storing the camera	99
About memory cards	100
About the battery	102
Before contacting a service center	106
Camera specifications	109
Glossary	113
FCC notice	117
Index	118

Error messages

When the following error messages appear, try these remedies.


Error message	Suggested remedies
Card Error	<ul style="list-style-type: none">• Turn off your camera, and then turn it on again.• Remove your memory card, and insert it again.• Format your memory card.
Card not supported.	The inserted memory card is not compatible with your camera. Insert a microSD, microSDHC memory card.
DCF Full Error	File names do not match the DCF standard. Transfer the files on the memory card to your computer, and then format the card.
File Error	Delete the damaged file or contact a Samsung service center.
File system not supported.	Your camera does not support the FAT file structure of the inserted memory card. Format the memory card on the camera.
Low Battery	Insert a charged battery or recharge the battery.
Memory Full	Delete unnecessary files or insert a new memory card.
No Image File	Take photos or insert a memory card that has some photos.

Camera maintenance

Cleaning your camera


Camera lens and display

Use a blower brush to remove dust, and then wipe the lens gently with a soft cloth. If any dust remains, apply lens cleaning liquid to a piece of lens cleaning paper, and then wipe gently.

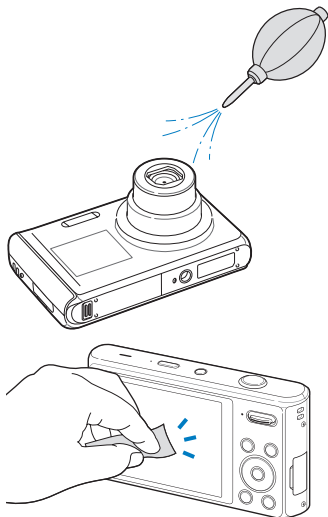

Camera body

Wipe gently with a soft, dry cloth.

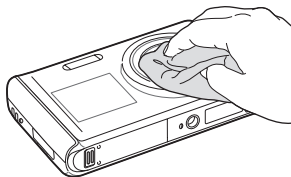

- Never use benzene, thinners, or alcohol to clean the device. These solutions can damage the camera or cause it to malfunction.
- Do not press on the lens cover or use a blower brush on the lens cover.

Using or storing the camera

Inappropriate places to use or store the camera

- Avoid exposing the camera to very cold or very hot temperatures.
- Avoid using your camera in areas with extremely high humidity, or where the humidity changes drastically.
- Avoid exposing the camera to direct sunlight and storing it in hot, poorly-ventilated areas, such as in a car during summer time.
- Protect your camera and the display from impact, rough handling, and excessive vibration to avoid serious damage.
- Avoid using or storing your camera in dusty, dirty, humid, or poorly-ventilated areas to prevent damage to moving parts and internal components.
- Do not use your camera near fuels, combustibles, or flammable chemicals. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the camera or its accessories.
- Do not store the camera where there are mothballs.

Using on beaches or shores

- Protect your camera from sand and dirt when you use it on beaches or in other similar areas.
- Your camera is not waterproof. Do not handle the battery, adapter, or memory card with wet hands. Operating the camera with wet hands may cause damage to your camera.

Storing for extended period of time

- When you store the camera for an extended period, place it in a sealed container with an absorbent material, such as silica gel.
- Remove the batteries from your camera when storing it for an extended period. Installed batteries may leak or corrode over time and cause serious damage to your camera.
- Over time, unused batteries will discharge and must be recharged before use.
- The present date and time can be initialized when the camera is turned on after the camera and battery have been separated for over 40 hours.

Use the camera with caution in humid environments

When you transfer the camera from a cold environment to a warm one, condensation can form on the lens or internal components of the camera. In this situation, turn off the camera and wait for at least 1 hour. If condensation forms on the memory card, remove the memory card from the camera and wait until all moisture has evaporated before reinserting it.

Other cautions

- Do not swing your camera by the strap. This may cause injury to yourself or others or damage to your camera.
- Do not paint your camera, as paint can clog moving parts and prevent proper operation.
- Turn off the camera while not in use.

 
- Your camera consists of delicate parts. Avoid impacts to the camera.
- Protect the display from external force by keeping it in the case when not in use. Protect the camera from scratches by keeping it away from sand, sharp implements, or loose change.
- Do not use the camera if the screen is cracked or broken. Broken glass or acrylic could cause injury to your hands and face. Take the camera to a Samsung service center to have it repaired.
- Never place cameras, batteries, chargers, or accessories near, on, or in heating devices, such as microwave ovens, stoves, or radiators. These devices may be deformed and can overheat and cause a fire or explosion.
- Do not expose the lens to direct sunlight, as this may discolor the image sensor or cause it to malfunction.
- Protect your lens from fingerprints and scratches. Clean your lens with a soft, clean, debris-free lens cloth.
- The camera may turn off if impacted from the outside. This is to protect the memory card. Turn on the camera to use it again.
- While you use the camera, it may heat up. This is normal and should not affect your camera's lifespan or performance.
- When you use the camera in low temperatures, it may take some time to turn on, the color may be changed temporarily, or after-images may appear. These conditions are not malfunctions and they will correct themselves when the camera is returned to normal temperatures.
- Paint or metal on the outside of the camera may cause allergies, itchy skin, eczema, or swelling for people with sensitive skin. If you experience any of these symptoms, stop using the camera immediately and consult a doctor.

- Do not insert foreign objects into any of your camera's compartments, slots, or access points. Damage due to improper use may not be covered by your warranty.
- Do not allow unqualified personnel to service the camera or attempt to service the camera yourself. Any damage that results from unqualified service is not covered by your warranty.

About memory cards

Supported memory cards




Your camera supports microSD (Secure Digital) or microSDHC (Secure Digital High Capacity) memory cards.



To read data with a PC or memory card reader, insert the memory card into a memory card adapter.

Memory card capacity

The memory capacity may differ depending on the scenes you shoot or the shooting conditions. These capacities are based on a 1 GB microSD card:

	Size	Super Fine	Fine	Normal	30 FPS	15 FPS
P h o t o s	16M	108	212	312	-	-
		123	241	353	-	-
		144	283	417	-	-
	10M	170	332	482	-	-
	5M	328	624	882	-	-
	3M	537	980	1,373	-	-
		882	1,471	1,931	-	-
	1M	1,626	2,574	3,089	-	-
* V i d e o s	280 HD	-	-	-	Approx. 04' 30"	Approx. 07' 36"
	640	-	-	-	Approx. 09' 27"	Approx. 18' 16"
	320	-	-	-	Approx. 33' 44"	Approx. 61' 12"

* Available recording time may vary if you use the zoom.
Several videos were recorded in succession to determine the total recording time.

Cautions when using memory cards

- Avoid exposing memory cards to very cold or very hot temperatures (below 0 °C/32 °F or above 40 °C/104 °F). Extreme temperatures can cause memory cards to malfunction.
- Insert a memory card in the correct direction. Inserting a memory card in the wrong direction may damage your camera and memory card.
- Do not use memory cards that have been formatted by other cameras or by a computer. Reformat the memory card with your camera.
- Turn off the camera when you insert or remove the memory card.
- Do not remove the memory card or turn off your camera while the lamp is blinking, as this may damage your data.
- When the lifespan of a memory card has expired, you cannot store any more photos on the card. Use a new memory card.
- Do not bend, drop, or subject memory cards with heavy impact or pressure.
- Avoid using or storing memory cards near strong magnetic fields.
- Avoid using or keeping memory cards in areas with high temperature, high humidity, or corrosive substances.
- Prevent memory cards from making contact with liquids, dirt, or foreign substances. If dirty, wipe the memory card clean with a soft cloth before you insert the memory card in your camera.
- Do not allow liquids, dirt, or foreign substances to come in contact with memory cards or the memory card slot. Doing so may cause memory cards or the camera to malfunction.

- When you carry a memory card, use a case to protect the card from electrostatic discharges.
- Transfer important data to other media, such as a hard disk, CD, or DVD.
- When you use the camera for an extended period, the memory card may become warm. This is normal and does not indicate a malfunction.



The manufacturer is not responsible for any loss of data.

About the battery

Use only Samsung-approved batteries.

Battery specifications

Specification	Description
Model	BP70A
Type	Lithium-ion battery
Cell capacity	700 mAh
Voltage	3.7 V
Charging time* (when the camera is switched off)	Approximately 150 min

* Charging the battery by connecting it to a computer may take longer.

Battery life

Average shooting time / Number of photos	Shooting conditions (when the battery was fully charged)	
Photos	Approximately 135 min / Approximately 270 photos	<p>The battery life was measured under the following conditions: in the mode, in the darkness, 16M resolution, Fine quality and DIS on.</p> <p>Procedure:</p> <ol style="list-style-type: none"> 1. Set the flash option to Off, take a single shot, and zoom in or out. 2. Set the flash option to Fill in, take a single shot, and zoom in or out. 3. Perform steps 1 and 2 for 30 seconds and repeat for 5 minutes. Then turn off the camera for 1 minute. 4. Repeat steps 1 to 3.
Videos	Approximately 90 min	Record videos at 1280 X 720 HQ resolution and 30 FPS.

- The figures above are based on Samsung's standards. Your results may differ depending on your actual usage.
- Several videos were recorded in succession to determine the total recording time.

Low battery message

When the battery charge has fully discharged, the battery icon will turn red and the **'Low Battery'** message will appear. Insert a charged battery or recharge the battery.

Notes about using the battery

- Avoid exposing batteries to very cold or very hot temperatures (below 0 °C/32 °F or above 40 °C/104 °F). Extreme temperatures can reduce the charging capacity of your batteries.
- When you use the camera for an extended period, the area around the battery chamber may become warm. This does not affect the normal use of the camera.
- Do not pull the power supply cord to disconnect the plug from the power outlet, as this may cause a fire or electric shock.
- In temperatures below 0 °C, battery capacity and battery life may decrease.
- Battery capacity may decrease in low temperatures but will return to normal in milder temperatures.

Cautions about using the battery

Protect batteries, chargers, and memory cards from damage

Prevent batteries from making contact with metal objects, as this can create a connection between the + and – terminals of your battery and lead to temporary or permanent battery damage and may cause a fire or electric shock.

Notes about charging the battery

- If the status lamp is off, make sure that the battery is inserted correctly.
- If the camera is on while charging, the battery may not fully charge. Turn off the camera before charging the battery.
- Do not use your camera when you charge the battery. This may cause a fire or electric shock.
- Do not pull the power supply cord to disconnect the plug from the power outlet, as this may cause a fire or electric shock.
- Let the battery charge for at least 10 minutes before turning on the camera.
- If you connect the camera to an external power source while the battery is depleted, using some high energy-consuming functions will cause the camera to turn off. To use the camera normally, recharge the battery.

- If you reconnect the power cable when the battery is fully charged, the status lamp turns on for approximately 30 minutes.
- Using the flash or recording videos depletes the battery quickly. Charge the battery until the red status lamp turns off.
- If the status lamp blinks in red, reconnect the cable, or remove the battery and insert it again.
- If you charge the battery when the cable is overheated or the temperature is too high, the status lamp may blink in red. Charging will start when the battery cools down.
- Overcharging batteries may shorten battery life. After charging is finished, disconnect the cable from your camera.
- Do not bend or place heavy objects on the AC cable. Doing so may damage the cable.

Notes about charging with a computer connected

- Use only the provided USB cable.
- The battery may not charge when:
 - you use a USB hub
 - other USB devices are connected to your computer
 - you connect the cable to the port on the front side of your computer
 - the USB port of your computer does not support the power output standard (5V, 500mA)

Handle and dispose of batteries and chargers with care

- Never dispose of batteries in a fire. Follow all local regulations when you dispose of used batteries.
- Never place batteries or cameras on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when they are overheated.



Personal injury or death can occur if the battery is handled carelessly or improperly. For your safety, follow these instructions for proper battery handling:

- The battery can ignite or explode if not handled properly. If you notice any deformities, cracks, or other abnormalities in the battery, immediately discontinue use of the battery and contact a service center.
- Use only authentic, manufacturer-recommend battery chargers and adapters and charge the battery only by the methods described in this user manual.
- Do not place the battery near heating devices or expose it to excessively warm environments, such as the inside of an enclosed car in the summertime.
- Do not place the battery in a microwave oven.
- Avoid storing or using the battery in hot, humid places, such as spas or shower enclosures.
- Do not rest the device on flammable surfaces, such as bedding, carpets, or electric blankets for a prolonged period.
- When the device is switched on, do not leave it in any confined space for a prolonged period.
- Do not allow the battery terminals to come in contact with metallic objects, such as necklaces, coins, keys, or watches.
- Use only authentic, manufacturer-recommended, Lithium-ion replacement batteries.

- Do not disassemble or puncture the battery with any sharp object.
- Avoid exposing the battery to high pressure or crushing forces.
- Avoid exposing the battery to major impacts, such as dropping it from high places.
- Do not expose the battery to temperatures of 60 °C (140° F) or above.
- Do not allow the battery to come in contact with moisture or liquids.
- Do not expose the battery to direct sunlight, fire, or any other source of excessive heat.

Disposal guidelines

- Dispose of the battery with care.
- Do not dispose of the battery in a fire.
- Disposal regulations may differ by country or region. Dispose of the battery in accordance with all local and federal regulations.

Guidelines for charging the battery

Charge the battery only by the method described in this user manual. The battery can ignite or explode if not charged properly.

Before contacting a service center

If you are having trouble with your camera, try these troubleshooting procedures before contacting a service center. If you have attempted the troubleshooting solution and are still having problems with your device, contact your local dealer or service center.



When you leave your camera at a service center, be sure to also leave the other components that may have contributed to the malfunction, such as the memory card and battery.

Situation	Suggested remedies
Cannot turn on the camera	<ul style="list-style-type: none">• Make sure that the battery is inserted.• Make sure that the battery is inserted correctly.• Charge the battery.
The power turns off suddenly	<ul style="list-style-type: none">• Charge the battery.• Your camera may be in Power save mode or Auto Power Off mode. (p. 93, 95)• The camera may turn off to prevent the memory card from being damaged due to an impact. Turn on your camera again.
The camera is losing battery power quickly	<ul style="list-style-type: none">• The battery may lose power more quickly in low temperatures (below 0° C). Keep the battery warm by putting it into your pocket.• Using the flash or recording videos depletes the battery quickly. Recharge if needed.• Batteries are consumable parts that must be replaced over time. Get a new battery if the battery life is diminishing quickly.

Situation	Suggested remedies
Cannot take photos	<ul style="list-style-type: none">• There is no space on the memory card. Delete unnecessary files or insert a new card.• Format the memory card. (p. 94)• The memory card is defective. Get a new memory card.• Make sure that the camera is switched on.• Charge the battery.• Make sure that the battery is inserted correctly.
The camera freezes	Remove the battery and insert it again.
The camera heats up	While you use the camera, it may heat up. This is normal and should not affect your camera's lifespan or performance.
The flash does not work	<ul style="list-style-type: none">• The flash option may be set to Off. (p. 49)• You cannot use the flash in some modes.
The flash fires unexpectedly	The flash may fire due to static electricity. This is not a malfunction.

Situation	Suggested remedies
The date and time are incorrect	Set the date and time in the display settings menu. (p. 94)
The display or buttons do not work	Remove the battery and insert it again.
The camera screen works poorly	If you use your camera at low temperatures, it can cause the camera screen to malfunction or discolor. For better performance of your camera screen, use your camera at normal temperatures.
The memory card has an error	<ul style="list-style-type: none"> • Turn off your camera and then turn it on again. • Remove your memory card and insert it again. • Format your memory card. See "Cautions when using memory cards" for more detail. (p. 100)
Cannot play back files	If you change the name of a file, your camera may not play the file. (Note: File names should meet the DCF standard.) If you encounter this situation, play back the files on your computer.

Situation	Suggested remedies
The photo is blurry	<ul style="list-style-type: none"> • Make sure that the focus option you set is suitable for close-up shots. (p. 51) • Make sure that the lens is clean. If not, clean the lens. (p. 98) • Make sure that the subject is within range of the flash. (p. 109)
The colors in the photo do not match the actual scene	An incorrect white balance can create unrealistic color. Select the proper white balance option to suit the light source. (p. 60)
The photo is too bright	Your photo is overexposed. <ul style="list-style-type: none"> • Turn off the flash. (p. 49) • Adjust the ISO sensitivity. (p. 50) • Adjust the exposure value. (p. 58)
The photo is too dark	Your photo is underexposed. <ul style="list-style-type: none"> • Turn on the flash. (p. 49) • Adjust the ISO speed. (p. 50) • Adjust the exposure value. (p. 58)
The TV does not display your photos	<ul style="list-style-type: none"> • Make sure that the camera is correctly connected to the TV with the A/V cable. • Make sure that your memory card contains photos.

Situation	Suggested remedies
Your computer does not recognize your camera	<ul style="list-style-type: none"> • Make sure that the USB cable is connected correctly. • Make sure that your camera is switched on. • Make sure that you are using a supported operating system. (p. 83, 88)
Your computer disconnects the camera while transferring files	The file transmission may be interrupted by static electricity. Disconnect the USB cable and connect it again.
Your computer cannot play videos	<ul style="list-style-type: none"> • Depending on the video player programs installed on your PC, video files captured by your camera may not play. To ensure the video files play on your computer, install and use the Intelli-studio. (p. 84) • Make sure that the USB cable is connected correctly.

Situation	Suggested remedies
Intelli-studio is not functioning properly	<ul style="list-style-type: none"> • End Intelli-studio and restart the program. • You cannot use Intelli-studio on Macintosh computers. • Make sure that PC Software is turned On in the settings menu. (p. 95) • Depending on your computer's specification and environments, the program may not launch automatically. In this case, click Start → My Computer → Intelli-studio → iStudio.exe on your computer.

Camera specifications

Image sensor	
Type	1/2.3" (Approx. 7.76 mm) CCD
Effective pixels	Approx. 16.1 mega-pixels
Total pixels	Approx. 16.4 mega-pixels
Lens	
Focal length	Samsung 5X Zoom Lens f = 4.7 - 23.5 mm (35 mm film equivalent: 26 - 130 mm)
F-stop range	F3.3 (W) - F5.9 (T)
Digital zoom	Still image mode: 1.0X - 5.0X (Optical x Digital: 25.0X)
Display	
Type	TFT LCD
Feature	<ul style="list-style-type: none"> • Main display: 2.7" (6.9 cm) QVGA (230K) • Front display: 1.5" (3.8 cm) 61 K/ TFT LCD
Focusing	
Type	TTL auto focus (Multi AF, Center AF, Face Detection AF, Object Tracking AF, Smart Face Recognition AF)

Range		Wide (W)	Tele (T)
	Normal	80 cm - infinity	100 cm - infinity
	Macro	5 cm - 80 cm	-
	Auto Macro	5 cm - infinity	100 cm - infinity

Shutter speed

- Smart Auto: 1/8 - 1/2,000 sec.
- Program: 1 - 1/2,000 sec.
- Night: 8 - 1/2,000 sec.

Exposure

Control	Program AE
Metering	Multi, Spot, Center-weighted, Face Detection AE, Smart Face Recognition AE
Compensation	±2EV (1/3EV steps)
ISO equivalent	Auto, 80, 100, 200, 400, 800, 1600, 3200 (Up to 3M Size)

Flash

Mode	Smart Auto, Auto, Red-eye, Fill in, Slow Sync, Off, Red-eye Fix
Range	<ul style="list-style-type: none"> • WIDE: 0.2 m - 3.5 m (ISO Auto) • TELE: 1.0 m - 2.0 m (ISO Auto)
Recharging time	Approx. 4 sec. (depending on battery condition)

Shake reduction	
Digital Image Stabilization (DIS)	
Effect	
Photo Shooting mode	<ul style="list-style-type: none"> Smart Filter: Normal, Miniature, Vignetting, Half Tone Dot, Sketch, Fish Eye, Defog, Classic, Retro, Negative, Custom RGB Image Adjust: Sharpness, Contrast, Saturation (5 Levels)
Video Shooting mode	Smart Filter: Normal, Palette Effect 1, Palette Effect 2, Palette Effect 3, Palette Effect 4, Miniature, Vignetting, Fish-eye, Defog, Classic, Retro, Negative, Custom RGB
White Balance	
Auto WB, Daylight, Cloudy, Fluorescent_H, Fluorescent_L, Tungsten, Custom Set	
Date Imprinting	
Off, Date, Date & Time	

Shooting	
Photos	<ul style="list-style-type: none"> Modes: Smart Auto (White, Macro Color, Portrait, Night Portrait, Backlight Portrait, Backlight, Landscape, Action, Tripod, Night, Macro, Macro Text, Blue Sky, Sunset, Natural Green, Fireworks), Program, Scene (Magic Frame, Beauty-Shot, Night, Landscape, Text, Sunset, Dawn, Backlight, Beach&Snow) Drive: Single, Continuous, Motion Capture, AEB Timer: Off, 10 Sec, 2 Sec, Double (10 Sec, 2 Sec)
Videos	<ul style="list-style-type: none"> Modes: Smart Movie*, Movie * Smart Movie: Landscape, Blue Sky, Natural Green, Sunset Format: MJPEG (Max recording time: 15 min) Size: 1280 X 720 HQ (Per one file: Max. 4GB), 640 X 480, 320 X 240 Frame Rate: 30 FPS, 15 FPS Voice: Sound Alive On/Sound Alive Off/Mute Video editing (embedded): Pause during recording, Still image capture

Camera specifications

Playback	
Type	Single image, Thumbnails, Multi Slide Show with Music and Effect, Movie clip, Smart Album* * Smart Album category: Type, Date, Color, Week, Face
Edit	Resize, Rotate, Image Adjust, Smart Filter, Trim
Effect	<ul style="list-style-type: none"> Image Adjust: Red-eye Fix, ACB, Face Retouch, Brightness, Contrast, Saturation, Add Noise Smart Filter: Normal, Miniature, Vignetting, Soft-Focus, Old Film 1, Old Film 2, Half Tone Dot, Sketch, Fish-eye, Defog, Classic, Retro, Negative, Custom RGB
Storage	
Media	<ul style="list-style-type: none"> Internal memory: Approx. 50 MB External memory (Optional): <ul style="list-style-type: none"> - microSD card (up to 2 GB guaranteed) - microSDHC card (up to 8 GB guaranteed) Internal memory capacity may not match these specifications.
File format	<ul style="list-style-type: none"> DCF, EXIF 2.21, DPOF 1.1, PictBridge 1.0 Still Image: JPEG (DCF) Video: AVI (MJPEG)

		For 1GB microSD			
			Super Fine	Fine	Normal
Image size	16M	4608 X 3456	108	212	312
	PH	4608 X 3072	123	241	353
	12M	4608 X 2592	144	283	417
	10M	3648 X 2736	170	332	482
	5M	2592 X 1944	328	624	882
	3M	1984 X 1488	537	980	1,373
	2M	1920 X 1080	882	1,471	1,931
	1M	1024 X 768	1,626	2,574	3,089
These figures are measured under Samsung's standard conditions and may vary depending on shooting conditions and camera settings.					
Interface					
Digital output connector	USB 2.0				
Audio	Mono (Internal speaker), Mono (Microphone)				
Video output	NTSC, PAL (selectable)				
DC power input connector	5 V				

Camera specifications

Power source

Rechargeable battery	Lithium-ion battery BP70A (700 mAh)
Connector Type	Micro USB (5 pin)

The power source may differ depending on your region.

Dimensions (W x H x D)

90.65 x 54.9 x 19.6 mm (excluding protrusions)

Weight

108 g (without battery and memory card)

Operating temperature

0 - 40° C

Operating humidity

5 - 85 %

Software

Intelli-studio

Specifications are subject to change without prior notice.

Glossary

ACB (Auto Contrast Balance)

This feature automatically improves the contrast of your images when the subject is backlit or when there is a high contrast between your subject and the background.

AEB (Auto Exposure Bracket)

This feature automatically captures several images at different exposures to help you capture a properly-exposed image.

AF (Auto Focus)

A system that automatically focuses the camera lens on the subject. Your camera uses the contrast to focus automatically.

Aperture

The aperture controls the amount of light that reaches the camera's sensor.

Camera shake (Blur)

If the camera is moved while the shutter is open, the entire image may appear blurred. This occurs more often when the shutter speed is slow. Prevent camera shake by raising the sensitivity, using the flash, or using a faster shutter speed. Alternately, use a tripod, the DIS or OIS function to stabilize the camera.

Composition

Composition in photography means arranging objects in a photo. Usually, abiding by the rule of thirds leads to a good composition.

DCF (Design rule for Camera File system)

A specification to define a file format and file system for digital cameras created by the Japan Electronics and Information Technology Industries Association (JEITA).

Depth of field

The distance between the nearest and farthest points that can be acceptably focused in a photograph. Depth of field varies with lens aperture, focal length, and distance from the camera to the subject. Selecting a smaller aperture, for example, will increase the depth of field and blur the background of a composition.

Digital zoom

A feature that artificially increases the amount of zoom available with zoom lens (optical zoom). When using the digital zoom, the image quality will deteriorate as the magnification increases.

DPOF (Digital Print Order Format)

A format for writing printing information, such as selected images and number of prints, on a memory card. DPOF-compatible printers, sometimes available at photo shops, can read the information from the card for convenient printing.

EV (Exposure Value)

All the combinations of the camera's shutter speed and lens aperture that result in the same exposure.

EV Compensation

This feature allows you to quickly adjust the exposure value measured by the camera, in limited increments, to improve the exposure of your photos. Set the EV compensation to -1.0 EV to adjust the value one step darker and 1.0 EV to one step brighter.

Exif (Exchangeable Image File Format)

A specification to define an image file format for digital cameras created by the Japan Electronic Industries Development Association (JEIDA).

Exposure

The amount of light allowed to reach the camera's sensor. Exposure is controlled by a combination of the shutter speed, the aperture value, and ISO sensitivity.

Flash

A speed light that helps to create adequate exposure in low-light conditions.

Focal length

The distance from the middle of the lens to its focal point (in millimeters). Longer focal lengths result in narrower angles of view and the subject is magnified. Shorter focal lengths result in wider angles of view.

Image sensor

The physical part of a digital camera that contains a photosite for each pixel in the image. Each photosite records the brightness of the light that strikes it during an exposure. Common sensor types are CCD (Charge-coupled Device) and CMOS (Complementary Metal Oxide Semiconductor).

ISO sensitivity

The sensitivity of the camera to light, based on the equivalent film speed used in a film camera. At higher ISO sensitivity settings, the camera uses a higher shutter speed, which can reduce blur caused by camera shake and low light. However, images with high sensitivity are more susceptible to noise.

JPEG (Joint Photographic Experts Group)

A lossy method of compression for digital images. JPEG images are compressed to reduce their overall file size with minimal deterioration of the image resolution.

LCD (Liquid Crystal Display)

A visual display commonly used in consumer electronics. This display needs a separate backlight, such as CCFL or LED, to reproduce colors.

Macro

This feature allows you to capture close-up photos of very small objects. When using the macro feature, the camera can maintain a sharp focus on small objects at a near life-size ratio (1:1).

Metering

The metering refers to the way in which the camera measures the quantity of light to set the exposure.

MJPEG (Motion JPEG)

A video format which is compressed as a JPEG image.

Noise

Misinterpreted pixels in a digital image that may appear as misplaced or random, bright pixels. Noise usually occurs when photos are shot with a high sensitivity or when a sensitivity is automatically set in a dark place.

Optical zoom

This is a general zoom which can enlarge images with a lens and does not deteriorate quality of images.

Quality

An expression of the rate of compression used in a digital image. Higher quality images have a lower rate of compression, which usually results in a larger file size.

Resolution

The number of pixels present in a digital image. High resolution images contain more pixels and typically show more detail than low resolution images.

Shutter speed

Shutter speed refers to the amount of time it takes to open and close the shutter, and it is an important factor in the brightness of a photo, as it controls the amount of light which pass through the aperture before it reaches the image sensor. A fast shutter speed allows less time to let light in and the photo becomes darker and more easily freezes subjects in motion.

Vignetting

A reduction of an image's brightness or saturation at the periphery (outer edges) compared to the center of the image. Vignetting can draw interest to subjects positioned in the center of an image.

White balance (color balance)

An adjustment of the intensities of colors (typically the primary colors red, green, and blue), in an image. The goal of adjusting the white balance, or color balance, is to correctly render the colors in an image.



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

 (Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



PlanetFirst represents Samsung Electronics' commitment to the sustainable development and social responsibility through eco-driven business and management activities.



Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

This Class [B] digital apparatus complies with Canadian ICES-003.

Dispose unwanted electronics through an approved recycler. To find the nearest recycling location, go to our website: www.samsung.com/recyclingdirect Or call, (877) 278 - 0799

FCC notice

- **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorientate, or relocate, the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

- **CAUTION:**

Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

- **Declaration of Conformity**

Trade Name : Samsung Electronics America, Inc.
Model No. : Samsung DV50/DV90/DV100/DV101
Responsible Party : Samsung Electronics America, Inc.
Address : 85 Challenger Road, Ridgfield Park,
NJ 07660
Telephone No. : 1-800-SAMSUNG (726-7864)

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Index

A

ACB

- in Playback mode 79
- in Shooting mode 59

Adjusting

- Brightness 80
- Contrast
 - in Playback mode 80
 - in Shooting mode 66
- Saturation
 - in Playback mode 80
 - in Shooting mode 66
- Sharpness 66

AF Lamp 95

AF Sound 92

Aperture 36

Auto Contrast Balance (ACB) 59

B

Battery

- Charging 103
- Life 102
- Specifications 102

Beauty Shot mode 35

Blink detection 55

Burst

- Auto Exposure Bracket (AEB)
62
- Continuous 62
- Motion capture 62

C

Camera shake 29

Capturing an image from a video 76

Children mode

- movie 44
- photo 43
- sound settings 92

Cleaning

- Body 98
- Display 98
- Lens 98

D

Date/Time Set 94

Date Type 94

Deleting files 72

Digital Image Stabilization (DIS) 28

Digital zoom 26

Disconnecting the device 87

Display brightness 93

Display type 23

DPOF 81

E

Editing 77

Enlarging 73

Error messages 97

Exposure 58

F

Face detection

- Blink Detection 55
- Normal 54
- Smart Face Recognition 56
- Smile Shot 55

Facial brightness 35

Facial imperfections 36

Flash

- Auto 50
- Fill in 50
- Off 49
- Red-eye 50
- Red-eye Fix 49
- Slow Sync 50

Focus area

- Center AF 53
- Multi AF 53
- Tracking AF 53

Focus distance

- Auto Macro 51
- Macro 51
- Normal (AF) 51

Format 94**Frame rate 39****Front display 14**

- Demo mode 92
- Shooting mode 42
- turning on 25

Function button 15**Function description 93****G****Glossary 113****H****Half-pressing 6****I****Icons 20****Image adjust**

- ACB 79
- add noise 80
- brightness 80
- contrast 80
- face retouch 80
- red-eye fix 79
- saturation 80

Imprint 95**Intelli-studio 85****Intelli zoom 27****ISO speed 50****L****Light source (White balance)
60****Long time shutter 36****M****Macro 51****Magic Frame mode 34****Maintenance 98****Memory card**

- Capacity 101
- microSD 100
- microSDHC 100

MENU button 15**Metering**

- Center-weighted 59
- Multi 59
- Spot 59

MJPEG (Motion JPEG) 110**Mode button 15****Movie mode 39****Muting**

- Video 39

My Star

- Canceling faces 70
- Ranking 69
- Registering faces 57

N**Navigation button 15****Night mode 36****P****Photo quality 47****Pictbridge 89****Playback button 17****Playback mode 68****Printing photos 89****Print order 81****Program mode 38****Protecting files 72**

Q

Quick View 93

R

Recording

Video 39

Red-eye

in Playback mode 79

in Shooting mode 49

Reset 94

Resizing 77

Resolution

Photo 46

Video 46

RGB tone

in Playback mode 79

in Shooting mode 65

Rotating 77

S

Scene mode 34

Service center 106

Settings

Accessing 91

Camera 94

Display 93

Sound 92

Shooting mode

Movie 39

Program 38

Scene 34

Smart Auto 32

Shutter speed 36

Slide show 74

Smart Album 70

Smart Auto mode 32

Smart Face Recognition 56

Smart Filter

in Playback mode 78

in Shooting mode 63

Smart Scene Detection mode 40

Smile shot 55

Start image 77, 93

T

Timer 48

Tracking focus 52

Transferring files

for Mac 88

for Windows 83

V

Video

Playing 75

Recording 39

Video Out 95

Viewing files

as thumbnails 71

by category 70

on TV 82

Slide show 74

Volume 92

W

White Balance 60

Z

Zoom button 15

Zooming 26



Please refer to the warranty that came with your product or visit our website <http://www.samsung.com/> for after-sales service or inquiries.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>