
SAMSUNG TECHWIN

High Resolution Vandal Dome Camera

User Manual

SCV-2080



High Resolution Vandal Dome Camera

User Manual

Copyright

©2009 Samsung Techwin Co., Ltd. All rights reserved.

Trademark

 is the registered logo of Samsung Techwin Co., Ltd. The name of this product is the registered trademark of Samsung Techwin Co., Ltd. Other trademarks mentioned in this manual are the registered trademark of their respective company.

Restriction

Samsung Techwin Co., Ltd shall reserve the copyright of this document. Under no circumstances, this document shall be reproduced, distributed or changed, partially or wholly, without formal authorization of Samsung Techwin.

Disclaimer

Samsung Techwin makes the best to verify the integrity and correctness of the contents in this document, but no formal guarantee shall be provided. Use of this document and the subsequent results shall be entirely on the user's own responsibility.

Samsung Techwin reserves the right to change the contents of this document without prior notice.

Warranty

Samsung Techwin Co., Ltd shall reserve the copyright of this document. Under no circumstances, this document shall be reproduced, distributed or changed, partially or wholly, without formal authorization of Samsung Techwin.

Before operating the camera, confirm the camera model and correct input power voltage. To help you understand this manual thoroughly, we'll introduce our model description.

■ **SCV-2080 SERIES**


- NTSC MODELS
SCV-2080N
- PAL MODELS
SCV-2080P

■ **MODEL DESCRIPTION**

- SCV-2080X



- SIGNAL SYSTEM
N — NTSC MODEL
P — PAL MODEL

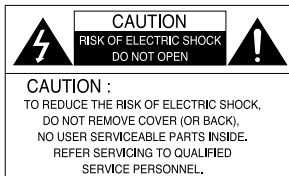

The lightning flash with an arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

INFORMATION - This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WARNING - Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

WARNING - To prevent electric shock and risk of fire hazards:

- ◆ Do NOT use power sources other than that specified.
- ◆ Do NOT expose this appliance to rain or moisture.

This installation should be made by a qualified service person and should conform to all local codes.

Contents

• Features	6
• Precautions	8
• Components and Accessories	10
• Overview	11
• Installation	12
■ Installation	12
■ Adjusting the monitoring direction of the camera	16
■ Optional Accessories for Installation	17
• Connection	18
■ Connecting to Monitor	18
■ Connecting to Power	19
■ Using Coaxial Communications	20
• Operating Your Camera	21
■ Menu Configuration	21
■ Menu Setup	22
· LENS	23
· EXPOSURE	23
· WHITE BAL (White Balance)	25
· SSDR (Samsung Super Dynamic Range)	26
· BACKLIGHT	27
· SSNR3	29
· DAY/NIGHT	29
· SPECIAL	31
· EXIT	37
• Troubleshooting	38
• Specifications	39
• Dimension	40

Features

IP66 Approved/Dust and Rain Resistant

With dust and rain resistant design, the camera can be installed outside under building eaves or places that are exposed to the dust and rain.

High Resolution

By adopting a diagonal 6mm(1/3") 410,000 (NTSC) pixel, 470,000(PAL) pixel SONY CCD, the camera produces clear picture quality with a horizontal resolution of 600 TV lines in color and a horizontal resolution of 700 TV lines in B/W mode.

Excellent Sensitivity

The built-in high sensitivity COLOR CCD produces a clear image.

- Color : 0.15Lux(50IRE, @F1.2), 0.0003LUX (SENS-UP, x512)
- B/W : 0.001Lux(50IRE, @F1.2), 0.00002LUX (SENS-UP, x512)

SSNR3 (Samsung Super Noise Reduction) Function

The high-performance W-V DSP chip effectively removes low-light gain noise and afterimage to provide clear images even in dark environments.

DAY&NIGHT(ICR)

This camera has a function that automatically selects the mode that is appropriate for daytime or night-time conditions.

The COLOR mode operates in daytime conditions to provide optimum colors, and B/W mode operates in night-time conditions to enhance the definition of the image.

Motion Detection

Since the camera detects motion without any additional external sensor, you can monitor activity more efficient.

SSDR (Samsung Super Dynamic Range)

For images with high contrast between bright and dark areas from difficult lighting conditions such as backlighting, this camera selectively illuminates darker areas while retaining the same light level for brighter areas to even out the overall brightness.

DIS (Digital Image Stabilizer)

The DIS function compensates for any camera movement, to produce more stable pictures.

Communication

Coaxial communication methods are supported.

- Protocol : Pelco Coaxitron

Miscellaneous Functions

HLC(High Light Compensation), SENS-UP, FLIP (H/V-REV), D-ZOOM, SHARPNESS and PRIVACY functions are provided.

OSD

The camera's OSD is complimented by 18 languages.

- NTSC : Korean, English, French, Spanish, Japanese, Portuguese, Taiwanese
- PAL : English, Chinese, German, Italian, French, Spanish, Russian, Czech, Polish, Romanian, Serbian, Swedish, Danish, Turkish, Portuguese



Samsung Techwin cares for the environment at all product manufacturing stages to preserve the environment, and is taking a number of steps to provide customers with more environment-friendly products. The Eco mark represents Samsung Techwin's will to create environment-friendly products, and indicates that the product satisfies the EU RoHS Directive.

Warnings & Cautions

This information is provided to ensure your safety and to prevent any losses, financial or otherwise. Please read it carefully and use the product accordingly.

* For product inquiries, please contact the retail shop where you bought the camera. The use of equipment such as an aerial ladder while providing after-sales service shall be at your expense.

* Separate the power plug during a thunder storm.

* This product is support equipment for surveillance systems. Therefore, we can't compensate for material loss and/or personal injuries by robbery, fire, natural disaster or other such events.

Warning/Attention/Special Mark Messages



Ignoring this information may result in material loss and/or serious personal injuries including death.



Ignoring this information may result in material loss and/or a slight injuries.



Indicates "Never Allowed."



Indicates "No Disassembling."



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Precautions

Do not install under extreme temperature conditions.



Use only under temperature conditions between -50°C and $+50^{\circ}\text{C}$. Provide good ventilation when using in high temperature conditions.

Do not install in high humidity environment.



May lower image quality.

Do not install under unstable lighting conditions.



Severe lighting changes or flickering may hinder normal camera operation.

Avoid touching the camera lens.



The lens is the most important component of the camera. Be careful not to smear it with fingerprints.

Do not drop the camera or subject it to physical shock.



May cause a product malfunction.

Never keep the camera face to strong light directly.



May damage the CCD.


Do not expose the camera to radioactivity.



Notes


- Exposure to a spotlight or an object emitting strong light may cause smear or blooming.
- Ensure that the power source complies with normal specifications before supplying it to the camera.

Components and Accessories

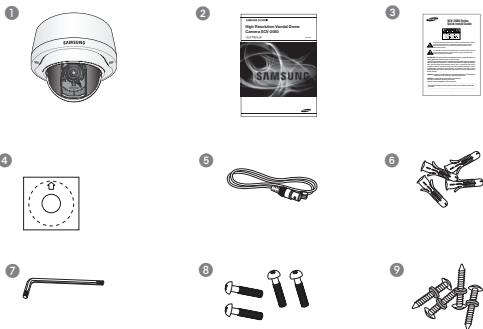

- 1 High Resolution Vandal Dome Camera SCV-2080
- 2 Instruction Manual
- 3 Quick Install Guide
- 4 Template
- 5 Cable for test monitor connection
- 6 Plastic Anchor (4 EA)
- 7 L-wrench
- 8 Fixing Screws (4 EA)
- 9 Tapping Screws (4 EA)

Overview

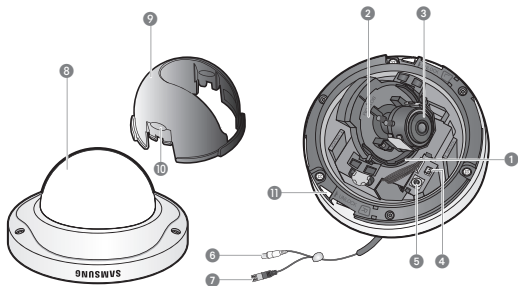



- ① Pan Base : Control panning angle of camera.
- ② Rotate Base : Control rotating angle of camera.
- ③ x3.6 Vari-focal Lens Module 2.8 ~ 10.0mm (F1.2)
- ④ Video Output Terminal to Monitor
- ⑤ Function Setup switch : Display the menu on the screen and move the cursor to four directions to confirm status or changing a selected item.
- ⑥ Video Output Jack
- ⑦ Power Input Terminal
- ⑧ Dome Cover
- ⑨ Inner cover
- ⑩ Wing locker
- ⑪ Lock releaser

Installation

Installation



Disassembling

- 1) Using the L-wrench provided, loosen 3 screws by turning them counterclockwise and separate the dome cover.
- 2) Lift up the inner cover while gently pressing both ends to separate it from the unit.
- 3) Loosen 3 screws by turning them counterclockwise, press both left and right lock releases inwards (in arrow direction) to unlock the stopper, and then separate the camera from the case.

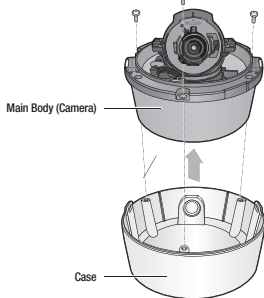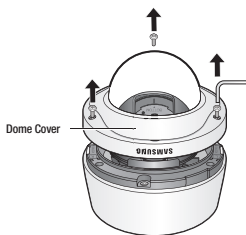

Installing the camera on a ceiling or wall


- 1) Affix the mounting template (supplied) to the mounting surface.
- 2) Drill holes (diameter 5mm, more than 35mm deep) on the ceiling by matching to the holes on the case bed, and insert plastic anchors (HUD 5) fully into the holes. Fix the case bed on the ceiling by using Tapping Screws (TH M4xL30). (4 places)
- 3) Connect power and video cables and arrange cable running not to damage or squeeze them, and assemble the camera unit in the reverse way.
- 4) Pass the power and BNC cable through the hole you want to pass them when mounting the main body on the mounting bracket.
- 5) Secure the camera on its mounting bracket with the four screws.

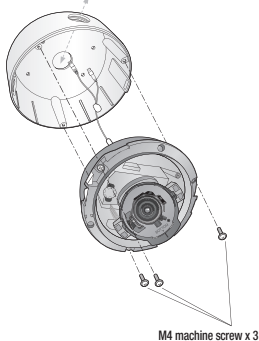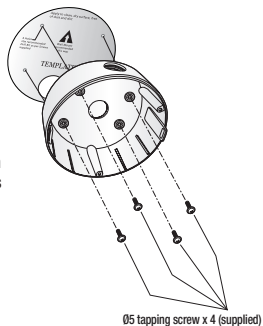

Installation


Installing the camera on a ceiling or wall with pipeline

1) Secure the mounting bracket on the place you want to mount it after combining the mounting bracket with the pipeline.

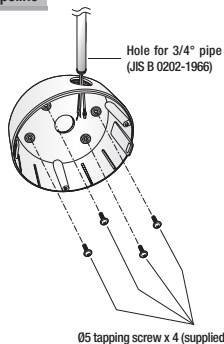


2) Connect power input and video output cables with the each cable from pipeline.

3) Secure the main body on mounting bracket.

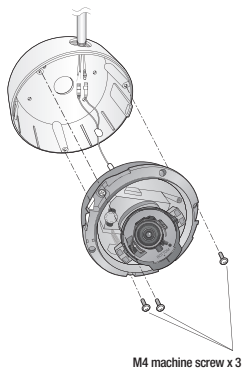


Reinstall the dome cover to the main body

- 1) Adjust the lens in a desired direction.
- 2) Secure the inner cover to the main unit.
- 3) Assemble the Dome Cover.
For waterproof purpose, fix and secure the bolt using L-wrench provided.

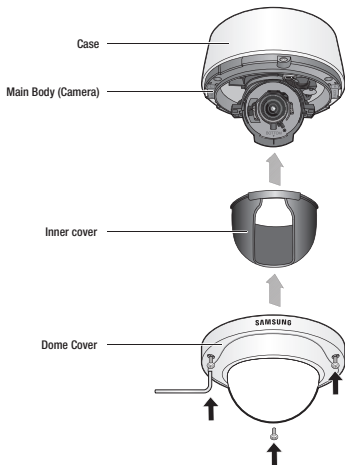

Installation

Adjusting the monitoring direction of the camera

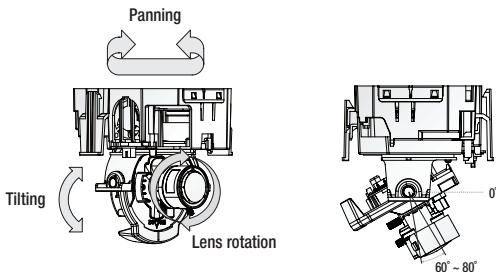

- 1) You can adjust the camera direction only when the camera is fixed on the ceiling.
Then, turning the camera to the left or right is referred to as "Panning", while moving the camera angle up or down is "Tilting". For panning, the panning limit is 220° for the clockwise, and 135° for the counter-clockwise, a total of 355° enabled; further rotation is prevented by the stopper.
 - Adjust the panning angle so that the camera settles in the right horizontal position. You can adjust the panning up to 135° in each one direction, and 220° in the other direction, a total of 355°.
 - Adjust the tilting angle so that the camera settles in the right vertical position. You can adjust the tilting between 0° and 90°.
 - The total rotation range is 355°. You can make adjustment in one direction up to 125°, and 230° in the other direction.
- 2) Methods of adjustment
 - The case of wall installation
 - 1 After mounting the camera on the wall, adjust the panning angle so that the camera faces a desired direction when tilting.
 - 2 Adjust the Rotate position to fit the video to the screen borders.
 - 3 Then, adjust the tilting angle so that the camera faces the monitoring direction.

- The case of ceiling installation

- 1 After mounting the camera on the ceiling, adjust the panning angle according to the monitoring direction. You should adjust the panning angle lest that the video be displayed upside down on the monitor.
- 2 Adjust the Rotate position to fit the video to the screen borders.
- 3 Then, adjust the tilting angle so that the camera faces the monitoring direction.



Notes

- For smoother Rotate adjustment, set the Tilt position between 60° - 80°.

 
Optional Accessories for Installation

For your easier installation, you can purchase appropriate optional accessories.

- 1) WALL MOUNT ADAPTOR(SCX-300WM)/
HANGING MOUNT(SCX-300HM) This adaptor
is used when installing the dome camera
onto a wall.




- 2) CEILING MOUNT ADAPTOR(SCX-300CM)/
HANGING MOUNT(SCX-300HM) This adaptor
is used when installing the dome camera on
a concrete ceiling.




Installation

 - 3) **POLE MOUNT ADAPTOR(SCX-300PM)** This is an adaptor for WALL MOUNT ADAPTOR (SCX-300WM) installation on a pole whose diameter is bigger than 80mm.




- 4) **CORNER MOUNT ADAPTOR (SCX-300KM)**
This is an adaptor for WALL MOUNT ADAPTOR (SCX-300WM) installation on the corner of wall joint.

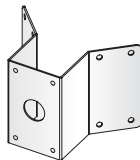

Connection

Connecting to Monitor

Connect the Video Output jack to the VIDEO-IN jack of monitor.

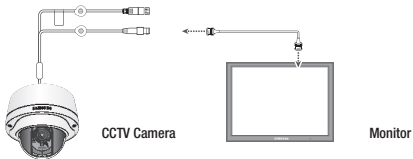


- As the connecting method varies with the instruments, refer to the manual supplied with the instrument.
- If necessary, you can connect the monitor to the REMOTE jack on the back of your camera.
- Only connect the cable when the power is turned off.

Connection

Connecting to Power

Connect the adaptor to the power input terminal as shown in the figure below. Output of the adaptor should be either one of AC 24 V, 1.5 A or DC 12 V, 1.0 A. Note that using DC 12 V may cause lower heater temperature.

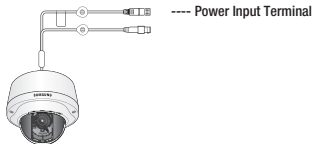

When the resistance value of copper wire is at [20°C(68°F)]

Copper wire size (AWG)	#24(0.22mm ²)	#22(0.33mm ²)	#20(0.52mm ²)	#18(0.83mm ²)
Resistance (Ω/m)	0.078	0.050	0.030	0.018
Voltage Drop (V/m)	0.028	0.018	0.011	0.006

- As shown in the table above, voltage decreases as the wire gets longer. Therefore use of an excessively long adaptor output line for connection to the camera may affect the performance of the camera.

* There may be some deviation in voltage drop depending on the type of wire and the manufacturer.



Notes


- Be sure to connect power only after all the installation is complete.
- Note that AC / DC adaptor is not supplied with camera.
- Ground should be connected to the GND terminal.

Connection

Using Coaxial Communications


- Coaxial Communications System
- OSD Control method

CAMERA	DVR	CONTROLLER
SET	MENU/ENTER	OSD KEY
UP	UP KEY	JOYSTICK UP
DOWN	DOWN KEY	JOYSTICK DOWN
LEFT	LEFT KEY	JOYSTICK LEFT
RIGHT	RIGHT KEY	JOYSTICK RIGHT

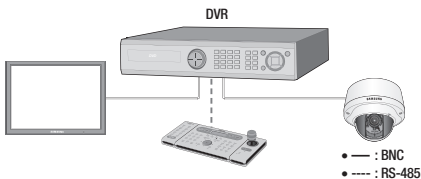

- Video Cable

 The camera's video output port is connected to the monitor with a BNC coaxial cable, shown below : If the distance between the camera and the monitor exceeds the recommended maximum, please use an auxiliary video amp.



Distance	Recommended Cable Specification
300m	3C2V(RG-59/U)
450m	5C2V(RG-6/U)
600m	7C2V(RG-11/U)



Notes

- It is recommended that pure copper coax cable is used and not copper coated steel, as this will cause issues with the communication over the coaxial cable.

Operating Your Camera


Menu Configuration

MAIN SETUP			
LENS	●DC		
EXPOSURE	●BRIGHTNESS ●SENS-UP	●SHUTTER ●RETURN	●AGC
WHITE BAL	●ATW ●MANUAL	●OUTDOOR ●AWC → SET	●INDOOR
SSDR	●OFF	●ON	
BACKLIGHT	●OFF	●BLC	●HLC
SSNR3	●OFF	●ON	
DAY/NIGHT	●COLOR	●B/W	●AUTO
SPECIAL	●IMAGE ADJ ●SYNC ●DIS	●MONITOR ●MOTION DET ●LANGUAGE	●CAM TITLE ●PRIVACY ●RETURN
EXIT	●SAVE	●NOT SAVE	●RESET


Operating Your Camera

Menu Setup

Use the Function Setup switch within the camera.

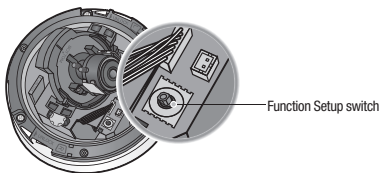

1. Press the Function Setup switch.
 - Main SETUP menu is displayed on the monitor screen.

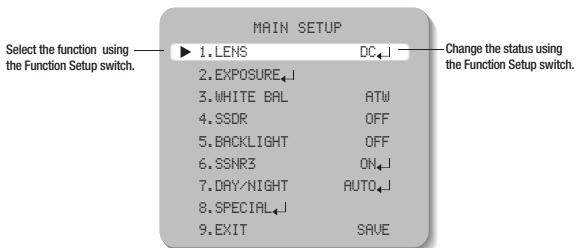

2. Select a desired function using the Function Setup switch.
 - Place the cursor over a desired item.
3. Set up a selected item by using the Function Setup switch.
4. To finish the setting, select 'EXIT' and press the Function Setup switch.



 
Notes

- An item with the ←↓ icon also has sub menus. To select a sub menu, select an item with the icon and press the Function Setup switch.
- An item with the --- icon is unavailable due to function settings.


LENS

Using this function, you can control the screen brightness.

1. When the SETUP menu screen is displayed, select 'LENS' by using the Function Setup switch so that the arrow indicates 'LENS'.
2. The Lens mode has sub menu site as listed below.
 - BRIGHTNESS : Adjusts the video brightness.
 - FOCUS ADJ : To adjust the lens focus correctly, you must activate the Focus Settings mode. To activate the Focus Settings mode, adjust the lens focus, and then deactivate the settings mode. You can adjust the shutter value of ESC shutter mode.




EXPOSURE

 

1. When the SETUP menu screen is displayed, select 'EXPOSURE' by using the Function Setup switch so that the arrow indicates 'EXPOSURE'.
2. Select a desired mode using the Function Setup switch.

Operating Your Camera

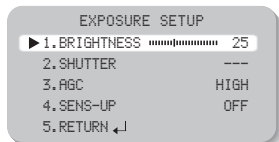

- BRIGHTNESS : Adjusts the video brightness.
- SHUTTER : You can select the shutter.
 - --- : Shutter speed is fixed at 1/60 sec (1/50 sec).
 - ESC : Select this to control the shutter speed automatically. If ESC is selected, the shutter speed is automatically controlled depending on the ambient illumination of the subject.
 - MANUAL : You can control shutter speed manually.
(NTSC MODEL - 1/60sec~1/120,000sec, PAL MODEL - 1/50sec~1/120,000sec)
 - A.FLK : Select this when you experience picture flicker, this happens when there is a clash with the installed lighting frequency.

Notes

- Set the shutter mode to --- if color rolling occurs.
 - When the SHUTTER is set to ESC after selecting the Internal Synchronization Type, the picture may become unstable if the camera faces a bright fluorescent light. Therefore, take care when choosing the installation position.
 - When the SHUTTER is set to MANUAL or A.FLK mode, SENS-UP will be disabled.
- AGC(AUTO GAIN CONTROL) : The higher the gain level, the brighter the screen - but the greater the noise.
 - OFF : Deactivates the AGC function.
 - LOW : Allows automatic gain control from 5.3dB to 32dB.
 - HIGH : Allows automatic gain control from 5.3dB to 37dB.
 - SENS-UP : When it is night or dark, the camera automatically detects the light level and maintains a clear picture if this mode is activated.
 - OFF : Deactivates the SENS-UP function.
 - AUTO : Activates the SENS-UP function.



Notes

 
- If you set the Function Setup switch to 'AUTO' mode, You can adjust the brightness by increasing or decreasing the shutter speed. (x2 ~ x512)
- Note that the higher the zoom level, the brighter the screen, but the more likely it is that an after-image will appear.
- Although Noise, Spots and Whitish symptoms may occur in SENS-UP operation when the zoom level is increased, this is normal.

- RETURN : Select this to save the changes in the EXPOSURE menu and return to the SETUP menu.

WHITE BAL (White Balance)

Use the White Balance function to adjust the screen color.

1. When the SETUP menu screen is displayed, select 'WHITE BAL' by using the Function Setup switch so that the arrow indicates 'WHITE BAL'.
2. Select a desired mode using the Function Setup switch.



※ Select one of the following 5 modes, as appropriate for your purpose.

- ATW : Select this when the color temperature is between 1,700°K and 11,000°K.
- OUTDOOR : Select this when the color temperature is between 1,700°K and 11,000°K. (sodium light inclusion)
- INDOOR : Select this when the color temperature is between 4,500°K and 8,500°K.
- MANUAL : Select this to fine-tune White Balance manually. Set White Balance first by using the ATW or AWC mode. After that switch to MANUAL mode, fine-tune the White Balance and the Function Setup switch.

Operating Your Camera

- AWC—SET : To find the optimal luminance level for the current environment, point the camera towards a sheet of white paper and press the Function Setup switch. If the environment changes, readjust it.




Notes


- White Balance may not work properly under the following conditions. In this case select the OUTDOOR mode.
 - ① When the color temperature of the environment surrounding the subject is out of the control range (e.g. clear sky or sunset).
 - ② When the ambient illumination of the subject is dim.
 - ③ If the camera is directed towards a fluorescent light or is installed in a place where illumination changes dramatically, the White Balance operation may become unstable.

SSDR (Samsung Super Dynamic Range)


SSDR illuminates darker areas of an image while retaining the same light level for brighter areas to even out the overall brightness of images with high contrast between bright and dark areas.

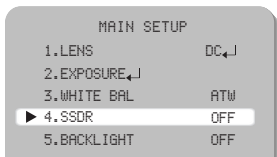

1. When the SETUP menu screen is displayed, select 'SSDR' by using the Function Setup switch so that the arrow indicates 'SSDR'.
2. Use the Function Setup switch to change the SSDR level in the sub menu according to the contrast between bright and dark areas.

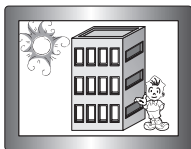

SSDR ON

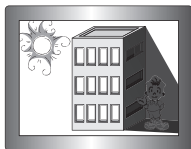


SSDR OFF

BACKLIGHT

Unlike conventional cameras, the SCV-2080 is designed so that it delivers a distinctive subject and background at the same time, even when the subject is in backlight, by adopting a function of the proprietary W-V DSP chip.

1. When the SETUP menu screen is displayed, select 'BACKLIGHT' by using the Function Setup switch so that the arrow indicates 'BACKLIGHT'.

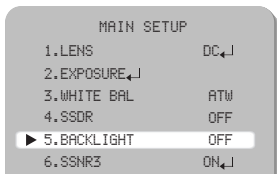

2. Select a desired mode using the Function Setup switch depending on the camera purpose.
 - OFF : Not being used
 - BLC : Enables a user to select a desired area on a picture and view that area more clearly.
 - LEVEL : Adjusts the brightness level of a monitoring area.
 - TOP/BOTTOM/LEFT/RIGHT : Adjust the area to be enhanced.

Operating Your Camera



○ HLC (High Light Compensation) :

If the scene contains extremely bright light areas such as; from car headlight, the light can mask out much of the on-screen detail.

- LEVEL : Adjusts the brightness level of a monitoring area.
- LIMIT : Enable to change the operating condition.
- MASK COLOR/TONE : Change the color / brightness of the masking area.
(Black, Red, Blue, Cyan, Magenta)
- TOP/BOTTOM/LEFT/RIGHT : Adjust the area to be enhanced.

3. Select a desired mode using the Function Setup switch.

- Select 'BLC' to adjust the area to be enhanced then adjust the level.
- HLC : Enable the user to change the level, limit, mask color/tone and area.

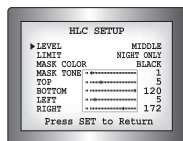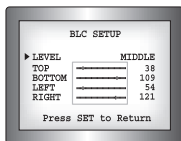


Notes

- Because there can be a difference in the effectiveness of HLC according to the amount of light area in the screen, optimize the installation angle for the best HLC performance.
- When dark, the HLC is only activated when a bright light exceeding a specific size. (In NIGHT ONLY mode.)
- The HLC is not activated in day light or when bright light is not present at night. (In NIGHT ONLY mode.)
- When HLC function is used, D-ZOOM and DIS functions are not activated.

SSNR3

This function reduces the background noise in a low luminance environment.

1. When the SETUP menu screen is displayed, select 'SSNR3' by using the Function Setup switch so that the arrow indicates 'SSNR3'.

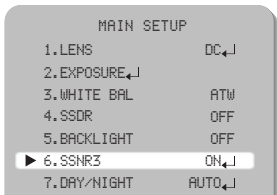

2. Select a desired mode using the Function Setup switch.
 - ON : Activates SSNR3 so that noise is reduced.
 - OFF: Deactivates SSNR3. Noise is not reduced.
3. Set the SSNR3 mode to 'ON' and press the Function Setup switch. Then you can adjust the noise reduction level.



Notes


- You cannot set the SSNR3 to 'ON' or 'OFF' when the AGC mode of the 'EXPOSURE' menu is 'OFF'.
- When adjusting the noise reduction level in the SSNR3 mode, remember that the higher the level set, the more the noise level will be reduced, as will the brightness of the image.

DAY/NIGHT

You can display pictures in color or in black and white.


1. When the SETUP menu screen is displayed, select 'DAY/NIGHT' by using the Function Setup switch so that the arrow indicates 'DAY/NIGHT'.

Operating Your Camera

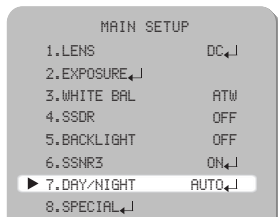

2. Select a desired mode using the Function Setup switch according to the picture display you want.

- ☉ AUTO : The mode is switched to 'Color' in a normal environment, but switches to 'B/W' mode when ambient illumination is low. To set up the switching time for AUTO mode, press the Function Setup switch. You can turn on or off the burst signal on B/W mode.

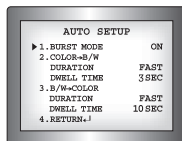

- BURST MODE : You can turn on or off the burst signal on B/W mode.
- DURATION : You can select the day/night switching point.
- DWELL TIME : You can select day/night switching delay time from.
→3s, 5s, 7s, 10s, 15s, 20s, 30s, 40s, 60s

	Color → B/W	B/W → Color
Early	2.5 lux	5 lux
Late	1 lux	10 lux

* The day/night switching point of the camera can be adjusted.

- COLOR : The picture is always displayed in color.
- B/W : The picture is always displayed in black and white.
You can turn on or off the burst signal on B/W mode.




Notes

- When AGC in the EXPOSURE menu is 'OFF', '---' mode operates as selecting 'COLOR' mode and 'AUTO' mode cannot be selected.


SPECIAL

1. When the SETUP menu screen is displayed, select 'SPECIAL' by using the Function Setup switch so that the arrow indicates 'SPECIAL'.

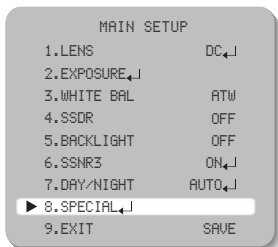


Operating Your Camera

2. Select a desired mode using the Function Setup switch.

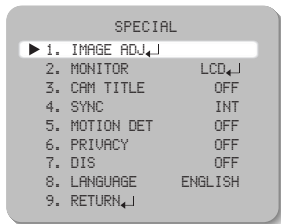

○ IMAGE ADJ :

- 1) When the SPECIAL menu screen is displayed, select 'IMAGE ADJ' by using the Function Setup switch so that the arrow indicates 'IMAGE ADJ'.
- 2) Select a desired mode using the Function Setup switch.

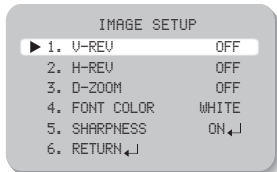

- **V-REV** : You can flip the picture vertically on the screen.
- **H-REV** : You can flip the picture horizontally on the screen.
- **D-ZOOM** : You can use a digital zoom of x1 ~ x16.
- **FONT COLOR** : You can change the OSD font color. (White, Yellow, Green, Red, Blue)


- **SHARPNESS** : As you increase this value, the picture outline becomes stronger and clearer. Adjust this value appropriately depending on the sharpness of the picture.
- **RETURN** : Select this to save the settings for the IMAGE ADJ menu and to return to the SPECIAL menu.



Notes


- When the V-REV or H-REV mode is enabled, the text on the screen does not flip.
- If you increase the SHARPNESS level too high, the picture may become distorted or noise may appear.

- **Monitor** : Please change the settings value of video appropriate to your monitor.
 - **LCD** : Please select this menu item when using an LCD monitor. You can change the gamma, PED level and color gain in the sub menus.
 - **CRT** : Please select this menu item when using a CRT monitor. You can change the PED level, color gain in the sub menus.
 - **USER** : Please use this menu item when using a monitor other than standard ones. You can change the gamma, PED level and color gain in the sub menus.

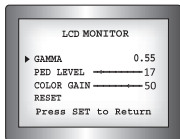

☉ **CAM TITLE** : If you enter a title, the title will appear on the monitor.

- 1) If the SPECIAL menu screen is displayed, use the Function Setup switch so that the arrow indicates 'CAM TITLE'.
- 2) Set it to 'ON' by using the Function Setup switch.
- 3) Press the Function Setup switch.
- 4) Use the Function Setup switch to move to a desired letter and select the letter by pressing the Function Setup switch. Repeat this to enter multiple letters. You can enter up to 15 letters.

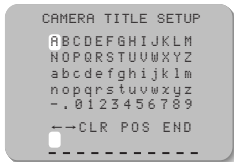

Operating Your Camera

- 5) Enter a title, move the cursor to 'POS' and press the Function Setup switch. The entered title appears on the screen. Select the position to display the title on the screen by using the Function Setup switch and press the Function Setup switch. When the position is determined, select 'END' and press the Function Setup switch to return to the SPECIAL menu.




Notes

- When the CAM TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you enter one.
- Only English is available in this mode.
- If you move the cursor to CLR and press the Function Setup switch, all the letters are deleted. To edit a letter, change the cursor to the bottom left arrow and press the Function Setup switch. Move the cursor over the letter to be edited, move the cursor to the letter to be inserted and then press the Function Setup switch.

- SYNC : In areas where the supply is at 60Hz(NTSC), 50Hz(PAL) frequency, you can synchronize the output phase of multiple cameras using the power synchronization function (Line-Lock) without using a synchronization signal generator.

- INT : Internal Synchronization Type
- L/L : Power Synchronization Type, Line-lock

- 1 Press the Function Setup switch.
- 2 You can select a desired phase from 0 to 359 when select 'phase'.

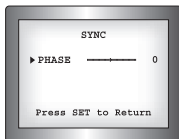


Notes

- When using AC power at 60Hz(NTSC), 50Hz(PAL) frequency, you can use the L/L type synchronization.
- When the power is DC 12V, the SYNC menu is fixed to the 'INT' mode.

☉ MOTION DET :

This product has a feature that allows you to observe movement of objects in 8 different areas on the screen, and the words 'MOTION DETECTED' appear on the screen when movement is detected. You can monitor activity more efficient.

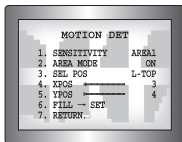


1) When the SPECIAL menu screen is displayed, press the Function Setup switch so that the arrow indicates 'MOTION DET'.

2) Set up the mode using the Function Setup switch.

- SENSITIVITY : You can select up to 8 MD areas. When SENSITIVITY number is high, motion detection sensitivity is increased to recognize even small movement.
- AREA MODE : Determines whether to use the MD area selected in SENSITIVITY.
- SEL POS : Determines which of the 4 vertices of each MD area is to be used.
- XPOS : Determines the coordinate of the horizontal axis for SEL POS.
- YPOS : Determines the coordinate of the vertical axis for SEL POS.
- FILL→SET : Fills in a selected MD area. The color of filling is sequentially selected as brown, orange, blue, cyan, green, yellow, magenta and red.
- RETURN : Select this to save the MOTION DET menu settings and return to the SPECIAL menu.

☉ PRIVACY : Mask an area you want to hide on the screen.

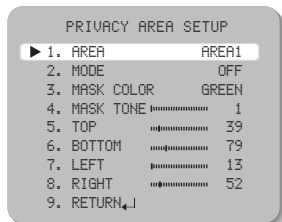

Operating Your Camera

1) When the SPECIAL menu screen is displayed, press the Function Setup switch so that the arrow indicates 'PRIVACY'.

2) Set up the mode using the Function Setup switch.

- AREA : You can select up to 12 PRIVACY areas.
- MODE : Determines whether to use the area selected in the AREA.
- MASK COLOR : Determine area color. You can select Green, Red, Blue, Black, White, Gray.
- MASK TONE : Adjust the brightness of MASK COLOR.
- TOP/BOTTOM/LEFT/RIGHT : Adjust the size and position of the selected area.
- RETURN : Select this to save the PRIVACY menu settings and return to the SPECIAL menu.

○ DIS (Digital Image Stabilizer) : This function mitigates any picture movement due to external factors such as wind.



Notes

- As the DIS function uses the digital zoom, the camera's resolution will decrease.
- DIS doesn't operate when background illumination is too low.
- DIS doesn't operate when object pattern is monotonic as like sky or white wall.

○ LANGUAGE : You can select the menu language according to your requirements.

- NTSC : Korean, English, French, Spanish, Japanese, Portuguese, Taiwanese
- PAL : English, Chinese, German, Italian, French, Spanish, Russian, Czech, Polish, Romanian, Serbian, Swedish, Danish, Turkish, Portuguese

○ RETURN : Select this to save the SPECIAL menu settings and return to the MAIN SETUP menu.

EXIT

Select a desired EXIT mode using the Function Setup switch depending on the camera purpose.

- SAVE** : Save the current settings and exit the MAIN SETUP menu.
- NOT SAVE** : Do not save the current settings and exit the MAIN SETUP menu.
- RESET** : Resets the camera settings to the factory defaults.
Language and Monitor settings are not initialized.

Troubleshooting

If you have trouble operating your camera, refer to the following table.
If the guidelines do not enable you to solve the problem, contact an authorized technician.


- **Nothing appears on the screen.**
 - ▶ Check that the power cord and line connection between the camera and monitor are properly connected.
 - ▶ Check that you have properly connected BNC cable to the camera.
- **The image on the screen is dim.**
 - ▶ Is lens stained with dirt? Clean your lens with soft, clean cloth.
 - ▶ Set the monitor or DVR to the proper condition.
 - ▶ If the camera is exposed to very strong light, change the camera position.
- **The image on the screen is dark.**
 - ▶ Adjust the contrast feature of the monitor or DVR.
 - ▶ If you have an intermediate device, set the 75Ω / Hi-z properly.
- **The camera is not working properly, and the surface of the camera is hot.**
 - ▶ Check that you have properly connected the camera to an appropriate power source.
- **The DAY/NIGHT menu does not work.**
 - ▶ Check that AGC of EXPOSURE SETUP menu is 'OFF'.
- **The SENS-UP function does not work.**
 - ▶ Check that AGC of EXPOSURE SETUP menu is 'OFF'.
 - ▶ Check that SHUTTER of EXPOSURE SETUP menu is 'A.FLK' or 'MANUAL'.
- **Color is not correct.**
 - ▶ Check the setting of WHITE BAL SETUP menu .
- **The screen flickers continually.**
 - ▶ Ensure the camera is not pointing towards the sun.
- **When coaxial communication is not available:**
 - ▶ Make sure that the camera and monitor are installed within the recommended distance.
 - ▶ Use the video amplifier equivalent to coaxitron if the recommended installation distance is exceeded.
- **The camera is out of focus.**
 - ▶ Check that you have properly adjusted the zoom / focus adjustment lever of lens.

Specifications

	SCV-2080N	SCV-2080P
ELECTRICAL		
Input Voltage	AC 24V/DC 12V, Built-in FAN & Heater(AC 24V)	
Power Consumption	Heater off : 4.0W(MAX), Heater on : 8.3W(MAX)	
VIDEO		
Imaging Device	1/3 inch, Diagonal 6mm Super HAD CCD	
Total Pixels	811(H) x 508(V)	795(H) x 596(V)
Effective Pixels	768(H) x 494(V)	752(H) x 582(V)
Scanning System	2:1 Interlace	
Synchronization	Internal / Line-Lock	
Frequency	H : 15.734KHz V:59.94Hz	H: 15.625KHz V: 50.00Hz
Horizontal Resolution	COLOR : 600TVL, B/W : 700TVL	
Min. Illumination	COLOR : 0.15 Lux (50IRE, @F1.2), 0.0003Lux (SENS-UP, x512) B/W : 0.001Lux (50IRE, @F1.2), 0.00002Lux (SENS-UP, x512)	
S/N (γ Signal)	52dB (Weight On, AGC Off)	
Video Output	CVBS : 1.0Vp-p, 75Ω composite	
LENS		
Zoom Ratio	3.6x (Manual)	
Focus Length	2.8 ~ 10.0mm (F1.2)	
Angular Field of View	Tele : 28°(H) x 21°(V), Wide : 94.4°(H) x 69.2°(V)	
PAN / TILT / ROTATE		
Pan / Tilt / Rotate Range	0°~355° / 0°~90° / 0°~355°	
OPERATIONAL		
Electronic Shutter Speed	1/60 ~ 1/120k sec	1/50 ~ 1/120k sec
ON Screen Display	NTSC : Korean, English, Japanese, Spanish, French, Portuguese, Taiwanese PAL : English, Chinese, German, Italian, French, Spanish, Russian, Czech, Polish, Romanian, Serbian, Swedish, Danish, Turkish, Portuguese	
SSDR	On / Off (Level adjustable)	
Backlight Compensation	BLC / HLC / OFF	
Day & Night	COLOR / BW / AUTO (ICR Type)	
Gain Control	Low / High / Off	
White Balance	ATW / Outdoor / Indoor / Manual / AWC (1,700°K ~ 11,000°K)	
SENS-UP (frame Integration)	Auto / Off (Selectable x2 ~ x512)	
Motion Detection	On / Off (8 Programmable zones)	
Privacy Masking	On / Off (12 Programmable zones)	
3D Noise Filter (SSNRll)	On / Off (Level adjustable)	
Digital Zoom	On / Off (x1 ~ x16)	
Digital Image Stabilization(DIS)	On / Off	
Camera Title	On / Off (Displayed 15 Characters)	
Sharpness	On / Off (Level adjustable)	
Flip / Mirror	On / Off	
Communication	Coaxial/Pelco Coaxitron)	
ENVIRONMENTAL		
Operating Temperature / Humidity	-50°C ~ +50°C / Less Than 90% RH	
Storage Temperature / Humidity	-20°C ~ +60°C / 20% ~ 90% RH	
MECHANICAL		
Weather Proof	IP66	
Dimension / Weight	Ø160(W) x 134.5(H)mm / 1.26Kg	

※ The specification for this product may change without prior notice for product improvement.

Dimension

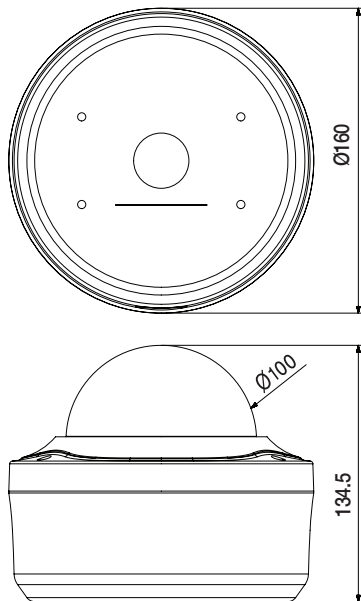

DECLARATION OF CONFORMITY

Application of Council Directive(s)	2004 / 108 / EC
Manufacturer's Name	SAMSUNG TECHWIN CO., LTD
Manufacturer's Address	SAMSUNG TECHWIN CO., LTD 42, SUNGJU-DONG CHANGWON-CITY, KYUNGNAM, KOREA, 641-716
European Representative Name	
European Representative Address	
Equipment Type/Environment	CCTV Camera
Model Name	SCV-2080P
Beginning Serial NO.	C5CX6V3Z300001X
Year of Manufacture	2010.03.01
Conformance to	EN 55022 : 2006 EN 50130-4 : 2003

We, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s).

Manufacturer	SAMSUNG TECHWIN CO., LTD	Legal Representative in Europe
Signature	<i>Bonjeng Gu</i>	Signature
Full Name	BONJENG GU	Full Name
Position	QUALITY CONTROL MANAGER	Position
Place	CHANGWON, KOREA	Place
Date	2010.03.01	Date

MEMO

MEMO

SAMSUNG TECHWIN



SALES NETWORK

SAMSUNG TECHWIN CO., LTD.

Samsungtechwin R&D Center, 701, Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do, Korea, 463-400
TEL : +82-70-7147-8740-60, FAX : +82-31-8018-3745

SAMSUNG TECHWIN AMERICA Inc.

1480 Charles Willard St, Carson, CA 90746, UNITED STATES
Tol Free : +1-877-213-1222, FAX : +1-310-632-2195
www.samsungcctvusa.com

SAMSUNG TECHWIN EUROPE LTD.

Samsung House, 1000 Hillswood Drive, Hillswood Business Park
Chertsey, Surrey, UNITED KINGDOM KT16 OPS
TEL : +44-1932-45-5300, FAX : +44-1932-45-5325

www.samsungtechwin.com
www.samsungsecurity.com

P/No. : Z6806-1233-01A

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>