

SanDisk® V-Mate™

Video Memory Card Recorder

User Guide

You may register your product at
www.sandisk.com/registration

and receive e-mail alerts about new firmware for
your V-Mate Video Memory Card Recorder!

Failure to register your product will NOT diminish the
rights you have under the product warranty.



English

Contents

Package Contents	2
Product Specification	2
System Requirements	2
Safety Instructions	2
Connecting V-Mate	3
Setting the V-Mate	4
Recording with the V-Mate*	5
Playing Video with the V-Mate	5
Playing recorded video on a PC	5
Troubleshooting	5
Worldwide BrandSetup Code List	6
Warranty	11

Congratulations

Congratulations on your purchase of the V-Mate Video Memory Card Recorder. Now you can easily record movies and TV programs on flash memory cards and play them back in a compatible playback device such as mobile phones, handheld game consoles, notebook PCs and more. Whenever you want, wherever you are! This user guide will instruct you on how to install and use your V-Mate.

* For home and personal use:

This product is intended to be used for recording and playback for your home and personal enjoyment. Copying and commercial use of copyrighted material without permission of the copyright owner may be prohibited by law. Use of your V-Mate in compliance with all copyright and applicable intellectual property laws remains the responsibility of the user of the product.

Package Contents

- V-Mate Video Memory Card Recorder
- Remote Control with Battery
- Audio/Video Cables (2x)
- Infrared Emitter Cable
- USB Cable
- Power Supply
- User Guide

Product Specifications

Video:

- Codecs: MPEG-4 SP, H.263
- Formats: MP4, 3GP, 3G2
- Resolution: Up to 640 x 480
- Frames per second: Up to 30

Compatible Card Formats:

- SD, SDHC, miniSD, miniSDHC, microSD, microSDHC
- RS-MMC (Dual Voltage)
- MMCplus, MMCmobile
- Memory Stick, Memory Stick PRO, Memory Stick Duo, Memory Stick PRO Duo

Connectors:

- 3.5 mm input for Composite Video, Audio Left & Right
- 3.5 mm output for Composite Video, Audio Left & Right
- USB mini B
- IR (infrared) emitter (connection to set top box or VCR)
- Power

System Requirements

For recording and playback:

- TV with RCA composite video (NTSC or PAL) and audio connection*
- Video source with RCA composite video and audio output connection (e.g. cable/satellite box, camcorder, VCR or DVD player)*

For firmware upgrading/connecting to a PC:

- Windows: Pentium-class PC with USB support and Windows 2000 or XP.
- Macintosh: Computer with USB support and Mac OS 10.1.2+

SAFETY INSTRUCTIONS



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WEEE Disposal Instructions

Do not dispose of this device with unsorted household waste. Improper disposal may be harmful to the environment and human health. Please refer to your local waste authority for more information on safe and effective disposal in your area.

Read these Instructions.

- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Clean only with a damp cloth (unplug the power adapter before cleaning).
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not use near water (e.g. sink, bathtub, swimming pool, etc.).

Warning:


TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

Note:

Please consult the rating label at the bottom of the SanDisk V-Mate for power input and other safety information.


Connecting V-Mate

1. Connect one audio/video cable to the composite video output and audio left/right output of an analog video source (e.g. cable/satellite box, camcorder, VCR or DVD player). The yellow plug should connect to Video Out, the red plug should connect to Audio Out (R), and the white plug should connect to Audio Out (L). Connect the 3.5 mm connector on the other side of the cable to the AV In connection on the back of the V-Mate.
2. If you are using a cable/satellite/terrestrial receiver box or VCR, connect the 3.5 mm connector on the IR Emitter cable to the IR Emitter connector on the back of the V-Mate. The IR emitter will automatically power on/off and select channels at cable/satellite/terrestrial receiver box or VCR during a scheduled recording. Remove the protective layer from IR emitter and stick the IR emitter next to the remote sensor of the cable/satellite/terrestrial receiver box or VCR. When attaching the IR emitter to the video source box, make sure to cover only a part of the IR Receiver window so that it will not block the IR signal coming from the remote control. To find the remote sensor on the video source box, consult its manual for more information.

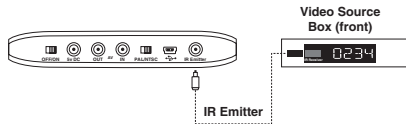

3. Connect the 2nd audio/video cable to the TV. On the TV, the yellow plug should connect to Video In, the red plug should connect to Audio In (R), and the white plug should connect to Audio In (L). Connect the 3.5 mm connector on the other side of the cable to the AV Out connection on the back of the V-Mate.
4. Plug the Power Supply into the back of the V-Mate and plug the power supply into a

5. Check the position of the NTSC/PAL switch on the back of the V-Mate. The selected position should match with the type of TV. Please consult the manual/specifications of the TV for details.
6. Move the power switch on the back of the V-Mate into the ON position.
7. Pull the plastic strip out of the remote control to activate the battery.
8. Press the power button on the remote and the V-Mate will start up (the blue slot LEDs blink and the green power LED stays on).
9. Turn on the TV and the video source box and change the input source on the TV. Depending on the TV, the input source may be called TV/Video, Input, or Source (consult the TV manual for more information). When the correct source is selected, you will see a message to insert a memory card. When the V-Mate is turned off (standby) from the remote control or on the back of the unit, the video signal from the video source box will be displayed on the TV screen. The V-Mate is now correctly connected

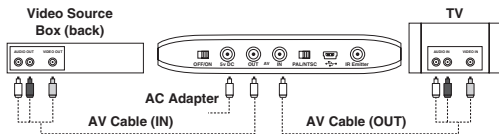

Setting the V-Mate

1. Make sure a compatible memory card is inserted. Only insert one memory card at a time.
2. In the next screen set the date and time (accurate time and date settings are required for scheduled recordings). When the power supply is disconnected, the clock in the V-Mate will reset. When the V-Mate is turned on again, a message will come up requesting to set the clock. After the time is set, the main menu will appear.

3. In order to record a video recording file that is compatible with your playback device, you need to set the appropriate recording settings. You can do this manually or by selecting your playback device from a list. To select from a list, select SETTINGS and then RECORDING FORMAT. Select the appropriate category for you playback device, then its brand and finally its model number. Settings can be manually adjusted by selecting SETTINGS → RECORDING FORMAT → MANUAL SETTINGS. The following settings can be manually adjusted:

- Quality (the higher the quality, the sharper the video)
- Format (different playback devices often work with different video formats)
- Resolution (the higher the resolution, the bigger the video width and height)
- Frame rate (the higher the frame rate, the smoother the video runs)

4. In order to schedule recordings and to let the V-Mate record programs while you are not present, the Infrared Emitter needs to use an infrared code that is compatible with the cable/satellite/terrestrial receiver box or VCR.

A. Go to SETTINGS → IR EMITTER.

B. Select the Device Type of the video source box that is connected to the V-Mate.

C. Input the code associated with the device type and the device brand from the table in the back of this user guide. Check www.sandisk.com for the most recent list of infrared codes for video source boxes.

D. Run the test to make sure V-Mate communicates properly with your video source box.

5. To adjust the Date and time, go to SETTINGS → Date & Time

6. To change the language of the user interface, go to SETTINGS → Language

Recording with the V-Mate*

To record a video file, go to RECORD NOW in the main menu or press the record button on the remote control. The RECORD NOW screen will appear and shows a preview window. If the video source box is turned on, the preview window will show the video stream that comes from the source box. Press the record or OK button and the timer will start running, indicating that the video is being recorded. The LED indicator next to the slot in which a card is inserted is blinking indicating that data is being written to the card. **DO NOT REMOVE THE CARD WHEN THE INDICATOR IS BLINKING AS IT MAY DAMAGE THE CARD AND CORRUPT THE VIDEO FILE.** To stop a recording, press the Stop button.

During recording in 640x480 resolution, there will be no preview window (in the other resolutions there is a preview window during recording). Instead the screen is black with "REC" displayed in the top left corner to indicate the V-Mate is recording. You can hear the audio. To see the video signal while recording in VGA resolution, you can setup a direct connection between the video source box (2nd AV output is required) and the TV (2nd AV input is required). This requires an extra AV cable (not included).

To schedule a recording, go to SCHEDULE RECORDING in the main menu and select a time slot (you can program a maximum of 30 time slots). With the cursor keys and the OK button set the date, channel, start time, stop time and the frequency (ONCE – for one time recording, DAY - for daily recording, WEEK – for weekly recording). If you program multiple time slots, make sure there is no overlap in the recording time. To delete a time slot, select the time slot and press the Delete button on the remote control.

After the recording has stopped and the indicator has stopped blinking, you may remove the card from the V-Mate and insert it in your playback device. Consult the manual of your playback device on how to insert a card and playback video files from the card.

Unauthorized recording of copyrighted materials may infringe on the rights of the copyright owners and violate copyright laws.

Playing video with the V-Mate

In addition to recording video files to playback on handheld devices, you can also play video on V-Mate that is recorded by the V-Mate itself. In the main menu select PLAY VIDEO and open a folder or select a video file. Press the Play button on the remote control to start the video file. To delete a video file, select it and press the Delete button on the remote control. To see more details about the video file properties, select it and press the Info button.

Playing recorded video on a PC

For playback on a PC, RealNetworks™ RealPlayer™ 10 or higher or Apple® QuickTime™ 6 or higher with the latest software updates is compatible with MPEG-4 ISO (.MP4) files.

Troubleshooting

For Frequently Asked Questions and other V-Mate support information, please go to our website at www.sandisk.com/retail/support.asp

For assistance by phone please call toll free **866-SANDISK (866-726-3475)** Monday through Friday, 6am till 6pm Pacific Standard Time.

Worldwide BrandSetup Code List

Setup Code For Cable Converters (including Cable/DVR combos)

ABC 0003, 0008, 0237
 Americast 0899
 Austar 0276
 Bell South 0899
 Bestlink 0303
 Birmingham Cable Communications 0276
 British Telecom 0003
 Cable & Wireless 1068
 Clearmaster 0883
 ClearMax 0883
 Coolmax 0883
 Coship 1462
 Daehan 0778
 Daeryung 0008, 0477, 0877, 1877
 Director 0476
 France Telecom 0817
 Galaxi 0008
 GE 0237
 Gehua 0476
 General Instrument 0003, 0276, 0476, 0810
 General Instruments 0003, 0276, 0476
 GNI 1466
 GoldStar 0144
 Hamlin 0009, 0273
 Hongtian Jiangsu 1462
 Hwalin 0303
 Jerrold 0003, 0276, 0476, 0810

Jiuzhou 1445
 Kabelvision 0003
 KNC 0008
 LG 0144
 Macab 0817
 Melita 0003
 Memorex 0000
 Motorola 0276, 0476, 0810, 1254, 1376
 Mr Zapp 0817
 MS 0303
 Multitech 0883
 Noos 0817
 NTL 0003, 0276, 1060, 1068
 Oak 0303
 Ono 1068
 Optus 0276, 1060
 Pace 0237, 1060, 1068, 1877
 Panasonic 0000, 0008, 0107
 Paragon 0000
 Phillips 0317, 0817, 1305
 Pioneer 0144, 0533, 0877, 1877
 Pulsar 0000
 PVP Stereo
 Visual Matrix 0003
 Quasar 0000
 RadioShack 0303, 0883
 Regal 0273, 0279
 Runco 0000
 Sagem 0817
 Salora 0000
 Samsung 0000, 0444, 0445, 1068

Scientific Atlanta 0008, 0237, 0477, 0877, 1068, 1877
 Skyworth 1464
 Sony 1006
 Starcom 0003
 Supercable 0276
 Supermax 0883
 Taihan 0778
 TCL 1445
 Telewest 1068
 Time Warner cable 1877
 TongKook 0840
 Torx 0003
 Toshiba 0000
 Trans PX 0276, 0303
 Tristar 0883
 TS 0003, 0303
 United Cable 0003
 US Electronics 0276
 V2 0883
 Viewmaster 0883
 Vision 0883
 Visiopass 0817
 Vortex View 0883
 Zenith 0000, 0008, 0525, 0899

Setup Code For Satellite Receivers (including Satellite/DVR combos)

@sat 1300
 ABSat 0123
 Regal 0642
 ADB 0710
 AGS 0710
 Akai 0200
 Allsat 0200, 1017, 1126

AlphaStar 0772
 Ampere 0132
 Amstrad 0132, 0345, 0795, 0847, 0863, 0882, 1175
 AntSat 1017, 1083
 Arcon 1043, 1075
 Arnion 1300
 Asat 0200
 AssCom 0853
 Astacom 0710
 Aston 0142
 Astro 0173, 1099
 Atsat 1300
 Aurora 0642, 0879
 Austar 0497, 0642, 0863, 0879
 Axial 0710
 Axis 1111
 Bentley Walker 1017
 Blaupunkt 0173
 Boca 0132
 Boston 0710
 Brand Unknown 0132, 0299
 British Sky Broadcasting 0847, 1175, 1847
 BskyB 0847, 1175
 BT 0710
 Canal Digital 0853
 Canal Satellite 0853
 Canal+ 0853
 CanalSatellite 0853
 Century 0856
 Chaparral 0216
 Cherokee 0123, 0710
 Chess 1085
 CityCom 0299, 1075, 1126

Colombia 0132
 Columbia 0132
 Comag 0132
 Conrad 0132
 Crossdigital 1109
 Cryptovision 0795
 Cyrus 0200
 D-box 0723, 0873
 Daewoo 1111
 Delfa 0863
 Deltasat 1075
 Digenius 0299
 DigiQuest 0863
 Digturk 1076
 DirecTV 0099, 0247, 0392, 0566, 0639, 0724, 0749, 0819, 1076, 1108, 1109, 1142, 1392, 1414, 1442, 1639, 1640, 1749, 1856
 Discovery 0710
 Diseqc 0710
 Dish Network System 0775, 1005, 1505, 1775
 Dishpro 0775, 1005, 1505, 1775
 DMT 1075
 DNT 0200
 Dream Multimedia 1237
 DREAM multimedia.TV 1237
 DStv 0642, 0879
 DX Antenna 1530

Echostar 0167, 0610, 0775, 0853, 0871, 1005, 1086, 1200, 1505, 1775
 Einhell 0132
 Elta 0200
 Emme Esse 0871
 Engel 1017
 Eurieult 0882
 Europa 0863
 Europhon 0132, 0299
 Eurosky 0132, 0299
 Expressvu 0775, 1775
 Force 1101
 Force NO AS 1101
 Fortec Star 1017, 1083
 Foxtel 0497, 0720, 0879, 1176
 Fracarro 0871
 Freesat 0882
 FTEmaximal 0863
 Fuba 0173, 0299
 Galaxis 0853, 0863, 0879, 1101, 1111
 Garnet 1075
 GE 0566
 General Instrument 0869
 General Instruments 0869
 GF 1043
 GF Star 1043
 GOD Digital 0200
 GOI 0775, 1775
 Gold Box 0853
 Goldbox 0853
 Goldvision 1017
 Gradiente 0099, 0856, 0887

Grundig	0173, 0345, 0847, 0853, 0879	Kathrein	0123, 0173, 0200, 0249, 1221	Nokia	0723, 0751, 0853, 0873, 1023, 1223	Proton	1535	SL	0132, 0299	Trio	1075
Hanseatic	1099	Kenwood	0853	OctalTV	1505	QNS	1402	SM Electronic	1200	UEC	0879
Hirschmann	0173, 0299, 0710, 0882, 1085, 1111	Key West	0132	OnDigital	0751	Quadral	0710	Smart	0132, 0299, 0882, 1101	UltimateTV	1392, 1640
Hisense	1535	Klap	0710	Optex	1043	Quelle	0299	Sony	0639, 0847, 0853, 1524, 1639, 1640	Uniden	0722, 0724
Hitachi	0819, 1250	Koscom	1043	Optus	0879	Radiola	0200			Unisat	0132, 0200
HNE	0132	Kreiling	0249	Orbitech	1099	RadioShack	0869	SR	0132	Universum	0173, 0299, 1087, 1099
Hornet	1300	Kreiselmeyer	0173	Origo	0497	Radix	0882	Star	0887	US Digital	1535
HSnsel & Gretel	0132	L&S Electronic	0132, 1043	OSAT	0345	RCA	0143, 0392, 0566, 0855, 1392	Star Choice	0869	USDTV	1535
HTS	0775, 1775	LaSAT	0132, 0299	Pace	0200, 0497, 0720, 0795, 0847, 0853, 0887, 1175	RFT	0200	Starlite	0200	Variosat	0173
Hughes		LG	1075, 1414	Packard Bell	1111	Roadstar	0853	Stream	1847	Ventana	0200
Network Syst	0749	Lifesat	0132, 0299, 1043	Packsat	0710	Saba	0710	Strong	0132, 0853, 0879, 1300	VH-Sat	0299
Hughes		Logix	1017, 1075	Palcom	0299	Sagem	0820, 1114, 1307	Sunkai	0123	Visiosat	0142, 0710
Network Systems	0749, 1142, 1442, 1749	Lorenzen	0132, 0299	Panasat	0615, 0879	Samsung	0853, 0863, 1017, 1108, 1109, 1276	Sunstar	0132, 0642	Viva	0856
Humax	0863, 1176, 1406	Luxor	0345	Panasonic	0247, 0701, 0847, 1527	Sat Control	1300	Supernova	0887	Voom	0869
Huth	0132, 1017, 1075	Magnavox	0722, 0724	Panda	0173	Satstation	1083	SVA	1455	Wintel	0299
Hyundai	1075	Manata	0132, 0710	Patriot	0132, 0710	Schneider	0710	Tecatel	1200	Wisi	0173, 0299
I-Lo	1535	Manhattan	1017, 1083	Paysat	0724	Schwaiger	0132, 0863, 1075, 1083, 1111	TechniSat	0200, 0863, 1099	Worldsat	0123, 0710
ID Digital	1176	Marantz	0200	Phillips	0099, 0173, 0200, 0710, 0722, 0724, 0749, 0853, 0856, 0887, 1076, 1114, 1142, 1442, 1749	SCS	0299	Technowelt	0132	XCOM	0123
Indovision	0887	Maspro	0173, 1530			Sedea Electronique	0132	Techedan	1017	Xsate	0123, 0847
Ingelen	0882	Matsui	0173, 0710			SEG	1075, 1087	tekComm	1017	Xtreme	1300
Innova	0099	Maximum	1075			Seleco	0871	Teleciel	1043	Yes	0887
International	0132	MediaSat	0853			Serino	0610	Telefunken	0710	Zehnder	1075
Interstar	1017	Medion	0132, 0299, 1043, 1075			Siemens	0173	Telestar	1099	Zenith	0856, 1856
InVideo	0871	Mega	0200	Phonotrend	0863, 1017, 1200	Silva	0299	Televise	0132, 1300		
IR	0173	Memorex	0724			SKY	0099, 0847, 0856, 0887, 1014, 1175, 1847, 1856	Televisa	0887		
Irdeto Technology	0879	Metz	0173					Thomson	0392, 0710, 0820, 0847, 0853, 1046	Aiwa	1904, 1911
ISkyB	0887	Micromaxx	0299	Pioneer	0853			Tioko	0132	America Action	0180
Italtel	0871	Microstar	1075	Planet	0871			Tivo	1142, 1442	Audiovox	0180
ITT Nokia	0723, 0873	Mitsubishi	0749	Preisner	0132, 1101			Tokai	0200	Broksonic	1911
Jiuzhou	1450	Morgan's	0132, 0200	Premiere	0853, 0873	SKY Italia	1847	Toshiba	0749, 0790, 1285, 1530, 1749	Emerson	0236, 1911
JOK	0710	Motorola	0856, 0869	Prima	0795	Sky Television	1014			Funai	1904
JVC	0775, 1775	Multichoice	0642, 0879	Primacom	1111	SKY+	1175			GE	1917, 1922
Kaon	1300	Myryad	0200	Profile	0710	Skymaster	1075, 1085, 1200	TPS	0820, 1307	Harley Davidson	1904
KaTelco	1111	Netsat	0099, 0887	Pova	0710			Triax	0132, 0200, 0810, 1099	Hitachi	1904
		Neuling	0132							JVC	1923
		Next Level	0869							Lloyd's	1904
		Nikko	0132							Magnavox	1904
										Mitsubishi	1917
										Orion	1911

TV/VCR Combination (T)

RadioShack	1904
RCA	1917, 1922
Samsung	1959
Sansui	1904, 1911
Schneider	1904
Sears	1904
Sharp	1917
Sony	1904
Symphonic	1904
Teac	1904
Thomas	1904
Zenith	1904, 1911

TV/DVD Combination (T)

Apex Digital	1943
Broksonic	1935
Bush	0698, 1037
Grundig	1935
Hitachi	1960
Panasonic	1941
Philips	1961
RCA	1948
Sansui	1935
Sylvania	0171
Toshiba	1935

TV/VCR/DVD Combination (T)

Sharp	1917
Toshiba	1945

Setup Code For VCRs (including DVRs)

ABS	1972
Accent	0072
Admiral	0048, 0209
Adventura	0000
Adyson	0072
Aiko	0278

Aim	0278
Aiwa	0000, 0037, 0209, 0348, 0479
Akai	0037, 0041, 0240, 0315, 0348, 0642
Akiba	0072
Akura	0072
Alba	0000, 0072, 0081, 0209, 0278, 0315, 0348
Alienware	1972
Allorgan	0240
Allstar	0081
America Action	0278
American High	0035
Amoisonic	0479
Amstrad	0000, 0072, 0278
Anam	0037, 0162, 0226, 0240, 0278
Anam National	0162, 0226, 1562
Anitech	0072
Ansonic	0000
Aristona	0081
ASA	0037, 0081
Asha	0240
Asuka	0037, 0038
Audiosonic	0278
Audiovox	0037, 0278
AVP	0000
Awa	0037, 0043, 0278, 0642
Baird	0000, 0041, 0104
Basic Line	0046, 0072, 0209

Beaumarck	0240
Beko	0104
Bell & Howell	0104
Bestar	0278
Black Diamond	0642
Black Panther	0278
Blaupunkt	0081, 0162, 0226
Blue Sky	0037, 0072, 0209, 0278, 0348, 0642
Bondstec	0072
Brand Unknown	0104, 0348
Brandt	0041, 0320
Brandt Electronic	0041
Brandt Electronique	0041
Brinkmann	0209, 0348
Broksonic	0002, 0121, 0184, 0209, 0348, 0479
Bush	0000, 0072, 0081, 0209, 0278, 0315, 0348, 0642
Calix	0037
Canon	0035
Carena	0081, 0209
Carrefour	0045
Carver	0081
Casio	0000
Cathay	0278
CCE	0072, 0278
CGE	0000, 0041
Changhong	0048, 0081
Cimline	0072
Cineral	0278
Citizen	0037, 0278
Clatronic	0000, 0072
Colt	0072
Condor	0278

Craig	0037, 0047, 0072, 0240
Crown	0037, 0072, 0278
Curtis Mathes	0035, 0041, 0060, 0162
Cybernex	0240
CyberPower	1972
Cyrus	0081
Daewoo	0045, 0046, 0104, 0209, 0278, 0642
Dansai	0072, 0278
Daytron	0278
De Graaf	0042, 0046, 0048, 0081, 0104
Decca	0000, 0041, 0067, 0081, 0209
Deitron	0278
Dell	1972
Denko	0072
Denon	0042
Diamant	0037
Diamond	0348
DirecTV	0739
Domiland	0209
Dual	0000, 0041, 0081, 0278, 0348
Dumont	0000, 0081, 0104
Durabrand	0038, 0039
Dynatech	0000
Elbe	0038, 0278
Elcatech	0072
Electrohome	0037
Electroponic	0037
Ellin	0240
Elmal	0000

Elta	0072, 0278
Emerex	0032
Emerson	0000, 0002, 0035, 0037, 0043, 0045, 0072, 0121, 0184, 0209, 0240, 0278, 0479
ESC	0240, 0278
Etzuko	0072
Ferguson	0000, 0041, 0278, 0320
Fidelity	0000, 0072, 0240, 0432
Finlandia	0000, 0037, 0042, 0043, 0046, 0048, 0081, 0104, 0226
Finlux	0000, 0042, 0081, 0104
Firstline	0037, 0043, 0045, 0072, 0209, 0278, 0348
Fisher	0046, 0047, 0104
Flint	0209, 0348
Frontech	0072
Fuji	0033, 0035
Fujitsu	0000, 0045
Fujitsu General	0037
Funai	0000
Galaxi	0000
Galaxis	0278
Garrard	0000
Gateway	1972
GE	0035, 0048, 0060, 0226, 0240, 0320

GEC	0081
General	0045
General Technic	0348
Genexxa	0104
Go Video	0432
GoldHand	0072
GoldStar	0037, 0038, 0209, 0225, 0226
Goodmans	0000, 0037, 0072, 0081, 0209, 0278, 0348, 0642
GPX	0037
Gradiente	0000
Graetz	0041, 0104, 0240
Granada	0000, 0037, 0042, 0046, 0048, 0081, 0104, 0226, 0240
Grandin	0000, 0037, 0072, 0209, 0278
Grundig	0072, 0081, 0226, 0320, 0347, 0348
Haaz	0348
Hanseatic	0037, 0038, 0081, 0209
Haojie	0240
Harley Davidson	0000
Harman/Kardon	0038, 0081
Harwood	0072
HCM	0072
Headquarter	0046
Hewlett Packard	1972
HI-Q	0047

Hinari	0041, 0072, 0209, 0240, 0278	ITV	0037, 0278 0278	Logik	0072, 0209, 0240	Metz	0037, 0081, 0162, 0226, 0347, 1562	Nordmende	0041, 0067, 0320	Penney	0035, 0037, 0038, 0042, 0240
Hisawa	0209	Jensen	0041	Lux May	0072			Northgate	1972		
Hischito	0045	JMB	0209, 0348	Luxor	0043, 0046, 0047, 0048, 0104, 0315	MGA	0043, 0240	NU-TEC	0209	Pentax	0042
Hitachi	0000, 0037, 0041, 0042, 0046, 0081, 0089, 0240	Joyce	0000			MGN Technology	0240	Oceanic	0000, 0041, 0046, 0048, 0081, 0104	Perdio	0000, 0209
		JVC	0041, 0045, 0067, 0081, 1008	LXI	0037	Micormay	0348	Okano	0072, 0209, 0278, 0315, 0348	Philco	0000, 0035, 0038, 0072, 0209, 0226, 0479
Hornlyphon	0081	Kaisui	0072	M Electronic	0000, 0038	Micromaxx	0209				
Howard Computers	1972	Kambrook	0037	Magnasonic	0278	Microsoft	1972			Philips	0000, 0035, 0081, 0226, 0618, 0739
HP	1972	Karcher	0081, 0278	Magnavox	0000, 0035, 0039, 0081, 0149, 0642	Migros	0000	Olympus	0035, 0226		
Hughes		KEC	0037, 0278			Mind	1972	Onimax	0642	Phoenix	0278
Network Syst	0042	Kendo	0072, 0209, 0278, 0315, 0348, 0642	Magnin	0240	Minolta	0042	Optimus	0037, 0048, 0104, 0162, 0432, 1062	Phonola	0081
Hughes				Manesth	0045, 0072, 0081, 0209	Mitsubishi	0000, 0041, 0043, 0048, 0067, 0081, 0642	Orbit	0072	Pilot	0037
Network Systems	0042, 0739	Kenwood	0038, 0041, 0067	Marantz	0035, 0038, 0081, 0209	Motorola	0035, 0048	Orion	0002, 0121, 0184, 0209, 0348, 0479	Pioneer	0042, 0067, 0081, 0162
Hypson	0000, 0037, 0072, 0209, 0278	KIC	0000	Mark	0000, 0278	MTC	0000, 0240			Polk Audio	0081
		Kimari	0047	Marta	0037	Multitec	0037	Orson	0000	Portland	0278
Hi er	0278, 0642	Kioto	0348	Master's	0278	Multitech	0000, 0072	Osaki	0000	Prinz	0000
iBUYPOWER	1972	KLH	0072	Matsui	0209, 0240, 0278, 0348	Murphy	0000		0000, 0037, 0072	Profitronic	0081, 0240
Imperial	0000	Kneissel	0037, 0209, 0278, 0348	Matsushita	0035, 0162, 0226	Myryad	0081	Osume	0072	Proline	0000, 0278, 0320, 0642
Ingersoll	0209, 0240			Media Center PC	1972	NAD	0104	Otake	0209	Proscan	0060
Inno Hit	0072	Kodak	0035, 0037	Mediator	0081	Naiko	0642	Otto Versand	0081	Proscoc	0278
Interbuy	0037, 0072	Kolin	0041, 0043	Medion	0209, 0348, 0642	National	0226	Pacific	0000, 0348, 0642	Prosonic	0209, 0278
Interfunk	0081, 0104	Kolster	0209	MEI	0035	Nebula Electronics	0033	Packard Bell	1972	Protec	0072
Internal	0278	Korpel	0072	Melelectronic	0000, 0037, 0038	NEC	0035, 0037, 0038, 0041, 0048, 0067, 0104, 0278	Palladium	0037, 0041, 0072, 0209, 0348	Protech	0081
International	0037, 0278, 0642	Kuba	0047	Memorex	0000, 0035, 0037, 0039, 0046, 0047, 0048, 0104, 0162, 0209, 0240, 0348, 0479	Neckermann	0081	Panasonic	0035, 0162, 0225, 0226, 0616, 1062, 1562	ProVision	0278
Intervision	0000, 0209, 0278	Kuba Electronic	0047			Nesco	0000, 0072			Pulsar	0039
		Kuwa	0226			Neufunk	0209			Pye	0000, 0081
IR	0041, 0042, 0045, 0047, 0072, 0081, 0104, 0209, 0226, 0240, 0348	Kyoto	0072			Newave	0037			Qisheng	0060
		Lenco	0278			Nikkai	0072, 0278			Quarter	0046
		Leyco	0072			Nikko	0037			Quartz	0046
		LG	0037, 0038, 0042, 0045, 0209			Noblex	0240			Quasar	0035, 0162, 0278
						Nokia	0041, 0042, 0046, 0048, 0081, 0104, 0240, 0278, 0000			Quelle	0081
Irradio	0037, 0072, 0081	Lifetec	0209, 0348					Pathe Cinema	0043	Radialva	0037, 0048, 0072, 0081
		Lloyd's	0000					Pathe Marconi	0041	Radiola	0081
ITT	0041, 0046, 0104, 0240	Loewe	0037, 0081, 0162, 1562	Memphis	0072					Radionette	0037

RadioShack	0000, 0037	Saville	0240, 0278	Sinudyne	0081, 0209	TCM	0348	Topline	0348	White	
Radix	0037	SBR	0081	Smaragd	0348	Teac	0000, 0037,	Toshiba	0041, 0042,	Westinghouse	0072, 0209,
Randex	0037	Schaub Lorenz	0000, 0041,	Sonic Blue	0616		0041, 0072,		0043, 0045,		0278
Rank	0041		0104, 0315,	Sonneclair	0072		0278, 0642		0067, 0081,	World	0348
Rank Arena	0041		0348	Sonolor	0046	Tec	0072		0432, 1008,	XR-1000	0000, 0035,
RCA	0000, 0035,	Schneider	0000, 0037,	Sontec	0037	Tech Line	0072		1503, 1972		0072
	0042, 0048,		0042, 0072,	Sony	0000, 0032,	Technics	0035, 0081,	Totevision	0037, 0240	Yamaha	0038, 0041
	0060, 0149,		0081, 0240,		0033, 0035,		0162, 0226	Touch	1972	Yamishi	0072, 0278
	0226, 0240,		0278, 0348,		0636, 1972	TechniSat	0348	Towada	0072	Yokan	0072
	0320, 0880		0642	Soundwave	0037, 0209,	Teco	0035, 0037,	Tradex	0081	Yoko	0037, 0072,
Realistic	0000, 0035,	Scott	0043, 0045,		0348		0038, 0041,	Triad	0278		0240
	0037, 0046,		0121, 0184	Ssangyong	0072		0048	Uher	0240	Zenith	0000, 0033,
	0047, 0048,	Sears	0000, 0035,	Standard	0278	Tedelex	0037, 0209,	Ultravox	0278		0039, 0209,
	0104		0037, 0042,	Stern	0278		0348	Unitech	0240		0479"
Reoc	0348		0046, 0047,	STS	0042	Teknika	0000, 0035,	United	0348	ZT Group	1972
ReplayTV	0616		0104	Sunkai	0209, 0278,		0037	United Quick Star	0278	ZX	0209, 0348
Rex	0041	Seaway	0278		0348	Teleavia	0041	Universum	0000, 0037,		
RFT	0072	SEG	0072, 0081,	Sunstar	0000	Telefunken	0041, 0209,		0081, 0104,		
Roadstar	0037, 0072,		0240, 0278,	Suntronic	0000		0278, 0320,		0209, 0240,		
	0081, 0240,		0642	Sunwood	0072		0642		0348"		
	0278	SEI	0081	Supra	0037, 0278,	Telestar	0037	Vector	0045		
Royal	0072	Sei-Sinudyne	0081		0348	Teletech	0000, 0072,	Vector Research	0038		
Runco	0039	Seleco	0037, 0041				0278	Victor	0041, 0067"		
Saba	0041, 0278,	Semivox	0045, 0209	Sylvania	0000, 0035,	Tenosal	0072	Video Concepts	0045		
	0320	Semp	0045		0043, 0081	Tensai	0000, 0072,	Video Technic	0000		
Saisho	0209, 0348	Sentra	0072	Symphonic	0000	Tensai	0278	Videomagic	0037		
Salora	0043, 0046,	Setron	0072	Systemax	1972	Tevion	0209, 0348,	Videosonic	0240		
	0104	Sharp	0037, 0048,	T+A	0162		0642	Viewsonic	1972		
Sampo	0037, 0048		0209	Tagar Systems	1972	Texet	0278	Villain	0000		
Samsung	0045, 0240,	Shinco	0000	Taisho	0209	Thomas	0000	Wards	0000, 0033,		
	0432	Shintom	0072, 0104	Tandberg	0278	Thomson	0041, 0060,		0035, 0038,		
Sanky	0039, 0048	Shivaki	0037	Tandy	0000, 0104		0067, 0278,		0039, 0042,		
Sansei	0048	Shogun	0240	Tashiko	0000, 0037,		0320		0045, 0046,		
Sansui	0000, 0041,	Siemens	0037, 0046,		0048, 0081,				0047, 0048,		
	0067, 0072,		0081, 0104,	Tatung	0240	Thom	0037, 0041,		0060, 0072,		
	0209, 0348,		0320, 0347		0000, 0041,	Tivo	0618, 0636,		0081, 0149,		
	0479	Siera	0081		0043, 0045,		0739, 1503		0240		
Sanyo	0046, 0047,	Silva	0037		0048, 0067,	TMK	0240	Watson	0081, 0642		
	0048, 0067,	Silver	0278		0081, 0209,	Tokai	0037, 0041,	Weltblick	0037		
	0104, 0209,	Singer	0278		0348		0072, 0104	Wharfedale	0642		
	0240, 0348		0045, 0072,	Tchibo	0348						

Warranty

SanDisk warrants that this product will be free from material defects in design and manufacture and will substantially conform to the published specifications under normal use for two years from your date of purchase, subject to the conditions below. This warranty is provided to the original end user purchasing from SanDisk or an authorized reseller, and is not transferable. Proof of purchase may be required. This product must be used with memory cards that are compliant with the specifications of the CompactFlash Card Association, the SD Card Association, the MultiMediaCard Association, or Memory Stick, Memory Stick PRO, SmartMedia and xD-Picture Card requirements as applicable; use with any other product voids this warranty. SanDisk is not responsible for any failure or defect caused by any third party product or component, whether authorized or not. This warranty does not apply to any third party software or content provided with the product and you are responsible for all service and repair needed for such software. This warranty is void if the memory card is not used in accordance with the product and content instructions, or if it is damaged as a result of improper installation, misuse, unauthorized repair, modification or accident.

To obtain warranty service contact SanDisk at 1-866-SanDisk or send an email to: support@sandisk.com. You must return the product in tamper resistant packaging, freight prepaid, as instructed by SanDisk. You must obtain a tracking confirmation number, which you may be required to provide to SanDisk. SanDisk will, at its option, repair or replace the product with new or refurbished product of equal or greater capacity and functionality, or refund the purchase price. The warranty duration on replaced product will be that time period remaining on the original product. THIS CONSTITUTES SANDISK'S ENTIRE LIABILITY AND YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY.

SanDisk does not warrant, and shall not be responsible for, any lost data or images contained in any product (including in any returned product), regardless of the cause of the loss. SanDisk's products are not warranted to operate without failure. SanDisk products should not be used in life support systems or other applications where failure could threaten injury or life. This warranty gives you specific legal rights, and you may also have other rights which vary by jurisdiction.

THE FOREGOING IS SANDISK'S SOLE WARRANTY. SANDISK DISCLAIMS ALL OTHER EXPRESS AND IMPLIED WARRANTIES TO THE EXTENT SUCH WARRANTIES

APPLICABLE LAW. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY. SOME JURISDICTIONS DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN NO EVENT SHALL SANDISK OR ANY AFFILIATED OR SUBSIDIARY COMPANY BE LIABLE UNDER ANY CIRCUMSTANCES FOR ANY DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES, ANY FINANCIAL LOSS OR ANY LOST DATA OR IMAGE, EVEN IF SANDISK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. IN NO EVENT WILL SANDISK'S LIABILITY EXCEED THE AMOUNT PAID BY YOU FOR THE PRODUCT.

The information in this manual is subject to change without notice. SanDisk shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the furnishing, performance or use of this material. This documentation may not be copied, reproduced, translated or reduced to any electronic medium, in whole or in part, without prior written permission from SanDisk.

SanDisk, the SanDisk logo, and Store Your World in Ours are trademarks of SanDisk Corporation, registered in the United States and other countries. V-Mate is a trademark of SanDisk Corporation. The SD, miniSD, microSD, SDHC, miniSDHC, and microSDHC marks and logos are trademarks. SanDisk is an authorized licensee of the MultiMediaCard trademark. RS-MMC, MMCplus and MMC mobile are trademarks of MultiMediaCard Association. Memory Stick, Memory Stick PRO, Memory Stick DUO and Memory Stick PRO DUO are trademarks of Sony Corporation. PSP and PlayStation are registered trademarks or trademarks of Sony Computer Entertainment, Inc. (SCEI). RealNetworks and RealPlayer are trademarks or registered trademarks of RealNetworks, Inc. Apple and QuickTime are trademarks of Apple Computer Inc., registered in the U.S. and other countries. Other brand names mentioned herein are for identification purposes only and may be trademarks of their respective holder(s).

© 2006 SanDisk Corporation. All rights reserved.

Made in China



Headquarters:
1-408-801-1000

SanDisk Corporation

601 McCarthy Boulevard
Milpitas, CA 95035

SanDisk Shanghai

No. 85 Lou Shan Guan Rd.
Room 305B, Oriental Intl. Building
Shanghai, China 200336

SanDisk International, Ltd.

Unit 100, Lakeside Drive
Airside Business Park
Swords, Co. Dublin, Ireland

SanDisk Limited (SDKK)

8F Nisso 15 Bldg.
2-17-19 Shin-Yokohama
Kohoku-ku, Yokohama, Japan 222-0033

U.S. Tech Support:
1-866-SANDISK (726-3475)

Worldwide Tech Support:
www.sandisk.com/techsupport

80-36-00585-Eng

In remembrance of Simon Wang
1977.09.12 - 2006.09.03
OEM Project Manager



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>