



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for WHIRLPOOL JT 369. You'll find the answers to all your questions on the WHIRLPOOL JT 369 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual WHIRLPOOL JT 369
User guide WHIRLPOOL JT 369
Operating instructions WHIRLPOOL JT 369
Instructions for use WHIRLPOOL JT 369
Instruction manual WHIRLPOOL JT 369

JT 369

Gebruiksaanwijzing
Instructions for use
Mode d'emploi
Gebruiksaanwijzing
Istruzioni per l'uso



Brugsanvisning
Bruksanvisning
Käyttöohje
Manual de utilização
Instrucciones para el uso



Οδηγός χρήσης
Instrucție utilizării
Használati útmutató
Инструкция по использованию
תורת והתקנת המכשיר



Návod k použití
Návod na použitie
Instrucțiuni de utilizare
Инструкция по использованию
تعليمات وسكينة الاتصال

www.whirlpool.com



[Your user manual
WHIRLPOOL JT 369](#)

Manual abstract:

DO NOT USE YOUR MICROWAVE oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode. THE DOOR SEALS AND THE DOOR SEAL AREAS must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician. EGGS DO NOT USE YOUR MICROWAVE oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended. GB 3 PRECAUTIONS GENERAL THIS APPLIANCE IS DESIGNED FOR DOMESTIC USE ONLY! THE APPLIANCE SHOULD NOT BE OPERATED without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance. THE VENTILATION OPENINGS on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results. IF YOU PRACTICE OPERATING the oven, put a glass of water inside.

The water will absorb the microwave energy and the oven will not be damaged. DO NOT STORE OR USE this appliance outdoors. DO NOT USE this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar. DO NOT USE the cavity for any storage purposes. REMOVE WIRE TWIST-TIES from paper or plastic bags before placing bag in the oven. LIQUIDS E.G. BEVERAGES OR WATER. Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.

To prevent this possibility the following steps should be taken: 1. Avoid using straight-sided containers with narrow necks. 2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container. 3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven. CAREFUL ALWAYS REFER to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol. AFTER HEATING BABY FOOD or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.

Ensure the Lid and the Teat is removed before heating! DEEP-FRYING DO NOT USE YOUR MICROWAVE oven for deep-frying, because the oil temperature cannot be controlled. USE HOT PADS OR OVEN MITTS to prevent burns, when touching containers, oven parts, and pan after cooking. Accessible parts may become hot during use, young children should be kept away. 4 GB ACCESSORIES GENERAL THERE ARE a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use. ENSURE THAT THE UTENSILS YOU USE are oven proof and allow microwaves to pass through them before cooking. WHEN YOU PUT FOOD AND ACCESSORIES in the microwave oven, ensure that they do not come in contact with the interior of the oven. This is especially important with accessories made of metal or metal parts. IF ACCESSORIES CONTAINING METAL comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged. ALWAYS ENSURE that the turntable is able to turn freely before starting the oven.

If the turntable isn't able to turn freely you should use a smaller vessel. TURNTABLE SUPPORT USE THE TURNTABLE SUPPORT under the Glass turntable. Never put any other utensils on the turntable support. Fit the turntable support in the oven. GLASS TURNTABLE USE THE GLASS TURNTABLE with all cooking methods.

It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven. Place the Glass turntable on the turntable support. COVER THE COVER IS USED TO cover food during cooking and reheating with microwaves only and helps to reduce spattering, retain food moisture as well as reducing the time needed. USE the cover for two level reheating. WIRE RACK USE THE HIGH WIRE RACK when cooking with grill or grill combination function.

USE THE LOW WIRE RACK when cooking with forced air or forced air combination function. CRISP HANDLE USE THE SUPPLIED SPECIAL CRISP HANDLE to remove the hot Crisp plate from the oven. CRISP-PLATE PLACE THE FOOD DIRECTLY ON THE CRISP-PLATE. Always use the Glass turntable as support when using the Crisp-plate..



[Your user manual](#)
[WHIRLPOOL JT 369](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>