


## MICRO COMPONENT SYSTEM

Thank you for purchasing this SHARP product.  
To obtain the best performance from this product, please read this manual carefully. It will guide you in operating your SHARP product.

XL-HP505 Micro Component System consisting of XL-HP505 (main unit) and CP-HP505 (speaker system).

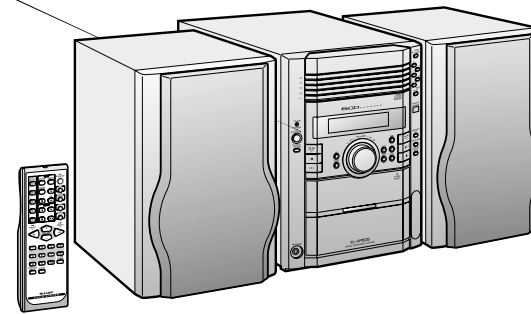

**CD-R/RW**  
Playable

**5CD** CHANGER

## Accessories

Please confirm that the following accessories are included.


Remote control × 1  
(RRMCG0408AWSA)

AM loop antenna × 1  
(QANTL0005AWZZ)


FM antenna × 1  
(92LFANT1746A)

# SPECIAL NOTES

Important Instruction




**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN




**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

**Explanation of Graphical Symbols:**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

0012

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

0012

**Caution - use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.**

0012

**NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING**

FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

**NOTE**

It is the intent of Sharp that this product be used in full compliance with the copyright laws of the United States and that prior permission be obtained from copyright owners whenever necessary.

0210

### FOR YOUR RECORDS

For your assistance in reporting this unit in case of loss or theft, please record below the model number and serial number which are located on the rear of the unit. Please retain this information.

**Model number** .....

**Serial number** .....


**Date of purchase** .....

**Place of purchase** .....

0202

# IMPORTANT SAFETY INSTRUCTIONS

XL-HP505

- 1 Read Instructions** - All the safety and operating instructions should be read before the product is operated.
- 2 Retain Instructions** - The safety and operating instructions should be retained for future reference.
- 3 Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
- 4 Follow Instructions** - All operating and use instructions should be followed.
- 5 Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6 Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7 Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- 8 Accessories** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- 9** A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn. 
- 10 Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 11 Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 12 Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.  
**Alternate Warnings** - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- 13 Power-Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
- 14 Protective Attachment Plug** - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

Important Instruction

## IMPORTANT SAFETY INSTRUCTIONS (continued)

- 15 Outdoor Antenna Grounding** - If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
- 16 Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 17 Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 18 Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 19 Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 20 Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 21 Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- a) When the power-supply cord or plug is damaged,
  - b) If liquid has been spilled, or objects have fallen into the product,
  - c) If the product has been exposed to rain or water,
  - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
  - e) If the product has been dropped or damaged in any way, and
  - f) When the product exhibits a distinct change in performance - this indicates a need for service.
- 22 Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 23 Safety Check** -

**ENERGY STAR® Program Information**

As an ENERGY STAR® Partner, SHARP has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. ENERGY STAR® is a U.S. registered mark.



**WHY PURCHASE ENERGY STAR® LABELED PRODUCTS?**

Many Electrical /Electronic Products use energy both when they are on and when they are off. Americans spend more than \$3 billion a year on energy consumed by home electronic products when they are not in use. The new ENERGY STAR® labeled models will reduce that energy "leakage" by up to 75 percent. Ultimately, this will mean more than \$1 billion a year in energy savings for consumers.

The energy savings will help reduce the burning of fossil fuels and the related carbon dioxide pollution that contributes to global warming. If every American family replaced their electronic equipment with ENERGY STAR® labeled models, it would reduce air pollution equivalent to eliminating more than two million cars.

By using ENERGY STAR® labeled products, you will save money on your electric bills and use less energy. That makes good economic sense and it's good for our environment.

To comply with the ENERGY STAR® standards mentioned above, please cancel the demonstration mode, as described on page 12.

**ENERGY STAR® is a U.S. registered mark.**

0209

**Contents**


	Page
<b>■ General Information</b>	
Precautions .....	6
Controls and indicators .....	7 - 9
<b>■ Preparation for Use</b>	
System connections .....	10 - 12
<b>■ Basic Operation</b>	
Remote control .....	13
General control .....	14
Setting the clock .....	15
<b>■ CD Playback</b>	
Listening to a CD (CDs) .....	16, 17
Advanced CD playback .....	18 - 20
<b>■ Radio</b>	
Listening to the radio .....	21, 22
<b>■ Tape Playback</b>	
Listening to a cassette tape .....	23, 24
<b>■ Tape Recording</b>	
<u>Recording on a cassette tape .....</u>	<u>24 - 26</u>
<b>■ Advanced Features</b>	
Timer and sleep operation .....	27 - 30
Enhancing your system .....	31, 32
<b>■ References</b>	
Troubleshooting chart .....	32 - 34
Maintenance .....	34
Specifications .....	35
<b>CONSUMER LIMITED WARRANTY .....</b>	<b>Back cover</b>

Important Instruction


## Precautions

### ■ General


- Please ensure that the equipment is positioned in a well-ventilated area and ensure that there is at least 4" (10 cm) of free space along the sides, top and back of the equipment.

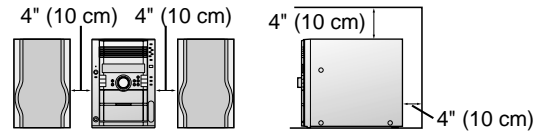

- Use the unit on a firm, level surface free from vibration.

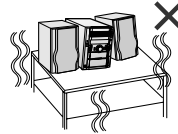

 - Keep the unit away from direct sunlight, strong magnetic fields, excessive dust, humidity and electronic/electrical equipment (home computers, facsimiles, etc.) which generate electrical noise.



- Do not place anything on top of the unit.
- Do not expose the unit to moisture, to temperatures higher than 140°F (60°C) or to extremely low temperatures.
- If your system does not work properly, disconnect the AC power cord from the AC outlet. Plug the AC power cord back in, and then turn on your system.
- In case of an electrical storm, unplug the unit for safety.

- This unit should only be used within the range of 41°F - 95°F (5°C - 35°C).

### Warning:


The voltage used must be the same as that specified on this unit. Using this product with a higher voltage other than that which is specified is dangerous and may result in a fire or other type of accident causing damage. SHARP will not be held responsible for any damage resulting from use of this unit with a voltage other than that which is specified.

### ■ Volume control

The sound level at a given volume setting depends on speaker efficiency, location and various other factors. It is advisable to avoid exposure to high volume levels, which occurs while turning the unit on with the volume control setting up high, or while continually listening at high volumes.

# Controls and indicators

XL-HP505


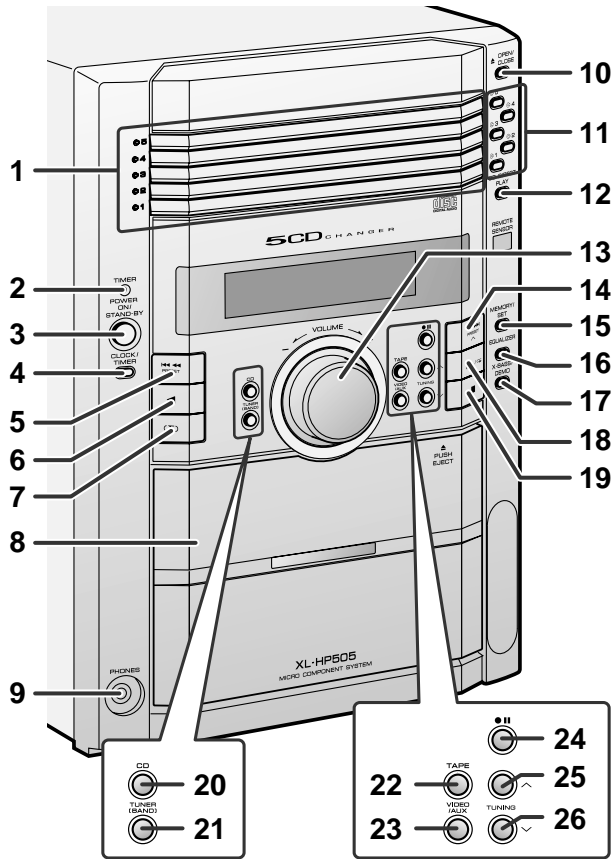


## ■ Front panel

	Reference page
1. Disc Trays	16
2. Timer Set Indicator	28
3. Power On/Stand-by Button	14
4. Clock/Timer Button	15, 27, 30
5. CD Track Down or Fast Reverse, Tape Fast Wind, Tuner Preset Down, Time Down Button	15, 17, 24
6. Tape Reverse Play Button	23
7. Tape Reverse Mode Select Button	23
8. Cassette Compartment	23
9. Headphone Jack	31
10. Disc Tray Open/Close Button	16
11. Disc Number Select Buttons	16
12. CD Direct Play Button	18
13. Volume Control	14
14. CD Track Up or Fast Forward, Tape Fast Wind, Tuner Preset Up, Time Up Button	15, 17, 24
15. Memory/Set Button	15, 20, 22, 27, 30
16. Equalizer Mode Select Button	14
17. Extra Bass/Demo Mode Button	12, 14
18. CD Play or Repeat, Tape Forward Play Button	16, 19, 23
19. CD or Tape Stop Button	17, 24
20. CD Button	16
21. Tuner (Band) Button	21
22. Tape Button	23
23. Video/Auxiliary Button	31
24. Tape Record Pause Button	25, 26
25. Tuning Up Button	21
26. Tuning Down Button	21

General Information

## Controls and indicators (continued)

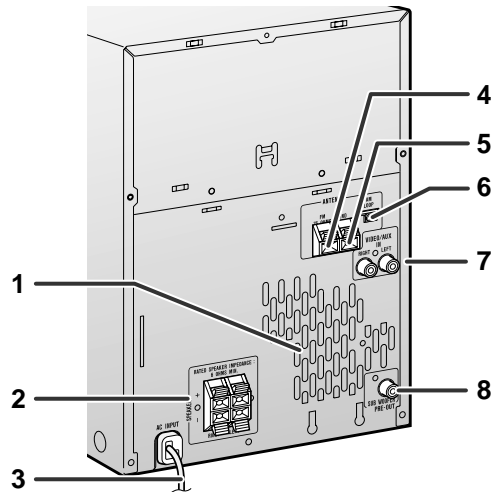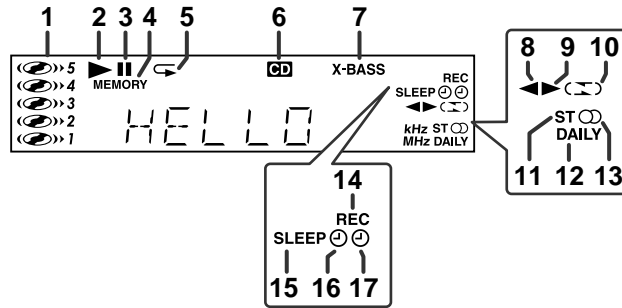

### ■ Display


	Reference page
1. Disc Number Indicators	18
2. CD Play Indicator	16
3. CD Pause Indicator	17
4. Memory Indicator	20
5. CD Repeat Play Indicator	19
6. CD Indicator	16
7. Extra Bass Indicator	14
8. Tape Reverse Play Indicator	23
9. Tape Forward Play Indicator	23
10. Tape Reverse Mode Indicator	23
11. FM Stereo Mode Indicator	21
12. Daily Timer Indicator	28
13. FM Stereo Receiving Indicator	21
14. Tape Record Indicator	25
15. Sleep Indicator	30
16. Timer Play Indicator	28
17. Timer Recording Indicator	28

### ■ Rear panel

	Reference page
1. Cooling Fan	12
2. Speaker Terminals	11
3. AC Power Cord	12
4. FM 75 Ohms Antenna Terminal	11
5. FM Antenna Ground Terminal	11
6. AM Loop Aerial Jack	11
7. Video/Auxiliary (Audio Signal) Input Jacks	31
8. Subwoofer Pre-output Jack	32

### ■ Speaker system



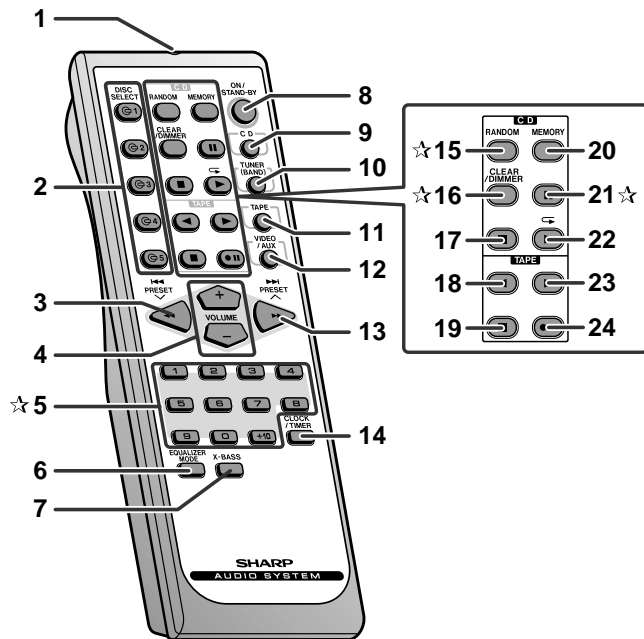

■ Remote control

Reference page


1. Remote Control Transmitter . . . . .	13
2. Disc Number Select Buttons . . . . .	16
3. CD Track Down or Fast Reverse, Tape Fast Wind, Tuner Preset Down, Time Down Button . . . . .	15, 17, 24
4. Volume Up and Down Buttons . . . . .	14
5. <b>Disc Direct Search Buttons</b> . . . . .	<b>18</b>
6. Equalizer Mode Select Button . . . . .	14
7. Extra Bass Button . . . . .	14
8. Power On/Stand-by Button . . . . .	14
9. CD Button . . . . .	16
10. Tuner (Band) Button . . . . .	21
11. Tape Button . . . . .	23
12. Video/Auxiliary Button . . . . .	31
13. CD Track Up or Fast Forward, Tape Fast Wind, Tuner Preset Up, Time Up Button . . . . .	15, 17, 24
14. Clock/Timer Button . . . . .	15, 27, 30
15. <b>CD Random Button</b> . . . . .	<b>19</b>
16. <b>CD Clear/Dimmer Button</b> . . . . .	<b>14, 20</b>
17. CD Stop Button . . . . .	17
18. Tape Reverse Play Button . . . . .	23
19. Tape Stop Button . . . . .	24
20. CD Memory Button . . . . .	20
21. <b>CD Pause Button</b> . . . . .	<b>17</b>
22. CD Play or Repeat Button . . . . .	16, 19
23. Tape Forward Play Button . . . . .	23
24. Tape Record Pause Button . . . . .	25, 26

Buttons with "☆" mark in the illustration or highlighted in bold on the list can be operated on the remote control only.

## System connections

Make sure to unplug the AC power cord before connecting the speaker wires.

### ■ Antenna connection (see page 11)

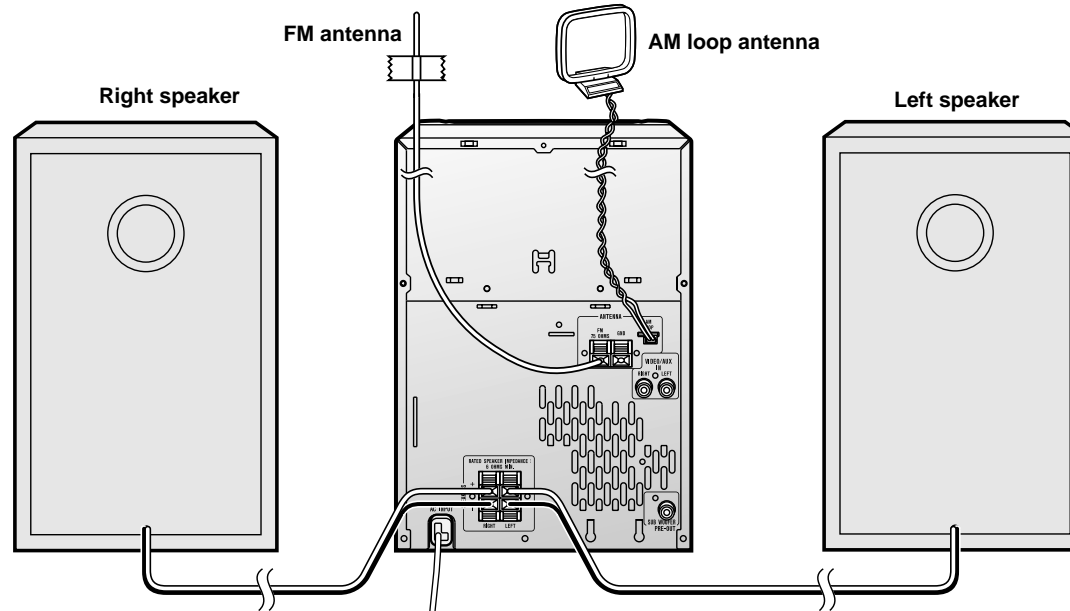

### ■ Speaker connection (see page 11)

AC outlet  
(AC 120 V, 60 Hz)

### ■ Connecting the AC power cord (see page 12)


■ **Antenna connection**

**Supplied FM antenna:**

Connect the FM antenna wire to the FM 75 OHMS terminal and position the FM antenna wire in the direction where the strongest signal can be received.

**Supplied AM loop antenna:**

Connect the AM loop antenna to the AM LOOP jack. Position the AM loop antenna for optimum reception. Place the AM loop antenna on a shelf, etc., or attach it to a stand or a wall with screws (not supplied).

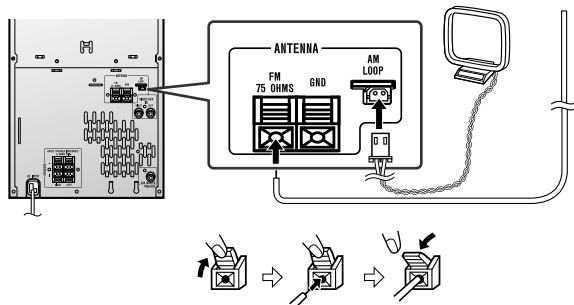


**Note:**


Placing the antenna on the unit or near the AC power cord may cause noise pickup. Place the antenna away from the unit for better reception.

**Installing the AM loop antenna:**
 
< Assembling >




< Attaching to the wall >

 

Wall Screws (not supplied)


■ **Speaker connection**

Connect the black wire to the minus (-) terminal, and the red wire to the plus (+) terminal.

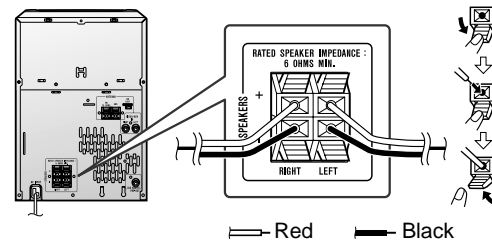

**Caution:**


- Use speakers with an impedance of 6 ohms or more, as lower impedance speakers can damage the unit.
- Do not mistake the right and the left channels. The right speaker is the one on the right side when you face the unit.
- **Do not let the bare speaker wires touch each other.**
- Do not allow any objects to fall into or to be placed in the bass reflex ducts.
- Do not stand or sit on the speakers. You may be injured.

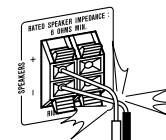

**Incorrect**

■ **Speaker grilles are removable**


Make sure nothing comes into contact with the speaker diaphragms when you remove the speaker grilles.

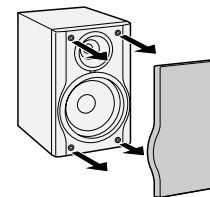

## System connections (continued)

### ■ Connecting the AC power cord

After checking all the connections have been made correctly, plug the AC power cord of this unit into the AC outlet. If you plug in the unit first, the unit will enter the demonstration mode.

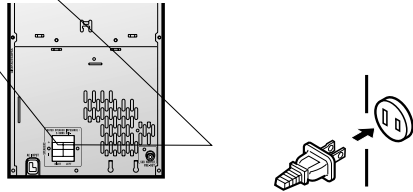

#### Notes:

- The unit will start the tape initialization when plugged in to the AC outlet. During this process, an initializing sound will be heard and the unit cannot be turned on. Wait until the process is finished.
- Unplug the AC power cord from the AC outlet if the unit will not be in use for a prolonged period of time.

#### Cooling fan:

This product is equipped with a cooling fan inside, which begins to run at a specified volume level for better heat radiation.

### ■ Outdoor FM antenna

Use an outdoor FM antenna if you require better reception. Consult your dealer.

#### Note:

When an outdoor FM antenna is used, disconnect the supplied FM antenna wire.

### ■ Demonstration mode


## Remote control

XL-HP505

### Battery installation

Use alkaline batteries (UM/SUM-3, R6, HP-7 or similar).  
Batteries

- 1 Remove the cover.
- 2 Insert the batteries in the direction indicated in the diagram.  
When inserting the batteries, push them toward the ⊖ battery terminals.
- 3 Replace the cover.

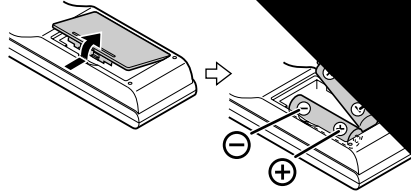

### Precautions for battery use:

- Replace all old batteries with new ones at the same time.

### Notes concerning use:


- Replace the batteries if the operating distance is reduced or if the operation becomes erratic.
- Periodically clean the transmitter on the remote control and the sensor on the unit with a soft cloth.
- Exposing the sensor on the unit to strong light may interfere with operation. Change the lighting or the direction of the unit.
- Keep the remote control away from moisture, heat, shock, and vibrations.

### ■ Test of the remote control



Check the remote control after checking all the connections (see pages 10 - 12).

Point the remote control directly at the remote sensor on the unit.

The remote control can be used within the range shown below:  
Press the ON/STAND-BY button. Does the power turn on? Now, press the **PAUSE** button. Does the power turn off? Now, press the **REPEAT** button. Does the music repeat? Now, enjoy music.

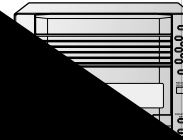

## General control

 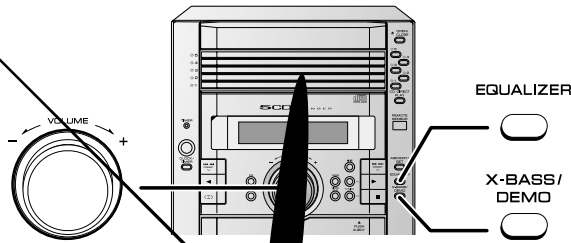

- To turn the power on**  
 Press the ON/STAND-BY button to turn the power on.

**After use:**  
 Press the ON/STAND-BY button to return the power stand-by mode.

- Illumination light control**  
 When the power is turned on, the illumination light will be on. To turn on/off the light, press the LIGHT button on the remote control more

### ■ Volume control

**Main unit operation:**  
 When the VOLUME control is turned clockwise, the volume will increase. When it is turned counterclockwise, the volume will decrease.

**Remote control operation:**  
 Press the VOLUME (+ or -) button to increase or decrease the volume.

### ■ Bass control


When the power is first turned on, the unit will enter the extra bass mode which emphasizes the bass frequencies, and "X-BASS" will appear. To cancel the extra bass mode, press the X-BASS (X-BASS) button.

### ■ Equalizer

When the EQUALIZER (EQUALIZER MODE) button is pressed, the current mode setting will be displayed. To change to a different mode, press the EQUALIZER (EQUALIZER MODE) button repeatedly until the desired sound mode appears.

## Setting the clock

XL-HP505

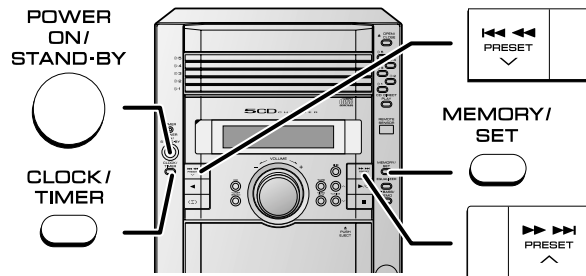

In this example, the clock is set for the 12-hour (AM 12:00) display.

- 1 Press the ON/STAND-BY button to turn the power on.**
- 2 Press the CLOCK/TIMER button.**
- 3 Within 10 seconds, press the ◀ or ▶ button to select "CLOCK", and press the MEMORY/SET button.**
- 4 Press the ◀ or ▶ button to select 12-hour or 24-hour display and then press the MEMORY/SET button.**

"AM 12:00" → The 12-hour display will appear.  
(AM 12:00 - PM 11:59)

"AM 0:00" → The 12-hour display will appear.  
(AM 0:00 - PM 11:59)


"0:00" → The 24-hour display will appear.  
(0:00 - 23:59)

**5 Press the ◀ or ▶ button to adjust the hour and then press the MEMORY/SET button.**



 Press the ◀ or ▶ button once to advance the time by 1 hour. Hold it down to advance continuously.

**6 Press the ◀ or ▶ button to adjust the minutes and then press the MEMORY/SET button.**



Press the ◀ or ▶ button once to advance the time by 1 minute. Hold it down to change the time in 5-minute intervals.

### To confirm the time display:

- 1 Press the CLOCK/TIMER button.
- 2 Within 10 seconds, press the ◀ or ▶ button until the current time is displayed.  
The time display will appear for about 10 seconds.

### Note:

The "CLOCK" or time will flash to confirm the time display when the AC power supply is restored after a power failure or unplugging the unit. If incorrect, readjust the clock as follows.

### To readjust the clock:

Perform "Setting the clock" from step 1. If the time display is flashing, step 4 (for selecting the 12-hour or 24-hour display) will be skipped.

### To change the 12-hour or 24-hour display:

- 1 Clear all the programmed contents. [Refer to "Clearing all the memory (reset)" on page 33 for details.]
- 2 Perform "Setting the clock" from step 1.


### Note:

The clock can also be set with the remote control.


XL-HP505

This  
not rec  
Some au  
the disc or th

*CD Playback*

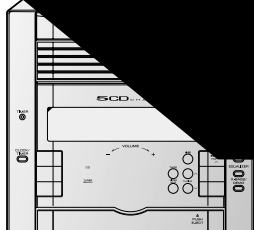



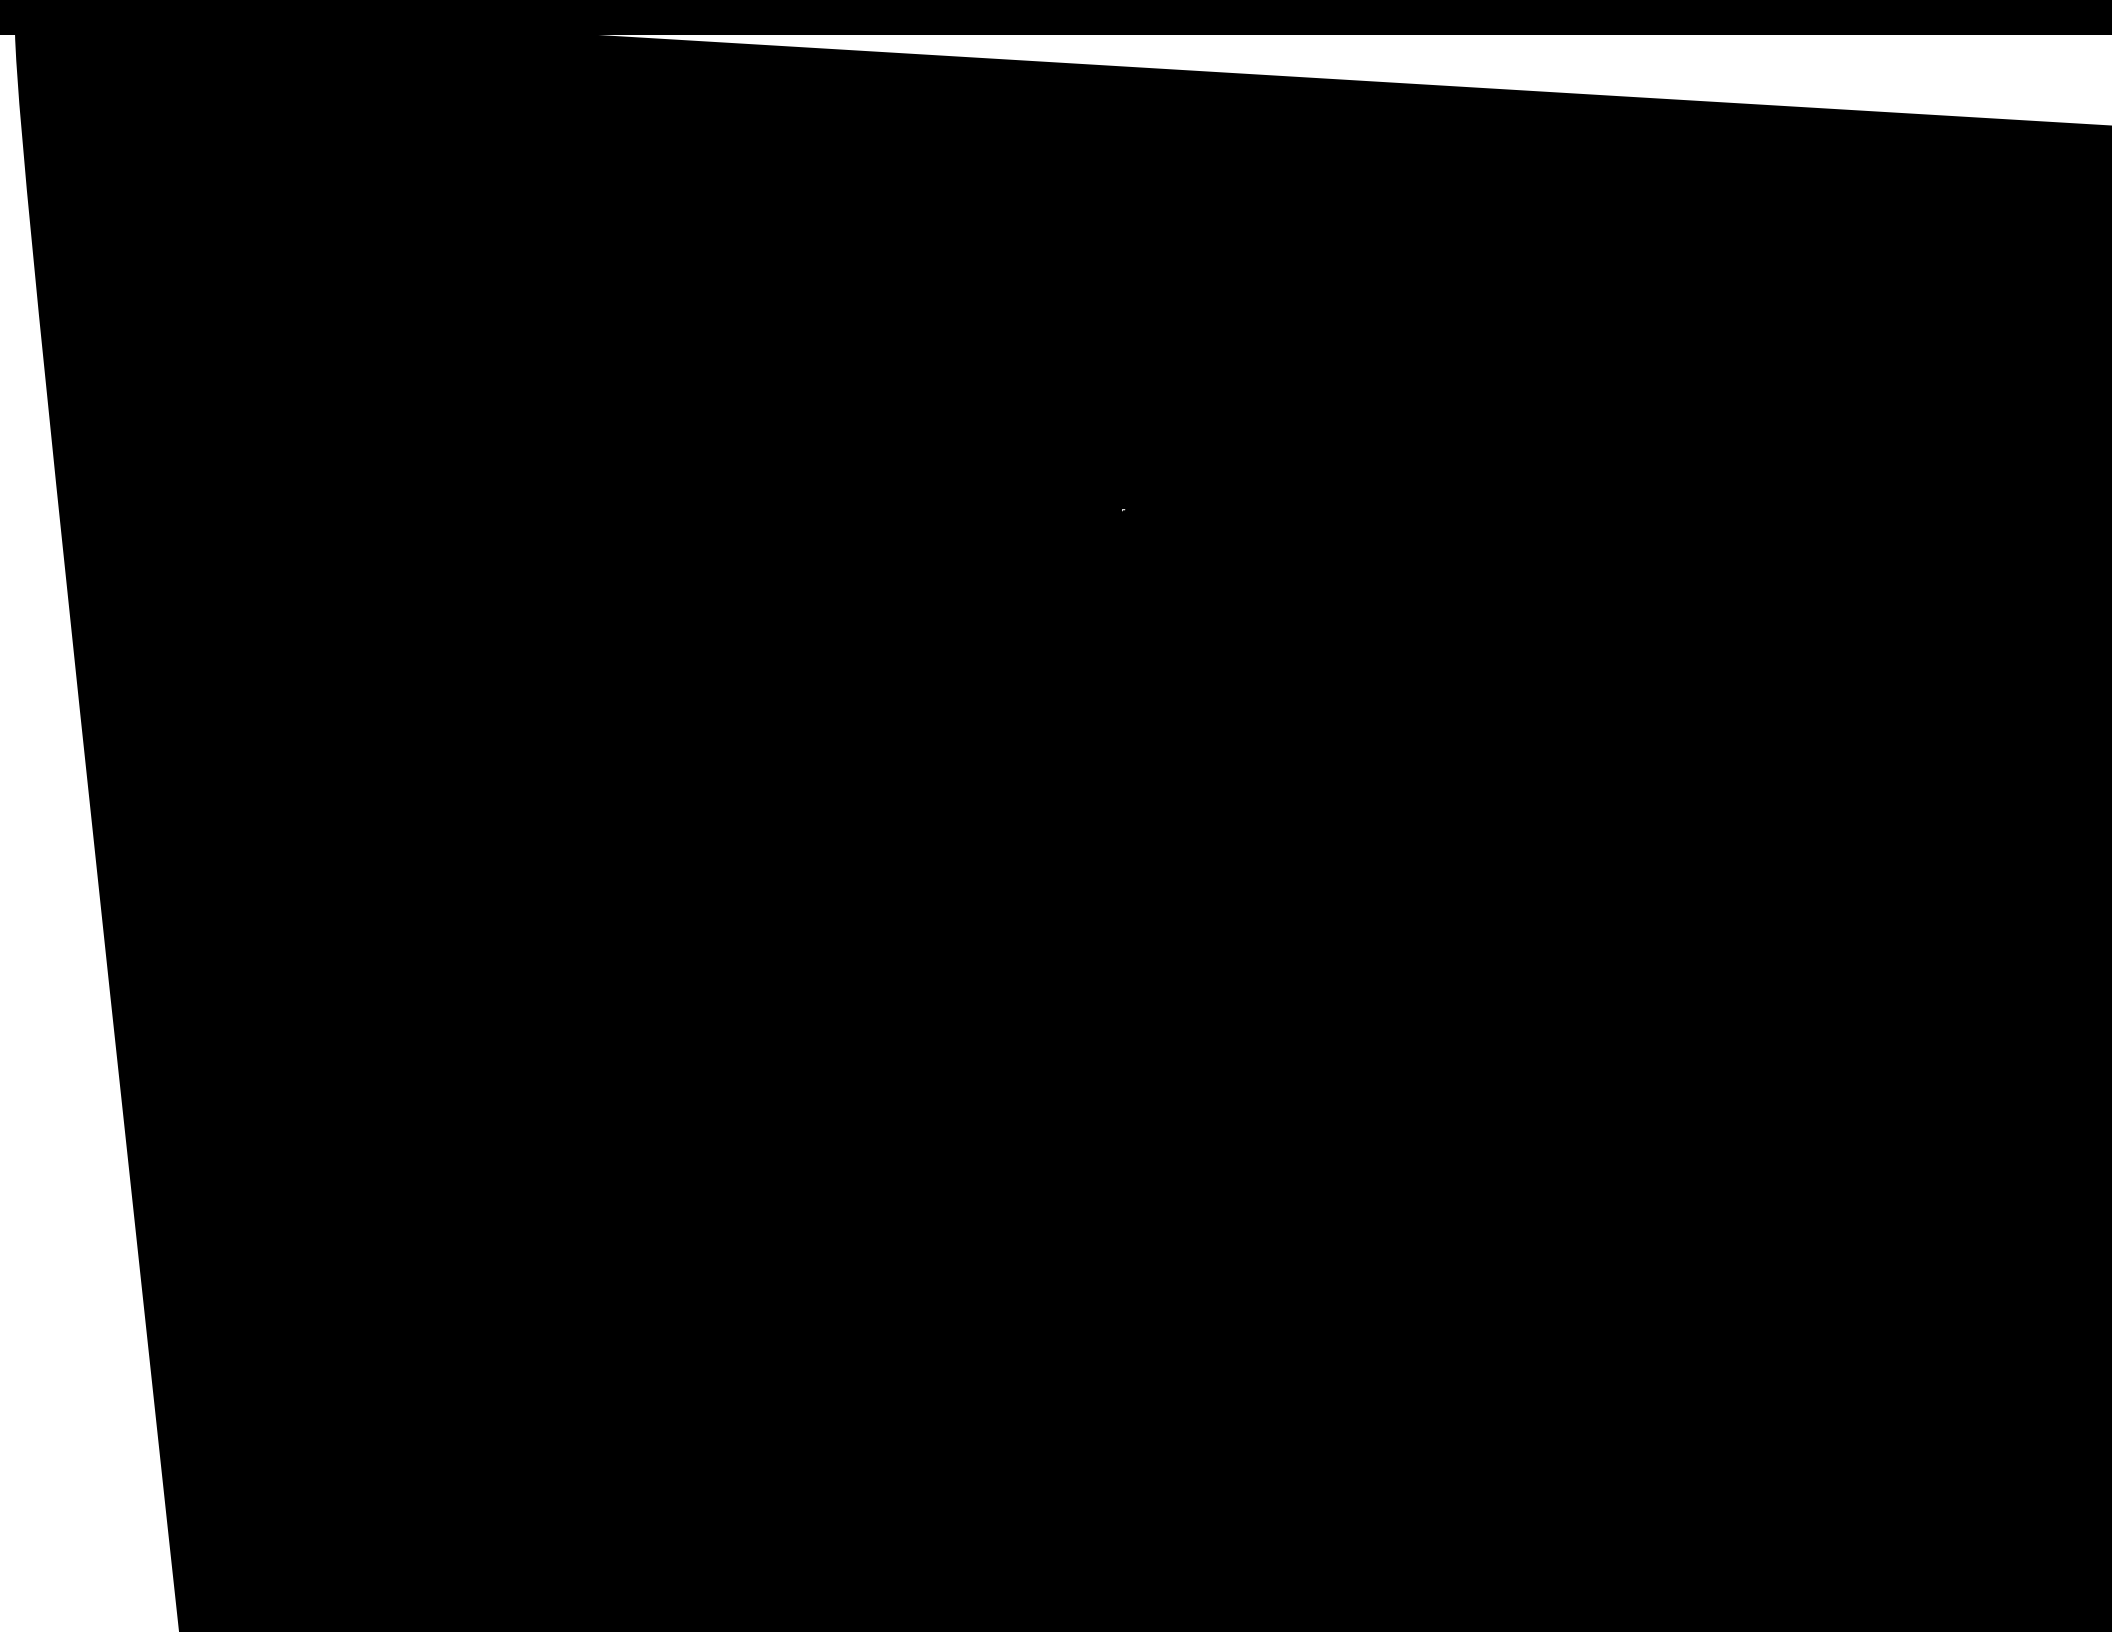


## Advanced CD playback

### ■ To specify a disc to play



You can play a disc by specifying the disc number.

- 1** Press one of the 1 - 5 buttons to select the desired disc.

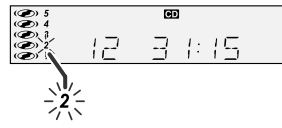

Selected disc number

 - 2** Within 5 seconds, press the CD DIRECT PLAY button on the main unit.

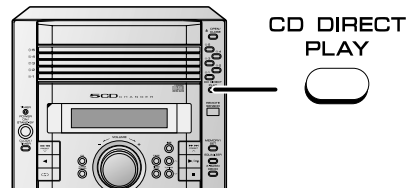

Only the chosen disc will be played and stopped automatically.

#### Note:

If the button of the disc tray with no disc is pressed, playback will not start and the disc indicator will go out.

#### To stop playback:

Press the ■ (CD ■) button.

### ■ Direct track search

By using the direct search buttons, the desired tracks on the current disc can be played.

Use the direct search buttons on the remote control to select the desired track while playing the selected disc.




Selected track number

- The direct search buttons allow you to select up to number 9.
- When selecting number 10 or more, use the "+10" button.

#### A. For example, to choose 13

- 1 Press the "+10" button once.
- 2 Press the "3" button.

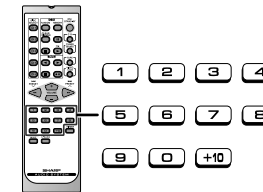

#### B. For example, to choose 30

- 1 Press the "+10" button three times.
- 2 Press the "0" button.

If the direct search buttons are pressed while the disc is stopped, press the ► / ◀ button to start the desired track on the current disc.

#### Notes:

- A track number higher than the number of tracks on the disc cannot be selected.
- During random play, direct search is not possible.

### ■ Repeat play

Repeat play can play all 5 discs, all tracks on a chosen disc, or a programmed sequence continuously.

#### To repeat all tracks on up to 5 discs:

Press the ► / ◀ button twice.

#### To repeat desired tracks:

Perform steps 1 - 6 in the "Programmed play" section on page 20 and then press the ► / ◀ button.



#### To cancel repeat play:

Press the ► / ◀ button again.  
"◀" will go out.

#### To repeat all tracks on the chosen disc:

- 1 Press one of the 1 - 5 buttons.
- 2 Within 5 seconds, press the CD DIRECT PLAY button twice.



#### To cancel repeat play:

Press the CD DIRECT PLAY button again.  
"◀" will go out.

### ■ Random play


The tracks on the disc(s) can be played in random order automatically.

#### To random play all tracks on up to 5 discs:

Press the RANDOM button on the remote control.

#### To random play all tracks on the chosen disc:

- 1 Press one of the 1 - 5 buttons.
- 2 Within 5 seconds, press the CD DIRECT PLAY button.
- 3 Press the RANDOM button on the remote control.

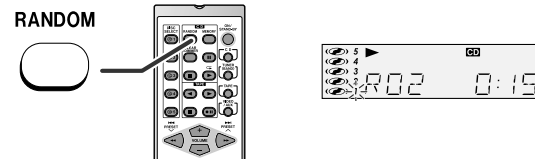

#### To cancel random play:

Press the ► / ◀ or CD DIRECT PLAY button.

#### Notes:

- If you press the ►► button during random play, you can move to the track selected next by the random operation. On the other hand, the ◀◀ button does not allow you to move to the previous track. The beginning of the track being played will be located.
- In random play, the CD player will select and play tracks automatically. (You cannot select the order of the tracks.)

#### Caution:

After performing repeat or random play, be sure to press the ■ (CD) button. Otherwise, the disc(s) will play continuously.

## Advanced CD Playback (continued)

### ■ Programmed play

You can choose up to 32 selections for playback in the order you like.

- 1 While in the stop mode, press the **MEMORY/SET (MEMORY)** button to enter the programming save mode.

- 2 Press one of the buttons (1-32) on the remote control. The "MEMORY" indicator will disappear and all the programmed contents will be cleared.

#### To cancel the programmed play mode:

While in the stop mode and the "MEMORY" indicator is lit, press the **CLEAR/DIMMER** button on the remote control. The "MEMORY" indicator will disappear and all the programmed contents will be cleared.

#### Adding tracks to the program:

If a program has been previously stored, the "MEMORY" indicator will be displayed. Then follow steps 1 - 6 to add tracks. The new tracks will be stored after the last track of the original program.

#### To check which tracks are programmed:

While the unit is stopped in the programmed play mode, press the **MEMORY/SET** button.

#### Notes:

- When a disc with programmed tracks is ejected, the program is automatically canceled.
- Even if you press the ON/STAND-BY button to enter the stand-by mode or change the function from CD to another, the programmed selections will not be cleared.
- During the program operation, random play is not possible.
- During programmed play, the CD DIRECT PLAY buttons will not work.

Listening to the



**Auto power on function:**

When you press any of the

- TUNER (BAND) button  
turns on and the "TUNE"
- / button on the main  
the last function starts (C

## Listening to the radio (continued)

### ■ Memorizing a station

You can store 40 AM and FM stations in memory and recall them at the push of a button. (Preset tuning)

**1** Perform steps 1 - 3 in "Tuning" on page 21.

 
**2** Press the **MEMORY/SET (MEMORY)** button to enter the preset tuning saving mode.



**3** Within 30 seconds, press the **PRESET (∨ or ∧)** button to select the preset channel number.

Store the stations in memory, in order, starting with preset channel 1.

**4** Within 30 seconds, press the **MEMORY/SET (MEMORY)** button to store that station in memory.



If the "MEMORY" and preset number indicators go out before the station is memorized, repeat the operation from step 2.

**5** Repeat steps 1 - 4 to set other stations, or to change a preset station.

When a new station is stored in memory, the station previously memorized will be erased.

#### Note:

The backup function protects the memorized stations for a few hours should there be a power failure or the AC power cord disconnection.


### ■ To recall a memorized station

Press the **PRESET (∨ or ∧)** button for less than 0.5 seconds to select the desired station.

### ■ To scan the preset stations

The stations saved in memory can be scanned automatically. (Preset memory scan)

- 1 Press the **PRESET (∨ or ∧)** button for more than 0.5 seconds. The preset number will flash and the programmed stations will be tuned in sequentially, for 5 seconds each.
- 2 Press the **PRESET (∨ or ∧)** button again when the desired station is located.

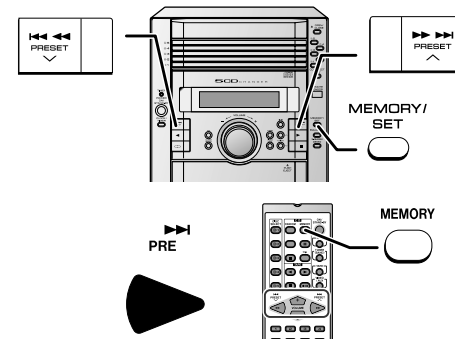

### ■ To erase entire preset memory

- 1 Press the **ON/STAND-BY** button to enter the stand-by mode.
- 2 While pressing down the **X-BASS/DEMO** button, press the **CLOCK/TIMER** button until "TUNER CL" appears.

*Tape Playback*

### ■ Various tape functions

Function	Main unit	Remote control	Operation
Side A playback			Press in the stop mode.
Side B playback			Press in the stop mode.
Stop			Press in the playback mode.
Fast forward/Fast rewind			Press in the playback or stop mode.

#### Caution:

- To remove the cassette, press the ■ (TAPE ■) button, and then open the compartment.
- Before changing from one tape operation to another, press the ■ (TAPE ■) button.
- If a power failure occurs during tape operation, the tape head will remain engaged with the tape and the cassette door will not open. In this case, wait until the power is restored.


## Recording on a cassette tape

#### Before recording:

- When recording important selections, make a preliminary test to ensure that the desired material is properly recorded.
- SHARP is not liable for damage or loss of your recording arising from malfunction of this unit.
- The volume and sound controls can be adjusted with no effect on the recorded signal (Variable Sound Monitor).
- **For recording, use only normal tapes. Do not use metal or CrO<sub>2</sub> tapes.**

#### Erase-prevention tab of cassette tapes:

- When recording on a cassette tape, make sure that the erase-prevention tabs are not removed. Cassettes have removable tabs that prevent accidental recording or erasing.
- To protect the recorded sound, remove the tab after recording. Cover the tab hole with adhesive tape to record on the tape without the tab.

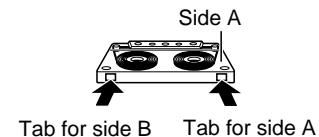




---

■ **Recording from a CD (CDs)**

You can record the desired CD using the CD DIRECT PLAY button.

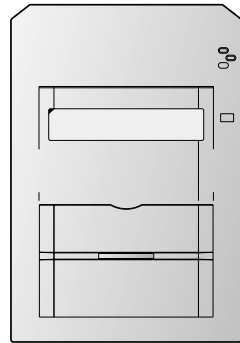

## Recording on a cassette tape (continued)

### Recording from several CDs continuously:

- 1 Perform steps 1 - 6 in "Recording from a CD (CDs)" on page 25.
- 2 Within 5 seconds, press the ► / ◀ (►) button to record on side A, or the ◀ button for side B.

### To perform programmed recording:

- 1 Program discs and tracks. (See page 20.)
- 2 Press the ●|| button.
- 3 Press the ► / ◀ (►) button to record on side A, or the ◀ button for side B.

 

### To stop recording:

Press the ■ (TAPE ■) button.  
The CD and tape will stop.

### Auto restart function:

If the recording side is switched from side A to B during recording, the system will record the interrupted track on side B from its beginning. The recording will be made without cutting the beginning of the track on side B.

### ■ Recording from the radio

- |          |   |   |
|----------|---|---|
| <b>1</b> | <b>Tune in to the desired station. (See page 21.)</b>   |   |
| <b>2</b> | <b>Load a cassette into the cassette compartment with side A facing you.</b><br>Wind past the leader of the tape, on which recording cannot be performed.   |   |
| <b>3</b> | <b>Press the ⇄ button to choose one side or both sides.</b><br>⇄ ... To record on both sides.<br>= ... To record on only one side.  |  |
| <b>4</b> | <b>Press the ●   button.</b><br>Recording will be paused.   |  |
| <b>5</b> | <b>Press the ► / ◀ (►) button to record on side A, or the ◀ button for side B.</b><br>To record on both sides, begin with side A. (If recording is started from side B, the tape will not switch over to side A.) |   |

### To interrupt recording:

Press the ●|| button.

To resume recording, press the same recording button you pressed in step 5. Other buttons do not allow resuming.

### To stop recording:

Press the ■ (TAPE ■) button.

### Note:

If you hear a whistling noise while recording an AM station, move the AM loop antenna.

### ■ Erasing recorded tapes

- 1 Press the TAPE button.
- 2 Follow steps 2 - 5 in "Recording from the radio".

## Timer and sleep operation

XL-HP505

The unit turns on and plays the desired source (CD, tuner, tape) at the preset time.

The unit turns on and starts recording from the tuner at the preset time.

**This unit has 2 types of timer: ONCE TIMER and DAILY TIMER.**

**Once timer:** Once timer play and once timer recording works for one time only at a preset time.

For example, if you are away but want to record a program on a radio station.


**Daily timer:** Daily timer play and daily timer recording works at the same preset time everyday.

For example, set the alarm to sound every morning.

### Using the once timer and daily timer in combination:


For example, use the once timer to record a radio program, and use the daily timer as an alarm clock.

- 1 Set the daily timer (pages 27 - 29).
- 2 Set the once timer (pages 27 - 29).

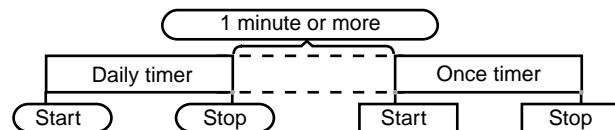

### Note:



When set times for the daily timer and once timer overlap, the once timer takes priority. Allow an interval of at least 1 minute between operations.

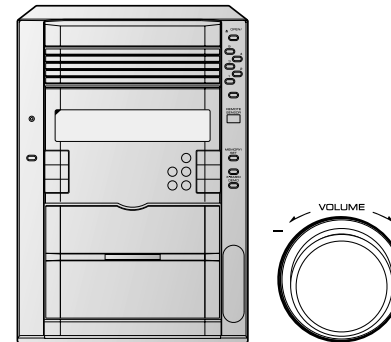

### ■ Timer playback or timer recording

#### Before setting timer:

  - 1 Check that the clock is set to the correct time (refer to page 15).
- 2 For timer playback: Load a cassette or discs to be played.  
For timer recording: Load a cassette for recording in the cassette compartment.

- 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the CLOCK/TIMER button.
- 3 Within 10 seconds, press the  or  button to select "ONCE" or "DAILY", and press the MEMORY/SET button.

Set the unit to the correct time if "ONCE" or "DAILY" does not appear.


Continued to the next page

## Timer and sleep operation (continued)

 - 4** Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE SET" or "DAILY SET", and press the MEMORY/SET button.



- 5** Press the ◀◀ or ▶▶ button to select "PLAY" or "REC", and press the MEMORY/SET button.




- The "DAILY" indicator remains lit while setting the daily timer.
- The illustrations show the daily timer setting.

- 6** Press the ◀◀ or ▶▶ button to adjust the hour and then press the MEMORY/SET button.



The illustrations show the timer playback setting in the daily timer mode.

 - 7** Press the ◀◀ or ▶▶ button to adjust the minutes and then press the MEMORY/SET button.



- 8** Set the time to finish as in steps 6 and 7 above.

- 9** Switch input with the ◀◀ or ▶▶ button, and then press the MEMORY/SET button.

To select the timer playback source: CD, TUNER (BAND) or TAPE.


To select the timer recording source: TUNER (BAND).

- When you select the tuner, select a station by pressing the ◀◀ or ▶▶ button, and then press the MEMORY/SET button.
- If a station has not been programmed, "NO P.SET" will be displayed and timer setting will be canceled.

- 10** Adjust the volume using the VOLUME control, and then press the MEMORY/SET button.

Do not turn the volume up too high.

- 11** Press the ON/STAND-BY button to enter the power stand-by mode.

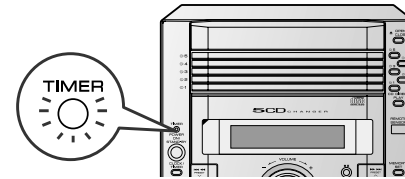

**12 When the preset time is reached, playback or recording will start.**

In the timer playback mode, the volume will increase gradually until it reaches the volume you were listening to before your system entered the timer stand-by mode.

**13 When the timer end time is reached, the system will enter the power stand-by mode automatically.****Once timer:**

The timer will be canceled.

**Daily timer:**

The timer will operate at the same time every day. It will continue until the daily timer setting is canceled. Cancel the daily timer when it is not used.

**Note:**

When performing timer playback or recording using another unit connected to the VIDEO/AUX IN jacks, select "VIDEO/AUX" in step 9. This unit will turn on or enter the power stand-by mode automatically, however, the connected unit will not turn on or off.

**To check the timer setting:**

- 1 In the timer stand-by mode, press the CLOCK/TIMER button.
- 2 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE" or "DAILY", and press the MEMORY/SET button.
- 3 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE CAL" or "DAILY CAL", and press the MEMORY/SET button.  
The unit returns to the timer stand-by mode after displaying the settings in order.

**Canceling the timer playback or timer recording:**

Timer is canceled by turning the power on while in the timer stand-by mode. The same operation can be performed in the following procedure without turning the power on.

- 1 In the timer stand-by mode, press the CLOCK/TIMER button.
- 2 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE" or "DAILY", and press the MEMORY/SET button.
- 3 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE OFF" or "DAILY OFF", and press the MEMORY/SET button.  
Timer will be canceled (the setting will not be canceled).

**Reusing the timer:****Using the same setting:**

The timer setting will be memorized once it is entered. To reuse the same setting, perform the following operations.

- 1 Turn the power on and press the CLOCK/TIMER button.
- 2 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE" or "DAILY", and press the MEMORY/SET button.
- 3 Within 10 seconds, press the ◀◀ or ▶▶ button to select "ONCE ON" or "DAILY ON", and press the MEMORY/SET button.

**Changing the setting:**

Turn the power on, and repeat the operation from step 1 in "Timer playback or timer recording".

 
 
**Note:**

The timer can also be set with the remote control.

## Timer and sleep operation (continued)

### ■ Sleep operation

The radio, compact disc and cassette tape can all be turned off automatically.

<b>1</b>	Play back the desired sound source.
<b>2</b>	Press the CLOCK/TIMER button.
<b>3</b>	Within 10 seconds, press the ◀ or ▶ button to select "SLEEP", and press the MEMORY/SET button. 
<b>4</b>	Press the ◀ or ▶ button to select the time. (Maximum: 3 hours - Minimum: 1 minute) ● 3 hours - 5 minutes → 5-minute intervals ● 5 minutes - 1 minute → 1-minute intervals
<b>5</b>	Press the MEMORY/SET button. "SLEEP" will appear. 
<b>6</b>	<b>The unit will enter the power stand-by mode automatically after the preset time has elapsed.</b> The volume will be turned down 1 minute before the sleep operation finishes.

#### To confirm the remaining sleep time:

- While "SLEEP" is indicated, press the CLOCK/TIMER button.
  - Within 10 seconds, press the ◀ or ▶ button to select "SLEEP X : XX".  
"X : XX" is sleep remaining time.
- The remaining sleep time is displayed for about 10 seconds.
  - You can change the remaining sleep time while it is displayed by pressing the MEMORY/SET button (steps 4 - 5).

#### To cancel the sleep operation:


Press the ON/STAND-BY button while "SLEEP" is indicated. To cancel the sleep operation without setting the unit to the stand-by mode, proceed as follows.

- Press the CLOCK/TIMER button.
- Within 10 seconds, press the ◀ or ▶ button to select "SLEEP OFF", and press the MEMORY/SET button.

#### ■ To use timer and sleep operation together

You can play back the same source only (the function cannot be switched).

- Set the sleep time (see left, steps 1 - 5).
- While the sleep timer is set, set the desired playback time (steps 2 - 10, pages 27 - 28).

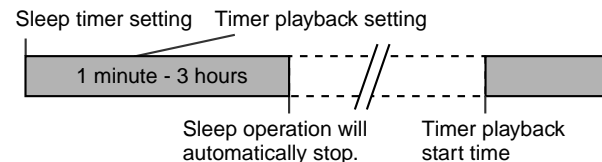

#### Caution:

When using the cassette deck, be sure the tape length is long enough to perform both functions. If you want to sleep and wake up listening to a tape, and the length of the tape is shorter than the sleep timer setting, timer playback will not be possible.

## Enhancing your system

XL-HP505


The connection cord is not included. Purchase a commercially available cord as shown below.

- **Listening to the playback sounds from VCR, DVD, etc.**

**Note:**

To prevent noise interference, place the unit away from the television.

- **To record on a tape**

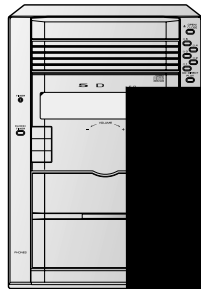


**Auto power on function:**

When you press any of the following buttons, the u

- VIDEO/AUX button (main unit and remote control) on and the "VIDEO" function is activated.
- / button on the main unit: The unit turns on and the last function starts (CD/TAPE/TUNER/VIDE

### ■ Subwoofer connection

When a commercially available speaker with a built-in amplifier is connected to this unit, you can enjoy sound with emphasized bass. Connect an RCA cord from a commercially available speaker with a built-in amplifier to the SUBWOOFER PRE-OUT jack.

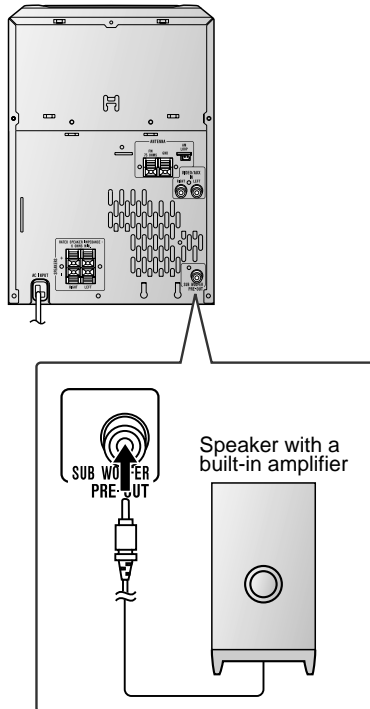

## Troubleshooting chart

Many potential problems can be resolved by the owner without calling a service technician.

If something is wrong with this product, check the following before calling your authorized SHARP dealer or service center.

### ■ General

Symptom	Possible cause
<ul style="list-style-type: none"> <li>● The clock is not set to the correct time.</li> </ul>	<ul style="list-style-type: none"> <li>● Did a power failure occur? Reset the clock. (Refer to page 15.)</li> </ul>
<ul style="list-style-type: none"> <li>● When a button is pressed, the unit does not respond.</li> </ul>	<ul style="list-style-type: none"> <li>● <u>Set the unit to the power standby mode and then turn it back on.</u></li> <li>● If the unit still malfunctions, reset it. (Refer to page 33.)</li> </ul>
<ul style="list-style-type: none"> <li>● No sound is heard.</li> </ul>	<ul style="list-style-type: none"> <li>● Is the volume level set to "0"?</li> <li>● Are the headphones connected?</li> <li>● Are the speaker wires disconnected?</li> </ul>

### ■ CD player

Symptom	Possible cause
<ul style="list-style-type: none"> <li>● Playback does not start.</li> </ul>	<ul style="list-style-type: none"> <li>● Is the disc loaded upside down?</li> </ul>
<ul style="list-style-type: none"> <li>● Playback stops in the middle or is not performed properly.</li> </ul>	<ul style="list-style-type: none"> <li>● Does the disc satisfy the standards?</li> <li>● Is the disc distorted or scratched?</li> </ul>
<ul style="list-style-type: none"> <li>● Playback sounds are skipped, or stopped in the middle of a track.</li> </ul>	<ul style="list-style-type: none"> <li>● Is the unit located near excessive vibrations?</li> <li>● Is the disc very dirty?</li> <li>● Has condensation formed inside the unit?</li> </ul>



### ■ Cassette deck

Symptom	Possible cause
<ul style="list-style-type: none"> <li>● Cannot record.</li> </ul>	<ul style="list-style-type: none"> <li>● Is the erase-prevention tab removed?</li> </ul>
<ul style="list-style-type: none"> <li>● Cannot record tracks with proper sound quality.</li> <li>● Cannot erase completely.</li> </ul>	<ul style="list-style-type: none"> <li>● Is it a normal tape? (You cannot record on a metal or CrO<sub>2</sub> tape.)</li> </ul>
<ul style="list-style-type: none"> <li>● Sound skipping.</li> <li>● Cannot hear treble.</li> <li>● Sound fluctuation.</li> </ul>	<ul style="list-style-type: none"> <li>● Is there any slack?</li> <li>● Is the tape stretched?</li> <li>● Are the capstans, pinch rollers, or heads dirty?</li> </ul>
<ul style="list-style-type: none"> <li>● Cannot remove the tape.</li> </ul>	<ul style="list-style-type: none"> <li>● If a power failure occurs during playback, the heads remain engaged with the tape. Do not open the compartment with great force.</li> </ul>

### ■ Remote control

Symptom	Possible cause
<ul style="list-style-type: none"> <li>● The remote control does not operate.</li> </ul>	<ul style="list-style-type: none"> <li>● Is the AC power cord of the unit plugged in?</li> <li>● Is the battery polarity correct?</li> <li>● Are the batteries dead?</li> <li>● Is the distance or angle incorrect?</li> <li>● Does the remote control sensor receive strong light?</li> </ul>

### ■ Tuner

Symptom	Possible cause
<ul style="list-style-type: none"> <li>● The radio makes unusual noises continuously.</li> </ul>	<ul style="list-style-type: none"> <li>● Is the unit placed near the TV or computer?</li> <li>● <u>Is the FM antenna or AM loop antenna placed properly? Move the antenna away from the AC power cord if it's located nearby.</u></li> </ul>

### ■ If trouble occurs

When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.

#### If such a problem occurs, do the following:

- 1 Set the unit to the stand-by mode and turn the power on again.
- 2 If the unit is not restored in the previous operation, unplug and plug in the unit, and then turn the power on.

#### Note:

If neither operation above restores the unit, clear all the memory by resetting it.

### ■ Clearing all the memory (reset)

- 1 Press the ON/STAND-BY button to enter the power stand-by mode.
- 2 While pressing down the ●|| button and the X-BASS/DEMO button, press the ◀◀ ◀◀ PRESET ∨ button until "CLEAR AL" appears.



#### Caution:

This operation will erase all data stored in memory including clock, timer settings, tuner preset, and CD program.

### ■ Condensation

Sudden temperature changes, storage or operation in an extremely humid environment may cause condensation inside the cabinet (CD pickup, tape heads, etc.) or on the transmitter on the remote control. Condensation can cause the unit to malfunction. If this happens, leave the power on with no disc (or cassette) in the unit until normal playback is possible (about 1 hour). Wipe off any condensation on the transmitter with a soft cloth before operating the unit.


### ■ Before transporting the unit

Remove all CDs from the unit. Your unit checks whether there are any discs inside the unit when the tray is closed. "NO DISC" appears if no disc is left. Then, set the unit to the power stand-by mode. Carrying the unit with discs left inside can damage the unit.

### ■ Care of compact discs

Compact discs are fairly resistant to damage, however mistracking can occur due to an accumulation of dirt on the disc surface. Follow the guidelines below for maximum enjoyment from your CD collection and player.


- Do not write on either side of the disc, particularly the non-label side from which signals are read. Do not mark this surface.
- Keep your discs away from direct sunlight, heat, and excessive moisture.
- Always hold the CDs by the edges. Fingerprints, dirt, or water on the CDs can cause noise or mistracking. If a CD is dirty or does not play properly, clean it with a soft, dry cloth, wiping straight out from the center, along the radius.

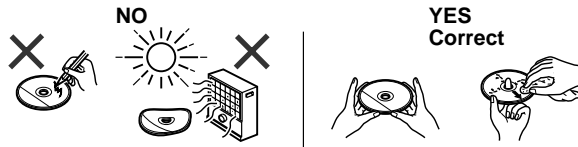

## Maintenance

### ■ Cleaning the tape-handling parts

- Dirty heads, capstans or pinch rollers can cause poor sound and tape jams. Clean these parts with a cotton swab moistened with commercial head/pinch roller cleaner or isopropyl alcohol.
- When cleaning the heads, pinch rollers, etc., unplug the unit which contains high voltages.

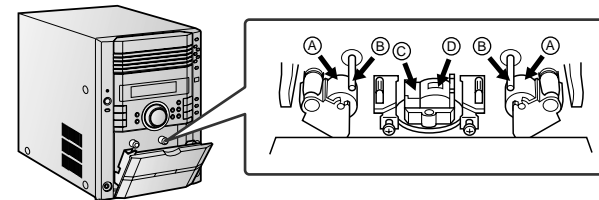

- A Pinch roller
- B Capstan
- D Erase head
- E Recording/Playback head

- After long use, the deck's heads and capstans may become magnetized, causing poor sound. Demagnetize these parts once every 30 hours of playing/recording time by using a commercial tape head demagnetizer. Read the demagnetizer's instructions carefully before use.

### ■ Cleaning the CD pickup lens

In order to ensure proper operation of the CD player, preventative maintenance (cleaning of the laser pickup lens) should be performed periodically. Lens cleaners are commercially available. Contact your local CD software dealer for options.

### ■ Cleaning the cabinet

Periodically wipe the cabinet with a soft cloth and a diluted soap solution, then with a dry cloth.

#### Caution:

- Do not use chemicals for cleaning (gasoline, paint thinner, etc.). It may damage the cabinet finish.
- Do not apply oil to the inside of the unit. It may cause malfunctions.

## Specifications

XL-HP505

As part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

### ■ General

<b>Power source</b>	AC 120 V, 60 Hz
<b>Power consumption</b>	80 W
<b>Dimensions</b>	Width: 7-1/4" (185 mm) Height: 10-1/4" (260 mm) Depth: 12" (307 mm)
<b>Weight</b>	13.7 lbs. (6.2 kg)

### ■ Amplifier

<b>Output power</b>	75 watts minimum RMS per channel into 6 ohms from 60 Hz to 20 kHz, 10% total harmonic distortion
<b>Output terminals</b>	Speakers: 6 ohms Headphones: 16 - 50 ohms (recommended: 32 ohms) Subwoofer pre-out (audio signal): 200 mV/10 k ohms at 70 Hz
<b>Input terminals</b>	Video/Auxiliary (audio signal): 500 mV/47 k ohms

### ■ CD player

<b>Type</b>	5-disc multi-play compact disc player
<b>Signal readout</b>	Non-contact, 3-beam semiconductor laser pickup
<b>D/A converter</b>	1-bit D/A converter
<b>Frequency response</b>	20 - 20,000 Hz
<b>Dynamic range</b>	90 dB (1 kHz)

### ■ Tuner

<b>Frequency range</b>	FM: 87.5 - 108 MHz AM: 530 - 1,720 kHz
------------------------	---

### ■ Cassette deck

<b>Frequency response</b>	50 - 14,000 Hz (normal tape)
<b>Signal/noise ratio</b>	50 dB (recording/playback)
<b>Wow and flutter</b>	0.3 % (WRMS)

### ■ Speaker

<b>Type</b>	2-way type speaker system 2" (5 cm) tweeter 5-1/8" (13 cm) woofer
<b>Maximum input power</b>	150 W
<b>Rated input power</b>	75 W
<b>Impedance</b>	6 ohms
<b>Dimensions</b>	Width: 6-1/2" (165 mm) Height: 10-1/4" (261 mm) Depth: 9-11/16" (246 mm)
<b>Weight</b>	6.2 lbs. (2.8 kg)/each

## CONSUMER LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

### **Model Specific Section**

**Your Product Model Number & Description:**

**XL-HP505 Micro Component System**

(Be sure to have this information available when you need service for your Product.)

**Warranty Period for this Product:**

One (1) year parts and labor from the date of purchase.

**Additional Item(s) Excluded from Warranty Coverage (if any):**

Non-functional accessories, supplies, and consumable items.

**Where to Obtain Service:**

At a Sharp Authorized Servicer located in the United States.

To find a location of the nearest Sharp Authorized Servicer, call Sharp toll free at 1-800-BE-SHARP.

**What to do to Obtain Service:**

Ship prepaid or carry in your Product to a Sharp Authorized Servicer.

Be sure to have **Proof of Purchase** available. If you ship the Product, be sure it is insured and packaged securely.

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, CALL **1-800-BE-SHARP**.

0005

# SHARP

**SHARP ELECTRONICS CORPORATION**

Sharp Plaza, Mahwah, New Jersey 07430-2135

**SHARP CORPORATION**

9906

Printed in Malaysia

TINSEA003AWZZ

03K R YT ①

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>