 




Speed Queen

Use and Care Guide Home Laundry Automatic Dryer

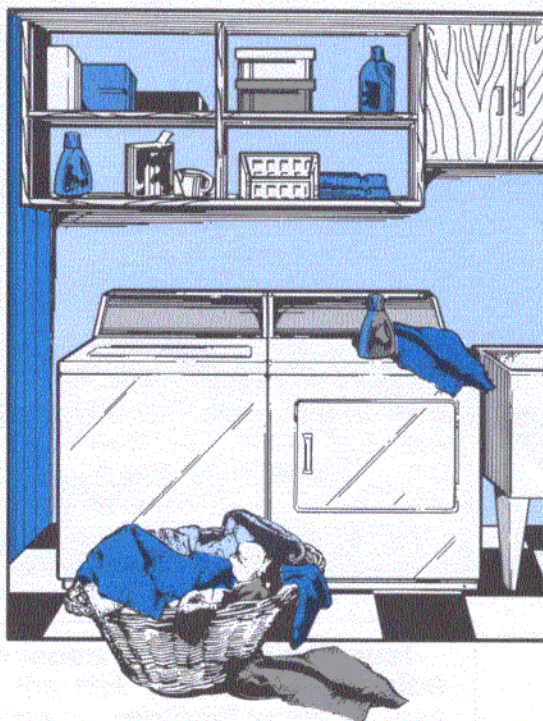

Models:
(Electric Heat)

AE9433
AE9233
AE9133
NE8533

NE8333
AE7233
AE7133
NE6533
NE6333

(Gas Heat)

AG9439
AG9239
AG9139
NG8539

NG8339
AG7239
AG7139
NG6539
NG6339

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE. (If the dryer changes ownership, be sure this manual accompanies the dryer.)

Part No. 59700R5
3/92

Operation Instructions

▲ WARNING

To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS, Pages 2 and 3, before operating the dryer.**

To Dry Clothes

 
IMPORTANT: Please read instructions before using dryer. Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then wipe dry. Install the dryer according to the **INSTALLATION INSTRUCTIONS. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

1. **CLEAN LINT FILTER** before each use.
2. **LOAD DRYER.** Open dryer door. Shake out laundry and place in dryer.
3. **CLOSE DOOR.** Dryer will not operate with the door open.

▲ WARNING

To reduce the risk of bodily injury, the dryer will stop tumbling when the door is opened. Do not use the dryer if it does not stop tumbling when the door is opened or start tumbling without pressing the **GO** pad. Remove the dryer from use and call the serviceman.

4. Press one of the **ON/SELECT** pads to select a cycle which is appropriate for the type of fabric being dried, (depending on the model of dryer you have). **REGULAR, PERM PRESS, DELICATES, KNITS,** or **NO HEAT.** These are automatic, preprogrammed cycles. A light to the left of the pad lights up to show you that pad has been activated.

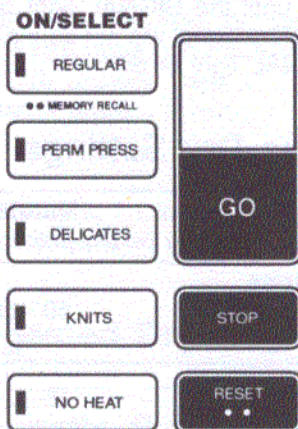

5. Press the **GO** pad. The dryer will start immediately and stop automatically when the cycle has completed. Dryer will not start until the **GO** pad is pressed.

NOTE: When you have selected an automatic cycle, you will see the letters **AU** appear in the display area.

TO STOP DRYER AT ANY TIME: Open the loading door or press the **STOP** pad.

TO RESTART DRYER: Close the loading door, select a cycle if necessary and press the **GO** pad. The dryer will not operate if the loading door is open.

STATUS Lights

The **STATUS** lights illuminate to show you at a glance, what is happening inside your dryer.

Clean Filter

Will flash before each cycle to remind you to clean the dryer's lint filter before each load. A clean lint filter promotes faster drying and energy savings.

Drying

Remains lit while your clothes are drying.

Cool-Down

Lights up during the cool-down portion of the cycle.

Wrinkle-Free

Lights up during the wrinkle-free portion of the cycle when the wrinkle-free option has been selected. The clothes may be removed from the dryer at any time during the wrinkle-free portion.

STATUS

■ CLEAN FILTER

■ DRYING

■ COOL DOWN

■ WRINKLE-FREE

Memory Save (Not on all models)

You can create and save your favorite cycles by using the **MEMORY SAVE** option. Each programmed cycle — **REGULAR, PERM PRESS, DELICATES, KNITS** and **NO HEAT** can have one additional memory cycle for a total of five memories or favorite cycles in addition to the programmed cycles.

To save a favorite cycle, first select a program cycle, then make the changes you want for that cycle. When all selections have been made, press the **MEMORY** pad. Your favorite cycle is now saved. This cycle can be stored until you either change the cycle or until there is a power outage of several seconds or longer.

To recall your memory cycle, press a **SELECT** cycle pad twice. The light on the **MEMORY** pad will light up when the memory cycle is recalled.

To change a memory cycle, press an ON/SELECT cycle pad twice to recall the memory cycle. Change the cycle, then press the MEMORY SAVE pad. The old memory cycle will be deleted and the new cycle memorized in its place.

FOR EXAMPLE: Let's change and save a REGULAR cycle. We will change the cycle by selecting the EXTRA DRY dryness level and add the WRINKLE-FREE option.

First, press the REGULAR ON/SELECT pad. Next, press the EXTRA DRY pad, and then press the WRINKLE-FREE pad.

 
When all selections have been made, press the MEMORY SAVE pad.

To recall the cycle, press the REGULAR pad twice.

the STOP pad two times in succession will completely turn the control off.

RESET

• •
Press RESET two times in succession to cancel any cycle or completely turn the dryer off.

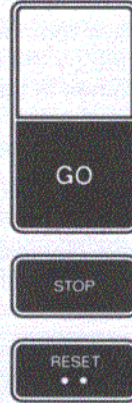

Customizing Programmed Cycles

All automatic cycles can be customized to fit your laundering needs.

First, select a cycle by pressing an ON/SELECT pad. Then, make changes in the pre-programmed cycle by using the pads to the right of the STATUS lights.

The degree of dryness of the load at the end of an AUTOMATIC cycle is controlled by the VERY DRY, EXTRA DRY, NORMAL and DAMP pads. Use the VERY DRY

selection when you want items to be extremely dry. Select EXTRA DRY for extra heavy, bulky items (like blue jeans or towels) that tend to hold more water than the average load. Unless another selection is made, the NORMAL dryness level will automatically be used. Select DAMP for items that you want to iron or finish drying by hanging them up.

The ON/SELECT and dryness level pads work together to provide you with up to nine different drying temperatures (depending on the model).

Wrinkle-Free (Not on all models)

Press the WRINKLE-FREE pad. This will allow an extended cool-down period of up to 99 minutes at the end of the selected cycle. This cycle provides a 30 second tumble every five minutes. At the end of the 30 second tumble and if the signal was selected, it will sound for three seconds to remind you to remove the laundry from the dryer. This option is not allowed in the NO HEAT cycle.

 
Go, Stop and Reset

Go

Press the GO pad to start the dryer. The dryer will not run until the GO pad is pressed.

Stop

Press STOP to stop the dryer at any point in the cycle. The dryer will remain at that portion of the cycle until the GO pad is again pressed. At that time, the cycle will continue where it left off. Pressing

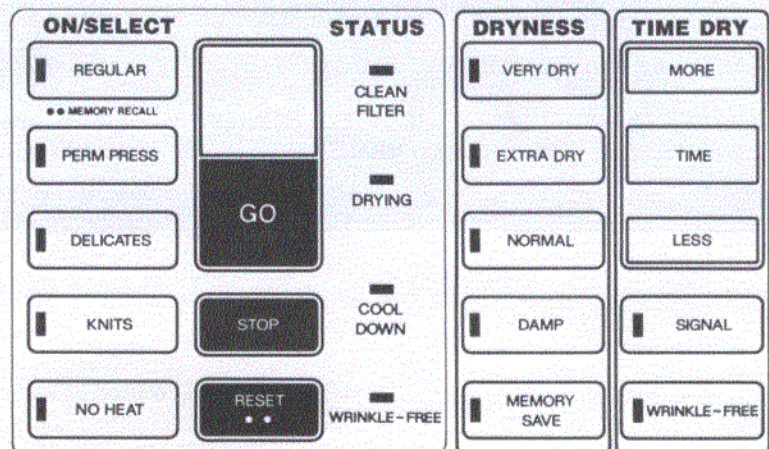

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>