

# **SPEED QUEEN**

## **DRYER**

### **OPERATING**

### **INSTRUCTIONS**

### **MODELS**

## **HE4070 & HG4080**

#### **FOR YOUR SAFETY**

**Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.**

#### **IF YOU SMELL GAS**

- 1. Open windows**
- 2. Don't touch electrical switches**
- 3. Extinguish any open flame**
- 4. Immediately call your gas supplier**

#### **INFORMATION FOR HANDY REFERENCE**

Date Purchased \_\_\_\_\_

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

Dealers Name \_\_\_\_\_

**NOTICE:** For your own convenience and protection, record the above information and retain your sales slip for this appliance. The model and serial numbers will be found on the nameplate located on inside of dryer door opening.



**SPEED QUEEN**  
Ripon, Wisconsin 54971

a McGraw-Edison Company Division

Read complete instructions before using dryer. Refer often to the special information in the Speed Queen Handbook to Better Automatic Drying. Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then dry. The dryer must be properly installed according to the installation instructions.

## TO DRY CLOTHES

**1 CLEAN LINT SCREEN:** See Page 5.

**2 LOAD DRYER:** Open dryer door. Shake out laundry and place in dryer. See Helps and Hints, Page 8.

**3 CLOSE DOOR:** Dryer will not operate with door open.

FABRIC  
DURABLE PRESS  
KNITS  
DELICATE

 
NORMAL

HEAVY



FLUFF

**4 SELECT DRYING TEMPERATURE:** The FABRIC switch controls the heat.

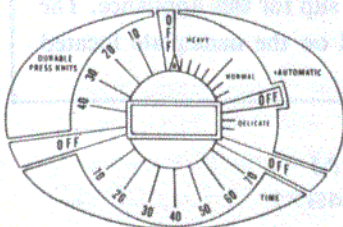

**5 SELECT TIMER SETTING** in cycle desired: AUTOMATIC, TIME DRY or DURABLE PRESS—KNITS cycle. These cycles control the drying time. See Pages 3 and 4 for detailed cycle information.

**START DRYER:** Press the **PUSH-TO-START** button. Dryer will operate until the end of the cycle (when timer knob indicator reaches the **OFF** position).

**PUSH TO START**

**TO STOP DRYER AT ANY TIME:** Open dryer door or turn timer knob to **OFF** position.



**TO RESTART DRYER:** Close door, reset timer if necessary and press **PUSH-TO-START** button. Speed Queen dryers are designed so they will not operate if the door is open. The **PUSH-TO-START** button, which is out of the reach of small children, **MUST** be pressed to start the dryer if it has been stopped for any reason. This is a safety feature.

## ABOUT YOUR SPEED QUEEN DRYER

### AUTOMATIC CYCLE

The **AUTOMATIC** cycle is designed to dry large and average loads of similar weight fabrics. Uniformity of fabric is important to insure that all items will dry in the same length of time. When properly set for the load, the **AUTOMATIC** cycle will shut the heat off when the load is dry. The dryer will then tumble without heat for 5 minutes before stopping at the **OFF** position.

Loads of a few small items or single articles, such as one sweat shirt, are not suitable loads. Large and small pieces together make the best loads for proper tumbling.

The **AUTOMATIC** cycle is marked into drying zones.

**HEAVY** — for heavy cottons such as quilts, large rugs, etc. This setting will not be required for most loads, but will be used for those occasional heavy bulky loads.

**NORMAL** — for cottons such as terry cloth towels, knits, corduroy, work clothes, mattress pads and mixed loads.

---

**DELICATE** — for fabrics the weight of sheets, shirts, dresses, etc., when they are dried with similar fabrics. Also for fabrics of or containing man-made fibers such as polyester, nylon, etc. Many fabrics today contain man-made fibers. These dry quickly and will not need the higher settings.

 
Turn the timer knob to the setting for the load. See Suggested Dryer Settings, page 6.

For the first several loads set the timer at the word **NORMAL** for regular loads and at the word **DELICATE** for lighter weight fabrics. You may find that a setting above or below this will be better for your loads. Your own experience will teach you the best settings for your drying requirements.

For more drying, turn the timer knob to the left to a higher setting. For less drying, turn the timer knob to the right to a lower setting.

The 5 minute cool-down (no-heat) will start at the last bar before the **OFF** position. The dryer will not heat if set at this position.

The timer will not advance with regularity as it does in the **TIME DRY** cycle. See *Before Calling Your Serviceman*, page 10.

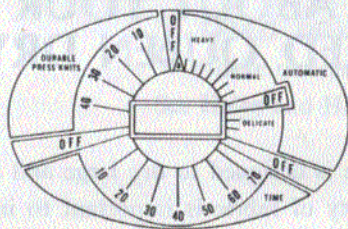

## TIME DRY CYCLE

This cycle will operate the dryer for the number of minutes for which it is set (up to 75). Use for any load desired. Use for items you might want to remove while still damp, such as knits, woolens, or for clothes to be ironed.

Turn the timer knob for the number of minutes required for drying. See Suggested Dryer Settings, page 7. The dryer will not heat if set for 5 minutes or less.

## DURABLE PRESS—KNITS CYCLE

This cycle will operate the dryer for the number of minutes for which it is set (up to 50). The cycle is especially for garments of Durable Press, Knits, and other fabrics of man-made fibers which require a shorter drying time. The 10 minute cool-down period at the end of the cycle cools the clothes while tumbling to minimize wrinkling. **For best results, remove these garments from the dryer as soon as tumbling stops.** The dryer will not heat if set for 10 minutes or less.

## LINT SCREEN

The lint screen is located at the front of the dryer in the lower part of the door opening.

**CLEAN THE LINT SCREEN BEFORE DRYING EACH LOAD.** This is important because a layer or pad of lint on the screen will block the flow of air through the dryer, thus reducing the dryer efficiency. The clothes will take longer to dry and energy will be wasted.

 
The screen may or may not be removed for lint removal.

**TO REMOVE LINT:** Wipe across the screen with dampened fingers.

**TO REMOVE LINT SCREEN:** Lift screen up and out of door opening. Screen may be washed if any residue is noticed on it.

**TO REPLACE SCREEN:** Place screen in door recess and push in firmly.

**THE LINT SCREEN MUST BE IN PLACE IN THE DRYER WHEN USING DRYER.**

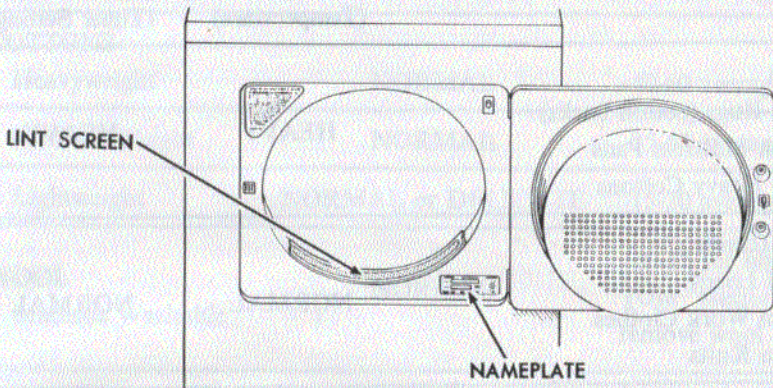

## EXHAUST SYSTEM

We recommend that moisture laden dryer air be exhausted to the outside atmosphere to assure maximum dryer efficiency. The duct pipe should be cleaned periodically to remove any obstructions. Check occasionally to make sure the flapper on the outside weather hood moves freely, is not pushed in and that nothing has been shoved against it. Check too that the flapper is not standing open. If it is open, leaves or even snow could plug it. Any restriction of the air from the dryer will decrease drying efficiency.

If the room where the dryer is installed is adequately ventilated, it may be operated without an outside exhaust. **Outside exhausting is the preferred method.** The necessary suggestions and directions for exhausting are given in the Installation Instructions which are included with the dryer. See your Speed Queen dealer for full particulars.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>