 


Speed Queen

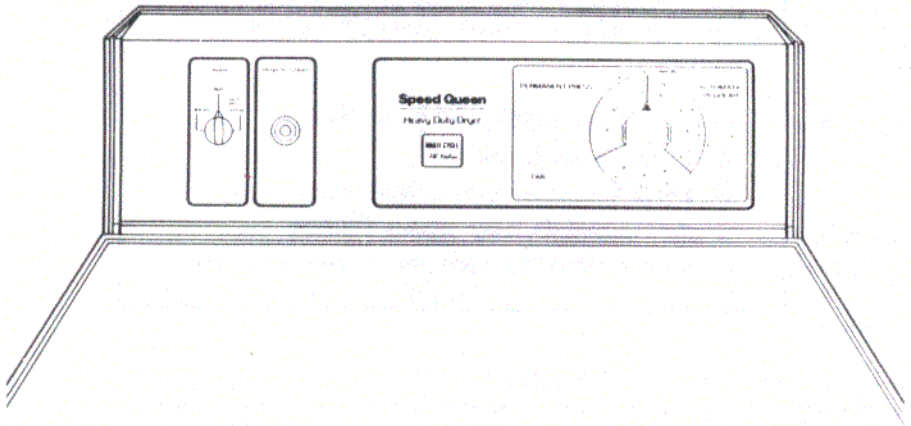

AUTOMATIC DRYER OPERATING INSTRUCTIONS

**Models
HE5003
and
HG5009**

Speed Queen Company
Ripon, WI. 54971

Part No. 57333R1
2/85

 
A Raytheon Company

Please read instructions before using dryer. Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then wipe dry. Install this dryer according to the installation instructions. **KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

TO DRY CLOTHES


1 CLEAN LINT FILTER before each use.

2 LOAD DRYER: Open dryer door. Shake out laundry and place in dryer.



3 CLOSE DOOR: Dryer will not operate with door open.

 4 SELECT DRYING TEMPERATURE: The FABRIC switch controls the drying temperature.

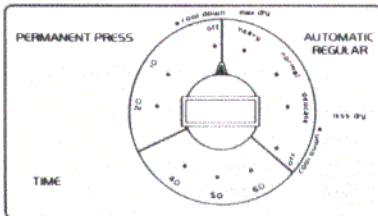

5 SELECT TIMER SETTING in cycle desired: **AUTOMATIC REGULAR, TIME** or **PERMANENT PRESS**. These cycles control the drying time.

6 START DRYER: Press the **PUSH-TO-START** button.



TO STOP DRYER AT ANY TIME: Open dryer door or turn timer knob to **OFF** position.

TO RESTART DRYER: Close door, reset timer if necessary and press **PUSH-TO-START** button. Speed Queen Dryers are designed so they will not operate if the door is open.

ABOUT YOUR SPEED QUEEN DRYER

AUTOMATIC CYCLES

The AUTOMATIC REGULAR cycle is designed to dry large and average size loads of similar weight fabrics. When properly set for the load, the dryer will determine the exact length of drying time, shut the heat off when the clothes are dry and tumble for approximately five minutes with no-heat before stopping at the OFF position.

Uniformity of fabrics is important to ensure that all items will dry in the same length of time.

THE TIMER KNOB WILL NOT ADVANCE WITH THE SAME REGULARITY IN THE AUTOMATIC CYCLE AS IT DOES IN THE TIME CYCLE. See "ABOUT YOUR AUTOMATIC CYCLE" Page 4.

LOAD TYPES FOR AUTOMATIC REGULAR CYCLE

MAX DRY or HEAVY — For fabrics that absorb a lot of water such as cotton quilts, rugs, and unusually large or heavy items. This setting will not be required for most loads.

NORMAL — For cottons such as cotton knits, corduroys, cotton work clothes and mixed loads.

DELICATE — For medium and lightweight fabrics (not permanent press) as in dresses, dress shirts and for delicate items.

These cycles have approximately 5 minute cool-down (no-heat) period at the end of the cycle.

PERMANENT PRESS cycle — For permanent press, polyester knits and other synthetics that are "no-iron".

TIME CYCLE — Settings for up to 65 minutes of drying time.

Approximately the last 5 minutes of the cycle is an automatic cool-down (no-heat) period to condition the clothes and to lessen wrinkling for permanent press loads.

SUGGESTED DRYER SETTINGS

LOAD TYPE	TIME	PERMANENT PRESS CYCLE (Timer Setting)
Permanent Press Polyester Knits Heavy and Mediumweight Synthetics	30 min.	PERMANENT PRESS
Lightweight, Delicates and Sheers	20 min.	PERMANENT PRESS
AUTOMATIC REGULAR CYCLE		
Bath Towels, Mixed Loads Cotton Work Clothes Cotton Knits		HEAVY
Cotton Sheets, Dresses and Dress Shirts		NORMAL
Sheer and Very Lightweight Cottons. Items labeled "Dry With Low Heat"		DELICATE

The suggested timer settings are approximate. Check garment care labels for proper dryer settings. At first, set indicator toward center of drying zone. You may find you will get better results for your loads by setting the indicator to either side. Turn timer knob to a lower setting (clockwise) for less drying, or to a higher setting (counterclockwise) for more drying.

 


ABOUT YOUR AUTOMATIC CYCLES

The timer knob does not advance at an even pace in the automatic cycles as it does in the time cycle.

For instance you may notice the timer knob remains in the same position for 15 minutes before it begins to move. THE TIMER IS NOT MALFUNCTIONING. This only means it took 15 minutes for the load to become dry enough to start advancing the timer knob.

The length of time it takes for the timer knob to begin advancing depends on the type and size of load being dried. The following are examples of settings used in the various automatic cycles.


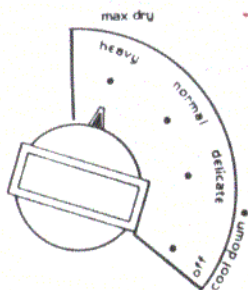


HEAVY

Use this setting when drying relatively full loads of rugs (cotton backed), cotton mattress pads, quilts and other heavy cottons.

NORMAL

  Use this setting for cotton sheets, dresses, and skirts.

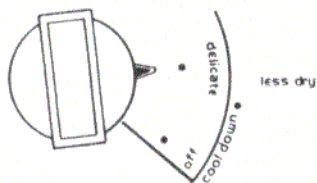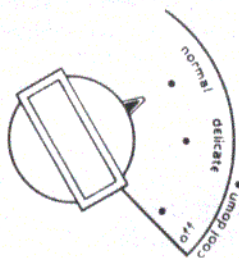

DELICATE

Use this setting for sheer and very lightweight cottons and those items labeled "Dry with Low Heat". Set the FABRIC selector on "Delicate" when using the DELICATE cycle.

SUGGESTED TIME DRYER SETTINGS

LOAD TYPE	MINUTES (Timer Setting)
COTTONS Bath towels, mattress pads, work clothes, knits, mixed loads, etc.	40-60 average load
COTTON Lightweight dress shirts, blouses, dresses, etc.	20-30 average load
PERMANENT PRESS - KNITS Work clothes, shirts, etc.	25-30 average load
PERMANENT PRESS Dress shirts, dresses, etc.	15-25 average load
SYNTHETICS Quilted robes, knits, etc.	20-30 average load
Lingerie, blouses, baby clothes, sheer curtains, etc.	10-20 average load

All suggested settings are approximate. Your loads, dryer installation, room conditions and drying requirements will teach you the proper settings for your loads.

Do not overload the dryer when drying permanent press clothes or they may be wrinkled. The load must be large enough so clothes will tumble. When tumbling stops, remove clothes and hang. Do not over-dry knits.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>