

Speed Queen Home Laundry Dryer Operating Instructions

Models HE6350 and HG6360

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

IF YOU SMELL GAS

1. Open windows
2. Don't touch electrical switches
3. Extinguish any open flame
4. Immediately call your gas supplier

INFORMATION FOR HANDY REFERENCE

Date Purchased _____

Model No. _____ Serial No. _____

Dealers Name _____

NOTICE: For your own convenience and protection, record the above information and retain your sales slip for this appliance. The model and serial numbers will be found on the nameplate located on the inside of the dryer door opening.

**Speed Queen Division
McGraw-Edison Company
Ripon, WI 54971**

 
Part No. 56627
6/78

 
Read complete instructions before using dryer. Refer often to the special information in the Speed Queen Handbook to Better Automatic Drying (supplied with dryer). Before using dryer for the first time, wash out the inside of the dryer cylinder with a sudsy cloth, then wipe dry. The dryer must be properly installed according to the installation instructions. Keep these instructions for future reference.

TO DRY CLOTHES

- 1 CLEAN LINT FILTER:** See Page 8.
- 2 LOAD DRYER:** Open dryer door. Shake out laundry and place in dryer. See Helps and Hints, Page 6.
- 3 CLOSE DOOR:** Dryer will not operate with door open.

- 4 SELECT DRYING TEMPERATURE:** The FABRIC switch controls the drying temperature.

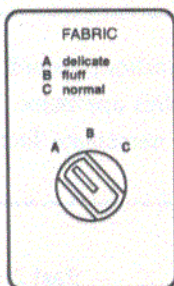


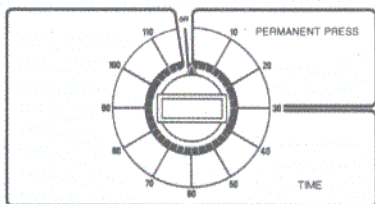

5 SELECT DRYING TIME: The numbers on the timer dial (0 to 110) represent the minutes of drying time. The **PERMANENT PRESS** cycle starts at

“30” as a reminder that these fabrics will dry in a shorter time than regular fabrics. See **SUGGESTED DRYER SETTINGS**, Page 4. The timer setting may be changed at any time during the drying period.

 The last 5 minutes of the cycle is an automatic cool-down (no heat) period to condition the clothes and to lessen wrinkling for permanent press loads. Dryer will not heat if set for 5 minutes or less.

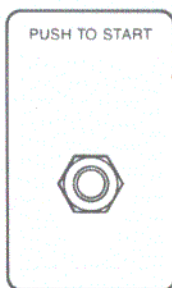

6 START DRYER: Press the **PUSH-TO-START** button. Dryer will operate until the end of the cycle (when timer knob indicator reaches the **OFF** position).

TO STOP DRYER AT ANY TIME: Open dryer door or turn timer knob to **OFF** position.

TO RESTART DRYER: Close door, reset timer if necessary and press **PUSH-TO-START** button. Speed Queen dryers are designed so they will not operate if the door is open. The **PUSH-TO-START** button, which is out of the reach of small children, **MUST** be pressed to start the dryer if it has been stopped for any reason. This is a safety feature.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>