


the
singing
machine®

SMC4TV MIC

SMM210

INSTRUCTION MANUAL

 (compatible with computer)



SPECIFICATIONS

| | |
|------------------------|--|
| TYPE: | -54 dB 600 OHMS IMPEDANCE UNI-DIRECTIONAL DYNAMIC MICROPHONE |
| POWER SOURCE: | DC 5V |
| DIMENSION (W x D x H): | 0.15 x 0.13 x 0.86 inches / 3.9 x 3.4 x 21.9 cm |
| WEIGHT: | 0.45 lbs / 0.21 kgs |

Specifications are typical. Individual units might vary and are subject to continuous improvement without notice and/or incurring any obligation.

FCC IMPORTANT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

The Singing Machine Company, Inc.

280 Machlin Court

City of Industry, CA 91789 USA

TEL: (954) 596-1000

FAX: (954) 596-2000

210-1206-ENG01

PRINTED IN CHINA

www.singingmachine.com

Download from Www.Somanuals.com. All Manuals Search And Download.

VISIT OUR WEBSITE www.singingmachine.com

The Singing Machine® is a registered trademark of The Singing Machine Co., Inc.

CONNECTING THE MICROPHONE

Connect the USB microphone's plug to MIC 1 or MIC 2 jack of SMC4TV (not included).

Warning - Tapping or dropping the microphone can permanently damage your microphone. Resist the urge to swing the microphone around by the cord!

FUNCTION SELECT

Press the MENU/Mic On-Off button; the Menu will appear. Select the Media Source option using the Skip Forward / Skip Back buttons. Press Navigation \blacktriangle / \blacktriangledown buttons. Press the Play/Pause/Stop button to confirm your Media Source. The display will jump to the selected function mode immediately.

PLAY/PAUSE/STOP

To start playing, press the PLAY/PAUSE/Stop button on the MIC. The first track and total number of tracks will be displayed on the TV.

To temporarily stop playing, press the PLAY/PAUSE/Stop button. The PAUSE indicator will be displayed.

To resume play, press this button again.

If the PLAY/PAUSE/Stop button is pressed and held in the course of playing, the track will cease to play. (The STOP indicator will be shown on the TV.)

MUSIC VOLUME AND MIC VOLUME

Adjust the MUSIC VOLUME control to a desired level to obtain the best performance.

To adjust the MUSIC VOLUME, you can press the Volume Up / Down buttons on the MIC.

To adjust the MIC VOLUME, press MENU/Mic On-Off button on the MIC. Press SKIP Forward / Skip Back buttons to select VOLUME menu. Press Navigation \blacktriangle / \blacktriangledown buttons to select and then press SKIP Forward / Skip Back button to select the magnitude.

Warning - To avoid microphone feedback do not hold the microphone too close to the speaker.

MICROPHONE ON/OFF

To turn the microphone off, you can press and hold MENU/Mic On-Off button for 3 seconds. Press and hold MENU button again to reactivate the microphone.

SKIP (For both MP3+G, CD and CD+G discs)

You can always skip forward or back to your desired track number by pressing the SKIP Forward / Skip Back buttons.

For the MP3+G disc (USB Drive), in order to select a track quickly, you can press and hold SKIP Forward / Skip Back button to skip up or down 10 tracks at a time.



KARAOKE EFFECTS

To adjust the KARAOKE EFFECTS, press MENU/Mic On-Off button. Press SKIP Forward / Skip Back button to select EFFECTS menu. Press Navigation \blacktriangle / \blacktriangledown buttons to select and then press SKIP Forward / Skip Back buttons to select the magnitude.

MICROPHONE COMPATIBLE WITH COMPUTER

Your SMC4TV MIC is compatible with Windows and Apple computer operating systems.

You can simply plug in the microphone to the USB port of your computer. Your computer will recognize that a microphone device has been added.

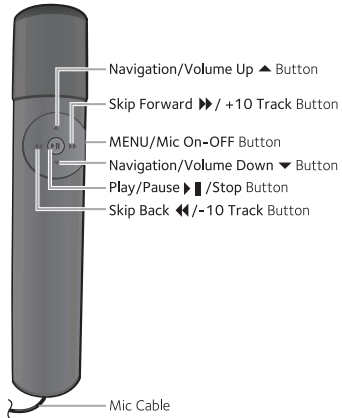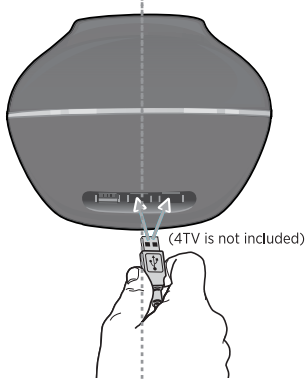

Mac



Microsoft Windows

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>