

User  
Manual

Tumble  
Dryer



ZDC 47100 W

## Welcome to the world of Electrolux

Thank you for choosing a first class product from Electrolux, which hopefully will provide you with lots of pleasure in the future. The Electrolux ambition is to offer a wide variety of quality products

that make your life more comfortable. You find some examples on the cover in this manual. Please take a few minutes to study this manual so that you can take advantage of the benefits of your new machine. We promise that it will provide a superior User Experience delivering Ease-of-Mind. Good luck!

The symbols you will see on some paragraphs of this booklet have the following meaning:



The warning triangle emphasize information that is particularly important for your safety or correct functioning of the appliance.



The information marked with this symbol provides additional instructions and practical tips on the use of the appliance.



Tips and information about economical and ecological use of the machine are marked with this symbol.

## Contents

---

Important safety information . . . .	3	Installation . . . . .	20
Controls panel and their functions	5	Electrical connection . . . . .	21
Description of the appliance . . . .	6	Guarantee Conditions . . . . .	22
Drying programmes . . . . .	6	Service & Spare Parts . . . . .	23
Before the first drying cycle . . . .	8		
Drying hints . . . . .	8-9		
Operating sequence . . . . .	10-12		
Care and cleaning . . . . .	13-15		
Something not working . . . .	16-17		
Technical data . . . . .	18		
Consumption values . . . . .	18		
Environment concerns . . . . .	19		

## ⚠ Important safety information

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

### General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
  - This appliance is not intended for use by persons (including children) with reduced physical, sensory or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
  - Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
  - Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
  - In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
  - Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
  - Always unplug the appliance after use, clean and maintenance.
  - Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre.
- Always insist on genuine spare parts.
- Items that have been soiled with substances such as cooking oil acetone, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
  - **Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Only tumble dry items washed with water.
  - **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
  - If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
  - Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into appliance
- ⚠ **WARNING!**  
**Never stop a tumble dry before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.**  
**RISK OF FIRE!**

## Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packaging must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- The final part of a tumble dryer cycle occurs without heat ( cool down cycle ) to ensure that the items are left at a temperature that ensures that items will not be damaged.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.
- After having installed the appliance, check that it is not pressing or standing on its electrical supply cable.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).

## Use


- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Do not dry unwashed items in the tumble dryer.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.

- Garments which have been in contact with volatile petroleum products should not be machine dried. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- Fabric softeners, or similar products should be used as specified by the fabric softener instructions.

## Child safety

- This machine is not intended for use by young children or infirm persons without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.

## Controls panel and their functions

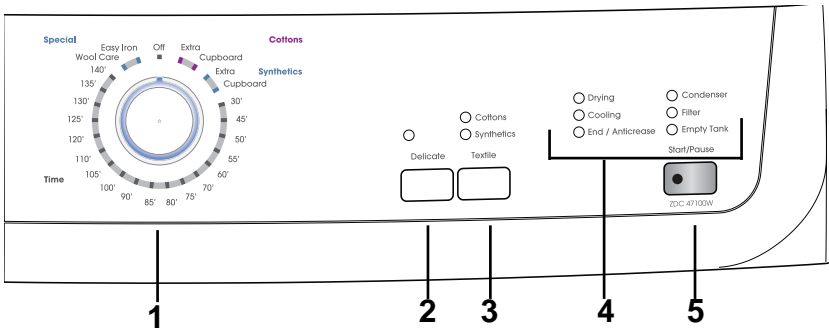

### 1 PROGRAMME TIME SELECTOR DIAL

Allows you to select electronically controlled or time controlled drying.  
Turn the dial to the required programme or time.

### 2 DELICATE button

1. Select programme.
2. Press the DELICATE button. The relevant light will light up.
3. Press the START/PAUSE button. The relevant light will stop flashing. DELICATE is only suitable for use with loads of up to 3kg! When the programme has finished the pilot lights End is on.

### 3 TEXTILE button

1. Select programme. and press the TEXTILE button.
  - You can select 2 different options:
    - Cotton Cycle: to be used for cotton, where as in the programmes
    - Synthetics to be used for synthetic or delicate items.
3. Press the START/PAUSE button. The relevant light will stop flashing.

### 4 INDICATOR LIGHTS


- “Drying” light
- “Cooling” light
- “End/Antcrease” light
- “Filter” light
- “Empty Tank” light
- “Condenser” light

### 5 START/PAUSE button

1. Select programme.
2. Press the START/PAUSE button. The relevant light will stop flashing.

## Description of the appliance

- 1 Control panel
- 2 Fluff filters
- 3 Rating Plate
- 4 Condenser Unit
- 5 Water reservoir
- 6 Adjustable feet

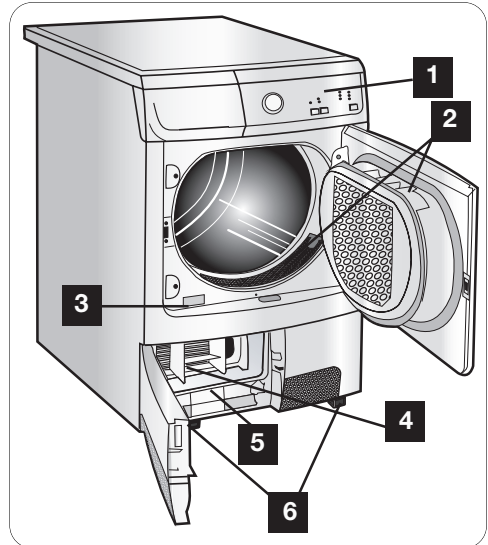

## Drying programmes

Programme	Max load kg	Type of laundry	Options	Description of programme
Extra	7	Cottons	Textile -Cotton	Drying thick or multi-layered textiles, e.g. terry towelling items
Cupboard	7	Cottons	Textile -Cotton	Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitted items, towels.
Extra	3	Synthetics	Textile -Synthetics	Thorough drying of thick or multilayered fabrics, e.g. pullovers, bedding, table linen.
Cupboard	3	Synthetics	Textile -Synthetics	For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires.

## Drying programmes

Programme	Max load kg	Type of laundry	Options	Description of programme
<b>Time</b>	3	Synthetics	Textile	If the TIME programme has been selected, programme duration time of 30 minutes up to 140 minutes can be set by intervals of 10 minutes. Drying thick or multi-layered textiles, e.g. terry towelling items.
	7	Cottons	-Synthetics -Cotton Delicate	
<b>Wool care</b>	1	Wool		Wool care is special programme for briefly treating woollens with warm air after they have been dried naturally, worn or stored for long periods. Wool fibres are aligned and the wool becomes soft and snugly.
<b>Easy Iron</b>	1	Cottons Synthetics		Special programme with anti-crease mechanism for easy care textiles such shirts and blouses; for minimum ironing effort. The result depends on the type and quality of textiles. (The loading volume corresponds to approx. 5 to 7 shirts.) Recommendation: Place textiles in the dryer straight after spinning. Once dried, immediately remove textiles and place on clothes hanger.

## Before the first drying cycle

---

Ensure that the electrical connections comply with the installation instructions.

- Remove the polystyrene block and any material from the drum.
- Before using your tumble dryer for the first time, we recommend that you place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

## Drying hints

---

### Before loading the laundry

Never tumble dry the following:  
Particularly delicate items such as net curtains, woollen, silk, fabrics with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdowns, sleeping bags, feather quilts and any items containing rubber foam or materials similar to rubber foam.

- Always follow the instructions on garment labels:



may be tumble dried



normal drying (high temperature)



delicate drying (low temperature)



do not tumble dry

- Close pillowcases and covers with fasteners to prevent small laundry items getting tangled inside them. Close press studs, zips and hooks and tie belts and apron strings.
- Sort laundry according to type and degree on drying required.
- Do not over-dry laundry, this avoids

creasing and saves energy.

- Avoid drying dark clothes with light coloured fluffy items such as towels as they could attract the fluff.
- The laundry must be thoroughly spun before tumble drying.
- **Easy-care items**, too, e.g. shirts, should be briefly pre-spun before drying (depending on crease resistance approx. 30 seconds or using the special brief spin programme of your washing machine).
- Knitted textiles (knitted underwear) may shrink a little during drying. Please do not overdry items of this type. It is advisable to allow for shrinkage when choosing the size of new purchases.
- You can also put starched items into your dryer. However, to achieve the desired starched effect, choose the programme "iron dry". To remove any starch residues, wipe out the internal drum after drying with a moist cloth and then rub it dry.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the



laundry or a fabric conditioner specifically for tumble dryers.

- Remove the laundry when the dryer has finished drying.
- If individual items are still damp after drying, set a brief post-drying time, but **at least 30 minutes**. This will be necessary particularly for multilayered items (e.g. collars, pockets, etc.).

**Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).**

Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

To avoid laundry becoming tangled: close zips, button up duvet covers and tie loose ties or ribbons (e.g. of aprons).

Turn items with double-layered fabrics inside out (e.g. with cotton lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.

## Maximum loads

Recommended loads are indicated in the programme charts.

General rules:

**Cotton, linen:** drum full but not too tightly packed;

**Synthetics:** drum no more than half full;

bathrobe	1200 g
napkin	100 g
quilt cover	700 g
sheet	500 g
pillow case	200 g
tablecloth	250 g
towelling towel	200 g
tea cloth	100 g
night dress	200 g
ladies' briefs	100 g
man's work shirt	600 g
man's shirt	200 g
man's pyjamas	500 g
blouse	100 g
men's underpants	100 g

**Delicate fabrics and woollens:** drum no more than one third full.

Try to load to the maximum capacity of the machine as small loads are uneconomical.

## Laundry weights

The following weights are indicative:

# Operating sequence

## 1 Connect the appliance.

## 2. Open the door.




## 3. Load the items one at a time, shaking them out loosely.



## 4. Close the door. Please check the laundry does not get caught between the door and filter.

## 5. Turn the programme selector dial to the required programme.

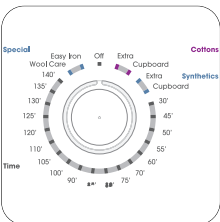

The light Start/Pause starts to flash.

The selector dial is divided into following sections:

- Cottons
- Synthetics
- Time
- Special

Allows you to select electronically con-

trolled or time controlled drying. Turn the dial to the required programme or time. Electronically controlled drying (automatic). The appliance runs these programmes with the help of probes which detect the degree of dampness of the laundry.

Simply select the programme according to the type of laundry and degree of drying required.

At the end of the programme the selector dial must be turned to position Off, to switch the machine off.

## 6. Selecting additional functions

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before depressing the Start/Pause button.

## 7. Select Delicate



Pressing this button allows drying to be performed at a lower temperature, for delicate items.

The corresponding pilot light comes on.

This option can also


be used for time controlled drying. DELICATE is only suitable for use with loads of up to 3kg!

When the programme has finished the pilot lights End is on.

## 8. Select the Textile

Press the Textile button repeatedly, to select the desired option. The relevant light will light up.

You can select 2 different options:

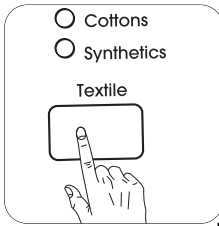


**Cotton Cycle:** to be used for cotton, where as in the programmes

When the programme has finished the pilot lights End is on.

**Synthetics** to be used for synthetic or delicate items.

When the programme has finished the pilot lights End is on.

## 9. Select the Start/Pause

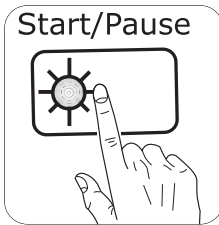

Press this button to start the dryer after having selected the programme and the options.

The relevant light will stop flashing. If the programme

selector dial is turned to another position, when the machine is running, the buzzer will sound and the programme phase indicator lights will flash.

The drum turns alternately in both directions during drying. All drying programmes end with a 10 minute cooling phase (light Cooling is on). You may remove the laundry after this phase. The lights Empty Tank and Filter illuminate and the buzzer sounds.

If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted.


This button must be depressed also after a power failure and after having reinserted the water reservoir, if it has been emptied in the middle of a pro-

gramme after lighting up of light Empty Tank.

In both cases the light of the Start/Pause button flashes to remind you that the start button needs to be pressed again.

## 10. Indicator lights

These lights indicate the following functions:

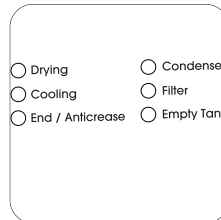

### “Drying” light

This light indicates that the appliance is in the drying phase.

### “Cooling” light

This light indicates that the appliance is in the cooling phase. At the end of drying, there is a 10 minute cooling phase to cool the laundry.

### “End of programme” light

This light is on at the end of the cooling phase, during the anti-creasing phase and at the end of the programme.

### “Filter cleaning” light

This light illuminates at the end of the programme to remind you that the filters must be cleaned.

### “Empty tank” light

This light comes on at the end of the programme to remind you that the water reservoir must be emptied out. If this light illuminates during a programme this means that the water reservoir is full. The buzzer sounds, the programme stops, the light of the Start/Pause button flashes.

### “Condenser cleaning” light

It comes on every 80 cycles to remind you that the condenser must be

cleaned.

### **11. At the end of the programme**

All drying programmes end with a 10 minute cooling phase.

You may remove the laundry after this phase. The lights Filter and Empty Tank, illuminate.

If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase (duration: 30 minutes maximum). If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase.

The Lights **Filter** and The **Empty Tank** remain lit and the buzzer sounds for 2 minutes. Turn the programme selector dial to "Off" to switch the machine off. Remove the laundry from the drum and carefully check that the drum is empty.

If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells.

Turn the programme selector dial to "Off"; all the lights go out. The appliance is switched off.

### **12. Remove the laundry.**

If you open and then close the door before turning the selector dial to "Off" all the lights corresponding to the phases making up the performed programme come on.

After each use

- Clean the filters.
- Empty the water reservoir.

### **Modifying the programme**

To change a programme which is running, first cancel it by turning the pro-

gramme selector dial to "Off". Select the new programme and press the Start button.

## Care and cleaning

You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

### External cleaning

Use only soap and water and then dry thoroughly.

### Cleaning the door



Open the door.




Clean periodically the interior part of the door to remove any fluff from the seals around the filter. Accurate cleaning ensures correct drying.

**⚠ Important:**  
do not use methyated spirit, diluents or similar product.

### Cleaning the filters



Your dryer will only function well if the filters are clean. The filters collect all the fluff which accumulates during drying and they must therefore be cleaned **at the end of each programme**, before removing the laundry, with a damp cloth. The light **Filter** is on to remind you of this operation.

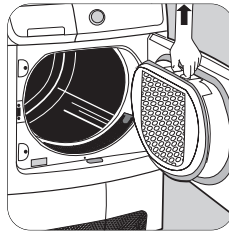


The filter in the inner door must be removed for cleaning. Do not be alarmed by the amount of fluff. It is not due to excessive wear caused by the dryer. All fabric loses fluff when drying but it goes un-noticed in the air. In a tumble dryer it simply collects in the filter. After a while, a whitish patina due to detergent residue on laundry forms on the filters.




When this occurs, clean the filters with warm water using a brush. Remove the filter in the door opening as per picture (it can be positioned with the tooth facing to the left or to the right).

**⚠ Important:**  
**Do not use the appliance without filters.**


## Cleaning the condenser unit

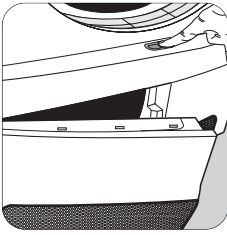


1. Clean the condenser when light **Condenser** comes on. The condenser is situated at the lower part of the cabinet behind a small door. To open the door, push the catch as per picture. During the drying cycle or at the end, it is normal for water to be present on the surface of the condenser insertion.

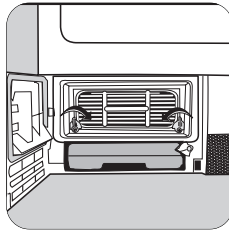

2. To pull out the condenser, first turn the two red stops downwards.

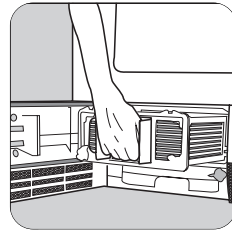

3. Then remove the condenser unit holding it at the handle.

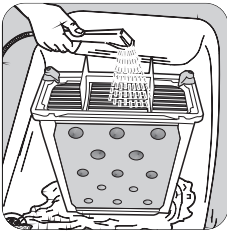

4. Clean the rubber seal round the condenser cabinet and in the inner part of the small door with a damp cloth.

### **Important:**

Do not use pointed objects or utensils to clean the spaces between the plates, as this could damage the condenser and make it permeable.

Re-fit the condenser, turn the red stops upwards and close the door.

### **Important:**

**Do not use this appliance if the condenser has not been fitted.**


## Emptying the water reservoir

### **Important:**


Water extracted from the laundry condenses inside the machine and is collected in a reservoir.

The reservoir must be emptied **after each drying cycle** to ensure efficient operation when the machine is next used. The pilot light **Empty Tank** reminds you of this operation.


Proceed as follows:

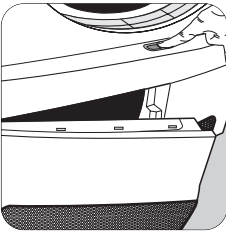


1. Open the small door at the lower part of the cabinet.

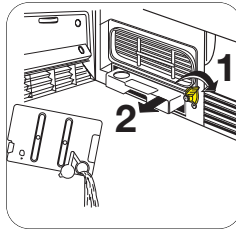

2. Turn the yellow stop upwards.

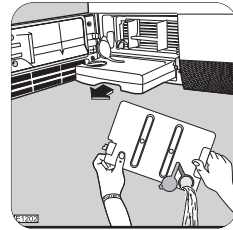


3. Pull out the reservoir.

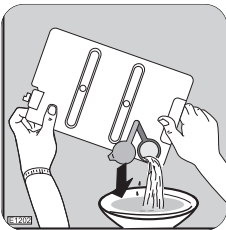

4. Open the small cover and let water flow down.

- Close the small cover and re-insert the reservoir correctly.

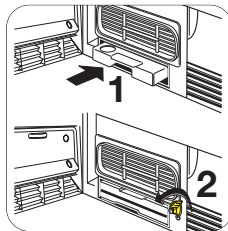

5. Push it until it clicks and turn the yellow stop downwards ensure it is firmly locked.

6. Close the small door and press the START/PAUSE button again to allow the programme to continue.

### **Important:**


**The reservoir must be re-inserted correctly.**

After emptying and inserting the reservoir the START-button has to be depressed again to allow the programme to continue.

**Handy tip:** The condensed water may be used in a steam iron or to top up a battery, etc. In this case it must be filtered (e.g. through a coffee filter).

## Cleaning the air intake grille

Using a vacuum cleaner remove the fluff from the air intake grille at the back of the appliance.

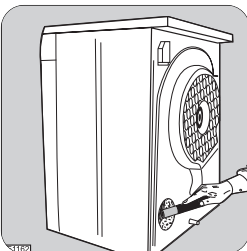

## Cleaning the drum

When your laundry does not reach the desired degree of dryness, in other words, when it turns out either too dry or too damp, we advise you to clean the inside of the drum with a cloth soaked with vinegar.

This will eliminate the slight patina that has formed in the drum (due to residues of detergent and softeners used in the washing, and to the lime contained in the water), which prevents the probes from detecting the correct degree of dryness.

## Something not working

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the **red** Start/Pause pilot light flashes to indicate that the machine is not working.

Once the problem has been eliminated, press the **Start/Pause** button to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Malfunction	Possible cause	Solution
Dryer does not work.	<ul style="list-style-type: none"> <li>• Mains plug is not plugged in or fuse is not working correctly.</li> <li>• Loading door is open.</li> <li>• Have you pressed the START/ PAUSE button?</li> </ul>	<ul style="list-style-type: none"> <li>• Plug in at mains socket.</li> <li>• Check fuse in fuse box (domestic installation).</li> <li>• Close loading door.</li> <li>• Press the START/PAUSE button again.</li> </ul>
Drying results unsatisfactory.	<ul style="list-style-type: none"> <li>• Wrong programme selected.</li> <li>• Lint filter clogged.</li> <li>• Heat exchanger clogged with lint.</li> <li>• Incorrect volume of laundry.</li> <li>• Ventilation slots in base area covered up.</li> <li>• Residue on inside surface of drum or drum ribs.</li> <li>• Conductance of water at installation site differs from standard setting of machine.</li> </ul>	<ul style="list-style-type: none"> <li>• Select a different programme the next time you dry.</li> <li>• Clean lint filter.</li> <li>• Clean heat exchanger.</li> <li>• Observe recommended loading volumes.</li> <li>• Uncover ventilation slots in base area.</li> <li>• Clean inside surface of drum and drum ribs</li> <li>• Re-programme standard setting for degree of drying.</li> </ul>
Loading door does not close.	<ul style="list-style-type: none"> <li>• Fine strainer not in place and/or large mesh filter not locked in place.</li> </ul>	<ul style="list-style-type: none"> <li>• Install fine strainer and/or snap large mesh filter into place.</li> </ul>



Malfunction	Possible cause	Solution
When pressing a button, the corresponding button flashes several times.	<ul style="list-style-type: none"> <li>Washing protection. After the start of the programme, the option can no longer be set.</li> </ul>	<ul style="list-style-type: none"> <li>Turn the programme knob to OFF. Set the programme again</li> </ul>
Drying cycle ends shortly after programme starts. END light illuminated.	<ul style="list-style-type: none"> <li>Not enough washing loaded or washing loaded is too dry for selected programme.</li> </ul>	<ul style="list-style-type: none"> <li>Select time programme or higher drying level (e.g. EXTRA DRY instead of CUPBOARD).</li> </ul>
Programme inactive, Condenser light illuminated.	<ul style="list-style-type: none"> <li>Water reservoir is full.</li> </ul>	<ul style="list-style-type: none"> <li>Empty the water reservoir, then start programme with START/PAUSE button.</li> </ul>
<p>Drying cycle lasts an unusually long time.</p> <p>Note: After around 5 hours the drying cycle ends automatically (see „Drying cycle complete“)</p>	<ul style="list-style-type: none"> <li>Lint filter clogged.</li> <li>Heat exchanger clogged with lint.</li> <li>DELICATE button pressed and load volume too big.</li> <li>Load volume too big.</li> <li>Laundry insufficiently predrained.</li> </ul>	<ul style="list-style-type: none"> <li>Clean lint filter</li> <li>Clean heat exchanger.</li> <li>DELICATE is only suitable for use with loads of up to 3 kg!</li> <li>Reduce load volume.</li> <li>Laundry must be adequately pre-drained.</li> </ul>

If you are unable to identify or solve the problem, contact your local Service Centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.



### Important:

If you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

## Technical data

Dimensions	Width	60 cm
	Height	85 cm
	Depth	58 cm
Electrical connection Voltage - Overall power - Fuse	Information on the electrical connection is given on the rating plate on the inner edge of the appliance door	
Depth with loading door open		109 cm
Maximum Load	Cotton	7 kg
	Synthetics	3 kg
Use	Domestic + 5°C + 35°C	

- C** **E** This appliance conforms with the following EU Directives:
- 73/23/EEC dated 19.02.1973 Low Voltage Directive
  - 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
  - 93/68/EEC dated 22.07.1993 CE Marking Directive

## Consumption values


Consumption values			
Programme	Programme duration (in minutes)	Energy consumption (in kWh)	Revolutions per minute
Cottons Cupboard1)	130	4,4	1000
Cottons Iron1)	100	3,41	1000
Synthetics Cupboard2)	48	1.36	1200

- <sup>1)</sup> Max Cottons load: 7 kg  
<sup>2)</sup> Max Synthetics load: 3 kg

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

## Environment concerns

### Packaging materials

The materials marked with the symbol  are recyclable.

>PE<=polyethylene


>PS<=polystyrene

>PP<=polypropylene

This means that they can be recycled by disposing of them properly in appropriate collection containers.

### Old machine

Use authorised disposal sites for your old appliance. Help to keep your country tidy!

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

## Ecological hints

To save energy and to help protect the environment, we recommend that you follow these hints:

- Try to load the maximum capacity of the machine as small loads are uneconomical.
- Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times.
- Do not over-dry laundry, this avoids creasing and saves energy. Select the drying programme according to the type of laundry and the required degree of dryness.
- To utilize the maximum load, laundry which is to be dried ready to put away (store dry) can be dried together with items to be ironed. To do this, select the programme for iron-dry, remove the iron-dry items at the end of the programme and then finish-dry the rest of the load.
- Clean the filters regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well. The room temperature should not exceed +35°C during drying.

# Installation



**It is dangerous to alter the specifications or attempt to modify this product in any way.**



**Care must be taken to ensure that the appliance does not stand on the electrical supply cable.**




**Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.**



**Important:**  
**The appliance must not built-in..**

## Unpacking

Slide out the polythene bag with the polystyrene stuffing before using the appliance. Pull off adhesive strips from inside machine on top of drum.

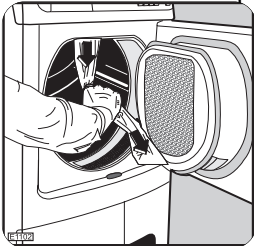

**Should the appliance be moved, it must be transported vertically. The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance.**

## Positioning

It is recommended that, for your convenience, the machine is positioned close to your washing machine.

The tumble dryer must be installed in a clean place, where dirt does not build up.

Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine.

To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.

The feet must never be removed. Do not restrict the floor clearance through deeppile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance.

## Important:


The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.

When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.

## Stacking kit

A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of a front loading washing machine with cover's

depth between 48 and 60 cm.  
Read carefully the instructions supplied with the kit.

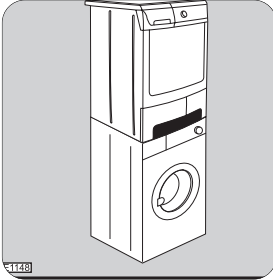

### Door reversal

To make it easier to load or unload the laundry the door can be reversed.

Reversing the door is not possible if after this operation the appliance result installed behind a door with a hinge on the opposite side to that of the appliance.

### **⚠ Important:**

This operation must be carried out by qualified personnel.  
Please contact the nearest Service Centre.

## Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

### **⚠ WARNING:**

**THIS APPLIANCE MUST BE EARTHED.**

The manufacturer declines any liability should this safety measure not be observed.

### **⚠ Important:**

**Should the appliance power supply cable need to be replaced, this must be carried out by our Service Center.**

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate.


The appliance is supplied with a 13amp plug fitted.

In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1362) fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

- |                  |           |
|------------------|-----------|
| Green and Yellow | - Earth   |
| Blue             | - Neutral |
| Brown            | - Live    |

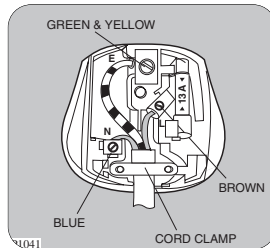

### **⚠ Important:**

**The plug must be accessible after the appliance has been installed.**

### **⚠ Important:**

**The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precautions.**

# Guarantee Conditions

---

## Standard guarantee conditions

We, Zanussi-Electrolux, undertake that if within 12 months of the date of the purchase this Zanussi- Electrolux appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- Electrolux Service Force Centre must undertake all service work under this guarantee
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

## Exclusions

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.

- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Electrolux manufacturer that are not marketed by Electrolux

## Service and Spare Parts

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Service Force Centre by telephoning

**0870 5 929 929**

Your telephone call will be automatically routed to the Service Force Centre covering your postcode area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at

**[www.serviceforce.co.uk](http://www.serviceforce.co.uk)**

Before calling out an engineer, please ensure you have read the details under the heading "Something not working"

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and postcode.
2. Your telephone number.
3. Clear concise details of the fault.
4. The model and Serial number of the appliance (found on the rating plate).
5. The purchase date.

Please note a valid purchase receipt or guarantee documentation is required for in guarantee service calls.

## Customer Care

For general enquiries concerning your Electrolux appliance, or for further information on Electrolux products please contact our Customer Care Department by letter or telephone at the address below or visit our website at **[www.electrolux.co.uk](http://www.electrolux.co.uk)**

Customer Care Department Electrolux  
Major Appliances Addington Way Luton  
Bedfordshire, LU4 9QQ Tel: 08705 727  
727 (\*) (\*) Calls may be recorded for  
training purposes.

## European guarantee

This appliance is guaranteed by Electrolux, in each of the countries listed in the following page, for the period specified in the appliance guarantee or otherwise by law. If you move from one of these countries to another of these countries the appliance guarantee will move with you subject to the following qualifications:

- The appliance guarantee starts from the date you first purchased the appliance which will be evidenced by production of a valid purchase document issued by seller of the appliance.
- The appliance guarantee is for the same period and to the same extent for labour and parts as exists in your country of residence for this particular model or range of appliances.
- The appliance guarantee is personal to the original purchaser of the appliance and cannot be transferred to another user.
- The appliance is installed and used in accordance with instructions issued by Electrolux and is only used within the home, i.e. is not used for commercial purposes.
- The appliance is installed in accordance with all relevant regulations in force within your new country of residence.

The provisions of this European Guarantee do not affect any of the rights granted to you by law.

**[www.electrolux.com](http://www.electrolux.com)**

		
Albania	+35 5 4 261 450	Rr. Pjeter Bogdani Nr. 7 Tirane
Belgique/België/ Belgien	+32 2 363 04 44	Bergensesteenweg 719, 1502 Lembeek
Česká republika	+420 2 61 12 61 12	Budijovická 3, Praha 4, 140 21
Danmark	+45 70 11 74 00	Sjællandsgade 2, 7000 Fredericia
Deutschland	+49 180 32 26 622	Muggenhofer Str. 135, 90429 Nürnberg
Eesti	+37 2 66 50 030	Mustamäe tee 24, 10621 Tallinn
España	+34 902 11 63 88	Carretera M-300, Km. 29,900 Alcalá de Henares Madrid
France	<a href="http://www.electrolux.fr">www.electrolux.fr</a>	
Great Britain	+44 8705 929 929	Addington Way, Luton, Bedfordshire LU4 9QQ



		
Hellas	+30 23 10 56 19 70	4 Limnou Str., 54627 Thessaloniki
<b>Hrvatska</b>	+385 1 63 23 338	Slavonska avenija 3, 10000 Zagreb
Ireland	+353 1 40 90 753	Long Mile Road Dublin 12
Italia	+39 (0) 434 558500	C.so Lino Zanussi, 26 - 33080 Porcia (PN)
Latvija	+37 17 84 59 34	Kr. Barona iela 130/2, LV- 1012, Riga
Lietuva	+370 5 2780609	Ozo 10A, LT 08200 Vilnius
Luxembourg	+35 2 42 43 13 01	Rue de Bitbourg, 7, L-1273 Hamm
Magyarország	+36 1 252 1773	H-1142 Budapest XIV, Erzsébet királyné útja 87
Nederland	+31 17 24 68 300	Vennootsweg 1, 2404 CG - Alphen aan den Rijn
<b>Norge</b>	+47 81 5 30 222	Risløkkvn. 2 , 0508 Oslo
Polska	+48 22 43 47 300	ul. Kolejowa 5/7, Warsaw
Portugal	+35 12 14 40 39 39	Quinta da Fonte - Edificio Gonçalves Zarco - Q 35 2774 - 518 Paço de Arcos
Romania	+37 17 84 59 34	Kr. Barona iela 130/2, LV- 1012, Riga
Schweiz/Suisse/ Svizzera	+41 62 88 99 111	Industriestrasse 10, CH-5506 Mägenwil
Slovenija	+38 61 24 25 731	Electrolux Ljubljana d.o.o. Gerbiceva 98, 1000 Ljubljana
Slovensko	+421 2 43 33 43 22	Electrolux Slovakia s.r.o., Electrolux Domáce spotrebiče SK, Seberíniho 1, 821 03 Bratislava
Suomi	www.electrolux.fi	
Sverige	+46 (0)771 76 76 76	Electrolux Service, S:t Göransgatan 143,S-105 45 Stockholm
Türkiye	+90 21 22 93 10 25	Tarlabafý caddesi no : 35 Taksim Istanbul
<b>Россия</b>	+7 095 937 7837	129090 Москва, Олимпийский проспект, 16, БЦ „Олимпик“

[www.electrtolux.com](http://www.electrtolux.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>