 
 


---

INSTRUCTIONS FOR THE USE  
AND CARE OF ZANUSSI SPIN DRYERS  
MODEL NUMBERS SD 2801 & SD 2802

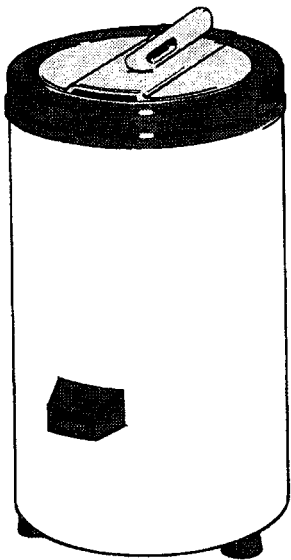

MODEL NO SD 2801

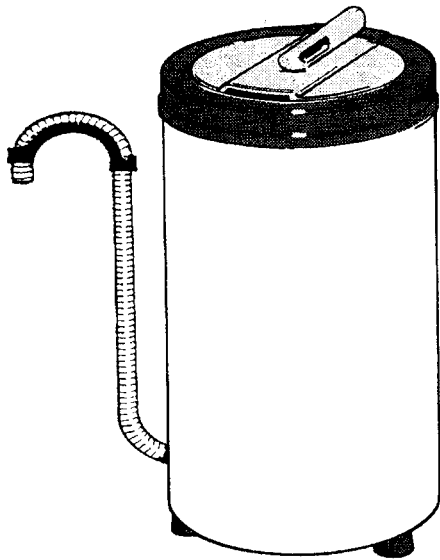

MODEL NO SD 2802

**ZANUSSI**  
The appliance of science

---

# Important User Information

**It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is left with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant safety information. This information has been provided in the interest of safety. You MUST read this safety information carefully before installing or using the appliance.**

## Installation

- Any electrical work required to install this appliance should be carried out by a qualified or competent person.

## Use

- Un-plug the appliance when it is not in use.
- Do not overload the appliance. Refer to instructions on loading.
- None of the washing must be above the drum.
- Only spin dry fabrics which are suitable for this purpose.
- Always ensure that the lever is locked in position when the spin dryer is in operation.
- Under no circumstances should the lid be forced open when the appliance is in operation.
- This machine should not be used for any purpose other than the spinning of laundry washed in water.
- It is very important to follow carefully each garment manufacturers washing and drying instructions.
- Washing that has been treated with bleach or stain removers should be rinsed thoroughly before placing in the spin dryer.
- Rinse clothes thoroughly which are contaminated with flammable liquids, such as petrol and cleaning fluids, or hair lacquers, creams, cooking fat, oils, wax or paint, before putting into the spin dryer.

- Woollen garments and those manufactured from synthetic wool mixtures should always be dried to the garment manufacturers instructions which usually state that they should be gently pulled into shape and dried on a flat surface.

## Service/Repair

- Under no circumstances should you attempt to repair the appliance (especially the supply cord) yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunctioning. If service is required this should be carried out by an authorised Zanussi Service Force Centre. Always insist on genuine Zanussi spare parts.

## General Safety

- It is dangerous to alter the specification or modify the product in any way.
- Do not put your hand in the drum when the spinner is in operation.
- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with this product.
- Children have been known to climb into unattended spin dryers when not in use. Always remove the plug or switch off at the socket outlet.
- When disposing of your old spin dryer, the electric cable must be cut off and disposed of. The lid should be removed to avoid accidents occurring with children and animals being trapped inside.

---

# Technical Specifications

Model	SD2801	SD2802
Load (Dry weight)	4,0 Kg	4,0 Kg
Spin Speed (rpm)	2800	2800
Power Supply	220-240 V/50 Hz	220-240 V/50 Hz

**This appliance complies with E.E.C. directive No 87/308 of 2.6.87 relative to radio interference suppression.**

**CE** This appliance complies with the following E.E.C Directives:  
73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications;  
89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications.  
92/31/EEC - EMC Directive

---

## Installation

Before you use the appliance for the first time, remove the cardboard inside the drum of the spin dryer, and wipe the inside of the drum with a damp cloth.

### Electrical Connection

**Warning: This appliance must be earthed. The manufacturer declines to accept any liability should this safety measure not be observed.**

For your convenience and safety your new Zanussi spin dryer comes ready fitted with a moulded flex and plug. All you have to do is push the plug into a 13 amp power socket and switch on.

However, if for some reason you need to replace this plug with one of your own you will find the wires inside the flex are colour-coded as follows:

**Green & Yellow: Earth**  
**Blue: Neutral**  
**Brown: Live**

Make sure you connect each wire to the correct terminal inside the plug. The plug's terminals may be colour coded in the same way as the wires. If not, the earth terminal will either be coloured Green, marked with the symbol »⏏«, or marked with the letter »E«. The neutral terminal will either be coloured black, or be marked with the letter »N«. The live terminal will either be coloured red, or be marked with the letter »L«.

---

# Using your Spin Dryer

## Loading

The drum may be partly or completely filled with washing. Make sure that the washing is evenly distributed inside the drum. None of the washing must be above the top of the drum. Once loaded you must cover the washing with the pliable cover provided.

## Draining

(Model SD2801)

Place a bowl under the spout of the dryer.

(Model SD2802)

Fit the pre formed plastic U-bend onto the outlet hose, leaving no more than 4 inches protruding from the end of the pre formed U-bend.

Position the hose over the edge of a sink, ensuring the sink is empty, the plug is removed, and the plug hole is not blocked.

## Spin Drying

When you have loaded the dryer, connect to the power point. Close the lid and pull the on/off lever towards the front, until it clicks into position on the lid. The spin dryer will start working.

It will only take a few minutes to spin dry your clothes; you can see when spin drying is finished as only a very few drops of water will come out of the hose. Give non-iron fabrics only a very short spin. To do this, turn the spin dryer off shortly be-

fore it has reached its maximum speed. Pull the locking lever to the right, the built-in brake will bring the drum to a halt. Remove the washing, switch off and pull the plug out of the socket.

**DO NOT** attempt to open the lid until the drum has stopped spinning.

## Care and Maintenance

When you have finished spin drying the last lot of clothes, wipe the drum dry with a cloth. If dirty water has been spun out of the dryer, it is necessary to rinse the drum with clean water, to prevent the next load of washing becoming dirty.

Washing that has been treated with bleach or stain removers should be rinsed thoroughly before placing in the spin dryer.

The outside of the dryer should be wiped with a damp cloth and rubbed dry. In this way it will retain its good looks.

On models with stainless steel drums a brown film can develop after a while, even »rust« deposits can appear. This is caused by iron particles which have entered the drum with the washing, or water with a rust or iron content. This »rust« can be removed by cleaning with a fine abrasive cleaning agent such as JIF. If operated correctly, your spin dryer should require no special maintenance.

---

# Something not Working

## Servicing

Before contacting your local Zanussi Service Force Centre, please make the following checks:

### If the dryer won't start:

- Make sure that the lid of the dryer is firmly shut, and that the lever is in the locked position.
- Make sure that the dryer is properly plugged in and that the socket switch (if any) is in the »on« position.
- Check that there is power at the socket by plugging in an appliance you know to be working – a small lamp, for example. If this too fails to work, check the main circuit fuses in your home's consumer unit or main fuse box.

### If the dryer vibrates badly, or is too noisy:

- Check that the machine is absolutely level.
- Check that your washing is evenly distributed.

If after carrying out the necessary checks, there is still a fault, call your local Zanussi Service force Centre, whose address can be found in the accompanying Customer Care Booklet, and can also be found in your local telephone directory under »Z«.

Please ensure you give the model and serial number of the appliance.

This information can be found on the rating plate at the back of the appliance, or on your guarantee card.

In-guarantee customers should ensure that these checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for any in-guarantee service calls.

## Spare Parts

Zanussi spare parts, may be purchased through your local Zanussi Service Force Centre.

---

# Peace of mind for twelve months

## Zanussi Standard Guarantee Conditions

We, Zanussi Ltd., undertake that if, within twelve months of the date of the purchase, this Zanussi appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, the company will, at its option, repair or replace the same **FREE OF ANY CHARGE** for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.

All service work under this guarantee must be undertaken by a Zanussi Service Force Centre.

Home visits are made between **8:30 am** and **5:30 pm** Monday to Friday. Visits may be available outside these hours in which case **a premium will be charged**.

Any appliance or defective part replaced shall become the property of this company.

## Exclusions

### This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right machines improperly installed or calls to machines outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Zanussi manufacture which are **NOT** marketed by Zanussi Ltd.

EU Countries – The standard guarantee is applicable but is subject to the owner's responsibility and cost to ensure the appliance meets the standards set by the country to which the product is taken. The Zanussi Company in the country concerned will be pleased to advise further. Sight of your purchase receipt will be required by them.

This guarantee is in addition to your statutory and other legal rights.

---

## Guarantee Record

Appliance purchased from

 
on

Guarantee card no

Model no

Serial no

(These details may be  
taken from your  
Guarantee Record Card)

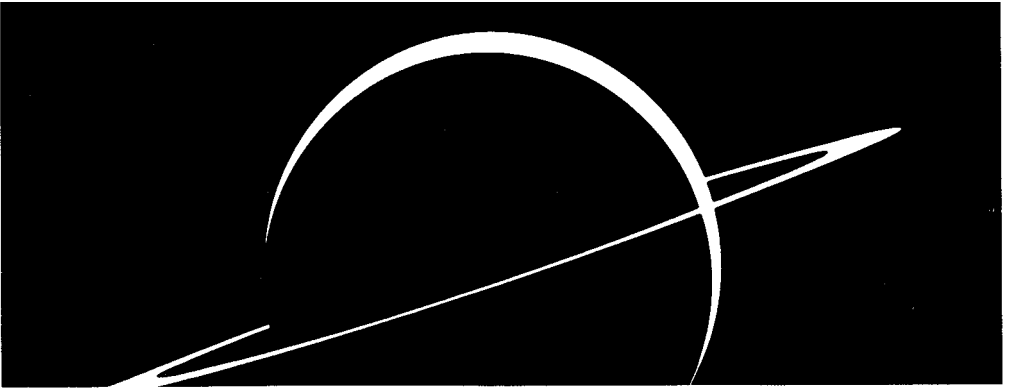

# ZANUSSI

The appliance of science

IAZ International (UK) Ltd., Zanussi House, Reading.

The information in this manual is correct at time of going to press.

Zanussi reserve the right to alter specifications without notice.

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>