 


ZANUSSI

TUMBLE DRYER TDS 383 W

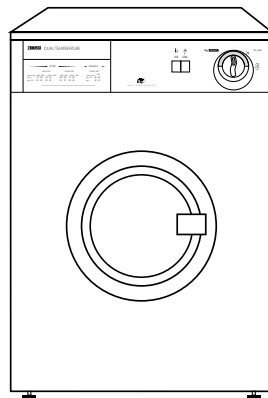



Important Safety Information

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.

These warnings have been provided in the interest of safety. You **MUST** read them carefully before installing or using the appliance.

Installation

- This appliance is heavy. Care should be taken when moving it.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.
- If the tumble dryer is placed on top of a washing machine, it is compulsory to use the stacking kit (optional accessory).
- This tumble dryer is designed to be vented through to the open air. It should have its own ventilation system which should not be joined with any other ventilation system connected to any other appliance.

Child Safety

- This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the product.
- Pets and children have been known to climb into tumble dryers. Please check your drum before use.
- Keep all packaging well away for children.

Use

- Do not overload the appliance (see programme chart).
- Clothes which are dripping wet should not be placed in the dryer.
- As some bulky items such as duvets and eiderdowns should be dried in large commercial machines because of their bulk, check with the manufacturer of the item if it is suitable for drying in a domestic machine, even if the dry weight of the item is within the limit advised.
- Please make sure that no gas lighters have accidentally been left in pockets of garments to be loaded into appliance.
- **Danger of explosion:** Never tumble dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). As these substance are volatile, they could cause an explosion. Tumble dry only items washed with water.
- In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items:
 - Cushions, quilts and the like (these items accumulate heat).
 - Items containing rubber foam or materials similar to rubber foam.
 - Leave the door slightly ajar when the appliance is not being used. This will allow the seal to be preserved.
 - Clean fluff filter after using tumble dryer. To prevent fire risks, do not use the appliance if the fluff filter is damaged.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Zanussi Service Centre. Always insist on genuine Zanussi spare parts.

Contents

For the User

| | |
|-------------------------------------|-------|
| Important Safety Information | 2 |
| ■ Installation | 2 |
| ■ Child Safety | 2 |
| ■ Use | 2 |
| Your New Tumble Dryer | 4 |
| Description of the Appliance | 5 |
| The Control Panel | 6 |
| ■ Buttons | 6 |
| ■ Mains-on light | 6 |
| ■ Time selector dial | 6 |
| Programme Chart | 7 |
| Operating Sequence | 8 |
| ■ Load the laundry | 8 |
| ■ Select the option | 8 |
| ■ Select the drying time | 8 |
| ■ When drying is completed | 8 |
| Hints & Tips on Drying | 9 |
| Maintenance and Cleaning | 10 |
| ■ External cleaning | 10 |
| ■ Cleaning the door | 10 |
| ■ Cleaning fluff filter | 10 |
| Something Not Working | 11 |
| Service and Spare Parts | 11 |
| Customer Care | 11 |
| Guarantee Conditions | 12 |
| Zanussi Service Force | 13-14 |

For the Installer

| | |
|-------------------------------------|-------|
| Installation Instructions | 15 |
| Technical Specifications | 15 |
| ■ Positioning | 16 |
| ■ Fitting the vent hose | 16-17 |
| ■ Door reversal | 18 |
| ■ Stacking kit (optional accessory) | 18 |
| ■ Electrical connection | 19 |

Guide to use the Instruction Book

The following symbols will be found in the text to guide you throughout the instructions:



Safety instructions



Hints and tips



Environmental information

Your New Tumble Dryer

This tumble dryer will give your wash that soft, relaxed feel whatever the weather.

Extremely high quality standards both during development and manufacturing guarantee a long service life for your appliance.

Maximum economy in the operation of your dryer is achieved through very frugal electricity consumption and short drying times.


Energy saving tips

To save energy we recommend that you follow these hints:

- Try to load the maximum capacity of the machine as small loads are **uneconomical**.
- Always load well spun laundry. The higher the spin speed, the lower the electricity consumption and the shorter the drying times.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Clean the filter regularly to avoid excessive drying times and high electricity consumption.
- Ventilate the room well. The room temperature should not exceed +35°C during drying.



 
In the interest of the environment

- Materials marked with the symbol  are recyclable.
- Check with your local Council or Environmental Health Office to see if there are facilities in your area for re-cycling this appliance.
- When the appliance is to be scrapped, cut off the power supply cable and make the door closing device unusable to prevent young children from being trapped inside.
- Help to keep your country tidy - use authorised disposal sites for your old appliance.


How do we help to protect the environment? We use recycled paper!

Description of the Appliance


- 1 Top cover
- 2 Programme chart
- 3 Low Temperature Button
- 4 Cool Tumbling Button
- 5 Mains-On Light
- 6 Drying Time Selector Dial
- 7 Rating Plate
- 8 Fluff filter
- 9 Door Handle
- 10 Adjustable feet

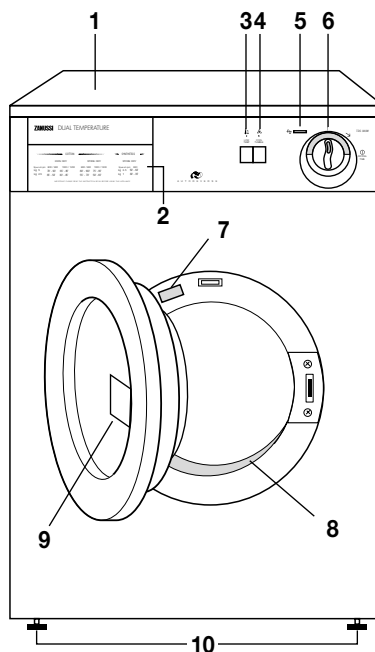

 - 11 Side vent outlet
- 12 Ring nut
- 13 Rear vent outlet

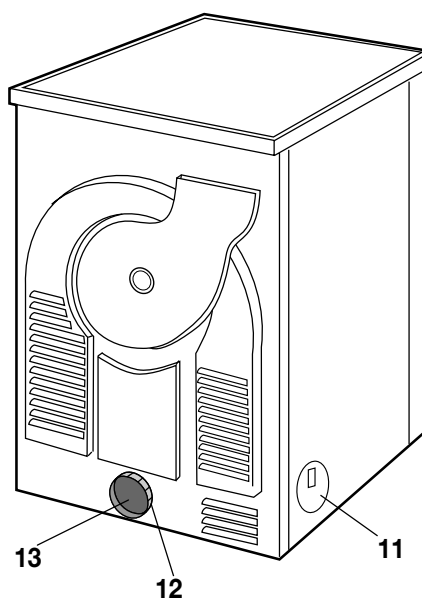

The Control Panel

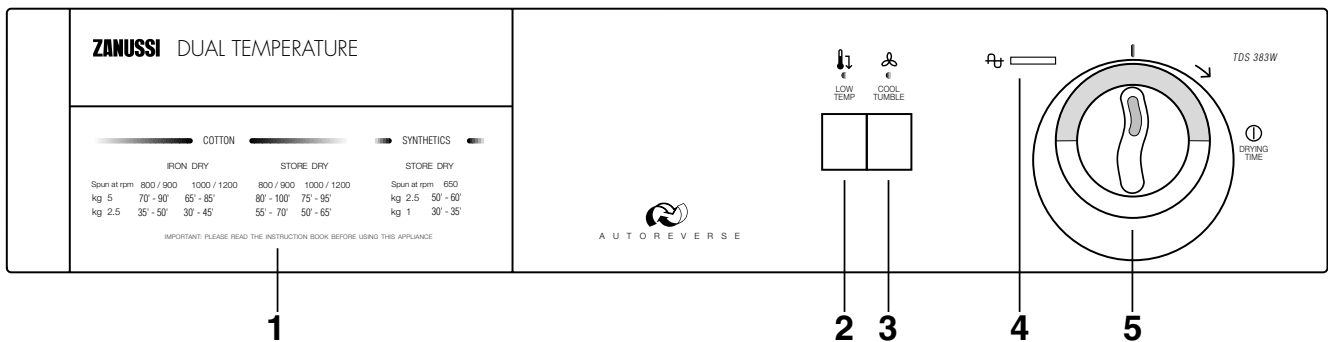 

1 Programme Chart

This will help you to select the correct time for drying.

2 Low Temperature Button

Press this button to reduce the temperature when drying particularly delicate cotton or linen items. In this case you should select a longer drying time. On the programmes for synthetics the temperature is automatically reduced. Therefore it is not necessary to depress this button.

3 Cool Tumble Button

By depressing this button the heat is cut off. This is particularly useful to freshen the laundry (e.g. to remove a persistent odour of moth-balls). Select 20-30 mins max.

4 Mains-On Light

 
This lights up when the machine starts operating and goes out at the end of the programme.

5 Drying Time Selector Dial

The selector dial incorporates two drying cycles, one of up to 120 minutes at a high temperature for cotton and linen, and one of up to 80 minutes at a low temperature for synthetic fabrics.

To set the machine to the selected time, turn the dial **clockwise** until the time you want coincides exactly with the pointer.

NEVER attempt to turn the dial in an anticlockwise direction.

When selecting the drying time, you should remember that it includes a 10 minute cooling phase (position  on the dial).

This phase should not be shortened, stopped or avoided, as this could cause skin burns or damages to the laundry.

Programme Chart

Cotton and linen

Selector dial: up to 120 minutes

| Type of laundry: | Degree of drying | Amount of laundry in kg | Drying time in minutes for laundry spun at | |
|----------------------------------------------------------------------------------------|-----------------------------------------------------------|-------------------------|--------------------------------------------|---------------|
| | | | 800/900 rpm | 1000/1200 rpm |
| Cotton Towelling Shirts Sheets Hand towels Tablecloths Table napkins | Store dry (wardrobe dry) | 5 | 80-100 | 75-95 |
| | | 2.5 | 55-70 | 50-65 |
| | Iron dry (not completely dry; suitable for ironing) | 5 | 70-90 | 65-85 |
| | | 2.5 | 35-50 | 30-45 |

ATTENTION! If you are drying delicate cotton, select the 'low temperature' option

Synthetics

Selector dial: up to 80 minutes

| Type of laundry: | Degree of drying | Amount of laundry in kg | Drying time in minutes for laundry spun at a minimum speed of 650 rpm |
|--------------------------------------------------------------------------------------|------------------|-------------------------|-----------------------------------------------------------------------|
| Synthetics or mixed fabrics which do not require ironing. | Store dry | 2.5 | 50-60 |
| | | 1 | 30-35 |
| Synthetics or mixed fabrics which have to be ironed. (Please see labels on items) | Iron dry | 2.5 | 40-50 |
| | | 1 | 25-30 |

 
ATTENTION! Please follow the instructions on labels when drying mixed fabrics.

Operating Sequence

Before using your tumble dryer for the first time, we recommend to place a few damp cloths inside the appliance and dry for approximately 20 minutes. There may be dust inside a brand new tumble dryer.


1. Load the laundry

Open the door by pulling the door handle forwards. Load the items one at a time, shaking them out loosely and close the door. Please check the laundry does not get caught between the door and filter.

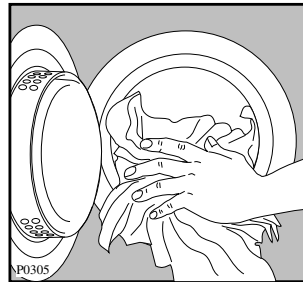


2. Select the required option

 Depress Low Temp. or Cool Tumble Button depending on the fabrics you have to dry.

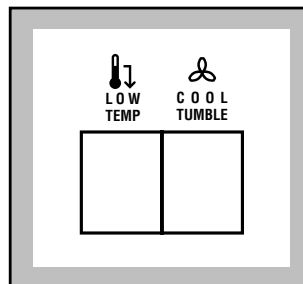

3. Select the drying time

 Turn the selector dial clockwise to the desired time (in the high or low temperature range, according to the fabrics). The mains-on light illuminates and the programme starts.

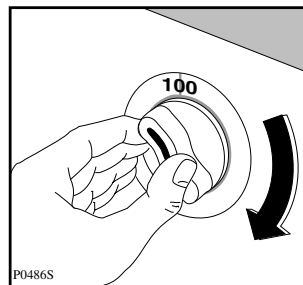

4. When drying is completed





The machine stops automatically and the mains-on light goes out. Release button ↓ or ↻, if depressed. Open the door and take out the laundry.

Clean the filter after every drying programme. A clean filter ensures correct functioning of the appliance.

Hints & Tips on Drying

Before placing articles of laundry in your tumble dryer, check the care labels to ensure they are recommended for tumble drying.

Care Labels you may find on your laundry

-  normal drying (high temperature)
-  delicate drying (low temperature)
-  may be tumble dried
-  do not tumble dry

 **Do not overload the appliance.**

Here is a list of the approximate weight of some common laundry items.

| | |
|------------------|----------------|
| Sheet | 700 to 1000 g |
| Pillowcase | 100 to 200 g |
| Tablecloth | 400 to 500 g |
| Table Napkin | 50 to 100 g |
| Kitchen Towel | 70 to 120 g |
| Linen Hand Towel | 100 to 150 g |
| Hand Towel | 150 to 250 g |
| Bath Towel | 700 to 1000 g |
| Bathrobe | 1000 to 1500 g |
| Shirt | 200 to 300 g |
| Apron | 150 to 200 g |

- Always load well spun laundry. The higher the spin speed the lower the electricity consumption and the shorter the drying time.
- DO NOT load dripping wet laundry into the dryer. Roll the article in a towel or spin to remove excess water.
- Close poppers and zips and fasten any buttons.
- Sort the laundry. Separate synthetics from cotton/linens, and dry separately.
- Remove the laundry immediately after the programme has finished.
- Use a fabric conditioning sheet to reduce static. We recommend the sheet is pinned to an article of laundry (using a safety pin).
- Mix the load i.e. large and small articles.
- When drying large items such as sheets, we recommend you periodically stop the dryer to redistribute the load.

DO NOT use the tumble dryer to dry the following:

- Articles contaminated with inflammable substances e.g. petrol, cleaning solvents, cooking oil, fats or hair lacquer.
- Woollen and synthetic/wool mixtures unless the item is labelled as suitable for tumble drying.
- Very delicate articles such as silk.
- Very large and bulky items such as duvets or sleeping bags.

Maintenance and Cleaning

You must **disconnect** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

External cleaning

 
Use only soap and water and then dry thoroughly. From time to time, apply a little wax furniture cream with a soft cloth.

Important: do not use methylated spirit, diluents or similar products.

Cleaning the door

Clean periodically the interior part of the door to remove any fluff.

Accurate cleaning ensures correct drying.

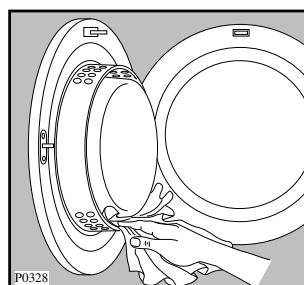


Cleaning the filter

Your dryer will only function well if the filter is clean. The filter collects all the fluff which accumulates during drying and it must therefore **be cleaned at the end of each programme, before removing the laundry**, with a damp cloth.

The filter cannot be removed.

 Do not be alarmed by the amount of fluff. It is not due to excessive wear caused by the dryer. All fabric loses fluff when drying but it goes un-noticed in the air. In a tumble dryer it simply collects in the filter.

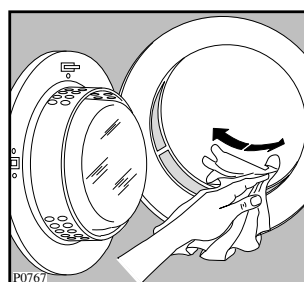

Something Not Working

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

IMPORTANT: if you call out an engineer to a fault listed below, or to repair a fault caused by incorrect use or installation, a charge will be made even if the appliance is under guarantee.

| Symptom | Possible causes |
|------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The tumble dryer does not start | <ul style="list-style-type: none"> ■ The door has not been closed. ■ The plug is not properly inserted in the power socket. ■ There is no current at the socket ■ The main fuse or the fuse in the plug has blown. ■ A drying time has not been selected. |
| Drying takes too long or laundry is not dry enough. | <ul style="list-style-type: none"> ■ The laundry has not been spun properly. ■ The filter is clogged up. ■ The room temperature is too high. ■ The selected time or cycle was not suitable for the laundry ■ There is too much laundry inside the appliance. ■ The dryer is not correctly installed. ■ The Low Temperature or Cool Tumble Button has been depressed. |

If after the above checks, there is still a fault, call your local Zanussi Service Force Centre.

Service & Spare Parts

In the event of your appliance requiring service, or if you wish to purchase spare parts, please contact your local Zanussi Service Force Centre by telephoning:

 
0870 5 929929

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

The addresses are listed on the following pages. Before calling out an engineer, please ensure you have read the details under the heading "Something Not Working".

When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code
2. Your telephone number
3. Clear and concise details of fault
4. The model and serial number of the appliance (found on the rating plate - see picture).
5. The purchase date

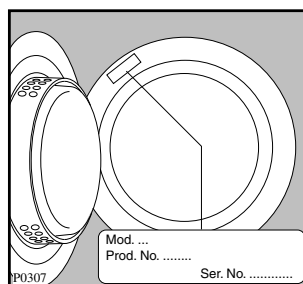

Customer Care

For general enquiries concerning your Zanussi appliance or for further information on Zanussi products, please contact our Customer Care Department by letter or telephone as follows:

Customer Care Department

Zanussi

55-77 High Street

Slough

Berkshire

SL1 1DZ

Tel 08705 727727*

or visit our website at www.zanussi.co.uk

* calls to this number may be recorded for training purposes.

Guarantee Conditions

Standard guarantee conditions

We, Zanussi undertake that if, within 12 months of the date of the purchase, this Zanussi appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same **FREE OF ANY CHARGE** for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with, by any person not authorised by us.

All service work under this guarantee must be undertaken by a Zanussi Service Force Centre.

Any appliance or defective part replaced shall become the Company's property.

This guarantee is in addition to your statutory and other legal rights.

Home visits are made between **8.30am** and **5.30pm** Monday to Friday. Visits may be available outside these hours in which case a **premium** will be charged.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Zanussi manufacture which are **NOT** marketed by Zanussi.

European guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.
- The guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

| | | |
|---------|-----------|---------------------|
| France | Senlis | +33 (0)344 62 22 22 |
| Germany | Nurnberg | +49 (0)911 323 2600 |
| Italy | Pordenone | +39 (0)1678 47053 |
| Sweden | Stockholm | +46 (0)8 738 79 50 |
| UK | Slough | +44 (0)1753 219897 |




To contact your local Zanussi Service Force Centre telephone **08705 929 929**

| | | | | | |
|------------------------------|-----------------------------------------------------------------------------------------------------------------|-------------------------------|--------------------------------------------------------------------------------------------|---------------------------------|----------------------------------------------------------------------------------------------------|
| CHANNEL ISLANDS | | ORKNEY (M65) | Corsie Domestics 7 King Street Kirkwall Orkney KW15 | NORTH EAST | |
| GUERNSEY | Guernsey Electricity PO Box 4 Vale, Guernsey Channel Islands | PERTH | Hydro Electrical Inveralmond House Ruthvenfield Road Perth PH1 3AQ | GATESHEAD (M39) | Unit 356a Dukesway Court Dukesway Team Valley Gateshead NE11 0BH |
| JERSEY | Jersey Electricity Company PO Box 45 Queens Road St Helier Jersey Channel Islands JE4 8NY | PERTH | Graham Begg Unit 4 Airport Ind Estate Wick KW1 4QS | GRIMSBY (M42) | 15 Hainton Avenue Grimsby South Humberside DN32 9AS |
| SCOTLAND | | (OWN SALES) | | HULL (M41) | Unit 1 Boulevard Industrial Estate Hull HU3 4AY |
| ABERDEEN (M05) | 54 Claremont Street Aberdeen AB10 6RA | SHETLAND | Tait Electronic Systems Ltd Holmsgarth Road Lerwick Shetland ZE1 0PW | LEEDS (M37) | 64-66 Cross Gates Road Leeds LS15 7NN |
| AUCHTERMUCHY (M03) | 33a Burnside Auchtermuchy Fife KY14 7AJ | (OWN SALES) | | NEWTON AYCLIFFE (M45) | Unit 16 Gurney Way Aycliffe Industrial Estate Newton Aycliffe DL5 6UJ |
| BLANTYRE (M07) | Unit 5 Block 2 Auchenraith Ind. Estate Rosendale Way Blantyre G72 0NJ | WHALSAY | Leask Electrical Harisdale Symbister, Whalsay Shetland ZE2 9AA | SHEFFIELD (M38) | Pennine House Roman Ridge Ind. Roman Ridge Road Sheffield S9 1GB |
| DUMFRIES (M01) | 93 Irish Street Dumfries Scotland DG1 2 PQ | NORTHERN IRELAND | | NORTH WEST | |
| DUNOON (M67) | Brair Hill 7 Hill Street Dunoon Argyll PA23 7AL | BELFAST (M27) | Owenmore House Kilwee Business Park Upper Dunmury Lane Belfast BT17 0HD | BIRKENHEAD (M11) | 1 Kelvin Park Dock Road Birkenhead L41 1LT |
| GLASGOW (M04) | 20 Cunningham Road Clyde Estate Rutherglen Glasgow G73 1PP | WALES | | CARLISLE (M10) | Unit 7 James Street Workshops James Street Carlisle Cumbria CA2 5AH |
| INVERNESS (M06) | Unit 3B Smithton Ind. Estate Smithton Inverness IV1 AJ | CARDIFF (M28) | Guardian Industrial Estate Clydesmuir Road Tremorfa Cardiff CF2 2QS | ISLE OF MAN (M64) | South Quay Ind. Estate Douglas Isle of Man IM1 5AT |
| ISLE OF ARRAN | Arran Domestics Unit 4 The Douglas Centre Brodict Isle of Arran KA27 8AJ | CLYWD (M14) | Unit 6-7 Coed – Parc Abergele Road Rhuddlan Clwyd Wales LL18 5UG | LIVERPOOL (M15) | Unit 1 Honeys Green Precinct Honeys Green Lane Liverpool L12 9JH |
| (OWN SALES) | | DYFED (M77) | Maes Y Coed High Mead Llanybydder Carmarthenshire SA40 9UL | MANCHESTER (M09) | Unit B Central Industrial Estate St Marks Street Bolton BL3 6NR |
| ISLE OF BARRA | J Zarfah 244 Bruernish Isle of Barra Western Islands HS9 5QY | HAVERFORDWEST (M75) | Cromlech Lodge Ambleton Haverfordwest Pembrokeshire SA62 5DS | PRESTON (M13) | Unit 250 Dawson Place Walton Summit Bamber Bridge Preston Lancashire PR5 8AL |
| (OWN SALES) | | OSWESTRY (M17) | Plas Ffynnon Warehouse Middleton Road Oswestry SY11 2PP | STOCKPORT (M16) | Unit 20 Haigh Park Haigh Avenue Stockport SK4 1QR |
| ISLES OF BUTE | Walker Engineering Glenmhor Upper Serpentine Road Rothesay Isle of Bute PA20 9EH | | | | |
| ISLE OF LEWIS | ND Macleod 16 James Street Stornoway Isle of Lewis PA87 2QW | | | | |
| KELSO (M08) | 2-8 Wood Market Kelso Borders TD5 7AX | | | | |

To contact your local Zanussi Service Force Centre telephone **08705 929 929**


| | | | | | |
|----------------------------|----------------------------------------------------------------------------------------------|---------------------------------|------------------------------------------------------------------------------|----------------------|------------------------------------------------------------------------------------------------|
| MIDLANDS | | LONDON & EAST ANGLIA | | SUNBURY (M63) | Unit 1a The Summit Hanworth Road Hanworth Ind. Estate Sunbury on Thames TW16 5D |
| BIRMINGHAM (M18) | 66 Birch Road East Wyrley Road Ind. Estate Witton Birmingham B6 6DB | BECKENHAM (M79) | 11a Gardener Ind. Estate Kent House Lane Beckenham Kent BR3 1QZ | SOUTH EAST | |
| BOURNE (M44) | Manning Road Ind. Estate Pinfold Road Bourne PE10 9HT | CHELMSFORD (M47) | Hanbury Road Widford Ind. Estate Chelmsford Essex CM12 3AE | ASHFORD (M58) | Unit 2 Bridge Road Business Est. Bridge Road Ashford Kent TN2 1BB |
| BRIDGNORTH (M72) | 68 St. Mary's Street Bridgnorth Shropshire WV16 4DR | COLINDALE (M53) | Unit 14 Capitol Park Capitol Way Colindale London NW9 0EQ | FLEET (M59) | Unit 1 Redsfield Ind. Estate Church Crookham Fleet Hampshire GU13 0RD |
| GLOUCESTER (M23) | 101 Rycroft Street Gloucester GL1 4NB | ELTHAM (M78) | 194 Court Road Mottingham Eltham London SE9 4EW | HAYWARDS HEATH (M55) | 21-25 Bridge Road Haywards Heath Sussex RH16 1UA |
| HEREFORD (M31) | Unit 3 Bank Buildings Cattle market Hereford HE4 9HX | ENFIELD (M49) | 284 Alma Road Enfield London EN3 7BB | SOUTH WEST | |
| HIGHAM FERRERS (M51) | 30 High Street Higham Ferrers Northants NN10 8BB | GRAVESEND (M57) | Unit B4 Imperial Business Estate Gravesend Kent DA11 0DL | BARNSTAPLE (M30) | Main Road Fremington Barnstaple North Devon EX31 2NT |
| ILKESTON (M43) | Unit 2 Furnace Road Ilkeston DE7 5EP | HARPENDEN (M46) | Unit 4 Riverside Estate Coldharbour Lane Harpenden AL5 4UN | BOURNEMOUTH (M26) | 63-65 Curzon Road Bournemouth Dorset BH1 4PW |
| LEICESTER (M22) | Unit 7 Oaks Ind. Estate Coventry Road Narborough Leicestershire LE0 5GF | LETCHWORTH (M50) | 16-17 Woodside Ind. Estate Works Road Letchworth Herts SG6 1LA | BRIDGEWATER (M35) | 6 Hamp Ind. Estate Bridgewater Somerset TA6 3NT |
| LINCOLN (M40) | Unit 8 Stonefield Park Clifton Street Lincoln LN5 8AA | LONDON (M76) | 2/4 Royal Lane Yiewsley West Drayton Middlesex UB7 8DL | BRISTOL (M25) | 11 Eldon Way Eldonwall Trading Bristol Avon BS4 3QQ |
| NEWCASTLE UNDER LYME (M12) | 18-21 Croft Road Brampton Ind. Estate Newcastle under Lyme Staffordshire ST5 0TW | MAIDENHEAD (M60) | Reform Road Maidenhead Berkshire SL6 8BY | EMSWORTH (M33) | 266 Main Road Southbourne Emsworth PO10 8JL |
| REDDITCH (M20) | 13 Thornhill Road North Moons Moat Redditch Worcestershire B98 9ND | MOLESEY (M61) | 10 Island Farm Avenue West Molesey Surrey KT8 2UZ | ISLE OF WIGHT (M34) | Unit 8 Enterprise Court Ryde Business Park Ryde Isle of Wight PO33 1DB |
| TAMWORTH (M19) | Unit 3 Sterling Park Claymore Tamworth B77 5DO | NEWBURY (M24) | 9 Pipers Court Berkshire Drive Thatcham Berkshire RG19 4ER | NEWTON ABBOT (M29) | Unit 2 Zealley Ind. Estate Kingsteignton Newton Abbot S. Devon TQ12 3TD |
| WORCESTER (M73) | Units 1 & 2 Northbrook Close Gregorys Mill Ind. Estate Worcester WR3 8BP | IPSWICH (M48) | Unit 6C Elton Park Business Centre Hadleigh Road Ipswich IP2 0DD | REDRUTH (M36) | Unit 7D Pool Ind. Estate Wilson Way Redruth Cornwall TR15 3QW |
| | | NORWICH (M52) | 2b Trafalgar Street Norwich NR1 3HN | | |

Installation Instructions

-  It is dangerous to alter the specifications or attempt to modify this product in any way.
-  Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
-  Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

Technical Specifications

| | | |
|----------------------------------------------|-----------------------------|-------------------------------------------------|
| DIMENSIONS | Height Width Depth | 85 cm (33.5") 60 cm (23.6") 57 cm (22.4") |
| POWER SUPPLY VOLTAGE TOTAL POWER ABSORBED | | 230-240 V/50 Hz 2650 W (13A) |
| MAXIMUM RECOMMENDED LOAD | Cotton, linen Synthetics | 5 kg (11 lbs) 2.5 kg (5 lbs) |
| DRUM VOLUME | | 108 l |

-  This appliance complies with the following E.E.C. Directives:
- 73/23 EEC of 19.2.73 (Low Voltage Directive) and subsequent modifications;
 - 89/336 EEC of 3.5.89 (Electromagnetic Compatibility Directive) and subsequent modifications.

Positioning

It is recommended that, for your convenience, the machine is positioned close to your washing machine. Whilst drying, the tumble dryer will expel a certain amount of warm, very moist air, and this should be removed from the room as quickly as possible to prevent condensation. In an extremely well ventilated room or close to an open window, this may occur naturally.

However, in general, it is better to carry the dryer's exhaust outside via a 100 mm diameter flexible hose (supplied with the machine); ending either temporarily at an open window, or permanently at a fixed ventilation grille, fitted to an exterior wall or window.

The tumble dryer must be installed in a clean place, where dirt does not build up.

Make sure there are no obstructing items or material near the air-intake louvres provided at the back (e.g. paper, rags etc.).

To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the two adjustable feet at the front of the machine until it is.

The feet must never be removed.

Do not restrict the floor clearance through deep-pile carpets, strips of wood or similar. This might cause heat build-up which would interfere with the operation of the appliance.

Important

 
 
 
When operating the tumble dryer, the room temperature must not exceed 35°C, as it may affect the performance of the appliance.

Fitting the vent hose


To simplify the installation, there is a choice of vent outlets: one at the back, the others in the left and right-hand side.

Connect the hose to whichever is the more convenient by pulling the ring nut (A) from the vent outlet at the back, screwing it on to the hose and pushing it firmly back into place.

The unused vents should now be sealed with the special snap covers provided.

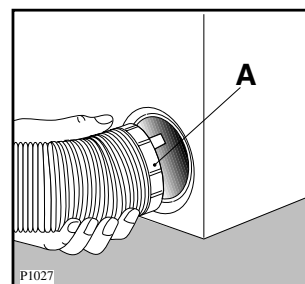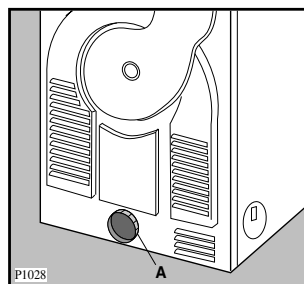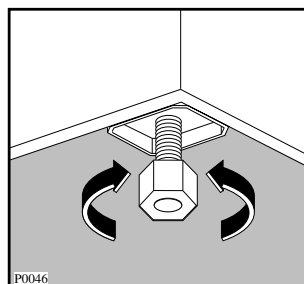

 
Advice: If the hose is long and the room temperature low, the moisture might condense to water inside the hose. **This is an unavoidable natural phenomenon.** To prevent this water from lying in the hose or flowing back into the tumble dryer, it is advisable to drill a small hole (dia. 3 mm) in the lowest point of the hose and to place a small container below it. (See picture, point B).

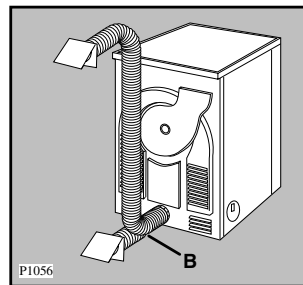

Once connected to the dryer, run the vent hose to the desired outlet point, ensuring that the run's overall length is less than 2 m, and that it contains no more than two bends. As to the outlet itself, if you have decided on a fixed wall/window grille, a good local builder's merchant should be able to supply you with the necessary fittings and installation advice.



 It is important not to connect the vent hose to, for example, a cooker hood, or a chimney or flue pipe designed to carry the exhaust from a fuel burning appliance.

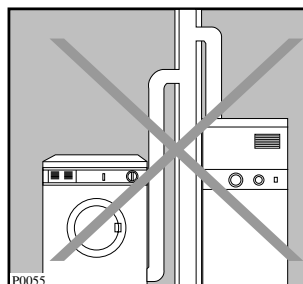

Note that to avoid condensation problems, it is essential that the dryer be fitted with the flexible hose to carry its "exhaust" at least beyond the kitchen units; preferable outside the kitchen.

In order to prevent the appliance from overheating, it is important that the steam exhaust is unobstructed. Therefore, in case of a permanent hose fitted to an exterior wall or ceiling, it must be ensured an exhaust capacity of at least 150 m³/h.

If the dryer is fitted next to kitchen units, make sure that the vent hose is not squashed. If the hose is partially squashed, drying efficiency will be reduced, resulting in longer drying times and higher energy consumption.

If the hose is completely squashed, the safety cut-outs with which the machine is fitted may operate.

 
 
Door reversal

To make it easier to load or unload the laundry the door can be reversed.

This operation must be carried out by qualified personnel.


Operate as follows:

- Remove the door by unscrewing the two screws (1) fastening the hinge to the cabinet (Fig. A).
- Remove the safety catch (2) and the plug (3) by bending the two fastening tags (Fig. A).
- Refit the safety catch (2) and plug (3) on the door by reversing their positions (Fig. B).
- Remove the plastic plate (4) by unscrewing the two fastening screws (Fig. A).
- Refit the plastic plate (4) on the opposite side (Fig. B).
- Refit the door by screwing in the two screws (1) which fasten the door to the cabinet (Fig. B).

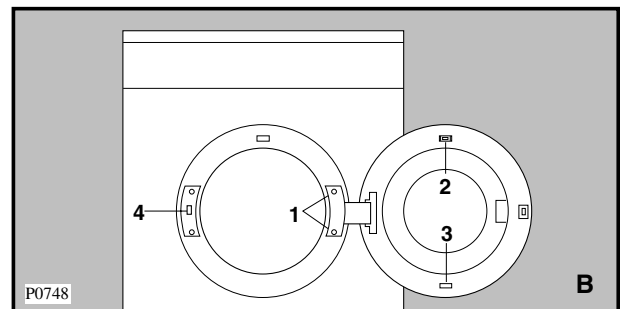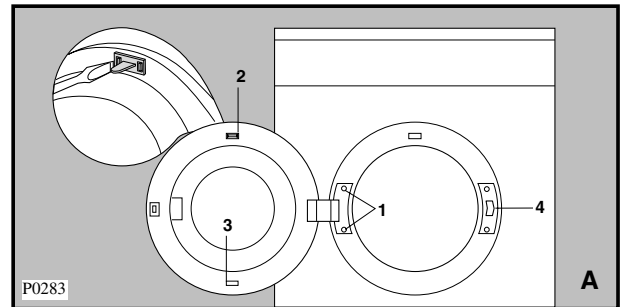

Stacking kit

 A special stacking kit is available through your dealer, to enable the mounting of the dryer on top of your washing machine.

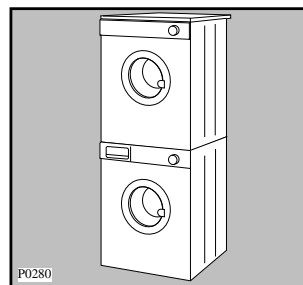

Electrical connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



WARNING: THIS APPLIANCE MUST BE EARTHED.

The manufacturer declines any liability should this safety measure not be observed.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. (See picture).

The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS1362) fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below.

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow - Earth

Blue - Neutral

 
 
Brown - Live

The wire coloured green and yellow must be connected to the terminal marked with the letter «E» or by the earth symbol \perp or coloured green and yellow.

The wire coloured blue must be connected to the terminal «N» or coloured black.

The wire coloured brown must be connected to the terminal marked «L» or coloured red.

Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.

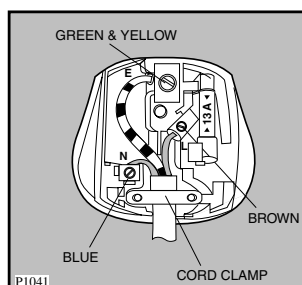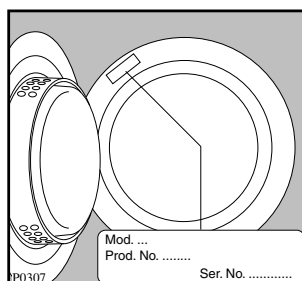

WARNING:

A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut off plug is disposed of safely.

Permanent connection

In the case of permanent connection it is necessary that you install a double pole switch between the appliance and the electricity supply (mains), with a minimum gap of 3mm between the switch contacts and of a type suitable for the required load in compliance with the current electrical regulations.

The switch must not break the yellow and green earth cable at any point.

 **From the Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>