

INSTRUCTION BOOKLET

ZANUSSI

(P.N.C. 9118

DISHWASHER
ZT 605

CONTENTS

Warnings	page	3
Installation	page	4
Positioning, levelling, adjusting the worktop , water outlet connection	page	4
Electrical connection	page	4
Use	page	5
Use of rinse aid, use of detergent	page	6
Loading the machine, use of the lower basket, use of the upper basket.	page	7
Adjusting the height of the upper basket	page	8
Helpful hints.	page	8
Washing programmes	page	9
Operating sequence	page	10
Maintenance and cleaning	page	11
Cleaning the central filters, cleaning the large filter, internal and external cleaning	page	11
Servicing	page	13
Building-in	page	14

TECHNICAL SPECIFICATIONS

DIMENSIONS	Width	cm 59.6
	Height	cm 82
	Max depth	cm 55.5
	Max depth with door open	cm 115
ELECTRICAL CONNECTION	Voltage	240 V / 50 Hz
POWER OF HEATING ELEMENT		1900 W
OVERALL POWER		2100 W
WATER SUPPLY PRESSURE	minimum	7 psi - 49 KN/cm ²
	maximum	110 psi - 758 KN/cm ²
CAPACITY (STANDARD IEC PLACE SETTINGS)		12
CONSUMPTION:	Water	22 lt
	Electricity	1.5 kWh

WARNINGS

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is left with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.

These warnings are provided in the interest of safety. You must read them carefully before installing or using the appliance.

- If the appliance is supplied with obvious damage, consult the supplier before installing it.
 - Any plumbing and electrical work required to install this appliance should be carried out by qualified technicians.
 - This appliance is designed to be operated by adults.
 - Care must be taken to ensure that the appliance does not stand on the electrical supply cable or on the water inlet and drain hoses.
 - Zanussi dishwashers are designed to be used for washing normal household utensils. Items that are contaminated by petrol, paint, steel or iron debris, corrosive, acidic or alkaline chemicals are not to be washed in a dishwasher.
 - Under no circumstances should you open the door whilst the appliance is in operation. Always turn off the appliance before opening the door. However, the dishwasher features a special safety device which cuts off the water inlet, should the door be accidentally opened, thus avoiding water leaks.
 - Never touch the heating element during or immediately after the end of the washing cycle.
 - When finishing loading or unloading close the door, as an open door can be a hazard.
 - It is dangerous to lean or to sit on the dishwasher door: the appliance could tip over.
 - Built-in dishwashers only: the appliance must be secured to the underside of the worktop using the brackets provided. Failure to do this could result in an unstable appliance which may cause damage or injury.
 - Unplug the appliance and turn off the water after use.
- Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunctioning.
 - This appliance should be serviced only by an authorised Zanussi Service Centre.
 - Before disposing of the appliance, disconnect the water hose, cut the electrical cable and ensure that the door cannot close.

For proper disposal of the appliance, contact your local waste collection service.

INSTALLATION

Remove all packaging before positioning the machine.

Positioning

If possible, position the machine next to a water tap and a drain.

The sides and the back of the dishwasher can rest against the adjacent furniture or the wall.

The dishwasher features fill and drain hoses which can be turned either to the left or the right to suit the installation.

Levelling

Good levelling is essential for correct closure and sealing of the door.

Loosen or tighten the adjustable support feet, until the machine is perfectly level.

Water Outlet Connection

The end of the drain hose can be connected as follows:
to the sink outlet siphon, securing it if necessary with a clip;

to a wall outlet provided with vent-hole, minimum internal diameter 4 cm;

hooked over the edge of the sink using the special curved plastic guide provided.


The waste connection must be at a height of between 30 cm (minimum) and 100 cm (maximum) from the floor.

It makes no difference which way the drain hose faces, either to the right or left of the dishwasher.

Avoid bending or kinking the hose as this could prevent or slow down the discharge of water.

If you use a drain hose extension it must be no longer than 2 metres and its internal diameter must be no smaller than the diameter of the hose provided.

Likewise the internal diameter of the couplings used for connection to the waste outlet must be no smaller than the diameter of the drain hose.

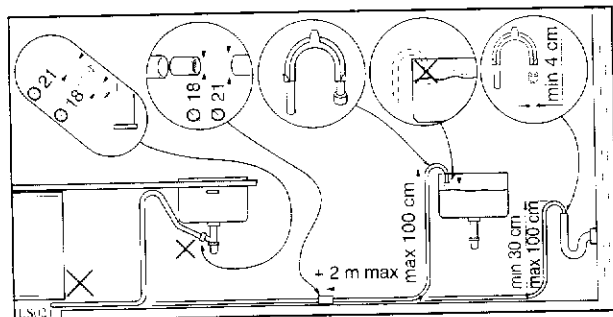


Water Supply Connections

This dishwasher may be fed with either hot (max. 60°C) or cold water.

A hot water supply is not always efficient with very soiled crockery as it shortens the washing programmes a lot.

Feeding the appliance with a hot water supply (max. 60°C) will allow you to obtain considerably shorter programmes.

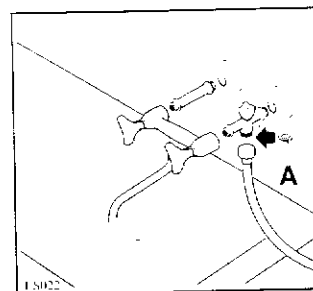


For making the connection itself, the coupling nut fitted to the machine's supply hose is designed to screw onto either a 3/4 inch gas thread spout, or to a purpose made quick-coupling tap such as the Press-Block. To make this easier, the hose itself may

be turned to the left or the right. In either case, be sure to incorporate the strainer (A) supplied with the machine onto the joint. See picture.

The water pressure must be within the limits given in the technical specifications, as it will not function correctly if pressure is outside these specifications.

Caution: the retaining ring must be properly fitted so as to avoid water leaks.

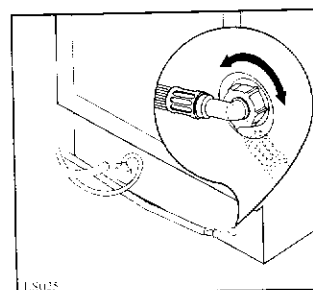

Note: the end of the hose connected to the machine can be positioned as required, by simply slackening the retaining ring.

Re-tighten the ring securely to avoid water leaks.

Avoid bends or kinks in the hose, which could prevent or slow down the flow of water.

If the machine is connected to new pipes or pipes which have not been used for a long time, you are advised to run the water for a few minutes before connecting the inlet hose. This will prevent deposits of sand or rust clogging the inlet hose filter.

Electrical connection

Before plugging the appliance into the wall socket, make sure that:


1. the mains voltage corresponds to the voltage given in the technical specifications;
 2. the meter, fuses, mains power supply and wall socket can all take the maximum load required.
- Make sure that the socket and plug are compatible without having to use any type of adapter. If necessary, have the domestic wiring system socket replaced.

Safety standards require the appliance to be earthed.

The Manufacturer accepts no liability for failure to observe the above safety precautions.

USE

Control panel

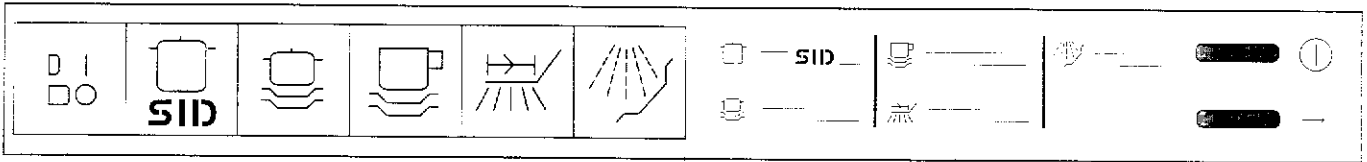

1

2

3

4

5

1. ON/OFF Pushbutton (⏻)

By depressing this pushbutton the MAINS-ON (ⓘ) (4) and the END of programme →| (5) indicator lights illuminate indicating that the washing programme can be selected and started.

2. Programme Selector Buttons

Depress the button corresponding to the desired washing programme (see the washing programme chart).

3. Programme Guide

This is a summary of the washing programme chart to help you to select the correct programme.

4. Pilot Light (ⓘ)

This illuminates when the ON/OFF button (1) is depressed, indicating that the machine is on.

5. End of Programme Indicator Light (→|)

This light illuminates when the programme has finished.

Rinse Aid

The use of this liquid ensures thorough rinsing and spot and streak free drying, making the water run quickly off the dishes for sparkling results. It is automatically added during the hot rinse. The dispenser, which is positioned inside the door, holds about 110 ml of rinse aid, which is sufficient for 16-40 dishwashing programmes, depending upon the dosage setting.

Filling with Rinse Aid

Open the container by turning the lid (A) anticlockwise.

Add rinse aid until the container is completely full (approx. 110 ml). The indicator (B) will be completely dark.

Top up with rinse aid when the indicator (B) becomes clear.


Remember to CLOSE the lid after every refill.

Caution

Clean up any rinse aid spilt during filling with an absorbent cloth to avoid excess foaming during the next wash.

Adjusting the Dose

According to the finish and drying results obtained, adjust the dose of rinse aid by means of the 6 position selector (C) (position 1 - minimum dose, position 6 - maximum dose). Gradually increase the dose if there are drops of water or lime spots on the dishes after washing. Reduce it if there are sticky whitish streaks on the dishes.

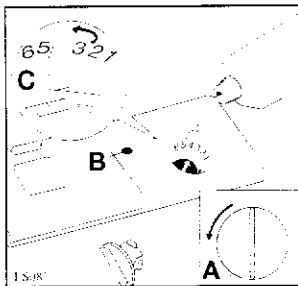


Use of Detergent

Before starting any of the dishwashing programmes, except for the Rinse and Hold programme, load the detergent in the dispenser.

Use only tablets, powder or liquid detergents specifically designed for domestic dishwashers.

Unsuitable detergents (such as those for washing by hand) do not contain the right ingredients for machine washing and hamper correct functioning of the machine.

To open the dispenser lid, pull the catch (D). This will open it.

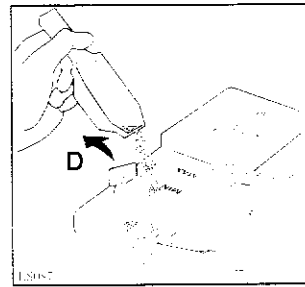

To help you to correctly dose the right amount of detergent, inside the container there are two reference marks:

- MIN = 15 ml
- MAX = 30 ml

The amount of detergent to be used varies depending on how soiled the dishes

are and the type of dishes being washed. We recommend the amounts shown in the programme chart on the next pages.

After filling the dispenser with detergent, close the lid.

At the end of any washing programme the lid is always open, ready for the next wash.

Since not all detergents are the same, you should also consult the instructions on the packet.


Remember that insufficient quantities of detergent will produce poor washing results whereas an excessive amount of detergent does not improve washing results and is also wasteful.

Using no more than the correct amount of detergent also contributes to reducing pollution.

For the INTENSIVE programme

If this programme, suitable for particularly dirty pans and dishes, is selected, an extra 10g (about 1 level dessert spoon) of detergent must be placed in the Super Intensity Dispenser (SID) located in the centre of the upper basket.

Pull out the basket and add the detergent.

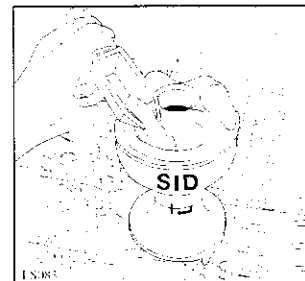

Always place a small amount of detergent (about a tea spoon) in the Super Intensity Dispenser (SID) when you select a programme with prewash, following the instructions given in the Washing Programme chart.

Important: Never use your dishwasher without the SID dispenser. Since SID also ensures correct distribution of the water to the upper spray arm, running the dishwasher without it will impair the washing results.



Loading your Machine

Before placing dishes in the machine, remove any large scraps of food from the plates (small bones, toothpicks, fish bones, scraps of meat and vegetables, fruit skins etc.) to avoid clogging the filters and consequently reducing performance. Open the door and slide out the baskets to load the dishes.

Use of the Lower Basket

The lower basket is designed to take saucepans, lids, plates (up to 27 cm in diameter), salad bowls, cutlery etc.


Serving dishes and large lids should be arranged around the edge of the basket, ensuring that the upper spray arm can turn freely.

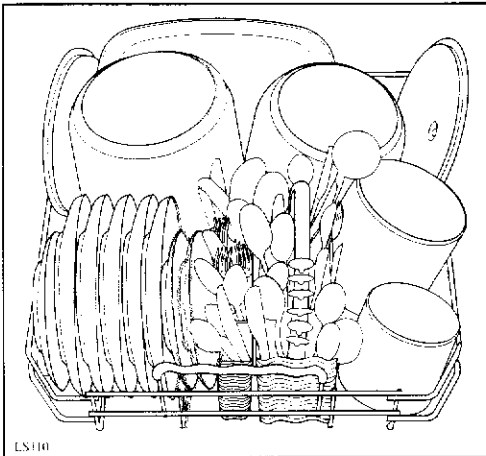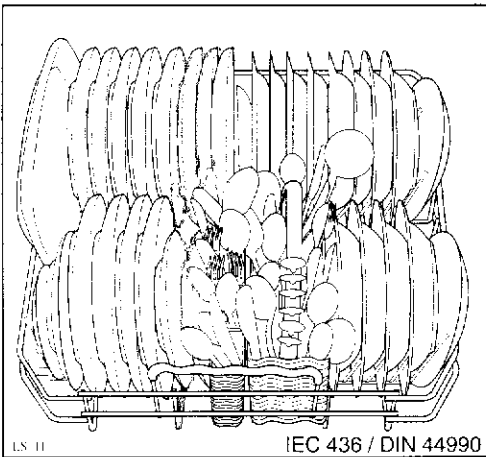


Cutlery should be placed in the removable cutlery basket with the handles facing downwards. If the handles protrude from the bottom of the basket, obstructing the lower spray arm, load the cutlery with the handles facing upward.

Mix spoons with the other cutlery to prevent them sticking together.

Teaspoons may be loaded into the special slots provided in the cutlery basket handle.

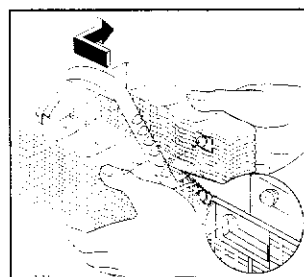

The cutlery basket is in two parts which can be separated to give greater loading flexibility. To separate the two parts, slide them horizontally in opposite directions and pull them apart. To reassemble, reverse the procedure.



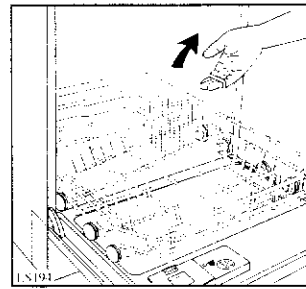


The bottom basket is also equipped with a special rear plate rack, which can be removed to allow more space for saucepans and salad bowls.

Use of the Upper Basket

The upper basket is designed for plates (dessert plates, saucers, dinner plates up to 24.6 cm in diameter), salad bowls, cups and glasses; these should be arranged as shown in the pictures.

Glasses with long stems can be placed upside-down in the raised cup-racks.

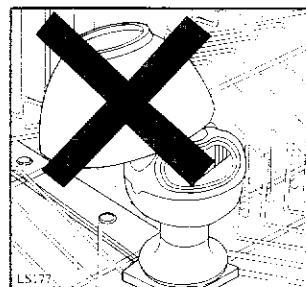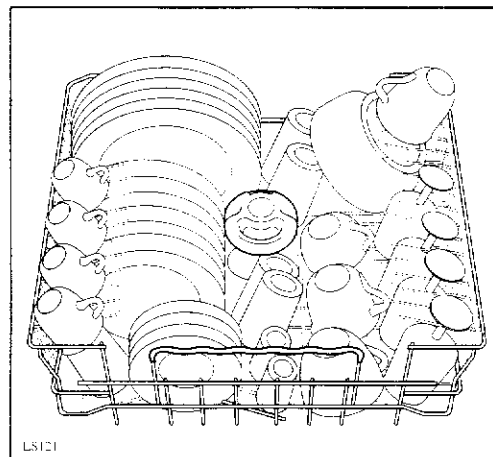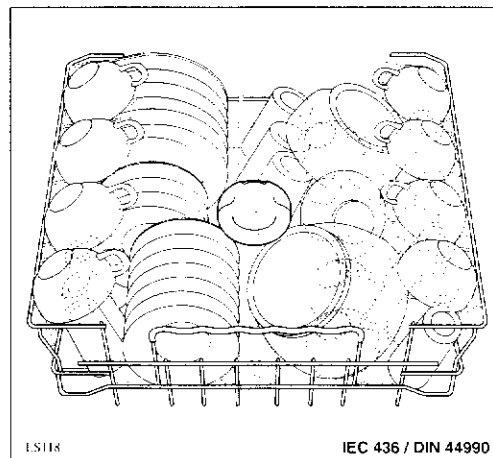


Caution

To ensure proper water distribution to the upper basket, do not place dishes over the hole in the Super Intensity Dispenser in the centre of the basket.

Before closing the door, ensure that the spray arms can rotate freely.

Adjusting the Height of the Upper Basket

If washing very large plates (over 27 cm and up to 31 cm in diameter) you can load them in the lower basket after moving the upper basket to the higher position as follows:

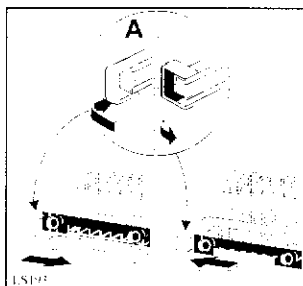

Move the front runner stops (A) of the upper basket outward and slide the basket out.

Refit the basket in the higher position and replace the stops (A) in their original position.

When the top basket is in the higher position it will only take plates up to 20 cm in diameter and you will not be able to use the raised cup racks.

HELPFUL HINTS

For Best Washing Results:

Before loading, remove all scraps of food and soak very heavily soiled pots and pans.

Always arrange saucepans, cups and glasses etc. upside-down.

Tilt items with convex or concave surfaces so that the water drains off easily.

Long items of cutlery such as ladles, carving knives etc. should be positioned horizontally in the upper basket.

Avoid contact between the dishes as far as possible; correct arrangement of the items will give better washing results.

Light items (plastic bowls etc.) should be loaded in the upper basket and arranged so that they do not move during washing.

To Save Energy

Do not prewash dishes under running water.

Place dishes in the machine immediately after every meal and wait until the dishwasher is full before washing.

If necessary run the Rinse and Hold programme (see Programme Chart on the following pages), so that any food scraps do not become caked on the dishes while you are waiting to run the complete wash programme.

Select an ECONOMIC programme when the baskets are not very full and/or when the dishes are not very soiled, following the instructions given in the Programme Chart (55°C programmes, QUICKWASH programme).

You will improve drying results by leaving the dishwasher door ajar for at least 15-30 minutes as soon as the programme finishes.

Items not Suitable for Dishwashers

The following should not be washed in the dishwasher:

Cutlery or dishes with wooden or horn handles or glued parts.

Handmade items, wooden objects, antiques or hand-painted china.

Certain types of decoration can discolour when washed in a dishwasher.

Crystal-ware and plastic objects, if not guaranteed dishwasher-proof, should be washed by hand. You are advised to place them in the upper basket and to select a delicate programme.

Certain types of glass can also become opaque after being washed several times in a dishwasher.

Silver cutlery tends to go black if mixed with steel cutlery. Place it in the cutlery basket separate from the others.



 

 

 

 

Iron and cast iron objects can rust and stain other items.

Aluminium tends to go black; copper, pewter and brass tend to stain.

Caution: You are advised not to load very small items which can fall through the baskets.

Note: When buying new dishes, ensure that they are dishwasher-proof.

WASHING PROGRAMMES

Pro-gramme	Type of load and degree of soil	Recommended programme	Required Pushbuttons	Cycle Description	Recommended quantity of detergent	
					in the dispenser SID	in the Super Intensity Dispenser
1	Heavily soiled crockery, pots, pans and cutlery with big quantity of food scraps	SUPER INTENSIVE SID	 	Prewash at 55°C Main wash at 65°C 2 cold rinses 1 hot rinse at 65°C Hot air drying	2 level dessert spoons (20 g)	1 level dessert spoon (10 g)
2	Normally soiled crockery, pots, pans and cutlery, with a normal quantity of food scraps	HEAVY SOIL	 	Cold prewash Main wash up to 65°C 1 cold rinse 1 hot rinse at 65°C Hot air drying	2 level dessert spoons (20 g)	Half dessert spoon (5 g)
3*	Lightly soiled crockery, pots and cutlery	ECONOMY	 	Cold prewash Main wash up to 55°C 1 cold rinse 1 hot rinse at 55°C Hot air drying	2 level dessert spoons (20 g)	Half dessert spoon (5 g)
4**	Lightly soiled crockery	QUICK WASH	 	Main wash up to 55°C 2 cold rinses	1 heaped dessert spoon (15 g)	/
5	Partial load (to be completed later in the day)	RINSE AND HOLD	 	Cold rinse to prevent food scraps from drying up and sticking to the dishes	/	/

* This programme is equivalent to IEC436 standard.

** This is a special programme to wash in a short time (approx. 32 minutes) a full load of lightly soiled dishes, glasses and crockery (except pots) so that you may re-use them promptly. Due to the shortness of this programme, no drying phase is provided.

Operating Instructions

1 Check that the filters are clean

(see cleaning instructions)

2 Check that there is salt and rinse aid

3 Load the dishes

Remove larger scraps of food.

Pull the lower basket out and arrange the saucepans, plates and cutlery in it.

Pull the upper basket out and arrange the plates, saucers, glasses and cups etc. in it.

Slide the baskets back into the machine.

 
 
 
Ensure that the spray arms can rotate freely.


4 Measure out detergent


Pour the required amount of detergent into the dispenser according to the indications in the Washing Programmes chart and close the lid.

5 Set the programme

The selection of a programme occurs with the door partially opened.

 Depress ON/OFF Pushbutton ; the Pilot  and end of programme  indicator lights come on.

Attention: should the End indicator light  not come on, it means that the previously selected programme hasn't finished. In this case, wait until the programme is over or cancel the programme (see point 8).

Depress the programme button which corresponds to the washing programme you wish to select and keep it pressed, until the End indicator light  goes out.

6 Start the programme


 
 
Open the water supply.

Close the door; the dishwasher starts operating.

7 At the end of the washing programme

An audible signal will sound for about 2 secs. This is to tell you that the programme is finished.

Wait until the end of the signal before opening the door.

Open the door. The Pilot Light  and End of Programme Indicator Light  are on. Depress the ON/OFF Button  to switch the dishwasher off.

 
Turn off the water tap and switch the machine off at the plug.



Wait a few minutes before removing the dishes; in this way they will be cooler and the drying will be improved.

Empty the lower basket first and then the upper one: this will avoid water dripping from the upper basket onto the dishes in the lower one.

8 Cancel the wash programme

To cancel a wash programme in progress or to reset the dishwasher if a wrong one has been selected, proceed as follows:

 
Turn the dishwasher on by pressing the ON/OFF Button .

Simultaneously depress  and  programme buttons.

Close the door. After a few mins you will hear the acoustic signal. This is to tell you that the dishwasher is reset.

Before opening the door and selecting a new programme wait until the end of the signal (2 secs).

Caution

If you need to stop the dishwasher at any moment during the wash programme, switch the appliance off at the plug; open the door and press the ON/OFF Button .

In general it is not advisable to open the door while the machine is working; if the door is opened however, a safety device ensures that the machine stops.


MAINTENANCE AND CLEANING

Cleaning the Central Filters

(After each wash)

Inspect the central filters (B) and (C) and remove any scraps of food with a brush, under running water.

Filters (B) and (C) are both removed by lifting up the outer one (B) (pulling the central funnel upwards); the smaller filter (C) can then be removed by pressing the two tongues (D).

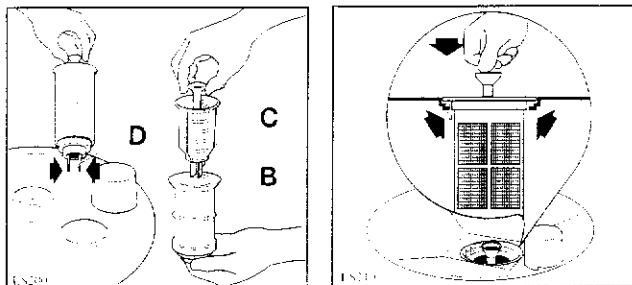

Once cleaned, refit the filters by pressing them down until they click into place.


Cleaning the Large Filter

(Once a month)

Clean the large filter (A) on both sides under running water, using a brush.

To take it out, remove the spray arm by pressing the two tongues (E). Turn the ring (F) anticlockwise (towards the left) and then slide the whole part out.

Refit the filter following the above instructions in reverse order.

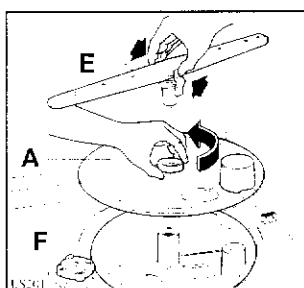

Caution: the dishwasher must not be used without filters.

Incorrect repositioning of the filters will produce poor washing results.

Cleaning of the filters is vital to ensure correct operation of the machine.


Internal and External Cleaning

You must ensure that the seals around the door, the detergent and rinse aid dispensers are cleaned regularly with a damp cloth.

We recommend the use of a Dishwasher Cleaner every 3 months, or run a wash programme without dishes using detergent.

Check that the spray arm nozzles are not obstructed. To remove the bottom spray arm, release it from its securing catches and pull it out. To clean the nozzles of the top spray arm, slide out the top basket whereby the spray arm will become accessible. To remove it, lift up the central funnel and unscrew the ring nut. Wash the spray arms under running water and refit them back.


Clean the external surfaces of the machine and control panel with a soft damp cloth. If necessary use only neutral detergents. Never use abrasive products, scouring pads or solvents (acetone, trichloroethylene etc...).

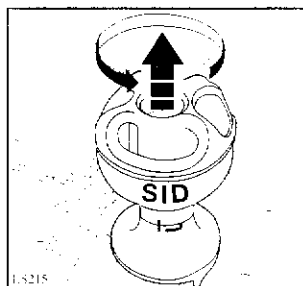


Check that the Super Intensity Dispenser (SID) is not clogged with detergent residue. If necessary, rinse it under running water after having removed it from the basket by twisting it anticlockwise and pulling it upwards.

Refit the dispenser by following the above instructions in reverse order.

Fasten it back onto the support by turning it clockwise.

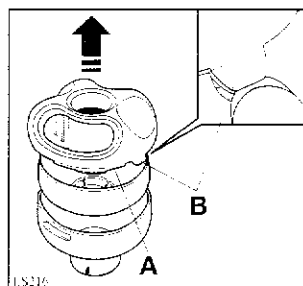

To thoroughly clean the inner chamber (A), simply lift both tabs (B) and remove the top part.

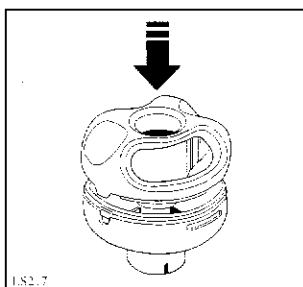

Reassemble the container by following the above instructions in reverse order.

Remember to push the top part fully home.

Prolonged Periods of Non-Operation

If you are not using the machine for any period of time you are advised to:

unplug the appliance and turn off the water;

fill the rinse aid dispenser;

leave the door ajar to prevent the formation of unpleasant smells;

leave the inside of the machine clean.

Frost Precautions

Avoid placing the machine in a location where the temperature is below 0°C.

If this is unavoidable, empty the machine, close the water inlet tap, disconnect the water inlet pipe and empty it.

Moving the Machine

If you have to move the machine (you are moving house etc...):

unplug it;

turn off the water tap;

remove the water inlet and discharge hoses;

pull the machine out together with the hoses.

Caution: avoid over tilting the machine during transport.

SERVICING

Certain problems are due to lack of simple maintenance or oversights and can be solved easily without having to call out an engineer.

The machine will not start

- The door has not been properly closed.
- The plug is not properly inserted in the power socket.
- There is no current at the socket. Check the fuse.

The machine will not fill with water

- The water tap is shut.
- The water supply has been cut off.
- The inlet hose is kinked.
- The water inlet hose filter is clogged.

The machine will not drain

- The drain hose is kinked.
- The sink drain is blocked.
- The drain hose extension is not correct.
- There is no air vent in the end of the drain hose.

The dishes are not clean (poor wash)

- The baskets are too full.
- The dishes have not been arranged properly.
- The spray arms do not rotate.
- The spray arm holes are clogged.
- The water inlet funnel in the centre of the upper basket is covered by dishes.
- The end of the drain hose is submerged in waste water (in the sink).
- The filters are clogged.
- The filters are not in position.
- Not enough detergent has been used or it is unsuitable.
- The detergent is old or has gone hard.
- The washing programme selected is too gentle.

Visible lime deposits or white film on the dishes

- The rinse aid has run out or too little is being used.

The machine is noisy


- The dishes are rattling against each other.
- The spray arms are knocking against the dishes.

The dishes are not quite dry

- The dishes have been left too long inside the machine.

The door is difficult to close

- The dishwasher is not level or is not properly built-in.

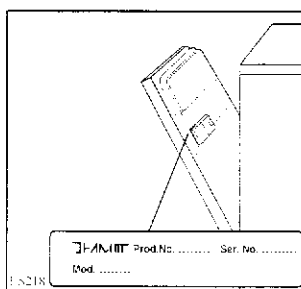

If, after the above checks, the fault persists, call your local Zanussi Service Centre. Please make sure you give the model and serial number of the appliance. This information can be found on the rating plate located on the right-hand side of the

dishwasher door (see picture).

Original spare parts can be purchased from Zanussi Service Centres.

In guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for any guarantee service calls.



BUILDING-IN

Building-in features

This dishwasher is designed to be fitted under a kitchen counter or sink.

In either case, it is essential that the recess dimensions indicated in the picture are followed.


No further openings for venting of the dishwasher are required, but only to let the water fill and drain hoses and power supply cable pass through.

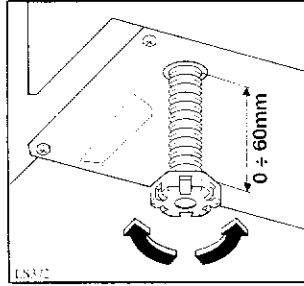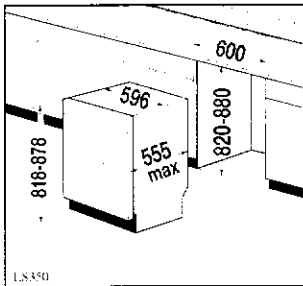

The recess height may be anywhere between 820 and 880 mm from the floor since the dishwasher incorporates levelling feet adjustable over a wide range (max 60 mm).


Adjust the height of the appliance by turning these feet.

A distance of 2 mm should be allowed between the top of the dishwasher and the counter top.

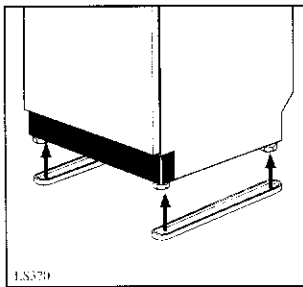

To make it easier sliding in and sliding out of the appliance, fit the pads supplied by pressing them on the feet as shown in the figure.

Fitting the vapour protection

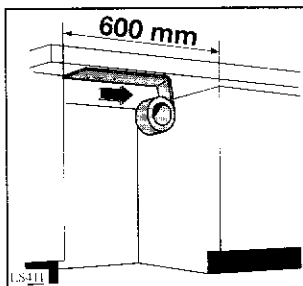

Fit the adhesive aluminium protection at the front recess, under the worktop, along the entire width.

Fitting under a counter (kitchen worktop or sink)

It is absolutely essential that the dishwasher is disconnected from the electricity supply before gaining access to any internal component.

Fit the dishwasher into the appropriate housing space and connect it. Make sure that the water fill and drain hoses and the power supply cable are not bent or kinked.

Fitting the panel onto the door

The door on this model is designed for the overlay of a panel having the following dimensions:


Width:	596 mm
Height:	644 to 714 mm max
Thickness:	20 mm max
Weight:	2 to 7.5 kg max

Note:

The panel height should not be more than what indicated, otherwise complete opening of the door will no longer be possible as the panel hits against the dishwasher plinth.

Mounting of decor panel onto the door


The height of the panel depends on the height of the plinth of adjacent kitchen units (see kitchen plinth adjustment).

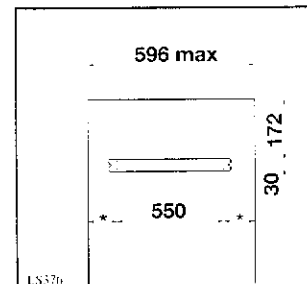

The panel must be fitted with a handle, as the dishwasher handle will be hidden by the panel.


Drill the panel with a \varnothing 2x12 bit according to the dimensions indicated in the figure.

Fix the cross bar onto the panel using four 3.5x16 screws provided. Reduce the length of fixing screws according to thickness of panel.

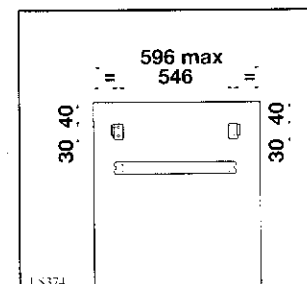


If for aesthetic matching the panel is provided with a false drawer (fitted or carved on the panel itself), the two brackets provided should also be used. Fix the brackets according to the measurements shown in the figure, by using four 3.5x16 screws.

Reduce the length of fixing screws according to thickness of panel.

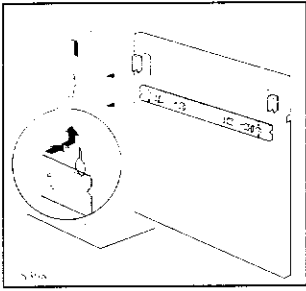


Mount the decor panel by inserting the two pivots of the cross-bar into the slotted holes of the door. Lift the decor panel until perfect alignment with the facia panel is obtained: if the two brackets have also been used, they will automatically

engage in the special holes provided on the dishwasher door.

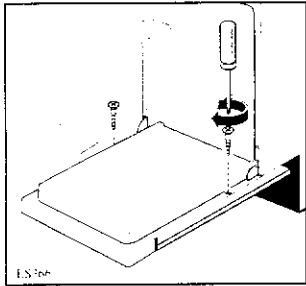

Once the correct position has been found, open the door and fasten the decor panel on the lower section by means of the two long 4x40 screws provided, using the holes through the inner door (see fig.).

Securing under a counter

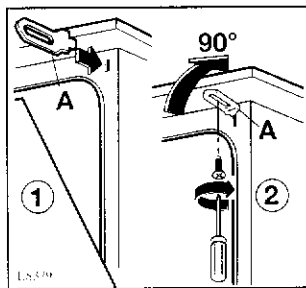

Open the door; vertically insert the two mounting brackets (A) on the front part of the dishwasher and turn them 90° (see fig.). Secure the brackets to the counter by means of two 3.5x16 screws provided. Brackets should be positioned so as to align

them to the slotted holes provided on the metal vapour protection.

Important!


The dishwasher must be secured against tilting. Therefore, make sure that the counter it is fitted under, is suitably secured to a fixed structure (adjacent kitchen cabinets, wall).

Attention!

When the dishwasher is secured to the kitchen cabinets, do not drill any holes into the sides of the machine.

Adjusting the door balance

The door of the dishwasher is balanced when it is open in any position.

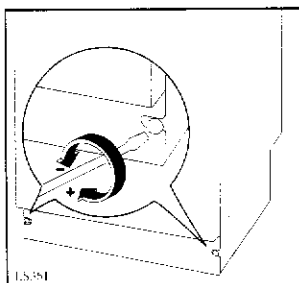

Fitting the decor panel may sometimes affect this balance. In this case it will be necessary to adjust the balance as follows: Half-open the door and regulate the screws located on the kick plate.

By screwing or unscrewing these screws, the tension of the door balancing springs is increased or decreased respectively.


Attention!

The weight of the panel should be within the limits given in the "dimensions of the panel", otherwise balancing the door will not be possible.


Levelling

Make sure that the dishwasher door closes properly, without rubbing on sides. Otherwise level the machine by slightly screwing or unscrewing the two front feet until perfect closure of the door is reached.

Kitchen plinth adjustment

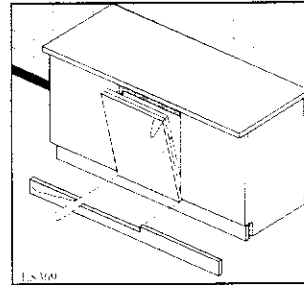


To allow correct opening of the door it is sometimes necessary to cut the kitchen plinth. Refer to the cutting table below.

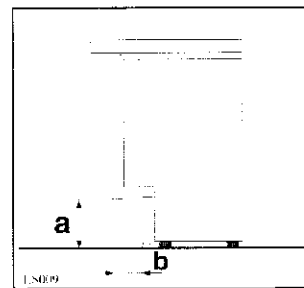

According to dimensions of (a) and (b) as shown on the figure, you will find on the following table the depth (X) of the cut to be made on the plinth.

The dimensions (a) and (b) of the table are those more frequently used in the kitchen furnitures.

		Height (a)								
		170	160	150	140	130	120	110	100	
Depth (b)	40	34	29	25	22	20	20	17	15	X
	50	35	29	25	22	20	18	18	15	
	60	33	28	25	22	20	18	16	15	
	70	32	26	22	20	20	16	15	15	
	80	/	21	20	16	15	15	12	12	
	90	/	/	12	11	10	10	10	10	
	100	/	/	/	5	5	5	5	5	

 

Dimensions of the cut on the plinth

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>