


ZANUSSI

Ceramic hob
ZKT 863 LX

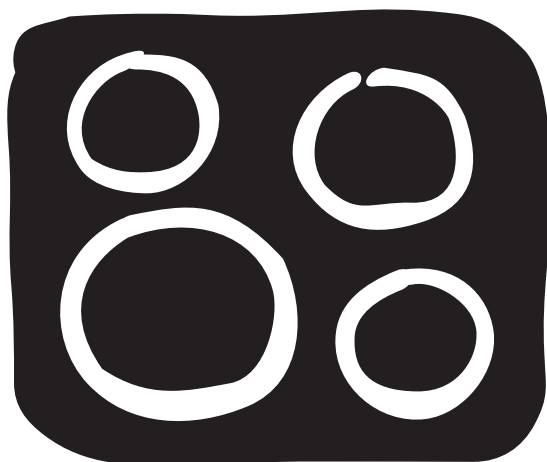

Installation and Operating Instructions



Dear Customer,

Please read these user instructions carefully and keep them to refer to later.

Please pass the user instructions on to any future owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning! Notes that concern your personal safety.

Important! Notes that show how to avoid damage to the appliance.



Useful tips and hints



Environmental information

Contents

Operating Instructions	4
Safety	4
Disposal	5
Description of the Appliance	6
Cooking zones and control panel	6
Digital displays	7
Safety cut-out function for the cooking zones	7
Before using for the first time	8
Initial Cleaning	8
Operating the hob	8
Touch control sensor panels	8
Switching on the appliance	8
Switching off the appliance	8
Heat settings selecting	9
Keep warm setting	9
Switching the double ring cooking zone off and on	9
Switching the casserole zone on and off	10
Switching off a cooking zone	10
Residual Heat Indicator	10
Cooking using the automatic warm up function	12
Cooking without the automatic warm up function	12
Child safety lock	13
Timer	14
Blocking/unblocking the control panel	17
Uses, tables and tips	18
Pans	18
Advice on cooking with and without automatic warm up	19
Settings for Cooking on the Zones	20
Cleaning and care	21
Hob	21
Hob Frame	22
What to do if	23
Rectifying faults	23
Installation Instructions	24
Technical Data	24
Regulations, Standards, Directives	24
Safety Instructions for the Installer	24
Electrical Connection	25
Electrical Connection Diagram	26
Assembly	27
Rating Plate	29
Warranty conditions	30
Service and Spare Parts	31

Operating Instructions

Safety

The safety aspects of this appliance comply with accepted technical standards and the German Appliance Safety Law. However, as manufacturers we also believe it is our responsibility to familiarise you with the following safety instructions.

Electrical Safety

- The installation and connection of the new appliance must only be carried out by qualified personnel.
- Repairs to the appliance are only to be carried out by approved service engineers. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. If your appliance needs repairing, please contact your local Service Force Centre.



Please follow these instructions, otherwise the warranty will not cover any damage that may occur.

- Flush-mounted appliances may only be operated following installation in suitable installation cabinets and workplaces which conform to the relevant standards. This ensures sufficient protection against contact for electrical units as required by the VDE [Association of German Electrical Engineers].
- If your appliance malfunctions or if fractures, cracks or splits appear:
 - switch off all cooking zones,
 - disconnect the hob from the electricity supply.

Child Safety

The cooking zones will become hot when you cook. Therefore, always keep small children away from the appliance.

Safety During Use

- This appliance may only be used for normal cooking and frying in the home. It is not designed for commercial or industrial purposes.
- Do not use the hob to heat the room.
- Take care when plugging electric appliances into mains sockets near the hob. Connection leads must not come into contact with the hot surface.
- Overheated fats and oils catch fire quickly. You should supervise cooking when preparing foods in fat or oil (e.g. chips).
- Switch off the cooking zones after use.

Safety When Cleaning

- For safety reasons do not clean the appliance with a steam jet or high pressure cleaner.
- Clean the hob in accordance with the maintenance and cleaning instructions in this manual.

To Avoid damaging your appliance

- Do not use the hob as a work surface or for storage.
- Do not operate the cooking zones when there is no pan or the pans are empty.
- Ceramic glass is insensitive to temperature shock and very robust; however it is not unbreakable. Especially sharp and hard objects that fall on the cooking surface can damage it.
- Do not use cast iron pans or pans with a rough, burred or damaged base. Scratching may occur if the pans are slid across the surface.
- Do not place any pans on the hob frame. Scratching and damage to the paint may occur.
- Make sure that no acidic liquids, e.g. vinegar, lemon or descaling agents, are spilt onto the hob frame, since these cause dull spots.
- If sugar or a preparation with sugar comes into contact with the hot cooking zone and melts there it must be cleaned off immediately with a scraper while it is still hot. If it cools, the surface may be damaged when it is removed.
- Keep all items and materials that can melt away from the ceramic glass surface, e.g. plastics, aluminium foil, or oven foils. If something of this nature should melt onto the ceramic glass surface, it must also be removed immediately using the scraper.

Disposal

Disposing of the packaging material

All materials used can be fully recycled.

Plastics are marked as follows:

- >PE< for polyethylene, as used for the outer wrapping and the bags inside.
- >PS< for polystyrene foam, e.g., as used for the padding materials. They are completely free of CFCs.

Disposal of old appliances



Warning: Before disposing of old appliances please make them inoperable so that they cannot be the source of danger.



To do this, disconnect the appliance from the mains supply and remove the mains lead.

To protect the environment, it is important that worn out appliances are disposed of in the correct manner.

- The appliance must not be disposed of with household rubbish.
- You can obtain information about collection dates or public refuse disposal sites from your local Council or Environmental Health Office.




 
 
 
 

Description of the Appliance

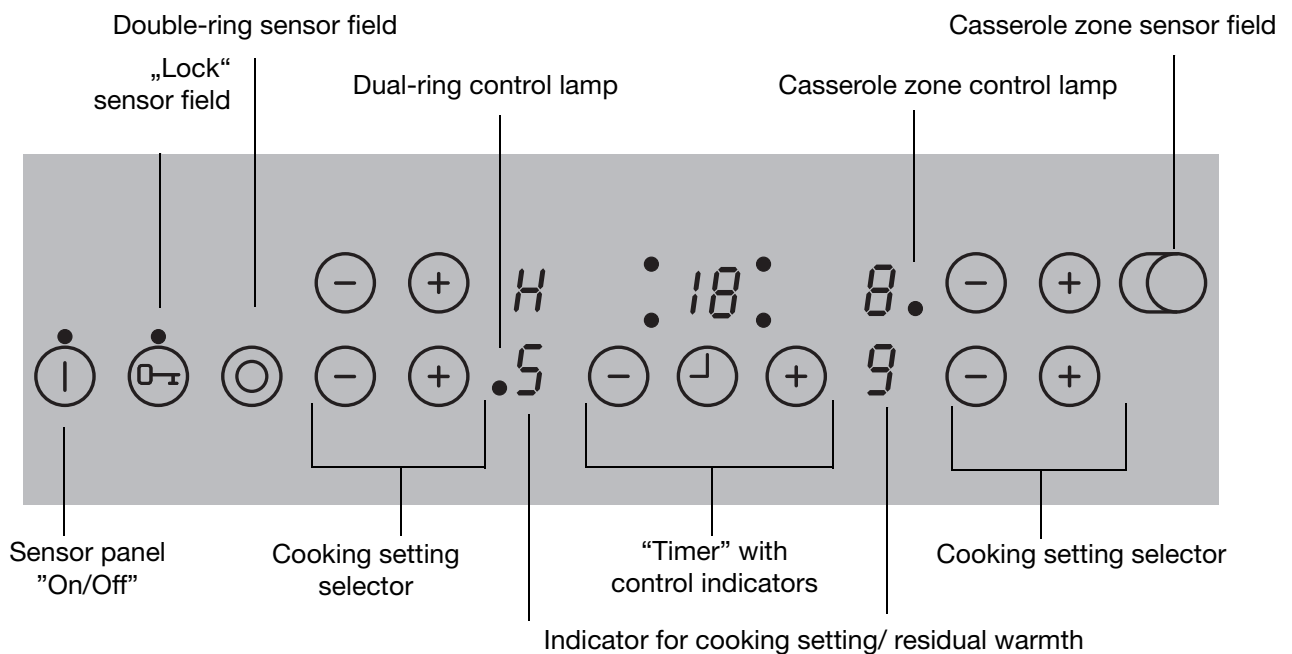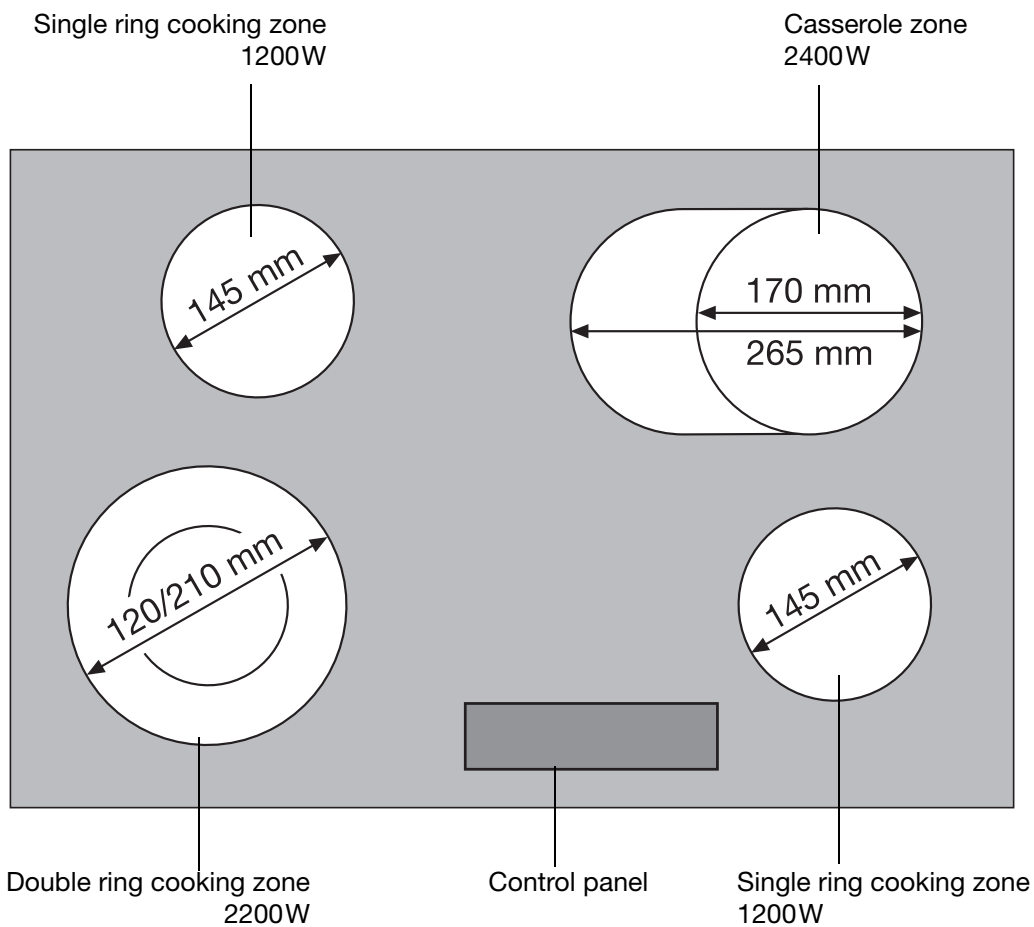Cooking zones and control panel



Digital displays

 
The four display fields, which are assigned to the four cooking zones, display:

-  after being switched on,
-  when the keep warm setting has been selected,
-  to , depending on the heat setting selected,
-  when using automatic cooking,
-  for residual heat,
-  when the child lock is activated,
-  with a fault




Safety cut-out function for the cooking zones

If one of the cooking zones is not switched off after a certain period of time or the cooking setting is not altered, that particular cooking zone will automatically switch itself off.

Any residual warmth will be indicated with  (as for "hot") in the digital displays corresponding to the particular cooking zones.

 The cooking zones switch themselves off when:


- Heat setting  1 - 2 after 6 hours
- Heat setting 3 - 4 after 5 hours
- Heat setting 5 after 4 hours
- Heat setting 6 - 9 after 1.5 hours



Should one or more cooking zones switch themselves off before the periods of time indicated have elapsed, see the chapter "What to do if ...".

Other causes for a cooking zone switching itself off


All cooking zones will immediately switch themselves off if liquid boils over and lands on the control panel.

The same thing will happen if you place a damp cloth on the control panel. In both instances, after the liquid or cloth has been removed, the appliance will need to be switched on again using the main switch .

Before using for the first time

Initial Cleaning


Wipe the ceramic glass surface with a damp cloth.

 **Important:** Do not use any caustic, abrasive cleaners! The surface could be damaged.

Operating the hob

Touch control sensor panels

To operate the touch control sensor panels, touch the desired panel with the tip of your pointed finger until the relevant displays illuminate or go out, or until the desired function is carried out.


 Ensure that you are only touching one sensor panel when operating the appliance. If your finger is too flat on the panel, the sensor panel below may be actuated as well.


Switching on the appliance

The entire appliance is switched on using the **"On/Off" sensor panel** ①.

Touch the "On/Off" sensor panel for approx. two seconds.

The digital displays will show ②.

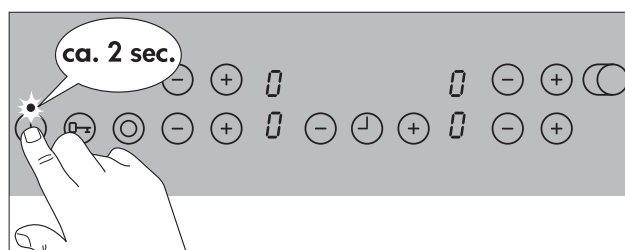

 After the "On/Off" sensor panel has been actuated to switch on your appliance, a cooking setting must be selected for a cooking zone within approx. 10 seconds, or a time must be set using the timer (egg timer function). If not, the appliance will switch itself off again for reasons related to safety.




Switching off the appliance

To completely switch off the appliance, **actuate the "On/Off" sensor panel** ①.

Touch the "On/Off" sensor panel for approx. one second.

 After switching off a single cooking zone or the entire cooking surface, the existing residual warmth will be displayed in the digital displays of the corresponding cooking zones in the form of  (for "hot").

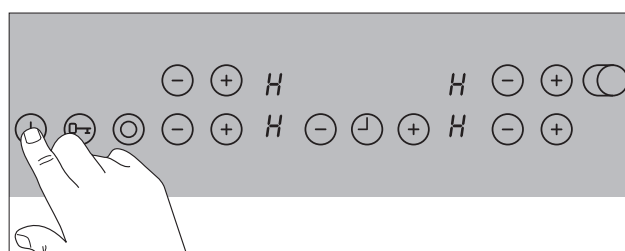


Heat settings selecting

For setting and changing the heat setting (□ to 9) for the selected cooking zone.

Raise the heat setting using the heat setting selector sensor panel ⊕.

Lower the heat setting using the heat setting selector sensor panel ⊖.

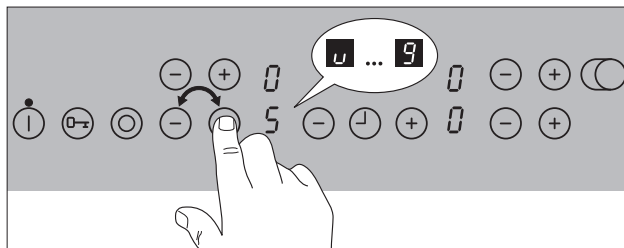

Keep warm setting

Each of the 4 cooking zones has a keep warm setting □.


Use the heat setting selector sensor panel ⊕ to set the keep warm setting □.

Switching the double ring cooking zone off and on

According to the size of the saucepan or frying pan, when using the double ring cooking zone you can switch between the smaller cooking zone and the larger cooking zone using the “double ring zone” sensor panel.

i You can only switch between the two if a heat setting has already been set for the smaller heating ring.


1. Set the desired heat level.

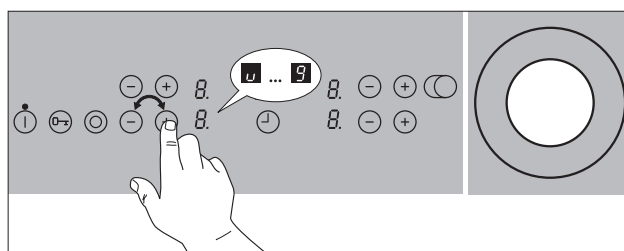

2. Touch the “double ring” sensor panel.


This will switch the setting to the outer heating ring. The control light will illuminate.

3. To switch off the outer heating ring, touch the “double ring” sensor panel, and the outer heating ring will switch off.

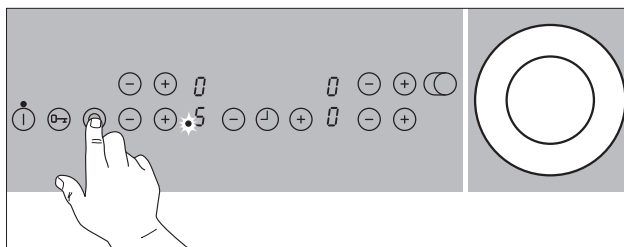


Switching the casserole zone on and off

1. Set the desired heat setting.

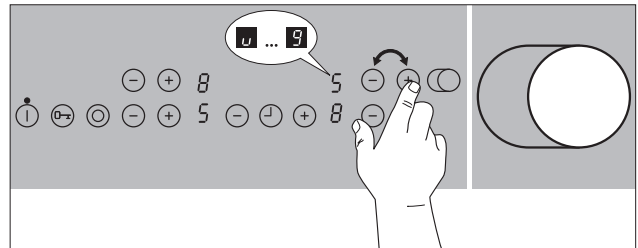


2. To switch the casserole zone on or off, place your finger flat on the "casserole zone" sensor field until the indicator light illuminates or goes off.

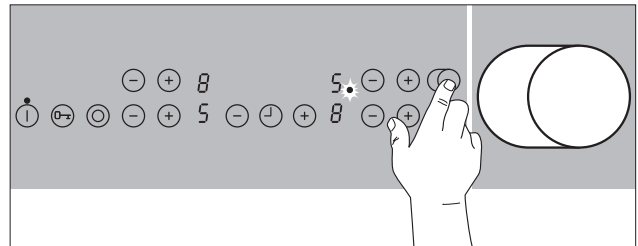



Switching off a cooking zone

1. To switch off a cooking zone touch the heat setting selector sensor panel ⊕ and ⊖ simultaneously, or return the setting to zero using the heat setting selector sensor panel ⊖.

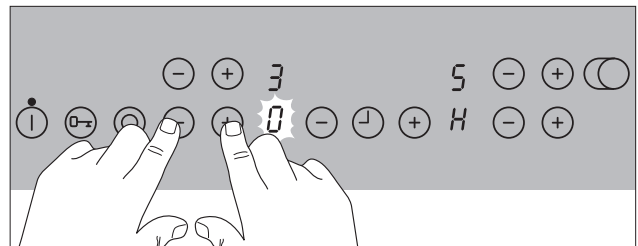

Residual Heat Indicator

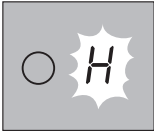When an individual cooking zone or the entire hob is switched off, any residual heat is shown with an  (for “Hot”) in the digital display for the appropriate cooking zones.

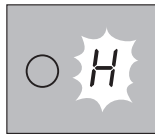

Even after the cooking zone has been switched off, the residual heat indicator only goes out when the cooking zone is cold.




You can use the residual heat for melting and keeping food warm.



Important! As long as the residual heat indicator is illuminated, there is a risk of burns.



Important! If the power supply is interrupted the  symbol will also go out and information about residual heat will no longer be available. However, it is still possible to burn yourself. This can be avoided by taking care around the hob.

Cooking using the automatic warm up function

All of the cooking surface's four cooking zones can be adjusted to any of nine settings, and are equipped with an automatic warm up function:

- [1], lowest heat setting
- [9], highest heat setting
- [H], automatic warm up function.


When you select the desired heat setting using the ⊕ heat setting selector sensor panel, the cooking zone will operate at maximum power for a certain period of time and will then automatically switch back to the follow-on heat setting that has been set.

The length of time that the automatic warm up function operates depends on the follow-on heat setting selected.

1. Touch the heat setting selector sensor panel ⊕ to set the desired heat setting from [1] to [9]. The heat setting that has been set will then be displayed. After a period of 5 seconds, the [H] (=automatic warm up function) will appear in the display in place of the heat setting. After the warm up period has finished, the heat setting will once more be displayed.

i If you should choose a higher heat setting while the automatic function is in operation, e.g. from [3] to [5], the period of time that the warm up function is in operation will be adjusted accordingly. If you select a lower setting, the warm up period will end immediately.

You can cook using the automatic warm up function only if the cooking zone is cold or moderately warm. If a cooking zone is already hot when you switch it on ([H] indicator), the automatic warm up function cannot be used.

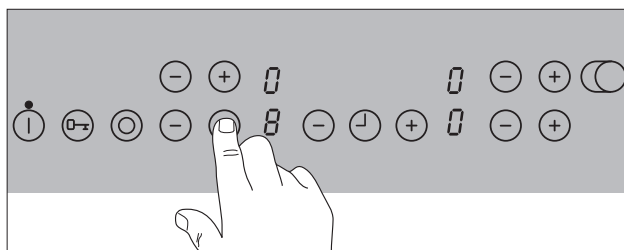


Cooking without the automatic warm up function

If you wish to use the cooking zones without the automatic warm up function, select the desired heat setting using the heat setting selector sensor panel ⊖.

1. Touch the heat setting selector sensor panel ⊖ in order to set the desired heat setting from [9] to [1].

i You can change the setting at any time using the heat setting selector sensor panels ⊕ and ⊖.

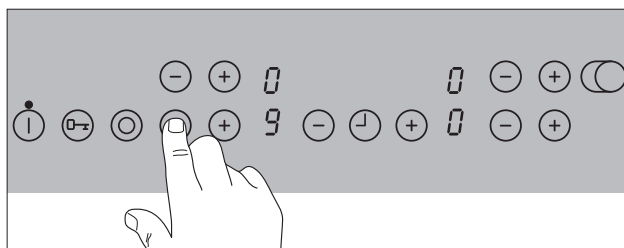

Child safety lock


You can use the child safety lock to safeguard against unwanted use of the cooking surface.

Switching on the child safety lock

To be able to switch on the child safety lock the appliance must be switched on, but all the cooking zones must be switched off.


1. Touch the $\Rightarrow \text{O}$ sensor field for approx. three seconds.

An acoustic signal will sound as confirmation.

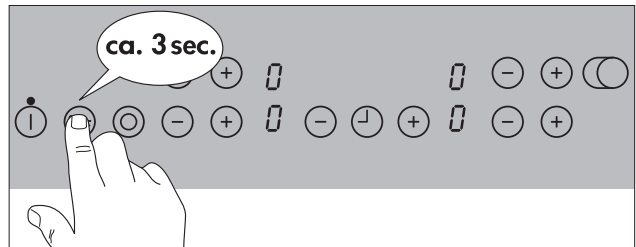

2. Touch any heat setting sensor field \oplus .

L will appear in the displays, and the child safety lock is activated. The appliance will switch itself off automatically after a few seconds.

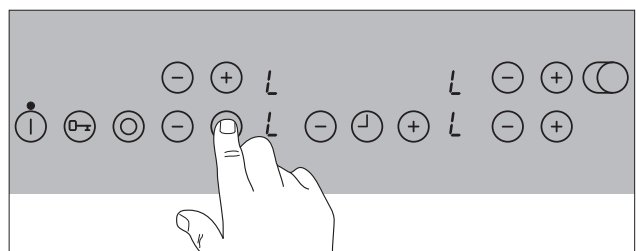


Overriding the child safety lock

The child safety lock can be overridden in order to use the appliance (until the appliance is switched off again). When the appliance is switched on again the child safety device is activated once again.


1. Switch on the appliance.

When the child safety device has been activated, L will be displayed.

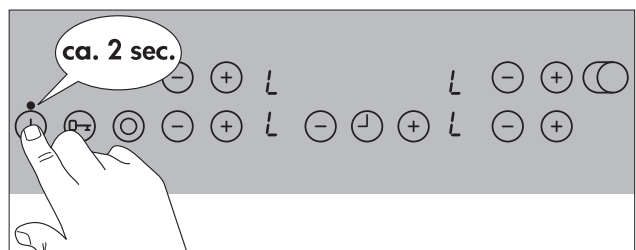


2. Touch any two heat setting sensor fields \oplus and \ominus simultaneously.


An acoustic signal will sound as confirmation. The child safety device has been overridden until the appliance is switched off, and the cooking surface can be used as normal.

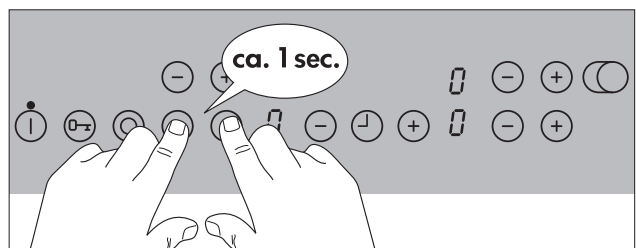


Switching off the child safety lock

 
1. Switch on the appliance.

 When the child safety device has been activated,  will be displayed.

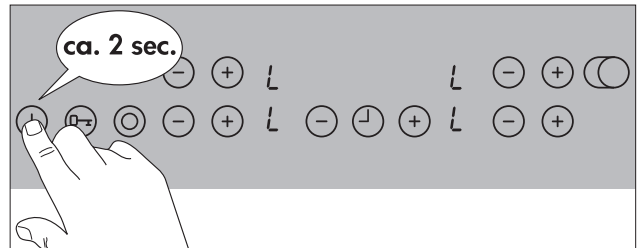


2. Touch the  sensor field for approx. three seconds.

An acoustic signal will sound as confirmation.

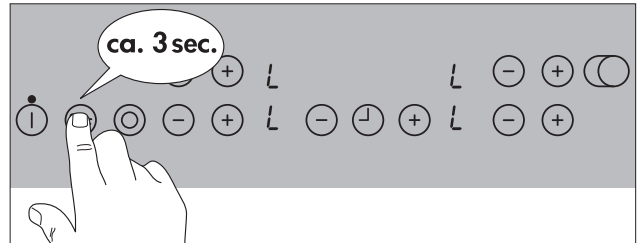

3. Touch any heat setting sensor field .

The displays will become dark, and the child safety device is switched off. The appliance will switch itself off automatically after a few seconds.

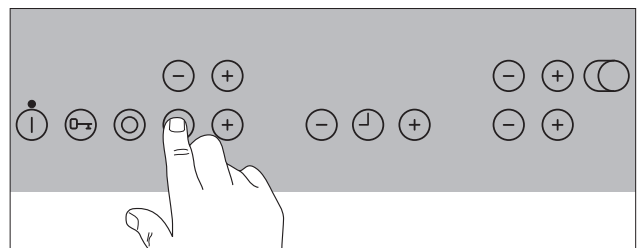

Timer

There are two ways to use the timer:


- as a **safety cut-out function**. Set a cooking period for a cooking zone, and after this time has elapsed the cooking zone will automatically switch itself off. This function can be used for more than one cooking zone simultaneously.
- as a **countdown timer** without a cut-out function (“egg timer”), whereby an acoustic signal can be heard after the set period of time has elapsed.


 



The countdown timer cannot be used if a cooking zone is switched on.



Safety cut-out

The cooking zone(s) for which you want to use the safety cut-out function must be switched on.

 
1. Using the timer sensor panel , select the cooking zone for which the safety cut-out is to be set.




By touching the timer sensor panel  once the first active cooking zone is selected in a clockwise direction, and the corresponding control lamp will flash rapidly. Hereby the (e.g.) left rear control lamp corresponds to the left rear cooking zone.  will appear in the timer display.


The next active cooking zone is selected by touching the timer sensor panel again .

 
2. While the control lamp is flashing rapidly, use the  or  timer setting sensor panels to set the desired period of time for this cooking zone up until the point where it automatically switches itself off (e.g. 15 minutes).




The safety cut-out function will be activated after several minutes



The control lamp will now flash more slowly and the remaining cooking time will be shown in the display as it elapses. If the safety cut-out function has been set for more than one cooking zone, the time displayed will be that for the cooking zone with the shortest period of cooking time remaining. The control lamps for the other cooking zones for which the safety cut-out function has been set will illuminate. To display the remaining cooking time for any of these cooking zones, it must be selected using the timer sensor panel , and the corresponding control lamp will then flash rapidly.



To reset the remaining cooking time the desired cooking zone must be selected using the timer sensor panel . The corresponding control lamp will then flash more rapidly. The settings are reset using the  or  timer setting sensor panels.

After the set period of cooking time has elapsed the cooking zone automatically switches itself off, an acoustic signal sounds for two minutes and the timer display flashes .

3. To switch off the signal, touch the timer sensor panel .

 To make the setting more quickly, touch any of the  or  timer setting sensor panels until the desired value is reached.

If the  timer setting sensor panel is actuated first, the time setting will begin at 99 minutes, and if the  timer setting sensor panel is actuated first, the time setting will begin at 1 minute.

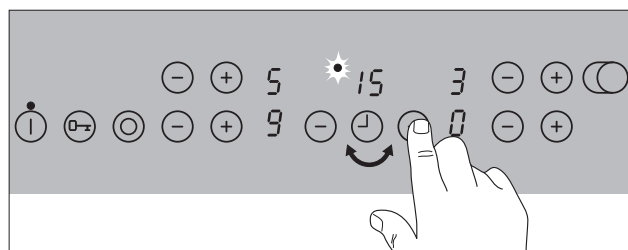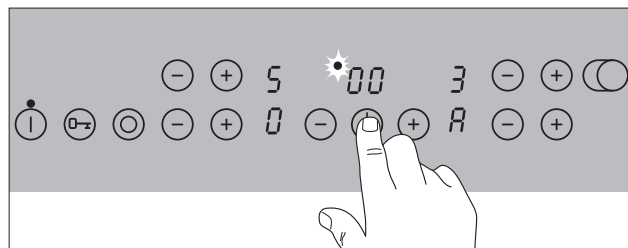

Switching off the safety cut-out function before it has come to an end

There are two ways to switch off the safety cut-out function before it has come to an end.

Switch off the cooking zone and timer simultaneously

1. Using the ⊖ heat setting selector sensor panel, re-set the desired cooking zone to zero: **the cooking zone and timer** will switch themselves off.

Switch off the timer – the cooking zone remains active

1. Select the desired cooking zone using the ⊕ timer sensor panel. The corresponding control lamp will then flash more rapidly.
2. Using the ⊖ timer setting sensor panel, set the timer to 00:
 - only the **timer** will switch itself off.
 - the cooking zone will remain in operation.

Countdown timer

To be able to use the countdown timer the appliance must be switched on, but all the cooking zones must be switched off.

1. Touch the timer sensor panel ⊖.
00 will be shown in the timer display.
2. Set the desired period of time using the ⊕ or ⊖ timer setting sensor panels.

The countdown timer function will be activated after several minutes and the remaining time will be displayed.

To reset the remaining time, touch the timer sensor panel and change the setting using the ⊕ or ⊖ sensor panels for setting the timer.

After the set period of time has elapsed an acoustic signal sounds and the timer display flashes 00.

3. To switch off the signal, touch the ⊕ timer sensor panel.

Blocking/unblocking the control panel


At any stage of the cooking process the control panel, with the exception of the “On/Off” sensor panel, can be blocked in order to prevent the settings being changed e.g. by wiping over the panel with a cloth.

1. Touch the “block” sensor panel for approx. one second.

The control light for the “block” sensor panel will illuminate. The sensor panels are blocked.

2. To unblock the panel, touch the “block” sensor panel again for approx. one second.

The control light in the “block” sensor panel will go out.

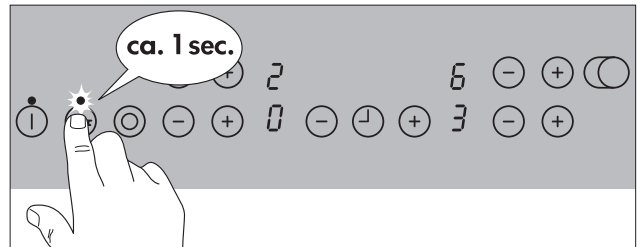


i When you switch the appliance off the blocking function is automatically switched off.

Uses, tables and tips



Pans

- You can recognise good pans by their bases. The base should be as thick and flat as possible.
- Pay particular attention when buying new pans to the diameter of the base. Manufacturers often give only the diameter of the upper rim.
- Pots with aluminium or copper bases can cause metallic discolouring on the ceramic glass surface, which is very difficult or impossible to remove.
- Do not use cast iron pans or pans with a rough, burred or damaged base. This can produce permanent scratching if the pan is slid across the surface.
- When cold, pan bases are normally bowed slightly inwards (concave). They should never be bowed outwards (convex).
- If you wish to use special types of pan (e.g. a pressure cooker, simmering pan, wok, etc.), please observe the manufacturer's instructions.

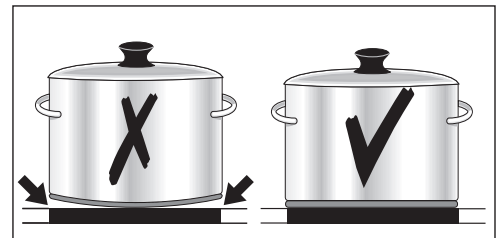

Energy saving tips

- Always position pots and pans before switching on the cooking zone.
 - Whenever possible always position the lids firmly on pots and pans to cover completely.
 - Switch off the cooking zones before the end of the cooking time to use the residual heat such as to keep foods warm or for melting.
-
- The base of the pan should be the same size as the cooking zone.

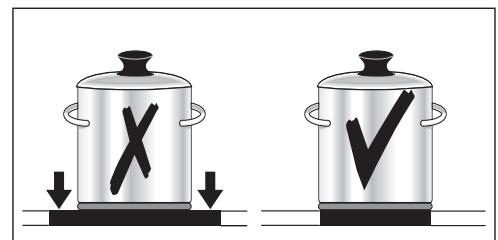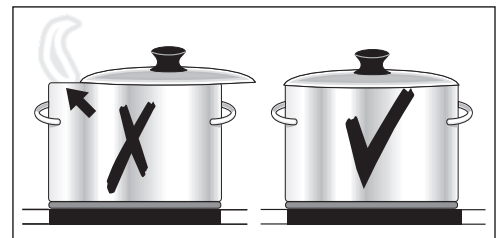

Advice on cooking with and without automatic warm up

The automatic warm up function is suitable for:

- dishes that start off cold, are heated up at high power and do not need to be continually watched when cooking on the selected heat setting,
- dishes that are put in a hot frying pan.

The automatic warm up function is not suitable for:

- goulash, beef olives and similar braised dishes that need continual turning until browned correctly, have liquid added and are then braised until cooked,
- dumplings, pasta dishes with large amounts of liquid,
- cooking with pressure cookers,
- very large quantities of soup/stew with more than 2 litres of liquid.

General notes:

- When cooking without the automatic warm up function, we recommend the use of a high heat setting to warm up the food (using the ⊖) and then leave the dish to finish cooking at an appropriate lower heat setting.
- Take special note of the results when you first use the appliance! You can then decide which heat setting is the best for "your dishes" in the "quantities you are accustomed to preparing" with "your pans". You will then quickly appreciate the advantages of the automatic function and will feel relaxed about using your new hob.

Settings for Cooking on the Zones

The figures in the following table are benchmark figures. The switch setting required for a certain cooking method depends on the quality of the pans and the type and amount of food.

Switch setting	Automatic warm up function ¹⁾ (min.)	Cooking method	Examples for use
9		Warming Sautéing Frying	Warming large amounts of liquid, boiling noodles, searing meat, (browning goulash, braising meat)
8	4,5	Intensive frying	Steak, sirloin, hash browns, sausages, pancakes/griddle cakes
7	3,5		
6	2,0	Frying	Schnitzel/chops, liver, fish, rissoles, fried eggs
5	10,2	Boiling	Cooking up to 1.5 l liquid, potatoes, vegetables
4	6,5		
3	4,8	Steaming Stewing Boiling	Steaming and stewing of small amounts of vegetables, boiling rice and milk dishes
2	1,7		
1	1,0	Melting	Melting butter, dissolving gelatine, melting chocolate
u	0,5	Keeping warm	Keeping meals warm

1) When cooking without the automatic function the warm up period can be individually selected.



When warming or sautéing food we recommend that you set the appliance to warm up setting “9” and then, for food which requires a longer cooking time, switch to the appropriate follow on heat setting to finish cooking the food.

Cleaning and care

Hob



Important: Cleaning agents must not come into contact with the **hot** ceramic glass surface! All cleaning agents must be removed with plenty of clean water after cleaning because they can have a caustic effect when the rings are next heated!

Do not use any aggressive cleaners such as grill or oven sprays, coarse scourers or abrasive pan cleaners.



Clean the ceramic glass surface after each use when it is warm to the touch or cold. This will avoid spillages becoming burnt on.

Remove scale and water marks, fat spots and discolouration with a metallic shimmer using a commercially available ceramic glass or stainless steel cleaner.


Light Soiling

1. Wipe the ceramic glass surface with a damp cloth and a little washing up liquid.
2. Then rub dry with a clean cloth. **Remnants of cleaner must not be left on the surface.**
3. Thoroughly clean the entire ceramic glass cooking surface once a week with a commercially available ceramic glass or stainless steel cleaner.
4. Then wipe the ceramic glass surface using plenty of clean water and rub dry with a clean fluff-free cloth.

Stubborn Soiling

1. To remove food that has boiled over or stubborn splashes, use a glass scraper.
2. Place the glass scraper at an angle to the ceramic glass surface.
3. Remove soiling by sliding the blade.

i You can obtain glass scrapers and ceramic glass cleaners from your local Service Force Centre.

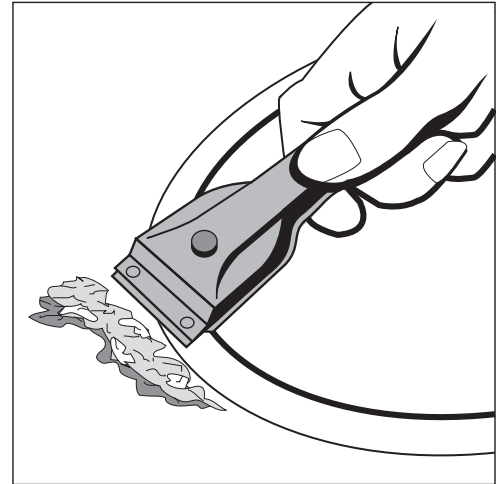


Problem Dirt

1. Remove burnt-on sugar, melted plastic, aluminium foil or other meltable materials with a glass scraper **immediately and while still hot**.

! **Important:** There is a risk of burning yourself when the glass scraper is used on a hot cooking zone!

2. Then clean the hob normally when it has cooled down.

i If the cooking zone on which something has melted has already cooled down, warm it up again for cleaning.
Scratches or dark marks on the ceramic glass surface, caused for example by a pan base with sharp edges, cannot be removed. However, they do not impair the function of the hob.

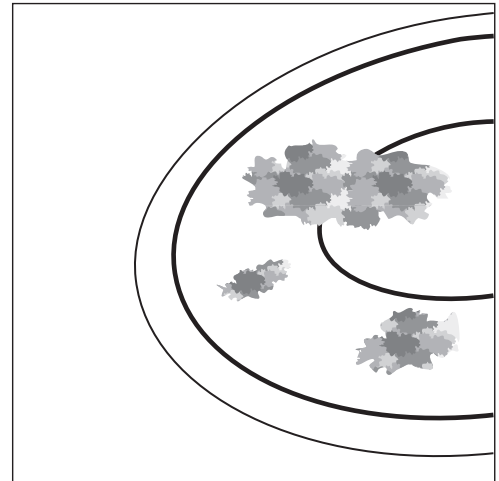

Hob Frame

! **Important!** Do not put vinegar, lemon-juice or scale removers on the hob frame, otherwise dull spots will appear.

1. Wipe the frame with a damp cloth and a little washing up liquid.
2. Soften dried dirt with a wet cloth. Then wipe off and rub dry.

What to do if ...

Rectifying faults

It is possible that faults have been caused by a minor error, which you can correct yourself with the help of the following instructions. Do not attempt any further repairs if the following instructions do not help in each specific case.



Warning! Repairs to the appliance are only to be carried out by approved service engineers. Improperly effected repairs may result in considerable risk to the user. If your appliance needs repairing, please contact your specialist dealer or local Service Force Centre.

If the ceramic glass hob is broken, please quote the **3-digit number** on the glass hob when contacting customer service.

What to do if ...

... the cooking zones are not functioning.

Check whether

- the fuse in the house wiring (fuse box) is intact. If the fuses trip a number of times, please call an authorised electrician.
- the appliance is properly switched on,
- the control lamps in the control panel are illuminated,
- the relevant cooking zone is switched on,
- the cooking zones are set at the desired settings,
- the cooking zones' safety switchoff function has been activated (see "Safety" chapter).

... you cannot switch on the cooking zones.

Check whether

- the control panel has been blocked.
- a period of more than 10 seconds has elapsed between when the On/Off button was actuated and the desired cooking zone switches on (see chapter "Switching on the appliance").
- the sensor panels are partially covered by a damp cloth or liquid.

... the display suddenly disappears except for for residual warmth.

Check whether

- the On/Off button was accidentally actuated.
- the sensor panels are partially covered by a damp cloth, liquid or similar.
- the safety switchoff function has been activated.

... after having switched off the cooking zones, no for residual warmth is indicated in the display.

Check whether

- the cooking zone was only briefly used and therefore did not become hot enough.

If the cooking zone is hot, please call customer service.

... a cooking zone will not switch off.

Check whether

- the sensor switches are partially covered by a damp cloth or liquid.
- the blocking function is switched on.

... a cooking zone will not switch on.

Check whether

- the child safety device is switched on.
- the blocking function is switched on.

... the display is illuminated?

Check whether the cooking zone has been overheated.

This display illuminates in the event of overheating, errors in the electronic equipment or for reasons related to safety.

... the appliance is not responding when a sensor panel is actuated.

The appliance will not respond to a sensor panel being actuated if you are simultaneously touching another sensor panel that is not part of a combination.

If you request a visit from customer service because of an error made in operating the appliance, a visit from a customer service engineer may not be free of charge even during the warranty period.

Installation Instructions



Important! The new appliance may only be installed and connected by a **registered specialist**.

Please observe this instruction, otherwise the warranty will not cover any damage that may occur.

Technical Data

Appliance dimensions

Width	761 mm
Depth	501 mm
Height	47 mm

Worktop cut-out dimensions

Width	750 mm
Depth	490 mm
Corner radius	R5

Cooking rings

Position	Diameter	Power
Front left	120/210 mm	750/2200 W
Rear left	145 mm	1200 W
Rear right	170/265 mm	1500/2400 W
Front right	145 mm	1200 W


Connection voltage 230 V ~ 50 Hz

Maximum connected load power 7,0 kW

Regulations, Standards, Directives

This appliance meets the following standards:

- EN 60 335-1 and EN 60 335-2-6 relating to the safety of electrical appliances for household use and similar purposes and
- EN 60350, or DIN 44546 / 44547 / 44548 relating to the operating features of electric cookers, hobs, ovens, and grills for household use.
- EN 55014-2
- EN 55014
- EN 61000-3-2
- EN 61000-3-3 relating to basic requirements for electro-magnetic compatibility protection (EMC)

 This appliance complies with the following EU Directives:

- 73/23/EEG dated 19.02.1973 (Low Voltage Directive)
- 89/336/EEG dated 03.05.1989 (EMC Directive including Amending Directive 92/31/EEG).

Safety Instructions for the Installer

- A device must be provided in the electrical installation which allows the appliance to be disconnected from the mains at all poles with a contact opening width of at least 3 mm
Suitable isolation devices include line protecting cut-outs, fuses (screw type fuses are to be removed from the holder), earth leakage trips and contactors.
- In respect of fire protection, this appliance corresponds to type Y (EN 60 335-2-6). Only this type of appliance may be installed with a high cupboard or wall on one side.
- Drawers may not be fitted underneath the hob.
- The installation must guarantee shock protection.
- The kitchen unit in which the appliance is fitted must satisfy the stability requirements of DIN 68930.
- For protection against moisture, all cut surfaces are to be sealed with a suitable sealant.
- On tiled work surfaces, the joints in the area where the hob sits must be completely filled with grout.
- On natural, artificial stone, or ceramic tops, the snap action springs must be bonded in place with a suitable artificial resin or mixed adhesive.
- Ensure that the seal is correctly seated against the work surface without any gaps. Additional silicon sealant must not be applied; this would make removal more difficult when servicing.
- Avoid installing the appliance next to doors and under windows. Otherwise hot cookware may be knocked off the rings when doors and windows are opened.
- The hob must be pressed out from below when removed.

Electrical Connection

Before connecting, check that the nominal voltage of the appliance, that is the voltage stated on the rating plate, corresponds to the available supply voltage. The rating plate is located on the lower casing of the hob.

The heating element voltage is AC230V~. The appliance also works perfectly on older networks with AC220V~.

The hob is to be connected to the mains using a device that allows the appliance to be disconnected from the mains at all poles with a contact opening width of at least 3 mm, eg. automatic line protecting cut-out, earth leakage trips or fuse.

A type H05VV-F cable or one with a higher grade must be used as the mains connecting cable.

The connection must be carried out as shown in the diagram. The connecting links should be fitted according to the appropriate connection diagram. The earth lead is connected to terminal ⊕. The earth lead must be longer than leads carrying electric current.

The cable connections must be made in accordance with regulations and the terminal screws tightened securely.

Finally, the connecting cable is to be secured with the mains cable cleat and the covering closed by pressing firmly (lock into place).


Before switching on for the first time, any protective foil or stickers must be removed from the ceramic glass surface.




Once connected to the mains supply check that all cooking zones are ready for use by briefly switching each on in turn at the maximum setting.



Electrical Connection Diagram

For UK only: 230V...240V~

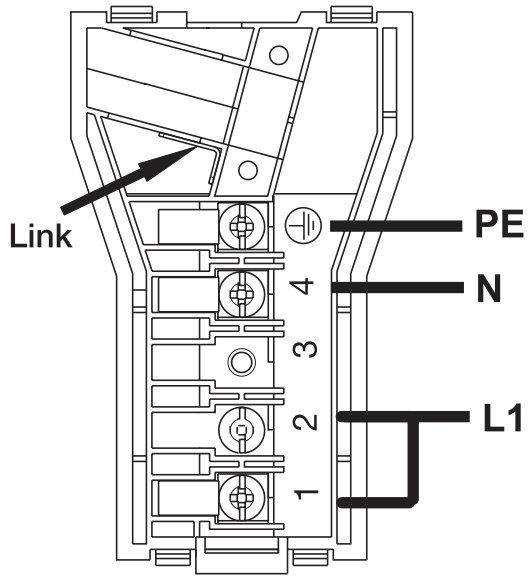



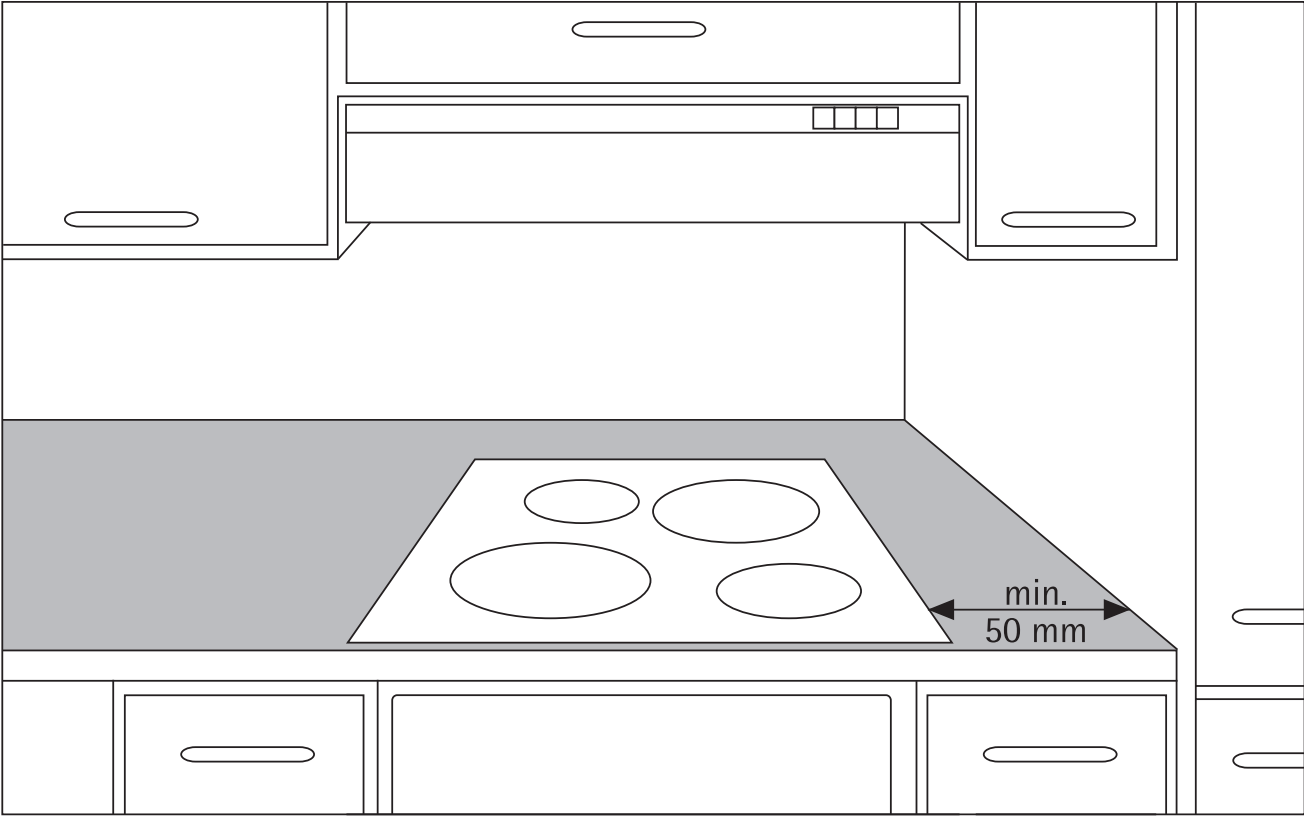

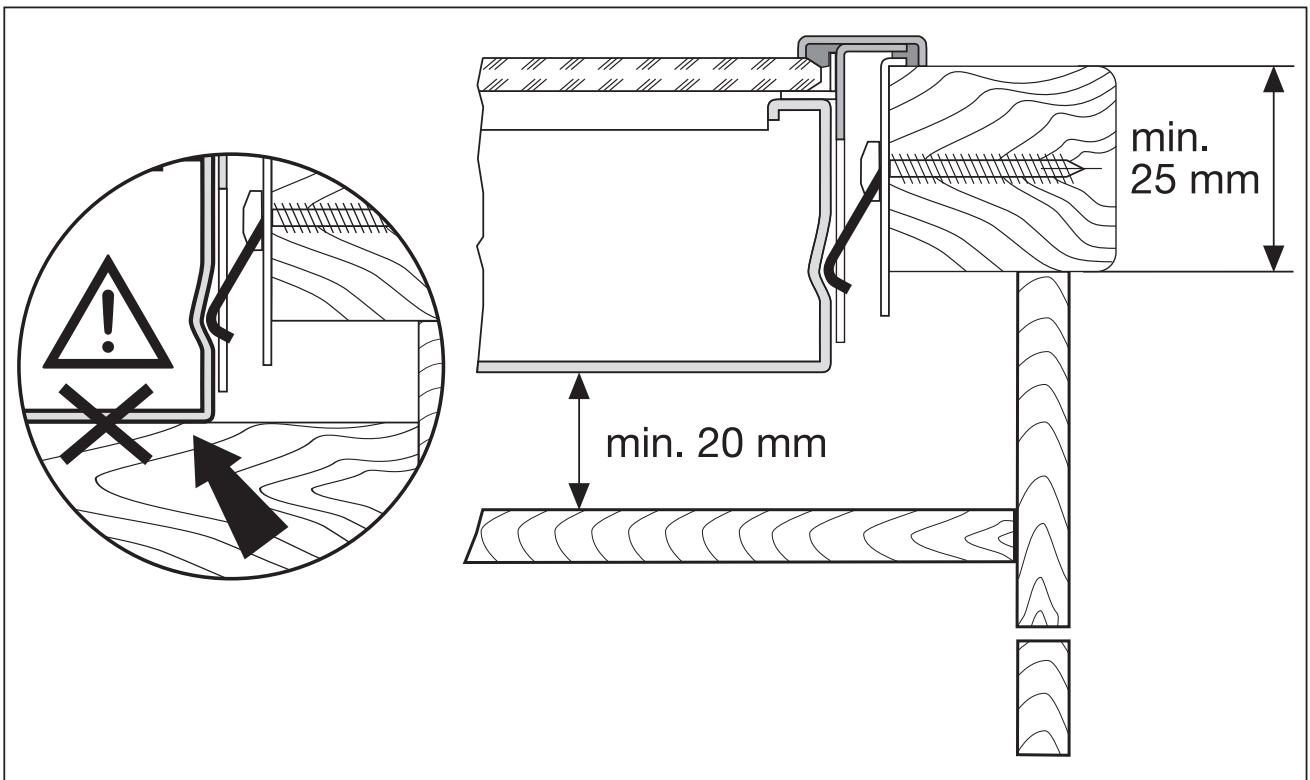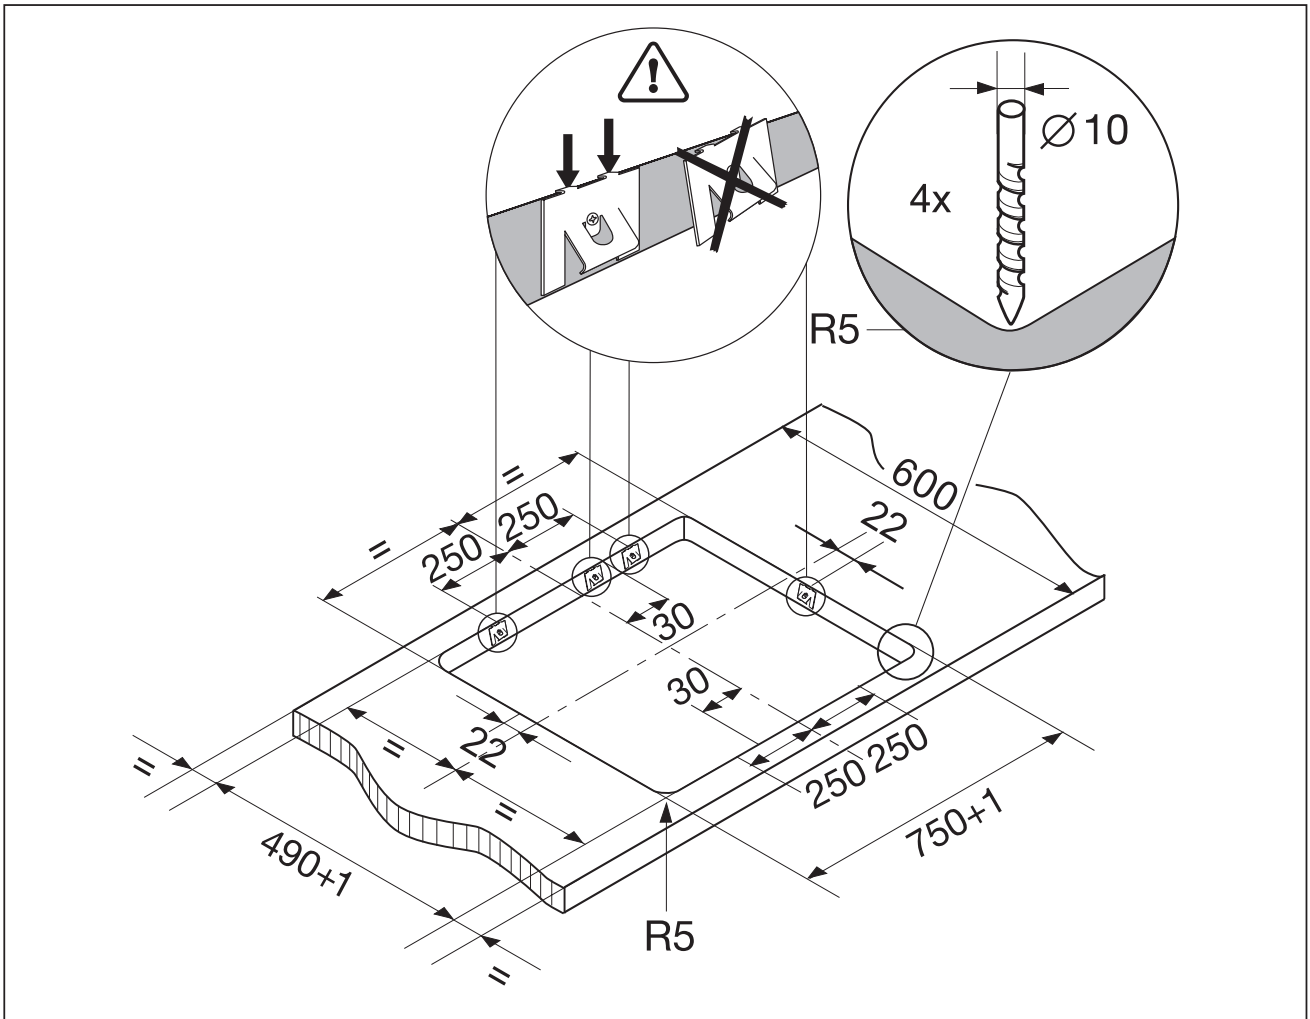Assembly





Rating Plate

Modell	ZKT 863LX	Prod.Nr.	949591691
Typ	55HBD47AO	230 V AC 50 Hz	
Made in Germany	Ser.Nr.	7,0 kW	
ZANUSSI		 	

Warranty conditions

Standard guarantee conditions

We, Zanussi, undertake that if within 24 months of the date of the purchase this Zanussi appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option repair or replace the same FREE OF CHARGE for labour, materials or carriage on condition that:

- The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
- The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's instructions.
- The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
- All service work under this guarantee must be undertaken by a Service Force Centre.
- Any appliance or defective part replaced shall become the Company's property.
- This guarantee is in addition to your statutory and other legal rights.

Home visits are made between 8.30am and 5.30pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

Exclusions

This guarantee does not cover:

- Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
- Costs incurred for calls to put right an appliance which is improperly installed or calls to appliances outside the United Kingdom.
- Appliances found to be in use within a commercial environment, plus those which are subject to rental agreements.
- Products of Zanussi manufacture which are not marketed by Zanussi.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exists in the new country of use for this brand or range of products.

- This guarantee relates to you and cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 3 44 62 20 13
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordernone	+39 (0) 800 11 7511
Sweden	Stockholm	+46 (0) 20 78 77 50
UK	Slough	+44 (0) 1753 219897

Service and Spare Parts

If the event of your appliance requiring service, or if you wish to purchase spare parts, please contact Service Force by telephoning:

0870 5 929 929

Your telephone call will be automatically routed to the Service Force Centre covering your post code area.

For the address of your local Service Force Centre and further information about Service Force, please visit the website at

www.serviceforce.co.uk

Before calling out an engineer, please ensure you have read the details under the heading „What to do if...“


When you contact the Service Force Centre you will need to give the following details:

1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model and serial number of the appliance (found on the rating plate)
5. The purchase date.

Please note that a valid purchase receipt or guarantee documentation is required for in-guarantee service calls.

Customer Care

For general enquiries concerning your Zanussi appliance, or for further information on Zanussi products please contact our Customer Care Department by letter or telephone at the address below or visit our website at **www.zanussi.co.uk**.

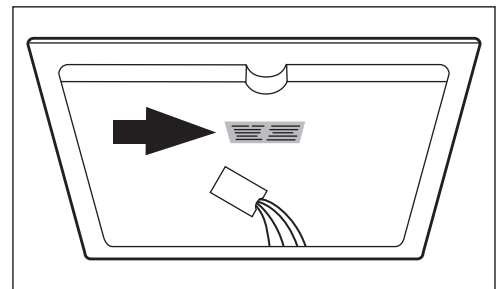

Customer Care Department
Electrolux
55-77 High Street
Slough
Berkshire, SL1 1DZ
Tel: 08705 350350 (*)


For Customer Service in the Republic of Ireland please contact us at the address below:
AEG/ Electrolux Group (Ire) Ltd
Long Mile Road/ Dublin 12
Republic of Ireland
Tel: +353 (0) 1 4090751
Email: service.eid@electrolux.ie

(*) Calls may be recorded for training purposes

822 925 196-A-181104-01

ZANUSSI

Subject to change without notice

 **The Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>