



# Owner's Instructions

REFRIGERATOR MODELS: ARD104  
ARD204

## READ THIS INFORMATION

It will tell you how to operate and care for your refrigerator.

It also offers tips on how to get the best as well as lowest cost performance.

If you prefer ordering your own parts, use the enclosed list to find the part number. Do not use the illustration number.

For parts or service information, call Absocold Corporation: (800) 843-3714 or (765) 935-7501.

Record in the space provided below the serial number and model number of this appliance.

They are located on the serial plate affixed to the backside of the refrigerator or inside the refrigerator affixed to the inner liner surface on the right hand side.

Model # \_\_\_\_\_

Serial # \_\_\_\_\_

### ONE FULL YEAR WARRANTY

Absocold Corporation guarantees to the original purchaser that this appliance will be free from defects in material and workmanship for a period of one year from the date of installation, or eighteen (18) months after receipt at destination, whichever is earlier, when this refrigerator is operated and maintained according to instructions attached to or furnished with this product.

### FIVE FULL YEAR WARRANTY ON HERMETIC COMPRESSOR UNIT

Absocold Corporation additionally guarantees, to the original purchaser only, the hermetic motor (compressor) furnished as a part of this refrigerator for a period of five (5) years from the date of installation, or sixty-six (66) months after receipt at destination, whichever is earlier, when this refrigerator is operated and maintained according to instructions attached to or furnished with this product.

During the above warranty periods, Absocold Corporation and its authorized dealers or its representatives retain the option to repair or replace the product, free of charge, if installation is within the fifty (50) states and the District of Columbia. If installation is outside the fifty (50) states, the cost of installation is borne by the purchaser, and Absocold's warranty obligations hereunder shall be limited to furnishing all replacement parts and materials, freight prepaid, to the continental United States port designated by the purchaser.

In an effort to properly administer its warranty policy, Absocold Corporation or its representatives may require a proof-of-purchase document before authorizing service or repair to the appliance under this warranty.

Warranty service information is available by simply contacting Absocold Corporation at 1 (800) 843-3714 or by contacting the dealer from whom you purchased this product.

It shall be the responsibility of the purchaser to deliver any compact refrigerator or freezer of less than 4.0 cubic feet in capacity to the nearest authorized service station, as designated by Absocold Corporation or its representatives, to obtain service under this warranty.

Except as provided herein, Absocold Corporation makes no other warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose.

This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Part No. 8336460118500C

(SR1150AB - SR1950AB - SR1950AS)

Absocold Corporation  
P. O. Box 1545  
Richmond, IN 47375

Printed in Mexico

# THINGS YOU OUGHT TO KNOW

## WHEN YOUR *QUICK CHILL 'N SNOOZE*<sup>™</sup> REFRIGERATOR IS INSTALLED

### INSPECT

Inspect for shipping damage. If damaged or parts are missing, notify your Absocold dealer at once.

### INSTALLATION REQUIREMENTS

Remove all packing material and tape. Install on a level floor or well-supported counter. Avoid any direct sunlight, heat source, or moisture. This refrigerator is designed to be *freestanding*— that is, the appliance is to be installed at least 1- $\frac{1}{2}$ " from the wall and the cabinet bottom is at least  $\frac{3}{4}$ " to 1" above the floor or carpet, in order to let the air circulate freely around the refrigerator. If this appliance is *recessed*, *built-in* or otherwise enclosed to restrict airflow, then all warranties stated herein are null and void.

### ELECTRICAL REQUIREMENTS

120 volts, 60 Hz.

### ELECTRICAL GROUNDING

(for 120-volt models only)

Must be grounded. Uses 110-120 volts, 60 Hz. (60 cycles A.C.) Do not use extension cord. Use three-prong plug, with three-prong grounded wall outlet.

Unless the above grounding method is followed, you are not protected against severe or lethal shock, in the event of a short circuit of an electrical component or wiring of refrigerator.

### CAUTION

Should you unplug refrigerator, allow at least three minutes before restarting in order to allow the start relay to function properly.

### USE AND CARE INFORMATION

#### • TIPS ON EVERYDAY USE AND CARE

**DEFROST:** As far as temperature control is set at ordinary position, evaporator is automatically defrosted and no manual operation is needed to defrost. Defrosted water is drained out to evaporating tray on the back of the refrigerator and is evaporated automatically.

**FOR ALL CLEANING:** Mix 2 tablespoons baking soda with 1 quart warm water, or use mild soap. No strong cleaners, scouring powder or pads should be used. For persistent odors, the Absocold service department has odor removal products.

#### • BEFORE CALLING FOR SERVICE

Check plug and fuse. Test outlet with lamp or other device. Check red SNOOZE light (located inside of refrigerator). If this light is on, compressor is off for 8 hours. You can turn it on by pressing SNOOZE button one more time. When you call, refer your model number and the problem to the Service Department at your nearest authorized Service Center or contact Absocold Corporation at (800) 843-3714 or (765) 935-7501.

**DANGER—ELECTRICAL SHOCK HAZARD. Disconnect power before servicing.**

### ENERGY SAVING TIPS - WAYS TO SAVE POWER, SAVE MONEY, AND STILL ENJOY YOUR REFRIGERATOR

- Reduce door openings.
- Close the door as soon as you can.
- Do not put hot foods in refrigerator.
- Keep your refrigerator away from stoves or other heat sources.

### WARNING!

- Your refrigerator should be connected directly to a grounded electrical wall outlet. No extension cords, multi-connection bars, etc. should be used.
- In case of prolonged power outage or an electrical disconnect of any type, please check your refrigerator for spoiled food.

### ADVANCED FUNCTIONS\*

Advanced functions that can provide you greater control over the refrigerator's operation:

#### SNOOZE function

Turns compressor off for 8 hours.

1. Push the SNOOZE button once. Red light appears when it is activated.
2. The refrigerator will be off for 8 hours.
3. During this period, temperature of refrigerator will rise, but once 8 hours have passed, it will start back up automatically. During this function, it is not recommended to place perishable items in this unit.
4. To deactivate SNOOZE function, simply push SNOOZE button again.

#### QUICK CHILL function

Turns compressor on continuously for 2 hours.

1. Push the QUICK CHILL button once. A green light appears when it is activated.
2. The refrigerator's compressor will operate continually for 2 hours. After this period, the refrigerator will return to normal operation. This function cools contents faster than normal operation.
3. To deactivate QUICK CHILL function, simply push QUICK CHILL button again.



\* Patent pending

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>