



myPDFmanuals


You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX KB9810E-M. You'll find the answers to all your questions on the AEG-ELECTROLUX KB9810E-M in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX KB9810E-M
User guide AEG-ELECTROLUX KB9810E-M
Operating instructions AEG-ELECTROLUX KB9810E-M
Instructions for use AEG-ELECTROLUX KB9810E-M
Instruction manual AEG-ELECTROLUX KB9810E-M

MICROMAT KB9810E

Built-In Electric Oven

User information

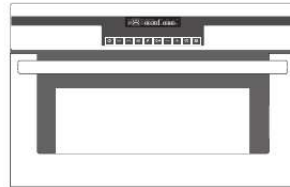

[Your user manual](#)
[AEG-ELECTROLUX KB9810E-M](#)

Manual abstract:

Considerable danger may result from improper repairs. If repairs become necessary, please contact your local Service Force Centre. Children's safety · Small children must be kept away from the appliance. Make sure that children do not touch the appliance when playing. · Always heat baby food in jars or bottles with the lid or top off. After heating, stir well or shake so that the heat is evenly distributed. Before you give the baby food to the child, please be sure to test the temperature. · When operating the grill (alone or in combination with the microwave) the viewing window becomes hot. Therefore keep small children away from the door of the appliance. Safety whilst Using · This appliance is intended to be used for cooking, roasting and baking food in the home.

· Take care when connecting electric appliances to sockets nearby. Do not allow connecting leads to come into contact with or to catch beneath the hot oven door. 5 · Warning: Risk of burns! The interior of the oven becomes hot during use. · Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully.

Do not have embers, sparks or naked flames in the vicinity when opening the door. 3 Information about acrylamides According to the latest scientific research, intensive browning of food, especially in products containing starch, may present a health risk due to acrylamide. Therefore we recommend cooking at low temperatures and not browning foods too much. 6 Microwave · Only switch the appliance on when there is food inside it. Without food inside it, the appliance could be overloaded.

· Only use microwave-safe cookware (see chapter Usage, Tables and Tips / Suitable Cookware and Material). · To protect the interior or the door of the appliance from corrosion through escaping steam (condensed water), please dry the appliance with a cloth after each use. · Do not leave the appliance unattended if food is being heated or cooked in disposable containers made of plastic, paper or other flammable materials. · If smoke appears, keep the appliance closed. Switch off the appliance and disconnect from the power supply. Do not use the appliance under any circumstances if it is no longer working correctly. · When heating liquids always put a coffee spoon or a glass rod in the container to avoid delay in boiling. With delay in boiling the boiling temperature is reached without the typical steam bubbles rising. If the container is shaken even slightly the liquid can suddenly boil over or spray violently. Risk of burns! · Prick food with „skin" or „peel", such as potatoes, tomatoes, sausages, with a fork several times before cooking so that the food does not burst.

Ensure that a minimum temperature of 70 °C is reached when cooking/ heating food. For this please refer to the power and time data in the tables. Never use mercury or liquid thermometers to measure the temperature of the food. · Foods heated with microwaves give off heat to the cookware. Use oven gloves or something similar. 7 · Do not overcook the dishes by using powers and times that are too high. The food can dry out, burn or set itself alight in certain places. · The interior of the oven, the grill heating element and the accessories become hot when the appliance is operating. Please be careful when handling them and use oven gloves or similar. Risk of burns! · Metal objects must be at least 2 cm from the walls of the interior and the oven interior door.

Otherwise spark discharge can occur and the appliance can be damaged. · If not advised otherwise, do not use aluminium foil. · Do not get anything caught between the door and the door frame. · Always keep the door seal, the door seal surfaces and the interior clean. Lack of cleanliness in the appliance can lead to dangerous situations.

· Do not store any flammable objects inside the oven. These could ignite when the oven is switched on. 3 Note on enamel coating Changes in the colour of the oven's enamel coating as a result of use do not affect the appliance's suitability for normal and correct use. They therefore do not constitute a defect in the sense of the warranty law. 8 Do not use the appliance.



[Your user manual](#)

[AEG-ELECTROLUX KB9810E-M](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>