

ADESSO WARRANTY

Adesso's warranty obligations are limited to the terms set forth below. Adesso warrants this hardware product against defects in materials and workmanship for a period of ONE (1) year from the date of original retail purchase.

If you discover a defect, Adesso will, at its option, repair or replace the product at no charge to you, provided you return it during the warranty period with shipping charges pre-paid to Adesso. You must contact Adesso for a Return Merchandise Authorization number (RMA) prior to returning any product. For each product returned for warranty service, please include your name, shipping address (no P.O. Box), telephone number, a copy of the bill of sale as proof of purchase and make sure that the package is clearly marked with your RMA number.

For warranty service outside of the United States or Canada, customer must bear the cost of shipping in both directions. Please contact support@adesso.com for instructions.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS, WHETHER WRITTEN, ORAL, EXPRESS OR IMPLIED. ADESSO SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING AND WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NO ADESSO DEALER, AGENT, OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION, EXTENSION OR ADDITION TO THIS WARRANTY.

ADESSO IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR UNDER ANY LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST

PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF EQUIPMENT OR PROPERTY AND ANY COST OF RECOVERING, REPROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH ADESSO PRODUCTS. ADESSO'S MAXIMUM LIABILITY FOR ANY AND ALL DAMAGES ARISING OUT OF USE OF THE PRODUCT SHALL BE LIMITED TO THE AMOUNTS PAID BY PURCHASER FOR SUCH PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages or exclusion of implied warranties, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

Adesso is a trademark of Adesso Inc. All other trademarks and trade names are property of their respective holders. Specifications and information in this publication are subject to change.

Please Note: Long-term repetitive use of any keyboard could cause injury to user. Adesso recommends users avoid excessive use of this or any keyboard.



Adesso Inc.

160 Commerce Way
Walnut, CA 91789
Phone (909) 839-2929
Fax (909) 839-2930
www.adesso.com

USER GUIDE



Wireless SlimTouch Mini Keyboard



MODEL: WKB-4000

For IBM and Compatible
Computer Systems

Includes Windows® Keys

INTRODUCTION

Congratulations on your purchase of an Adesso Wireless SlimTouch Mini Keyboard with integrated Touchpad. The Wireless SlimTouch Mini Touchpad keyboard features 2.4GHz connectivity, an ultra-slim, ultra-stylish design with clean lines, and an integrated touchpad.

FEATURES

- Integrated touchpad takes the place of your mouse.
- Easy to use, simply glide your finger over the touchpad.
- Small and lightweight, fits anywhere, extremely portable.
- Low-profile keys for quieter typing.
- Ideal for your LCD monitor, Plasma TV, Tablet PC, Notebook or in presentation environments.

SETUP & INSTALLATION

- 1) Make sure that your computer is turned OFF before installing this keyboard or any other hardware device.
- 2) Install the AAA batteries into the Wireless Keyboard
- 3) Plug the mini USB receiver in an available USB port on the back of your computer. (DO NOT FORCE)
- 4) Turn on the computer.

- 5) Then press the "SW" button on the mini USB receiver once. (See example)



- 6) Within 15 seconds of pressing the "SW" button press the "Fn" key on the lower left corner of the wireless keyboard. (See example)



- 7) The touchpad should function with the standard PS/2 mouse driver. Upon startup when the new hardware is detected, these drivers should be automatically selected. If you have problems, first remove any other drivers that may be installed from a previous pointing device.

NOTES

- Do not mix old batteries with new batteries.
- Do not mixed different brands of batteries.
- The wireless keyboard will go into battery saver mode after 10 minutes of inactivity. Simply press any key to "wake" it up.

- When the touchpad is not working smoothly or the cursor is moving automatically, it may be caused from low batteries. Please install new batteries to improve performance.
- Double-click or tap on the touch pad quickly to select or open a program.
- The bottom button functions like the left mouse button and the top button as the right mouse button.
- Depress the bottom button and move the cursor to select an object, highlight or move item to a different location.

IMPORTANT NOTICE

Extended continuous use of this keyboard may exacerbate repetitive motion or stress injuries. As with any equipment that may cause repetitive motion injuries, preventative devices, such as a wrist rest or wrist guard, are recommended, and the wrist should always be kept in a straight position when typing.

REQUIREMENTS

- Windows XP, 2000, Me, 98SE
- USB port for Wireless functionality

SUPPORT

For technical support, please send an e-mail to: support@adesso.com or visit our Frequently Asked Questions (FAQs) site at: <http://www.adesso.com/faqs.asp>

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>