



LASER BARCODE SCANNER



USER'S GUIDE

NUSCAN 3200 series

Table of Contents

1. Limited Warranty	1
2. Introduction	2
3. Contents	3
4. Barcode Symbologies	3
5. Product Introduction	4
6. Installation	4
Connection	4
Test Scanning.....	5
Maintenance	5
7. Scanning Mode Selection	6
8. Beeper Mode Selection	7
9. Default Parameters	8
10. Barcode Scan Field.....	9
11. Technical Specifications	10
12. Programming Guide.....	11
13. Trouble Shooting.....	11
14. Product Support.....	12

Note:

This manual should only be used to make changes in the configuration of the scanner for specific applications.

The NUSCAN 3200 Series scanners are ready to scan most kinds of barcodes. This laser barcode scanner does not require software or drivers to operate. The scanner enters data as keyboard data.

If you are unsure of the scanner configuration or have scanned the incorrect codes, please scan the "Reset Configuration to Defaults" barcode. This will reset the scanner to its factory settings.



1. Limited Warranty

No warranty of any kind is made in regard to this material, including, but not limited to, implied warranties of merchantability or fitness for any particular purpose. We are not liable for any errors contained herein or for incidental or consequential damages in connection with furnishing, performance or use of this material. We shall be under no liability in respect of any defect arising from fair wear and tear, willful damage, negligence, abnormal working conditions, failure to follow the instructions and warnings, or misuse or alteration or repair of the products without written approval. No part of this document may be reproduced, transmitted, stored in a retrieval system, transcribed, or translated into any human or computer or other language in any form or by any means electronic, mechanical, magnetic, optical, chemical, biological, manual or otherwise, except for brief passages which may be quoted for purposes of scholastic or literary review, without express written consent and authorization.

General handling precaution



DO NOT DISPOSE IN FIRE.



DO NOT USE OR STORE SCANNER IN HUMID AREAS



DO NOT DROP THE SCANNER



DO NOT TAKE APART WITHOUT PROPER AUTHORIZATION

2. Introduction

The NUSCAN 3200 Laser Barcode Scanner combines the best scanning performance and value. NUSCAN 3200 comes in multiple modes to handle any task. Its flexible architecture gives users different configurations to choose from, with different combinations of communications.

With its rugged high class ID design and ergonomic styling, NUSCAN 3200 offers superior service life and reduces user fatigue. In addition to 80 scans per second performance, it is equipped with RIOTEC Laser Engine which is no moving parts inside, soft fixed laser light, high reliability, linear receiver, and long scanner lifetime. Moreover, NUSCAN 3200 window covered with rubber that fully protects product and increases shock resistance.

Boasting several compatible interfaces (USB, K/B and RS-232) and numerous configurations, the scanner is a powerful and reliable handheld scanner without compromise.

3. Contents

The NUSCAN 3200 Long Range Laser Barcode Scanner package should contain:

NUSCAN 3200 Long Range
Laser Barcode Scanner



User's Guide




4. Barcode Symbologies

Barcodes are symbols consisting of a series of bars and spaces which can be applied to packages, cartons, bottles and other commercial products. The bars and spaces in each symbol are grouped in such a way to represent a specific ASCII character or function. The interpretation of these groups is based on a particular set of rules called Symbologies. Various symbologies have been developed for particular applications. Some examples are shipping and receiving, manufacturing, retail, healthcare, transportation, document processing and tracking, and libraries.

NUSCAN 3200 Series Scanners can read most of the popular barcode symbologies including Code 39, Code 93, Code 128, Code11, Interleaved 2 of 5, UPC-A, UPC-E, EAN/JAN-8, EAN/JAN-13, Codabar, UPC/EAN/JAN, MSI,.....

5. Product Introduction

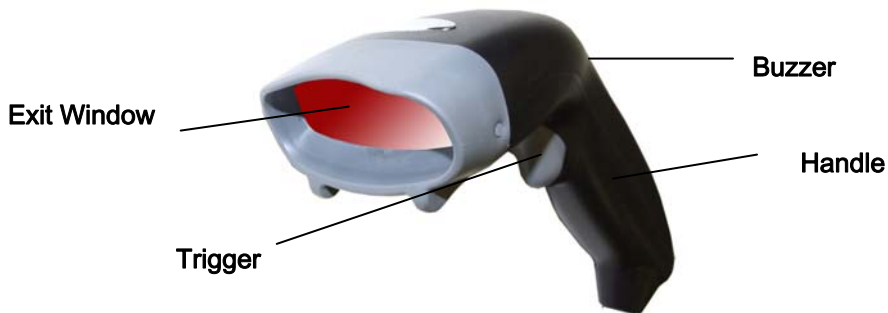


When a barcode is successfully decoded, the blue LED light of the scanner will turn on and off and the scanner will beep once. If the barcode is not successfully read, the LED will show red and the buzzer will not sound.


6. Installation

Insert the plug on the free end of the Communications Cable into the appropriate connector on the host as below described:


a. USB Connection

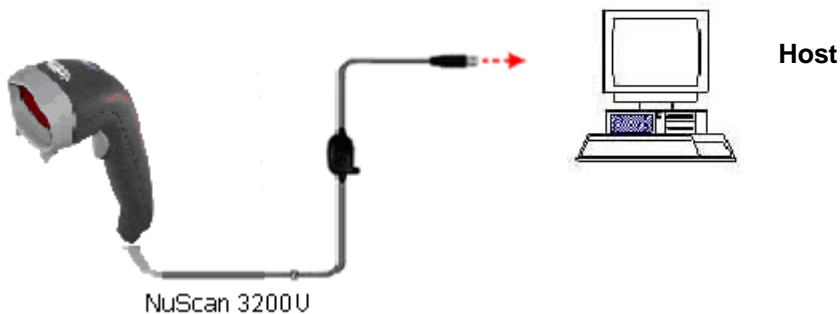

b. K/B Connection

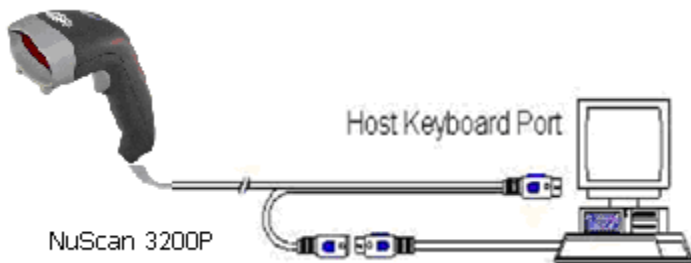

c. Serial Port (RS-232) Connection

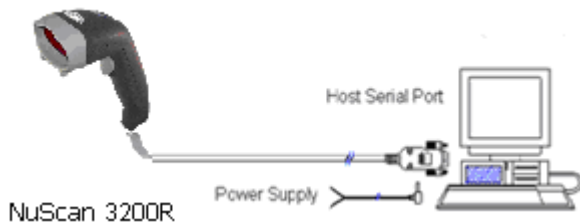

NOTE: For Serial port (RS-232), please plug the power connector of 5V power adapter to RS232 cable.

1. Be sure that Host computer is turned off.
1. Ensure that all connections are secure.
2. Turn on your Host.
3. Aim the scanner at a barcode. Ensure that the scanner is in trigger mode (default), and press the trigger.
4. On successful decode, the blue LED light will turn on and off and the scanner will beep once.

Tip

Do not hold the scanner directly over a barcode at 90°. Scanning light bounces directly back into the scanner from the barcode label is known as specular reflection which will create a "dead zone" where decoding is difficult. Practice a few times to find what range of angles works best.

Maintenance

Cleaning the scan window is the only maintenance required. A dirty window may affect scanning accuracy.

Wipe the scanner window gently with a lens tissue or other material suitable for cleaning optical material.

Do not spray water or other cleaning liquids directly onto the window.

7. Scanning Mode Selection

Trigger Mode (Default)

The scanner becomes inactive as soon as the data is transmitted. It must be triggered to become active again.



Continuous Mode

When set this code, laser light is always ON. Can read barcode continuously after code transmission.



Pulse Mode

When set this code, laser light will flash when standby. Can read barcode continuously after code transmission.



Reset Mode

The reading of the "RESET" label turns all the parameters back to default values.



8. Beeper Mode Selection

GOOD READ BEEP TONE - RESET



0B142

(Default)

GOOD READ BEEP TONE - NONE



014200

Reset Mode

The reading of the "Reset Configuration to Defaults" label turns all the parameters back to default values.



0B

9. Default Parameters

These tables give the default settings of all the programmable parameters.

DEFAULT VALUES OF OPERATING PARAMETERS

Function	Default Values
Scanning Mode Selection	Trigger mode
Message/Block mode selection	Message
Good read beeper tone selection	On

DEFAULT VALUES OF K/B PARAMETERS SETTING

Function	Default Values
Keyboard type selection	IBM PC/AT USA
Message terminator	Enter/ carriage Return


DEFAULT VALUES OF RS-232 (SERIAL) COMMUNICATION PARAMETERS

Function	Default Values
Handshaking protocol	None
Baud rate	9600
Data bit	8
Stop bit	1
Parity	None
Message terminator selection	CR

DEFAULT VALUES OF USB COMMUNICATION PARAMETERS

Function	Default Values
Keyboard Type	US Keyboard
Message terminator	Enter

10. Barcode Scan Field

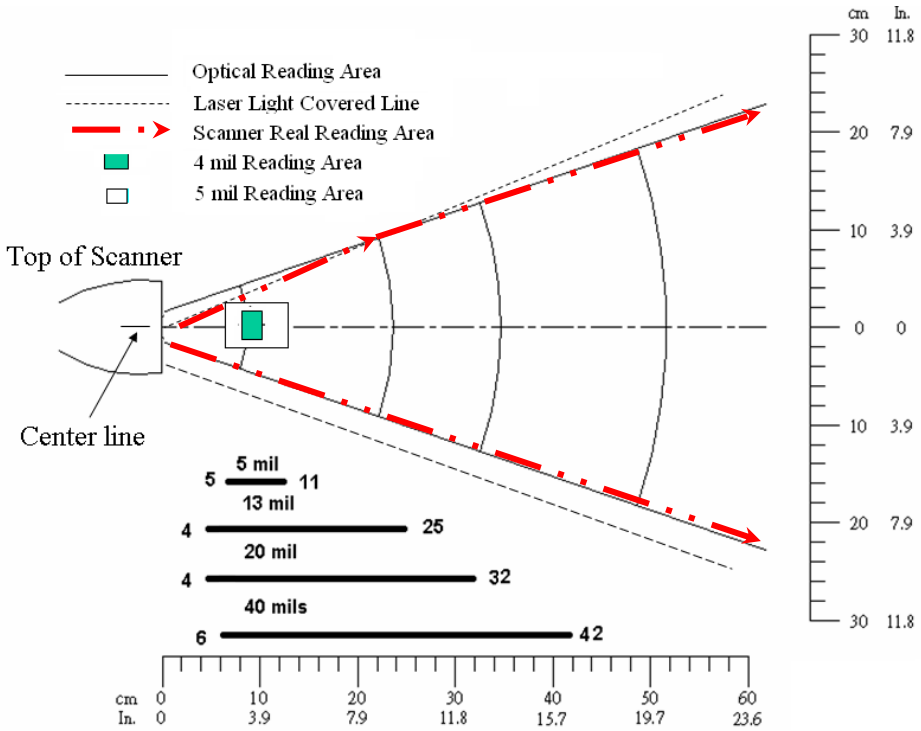

Depth of Field (Up to 42 cm): Based on Symbol's Standard Code 39 PCS=0.9 lable and 600 lux environment and there are +/- 1 cm tolerance

11. Technical Specifications

OPERATIONAL	
Light Source	650nm Laser Diode
Optical System	Linear CCD
Scan Speed	80 scans per second
Minimum Bar Width	4 mil
Print Contrast	45% or more @ UPC/EAN 100%
Reading Indicators (LED)	Two-color LED (blue and red)
Beeper Operation	ON/OFF
System Interfaces	USB, K/B or RS-232
PHYSICAL	
Height	7.16 Inches (182 mm)
Depth	3.66 Inches (93 mm)
Width	2.40 Inches (61 mm)
Weight	0.28 LBS (130g +/- 5g) (No cable)
Cable	6 ft (2m)
POWER	
Input Voltage	5 VDC +/- 0.5 V
Power	20mA @ 5V (standby current)
Operating Current	60 mA @ 5V
Regulation	FCC Class A & CE
ENVIRONMENTAL	
Temperature-Operating	0°C ~ 50°C (32°F ~ 122°F)
Temperature-Storage	-20°C ~ 60°C (-4°F ~ 140°F)
Humidity-Operation	10% ~ 85% (non-condensing)
Humidity-Storage	5% ~ 95% (non-condensing)
Light Levels	Up to 36,000 Lux
Shock	1.5m drop onto concrete

12. Programming Guide

If you need to make changes in the configuration of the scanner for specific applications, a full Programming Guide can be downloaded at:

http://www.adesso.com/productmanuals/UserGuide_NuScan3200.pdf

13. Trouble Shooting

a. Problem: Nothing happens when you follow the operating instructions.

Possible Cause	Possible Solution
Interface cables are loose.	Check for loose cable connections.

b. Problem: Light comes on, but symbol does not decode.

Possible Cause	Possible Solution
Scanner is not programmed for the correct bar-code type.	Please refer User's Guide and be sure to select the correct interface selection and ensure that the scanner is programmed to read the type of barcode you are scanning.
Barcode symbol is unreadable.	Check the symbol to make sure it is not de-faced. Try scanning test symbols of the same barcode type.
Distance between scanner and barcode is incorrect.	Move the scanner closer to or further from the barcode.

c. Problem: Symbol is decoded, but not transmitted to the host.

Possible Cause	Possible Solution
Scanner is not programmed for the correct host type.	Please make sure the scanner is configured to the appropriate host type by scanning the corresponding programming barcode on the User's Guide.

d. Problem: Scanned data is incorrectly displayed on the host.

Possible Cause	Possible Solution
Scanner is not programmed to work with the host.	<p>Be sure proper host type is selected.</p> <p>For RS-232, ensure the scanner's communication parameters match the host's settings.</p> <p>For keyboard emulation configuration, ensure the system is programmed for the correct keyboard type, and that the CAPS LOCK key is off.</p> <p>Be sure editing options (e.g. UPC-E to UPC-A Conversion) are properly programmed.</p>

14. Product Support

Website Support:

We have listed most of our FAQ (Frequency Asked Questions) at

<http://www.adesso.com/faqs.asp>

If it does not help you to resolve your product issues, you may also contact Adesso Technical Support by email or telephone support during 9:00AM to 6:00PM PST from Monday through Friday.

Email Support: support@adesso.com

Email your request to ***support@adesso.com*** and include the following information:

- Your Name & Contact email address & telephone number
- Model number & Serial number of your Adesso product
- Operating System
- Description of how you installed and set up your Adesso product
- Description of your technical difficulty

Phone Support: **(800) 467-1195**

Before you call us for Tech-Support, please provide below information:

- Your Name & Contact telephone number
- Model number & Serial number of your Adesso product
- Operating System
- Description of how you installed and set up your Adesso product
- Description of your technical difficulty

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>