

professional mobile fog machine

DYNO-FOG™



SPECIFICATIONS:

MODEL - Dyno-Fog™

WEIGHT: 10 LBS.

DIMENSIONS: 5" X 6.75" X 15"

FUSE: 10A AGC

SUPPLY VOLTAGE: 120V

WARM UP TIME: 5 Minutes

TANK CAPACITY: 1 Quart Removable

OUTPUT: 4,000 cubic feet per minute

FLUID TYPE: Water Base American DJ Fog Juice™

DUTY CYCLE: Not to exceed 6 hours turned on.

HEATER: 1000 WATT

Controller with 10 ft. cable &

Hanging Bracket Included

NEVER POINT OR AIM ANY FOG MACHINE TOWARDS PEOPLE OR THEIR CLOTHING. FOG MACHINES EMIT HOT VAPOR AND SHOULD BE USED WITH THE SAME CARE THAT YOU WOULD OBSERVE WHEN USING AN ELECTRIC KETTLE OR IRON.

TO HELP PREVENT UNIT FROM CLOGGING, USE AMERICAN DJ® CLEAN MACHINE™ LIQUID. CLEAN MACHINE IS RECOMMENDED WHEN STORING YOUR FOGGER FOR MORE THAN 1 WEEK, OR AT LEAST ONCE A MONTH AS NORMAL MAINTENANCE WHEN UNIT IS BEING USED ALL THE TIME. ITS LIKE A TUNE UP FOR YOUR FOG MACHINE! CLEAN MACHINE REMOVES PARTICLE BUILD UP IN THE HEATER AND GIVES LONGER LIFE TO THE FOG MACHINE. CLEAN MACHINE IS AVAILABLE IN GALLON OR QUART BOTTLES FROM YOUR LOCAL AMERICAN DJ® DEALER.

CONGRATULATIONS ON YOUR PURCHASE OF THE *American DJ®* Dyno-Fog™.

Operating Instructions:

Before attempting any operation please make sure there is an adequate supply of American DJ Fog Juice™ in the fluid reservoir. Running the fog machine dry will cause pump failure and or clogging. This is the largest cause of failure in fog machines. Plug the Dyno-Fog™ into a standard 110V/120V electrical outlet. The unit will draw up to 6A of power. Connect the remote control into the rear of the machine, the red L.E.D. on the remote will turn 'ON'. The fog machine will take approximately 5 minutes to reach operating temperature. Once the machine has warmed up, the red L.E.D. on the remote will turn 'OFF'. To emit fog, press the button on the remote for desired length of time. If fog does not come out, after holding the button down for 30 seconds, check the fluid tank and hose to make sure there is fluid going through the hose. From time to time the red L.E.D. light will come on as the machine reheats to the proper operating temperature.

Trouble Shooting and Service:

If you experience low output, pump noise, or no output at all, disconnect the machine immediately. Do not attempt to continue use as this may damage the unit. Check fluid level, the external fuse, remote connection, and main power. If all of the above appears to be O.K., and the unit continues to fail to operate correctly, the unit will require service. Return the machine to an American DJ Authorized dealer or service center.

We recommend you fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompanied by an R.A. #. If the unit is under warranty, you must provide a proof of purchase invoice.

Affordable Quality Lighting Products from *American DJ®* Los Angeles, CA 90058 USA

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>