

American DJ®

User Instructions

S-100A™

STROBE



Caution! Always disconnect from main power before replacing lamps or servicing unit. Remember to always replace with same lamps and fuses.

Thank you for purchasing this American DJ® product. For your convenience this strobe light has been lamped and is ready to be used, there is no assembly required. Please read the following instructions before installing or using your new unit.

Model: S-100A™

SPECIFICATIONS:

Lamp: ZB-45
Power: 110V/60Hz
Working Position: Any
Weight: 7 lbs.
Size: 9" x 9" x 9"

Operating Instructions:

Unit is ready to be hung or set on the ground. After plugging in unit, the light can be controlled by the strobe flash adjustment pot on the rear of the strobe. The S-100A™ is a 45W strobe, including mounting bracket and control signal input and output for linking up to four S-100A's. For use with the S-10A™, S-4A™, or the S-2A™ remote controls. To link strobes use a 1/4" to 1/4" mono cable.

To replace lamp; Unplug unit. Unscrew front two screws and remove front plastic. Take out lamp, replace with a new lamp, then reassemble. Do not take the metal housing apart, strobes retain HIGH VOLTAGE inside. There are no serviceable parts inside.

For service contact you local *American DJ*® Dealer.

American DJ® LOS ANGELES, CA. 90058

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>