


MP150

ATTENTION: Please recharge the MP3 player before using it!

### Accessories

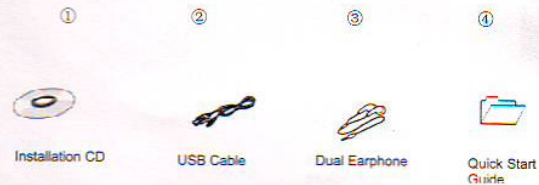

### Buttons and the functions

1. **[R/V]** :Record mode or volume mode
2. **[←]** :Backward
3. **[▶]** :Play/Pause/confirm button
4. **[→]** : Forward

### Menu Navigation

- > **[M]** button: Enter Main-Menu or Sub-Menu or return
- > Skip button (**[▶]** / **[←]**): Shift menus.
- > Play/Pause button (**[▶]**): Play, Pause, or confirm.

### Adjust Volume

In MP3 Play, RPL mode, FM mode, short press **[R/V]** and short press **[▶]** / **[←]** button to adjust the volume.

### RPL (Record mode and Play the record mode)

1. Long press **[M]** button to enter into main menu.
2. Short press **[▶]** / **[←]** button to select RPL mode.
3. Short press **[▶]** button to confirm.
4. Long press **[R/V]** button start to record.
5. Short press **[▶]** button to pause record.
6. Short press **[R/V]** button to save the record file.
7. Short press **[▶]** button to play the record.
8. Short press **[M]** button to enter into sub menu when playing record mode (e.g. Repeat, Play Rate, Intro, Display, A-B, File Browse)
9. Short press **[▶]** button to confirm.

### FM Radio (Optional function and only for MP3 player with "FM" function.)

1. Long press **[M]** button to enter main-Menu.
2. Short press **[▶]** / **[←]** button to select "FM Radio" mode.

3. Short press **[▶]** button to confirm.

### Equalizer:

1. Select Equalizer mode and short press **[▶]** button to enter into.
2. Short press **[▶]** / **[←]** button to select your desired option (e.g. Normal, Pop, Rock, Classic, Jazz, Bass, Custom EQ)
3. Short press **[▶]** button to confirm.

### 3D:

1. Select 3D mode and short press **[▶]** button to enter into.
2. Short press **[▶]** / **[←]** button to select your desired option(e.g. ON, Off)

### Play Rate:

1. Select Play Rate mode and short press **[▶]** button to enter into.
2. Short press **[▶]** / **[←]** button to select your desired option(e.g. 1.00X, 1.14X, 1.33X, 0.67X, 0.80X)
3. Short press **[▶]** button to confirm

### Intro:

1. Select "Intro" mode and short press **[▶]** button to enter into.
2. Short press **[▶]** / **[←]** button to select your desired option from "00" to "15"
3. Short press **[▶]** button to confirm

### Display:

1. Select "Display" mode and short press **[▶]** button to enter into.
2. Short press **[▶]** / **[←]** button to select your desired option(e.g. Off, Wave motion, Stereo)

4. Short press **[▶]** button to save.

### Record FM

In the receive the FM radio, long press **[R/V]** button to enter record mode, press **[R/V]** button exit the FM record mode to enter Play the record file mode.

### SYS (system)

1. Long press **[M]** button to enter main menu.
2. Short press **[▶]** / **[←]** button to select "SYS" mode.
3. Short press **[▶]** button to enter into.
4. Press **[▶]** / **[←]** to choose your desired mode(e.g. USB Mode, Time, Power, Language, Display, Sys Tools)
5. Short press **[▶]** button to confirm.

### USB Mode:

- Short press **[▶]** / **[←]** button to select USB Mode (Pen Drive or DRM Download)
- Time:
  - Short press **[▶]** / **[←]** button to select Time (Adjust, Alarm, Time Zone)
- Adjust Time: Short press **[M]** button to select YY-MM-DD and the time options, and short press **[▶]** / **[←]** button to confirm.

DRM: (Optional Function and no this icon in System if MP3 has no "DRM")

3. Short press **[▶]** button to confirm

### A-B repeat

1. Select "A-B" mode and short press **[▶]** button to enter into.
2. Short press **[R/V]** button to select "A" point and short press **[R/V]** button again to select "B" point.
3. Short press **[R/V]** button the third to cancel "A-B" repeat.

### File Browse

1. Select "File Browse" mode and short press **[▶]** button to enter into.
2. Short press **[▶]** / **[←]** button to select your desired file.
3. Short press **[REC/VOL]** button to delete the file, short press **[▶]** / **[←]** button to select "Yes" or "No", Short press **[▶]** button to confirm delete.
4. Short press **[▶]** button to play your desired file.

### Adding/ Removing MP3 Files

1. Plug USB connector into computer
2. Add MP3 files to the USB storage's folder
3. Delete any MP3 files from the USB storage's folder
4. Close the USB Storage's folder (right click on icon).
5. Follow Operating system guidelines for removal of unit.
6. Remove unit from Computer.

5. **[M]** : Menu button
6. **[HOLD ▶]** : MP3 lock button

### Play MP3 Music

#### To Start:

1. Connect earphone to earphone jack.
2. Switch \* **[HOLD ▶]** \* to no lock position.
3. Long press **[▶]** button to turn on. (The default mode is "Music" mode)
4. Short press **[▶]** button to play music.

In the play mode, short press **[M]** to enter into sub menu and short press **[▶]** / **[←]** button to select your desired mode (e.g. Repeat, Equalizer ,3D, Play Rate, Intro, Display, A-B, File Browse)

Short press **[▶]** to confirm.

To return main-Menu: Long press **[M]** button

To Pause play: Short press **[▶]** button.

To resume play: Short press **[▶]** button again.

To change tracks: use **[▶]** / **[←]** button.

To enter record mode: long press **[R/V]** button to start to record.

To turn unit off: Long press **[▶]** button.

#### Repeat:

1. Select repeat mode and short press **[▶]** button to enter into.
2. Short press **[▶]** / **[←]** button to select your desired option(e.g. No Repeat, ONE, All, Random All, Dir Repeat, Dir All Repeat, Dir Random All)

2

3. Short press **[▶]** button to enter "FM Radio" mode.
4. Short press **[▶]** / **[←]** button to tune your desired stations.

Short press **[▶]** button to enter sub menu (e.g. Preset, Auto Search, Manual Search, Save, Exit)

Short press **[▶]** button to confirm.

#### Preset

1. Short press **[▶]** / **[←]** button to select the preset stations.
2. If none preset station found, short press **[▶]** button to enter sub menu (e.g. Preset, Auto Search, Manual Search, Delete, Delete all, Exit) to select "Auto Search" or "Manual search" mode to search the station then save.

#### Auto Search

Select "Auto search" mode, the FM tuner will search stations automatically, short press **[▶]** button to enter sub menu (e.g. Preset, Auto Search, Manual Search, Save, Save all, Exit)

#### Manual Search

Select "Manual search" mode, press **[▶]** / **[←]** to select the desired station frequency by 0.1MHz. Short press **[▶]** button to enter sub menu (e.g. Preset, Auto Search, Manual Search, Save, Exit)

#### Save

1. Select your desired band
2. Short press **[▶]** button to enter into sub menu to select "Save" mode

- In USB Mode to select DRM Download mode and short press **[▶]** button to confirm.
- Plug in the Player to the USB port of the PC.
- Enter the Media Player mode in the computer automatically to operate synchronous.

**NOTE: After plugging in the USB cable, press **[M]** button to switch between USB mode and MTP (Media Transfer Protocol) mode for DRM function.**

Power:

Short press **[▶]/[←]** button to select Auto off: 000 or in playback. When you select "Auto off:000" and press **[▶] / [←]** to select your desired time.

Language:

- Select language mode and short press **[▶]** button to confirm.
- Short press **[▶] / [←]** to select your desired option (e.g. English, Chinese(Simp), Chinese (Trad), Czech, Danish, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Norwegian, Polish, Portuguese, Russia, Spanish, Swedish, Turkish, Ukrainian, Holland, Arabic, Thai)
- Short press **[▶]** button to confirm.

Display:

Short press **[▶] / [←]** button to select Contrast or Backlight. Short press **[▶] / [←]** button to select your desired number.

Sys Tools:

- Short press **[▶] / [←]** button to select your desired option (e.g. Del File, Format, Reset, System Info.)
- Short press **[▶] / [←]** button to select "Format" mode and short press **[▶]**

- button to enter into.
- Short press **[▶]** button to enter into sub menu(e.g. Quick, Complete)
- Short press **[▶] / [←]** button to select your option and short press **[▶] / [←]** button to select "Yes/NO"
- Short press **[▶]** button to confirm.

Select "Reset" mode and short press **[▶]** button to confirm. Short press **[▶] / [←]** button to select "Yes/NO"

Select "System Info" mode and short press **[▶] / [←]** button to look "FW,CHIP and FREE"

**CD disk use specification**

- USB Flash Disk driver for windows98SE (If the user's computer OS is Windows98SE, please install the driver)
  - Put CD disk to the CD driver
  - Click the right key to turn on CD driver and to operate "CD disk/driver/MP3/SETUP.EXE" file.

9

## Technical Specification

No.	Name	Description
1	Capacity of Flash Memory	Build-in Flash Memory, up to 2G.
2	USB Interface	USB2.0(High speed)
3	LCD Display	128x64, 2-color (yellow and blue) OLED
4	Power supply	Li-Polymer battery
5	S/N ratio	>85dB
6	Audio Frequency Range	20hz - 20khz
7	EQ	Normal, Pop, Rock, Classic, Jazz, Bass, Custom EQ
8	Decoding Format	MP3 (MPEG 1.0/2.0/2.5, Layer 1/2/3, ID3 display supported) and WMA
9	File System	FAT16, FAT32
10	File number/folder	9999 files (max)/5
11	Operating Temperature	5°C ---35°C (41°F---95°F)
12	Operating Moisture	10%---75%

736-MD288i006



- Click "NEXT" to enter into the next picture.
- Click "NEXT" to enter into the next picture.
- Choose "Finish" to finish setup program. Restart the PC and you can use the MP3 player.

### 2. Format to the MP3 player

The MP3 player format is "FAT" format. If you will format the MP3 player and click right key to choose format mode to format in the operate system.

10

## Notice

- ▶ Please unlock the button before use.
- ▶ EQ is not obvious when playing WMA format music.
- ▶ Can't identify the sixth and above sixth level of directory.
- ▶ Do not leave the player in a place subject to moisture with temperature higher than 35°C or lower than -5°C
- ▶ Do not use the earphones while driving an automobile or riding a bicycle, it's not only dangerous but also against the law.
- ▶ It may cause an accident if you turn up the volume of the earphones while walking down the street, especially crossing at intersections.
- ▶ Do not turn up the volume too high, doctors warn against prolonged exposure to high volume.
- ▶ Stop using the device or turn the volume down if you have ringing in your ears.
- ▶ Our packages use cardboard, polyethylene, and do not use any unnecessary materials
- ▶ As U-disk, the disk will be write-protected if you switch the hold to lock the buttons.
- ▶ Press **[Reset]** button to reset the setting when hang up.
- ▶ If the file is WMA format that do not support "Play rate" mode.
- ▶ The user manual only for reference. It is standard by the sample.

11

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>