



# The Big Caboose Stand-On Triple Instruction Manual

These instructions are for the following Joovy Style #'s:

430, 431, 437

Patent No. 5,622,375



**Please read this instruction manual completely before using this stroller. Keep these instructions for future reference.**

Joovy • 2919 Canton Street • Dallas, TX 75226 • (877) 456-5049 • Fax: (214) 761-1774  
E-mail: [customerservice@joovy.com](mailto:customerservice@joovy.com) • Website: [www.joovy.com](http://www.joovy.com)



# WARNINGS

- Failure to follow these instructions could result in serious injury or death.
  - Never leave child unattended.
  - Avoid serious injury from falling or sliding out.
  - Always use safety belts and insure that all children are positioned according to these instructions.
- 
- ✓ Be certain that the stroller is fully opened, BOTH safety latches are in position, and the wheel brakes are on before allowing children near the stroller.
  - ✓ The maximum weight of the child that can be seated in each front seat is 40 pounds.
  - ✓ The rear stand-on platform and the rear bench seat are designed for a child that is at least 2-1/2 years old but LESS than 45 pounds and 40 inches tall.
  - ✓ Use of the stroller with three children weighing more than 40 pounds each, or children weighing a total of more than 125 pounds, will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition.
  - ✓ Never use this stroller to carry more than 3 children at the same time.
  - ✓ Never allow a child to step on the footrest to get into or out of the stroller.
  - ✓ Do not use the stroller on stairways or escalators.
  - ✓ Hanging purses, shopping bags, parcels, diaper bags or other accessory items from the handle bars or any other parts of the stroller may change the balance of the stroller and cause a hazardous unstable condition.
  - ✓ The maximum weight that can be carried in the storage basket is 10 pounds. Excessive weight may result in a hazardous unstable condition.
  - ✓ When installing an infant carrier onto the stroller, ALWAYS use the restraining strap to secure the carrier in place.
  - ✓ Never allow your stroller to be used as a toy.
  - ✓ Discard all packaging materials properly. Do not allow children to play with them.
  - ✓ To clean, use only mild household soap or detergent and warm water on a sponge or clean cloth.
  - ✓ Check your stroller for loose rivets, snaps, worn parts, and torn material or stitching on a regular basis.
  - ✓ Discontinue use of the stroller should it malfunction or become damaged.
  - ✓ Please contact our customer service department to arrange for repair or obtain replacement parts.

**Please do not return this product to the store**

If you experience any difficulty with the assembly or use of this product, if you have a question regarding these instructions, please contact our Customer Service Department at 1-888-597-0992 between the hours of 8:30 am and 5:00 pm Central Time.

**Please note: Styles and colors may vary.**

# Assembling and Using your Stroller

To insure safe operation of your stroller, please follow these instructions carefully

## Unpacking the Product

- Carefully remove stroller and all parts from the box and plastic bag.
- Identify the parts (stroller, front wheels (2), canopy (2), tray (2), car seat carrier support (2) and documents) with the pictures in Figure 1.
- Discard all packaging materials properly.
- Remove the plastic coverings from all foam handles and any other areas of the product and discard also.
- DO NOT allow children to play with any packaging materials.



Figure 1

## CAUTION

**Adult assembly is required for this product.**

## Unfolding the stroller

- Keep children away from stroller while unfolding.
- Position the stroller with the handle bar closest to you.
- Release the locking latch located on the right side by lifting the lever off of the extended rivet. See Figure 2.
- Lift up slightly on the handle of the stroller. Then place one foot onto the rear platform and pull up and back on the handle until both side frame bars snap into their locking positions in the frame.

CAUTION: While unfolding the stroller, be careful to keep your fingers from being pinched by moving parts.

- Lock the safety latches on the lower portion of each side of the stroller by pushing the lever down over the extended rivet. See Figure 3.
- Ensure that the stroller is completely opened and the safety latches are secured before ANY use of the stroller.



Figure 2



Figure 3

## WARNING

**ALWAYS secure the safety latches on the sides of the stroller when it is in the unfolded use position. This will prevent collapse of the stroller should the handle trigger locks be accidentally opened.**

## Installing the Front Wheels

- Take one of the double wheel sets and locate the small hole in the rotating bracket that is inside the red lever.
- Push the front axle into this hole and keep pushing the wheel set onto this axle until you hear an audible click. See Figure 4.
- Pull downward on the wheel set to be sure that it has locked into position on the axle.
- Repeat this same procedure for the other wheel set.
- When assembled properly, both wheel sets should rotate and roll smoothly when the stroller is pushed.



Figure 4



Figure 5

## **Front Wheel Locks**

The front wheels can be either in swivel mode or locked mode.

- To put the front wheels in their locked mode, first rotate each wheel set so that the wheels are pointed straight ahead.
- Pull up on the lever to engage the small tab on the lever with the slot in the plastic frame sleeve. The lever can be either facing forward or rearward to lock the wheels. See Figure 5.
- To unlock the wheels and put them into swivel mode, push down on the lever to disengage the tab from the slot.

## **Installing and Operating the Canopy**

- To attach the canopy, position the canopy on the stroller with the thick padded edge toward the front of the stroller.
- Line up the male fittings on the canopy with the female fittings near the center of the stroller and push downward until the fittings snap into place. See Figure 6. Pull upward on the canopy sides to be sure both are snapped securely in place.
- To open the canopy, pull forward on the front edge of the canopy while holding the back edge in place. Once the canopy is fully opened, push down on BOTH side hinges to lock it in the open position.
- To close the canopy, unlock the side hinges and pull the front edge toward the rear of the stroller until folded. See Figure 7.



Figure 6



Figure 7



Figure 8

- The canopy will ratchet forward or backward to block the sun. Pull forward on the front of the canopy frame tube to rotate it forward. Pull backward on the rear frame tube to rotate it backward. See Figure 8.
- To remove the canopy, press the tab on the side of each of the male fittings while pulling upward on the canopy frame. See Figure 9.



Figure 9

## **WARNING**

**Possible pinching hazard - Be careful when closing and opening the side hinges so as not to pinch your fingers.**

## **Attaching/Detaching the Child Tray**

- To attach the child tray, line up the female fittings on the tray with the male fittings on the front of the stroller and push inward until the fittings snap into place. See Figure 10. Pull outward on both sides of the tray to be sure both are snapped securely in place.
- To remove the front tray, press the lock button on the side of each of the male fittings while pulling outward on the tray. See Figure 11.



Figure 10



Figure 11

## **WARNING**

**The child tray is not a restraint device. Always secure your child with the seat belt. Never lift the stroller by the child tray. Use caution when attaching the child tray when there is a child seated in the stroller.**

## Rear Wheel Brakes

- Before placing any child into the stroller or removing them from the stroller, be certain that the rear wheel brakes are engaged.
- To engage the rear wheel brakes, push down on the brake lever located on each rear wheel. See Figure 12. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster.
- Check that the brakes are properly applied by attempting to push the stroller backwards and forwards.
- To release the brakes, gently lift up on the brake lever. See Figure 13.



Figure 12



Figure 13

## WARNING

**Always set BOTH wheel brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended, especially on a hill or incline, as the stroller may tip over or slide.**

## Adjusting the Footrest

The footrest can be adjusted to two positions – up or down.

- To place the footrest into the upper position, pull up on the plastic portion of the footrest until it catches into position. Check to make sure the footrest is firmly in place. See Figure 14.
- To place the footrest into the down position, pull up and back on the support bar and slowly rotate until the footrest is in the lowest position.
- Lower the footrest to its down position. Note that the footrest will not “lock” into the down position, but will remain there by gravity only.



Figure 14

## **WARNING**

**Never allow a child to step onto the footrest in either position in order to get into or out of the stroller. This may cause the stroller to tip over and injure the child.**

## **Securing a Child into the Front Seats**

- Insure that the two snaps on both armrest pads that hold the seat onto the frame are securely snapped together.
- Insure that both shoulder straps are attached to the waist strap buckles. See Figure 15.
- Unlatch the waist/shoulder buckle by squeezing the latch releases on both sides of the buckle and removing the male ends of each buckle.
- Carefully place the child in the stroller seat with the shoulder straps over their shoulders and chest. Then place the crotch strap between the child's legs.
- NOTE that there are three height adjustment positions for the shoulder harness straps. For a younger child, the shoulder straps should be positioned through the lower sewn-in loops on the seatback. For a young child that is tall, the shoulder straps may be positioned through the upper sewn-in loops on the seatback. For a taller child, use the shoulder straps WITHOUT positioning them through these sewn-in loops. To re-position the shoulder straps, unbuckle them from the harness buckle and feed these straps through the sewn-in loops, insuring that they are not twisted. Re-buckle the shoulder straps onto the harness buckle to secure them.
- Bring the seat belt around the child's waist and insert the male ends of the waist/shoulder buckle into the female buckle. Insure that they snap into place. See Figure 16. Tighten the waist belt to be snug around the child's waist.
- Both the shoulder straps and the waist/crotch straps may be adjusted using the sliding buckles on these straps. See Figures 17 and 18.

## **WARNING**

**Avoid serious injury from falling or sliding out. Always use the seat belt and harness.**





Figure 15



Figure 16



Figure 17



Figure 18

## **Seatback Positioning**

Each front seat has two positions. The fully upright position should only be used for a child that is at least 6 months old.

- To place the seat in the upright position, push the bar on the rear of the seat toward the front of the stroller and rotate the seatback towards the front of the stroller until this bar is locked in its **LOWEST** position. See Figure 19.
- To recline the seat, pull the bar on the rear of the seat toward the rear of the stroller and rotate the seatback down until this bar is again in its **LOWEST** position. See Figure 20.



Figure 19



Figure 20

## **WARNING**

**Whether the seatback is upright or reclined, ALWAYS make certain that the rotating bar behind the seatback is in its **LOWEST** position before placing the child into the seat.**

## **Securing a Rear Standing Child**

- Push the bench seat to its most forward position.
- Position the canopy to its most forward position.
- Position the child on the platform on the back of the stroller. Be sure that the child is facing forward and BOTH of their hands are holding the handles on the frame.
- Position the safety strap behind the child and engage the buckle. See Figure 21. Adjust the strap so that it is snug against the child's back.
- Be sure that BOTH of the child's feet are fully on the platform at all times.
- You may need to adjust the position of the seatback to allow for more room for the child to stand.



**Figure 21**

### **WARNING**

**The rear stand-on platform and the rear bench seat are designed for a child that is at least 2-1/2 years old but LESS than 40 inches tall.**

**NEVER allow a standing child to use the canopy as a hand hold.**

**Use of the stroller with three children weighing more than 40 pounds each, or children totaling more than 120 pounds, will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition.**

**NEVER use this stroller to carry more than 3 children at the same time.**

## Using the Rear Bench Seat

- Push the bench seat to its most rearward position.
- Position the canopy to its most forward position.
- Have the child sit on the bench seat facing backward with their feet on the platform.
- You may need to adjust the position of the seatback to allow for more room for the child to sit.
- Unlatch the seat belt buckle by squeezing both prongs of each male buckle of the waist strap.
- Place the crotch strap between the child's legs.
- Bring both ends of the seat belt around the child's waist and insert both male end of the seat belt buckle into the female buckle. Insure that it snaps into place. See Figure 22.
- Adjust the seat belt to be snug around the child's waist.
- Be sure that the BOTH of the child's feet are fully on the platform at all times.
- Be sure that BOTH of the child's hands are holding the handles on the frame.



**Figure 22**

### **WARNING**

**NEVER allow a rear seated child to use the canopy as a hand hold.**

## Storage Basket

The maximum weight that can be carried in the storage basket is 10 pounds. Excessive weight may result in a hazardous unstable condition. You can access the storage basket by sliding the rear bench seat forward or backward.

## Using the Stroller as an Infant Car Seat Carrier

The Big Caboose will accommodate a car seat carrier in EACH of the front seating locations. Follow the same instructions for each seat if two car seats are to be installed.

- To use the stroller to carry an infant car seat carrier, you must replace the Child Tray with the Car Seat Carrier Support.
- Remove the Child Tray by pressing in on the lock tabs and pulling the tray off the brackets. Store the tray in a convenient place for later use.
- Line up the female fittings on the Car Seat Carrier Support to the male fittings on the front of the stroller and push inward until the fittings snap into place. See Figure 23. Pull outward on both sides of the support to be sure both are snapped securely in place.
- Push the canopy to its most rearward position.
- Adjust the seatback to its reclined position.
- Remove the infant carrier from the car seat base.
- Place the infant carrier onto the top of the stroller in a REAR FACING POSITION, locating the head end of the carrier so that it rests on the Car Seat Carrier Support and the feet end of the carrier so that it rests on the seatback, but NOT on top of the edge of the seatback. See Figure 24.
- Insure that the head end of the infant carrier is pushed down firmly INSIDE the frame of the Car Seat Carrier Support and that it is centered side to side.
- Remove the carrier restraining straps from the pouches on both sides of the stroller. Buckle them in place over the LOWEST part of the carrier sides. Adjust the straps so



**Figure 23**



**Figure 24**



**Figure 25**

they are tight around the carrier but AWAY from the child's neck. Pull up on the carrier to be sure it is held on securely. See Figure 25.

- Always check frequently to be sure that the restraining straps are tight across the infant carrier but away from the child's neck.
- When you remove the infant carrier from the stroller, always replace the two restraining straps back into their side pouches.

## **WARNING**

**ALWAYS** install the infant carrier so that the child is facing toward the rear (handle) of the stroller with the restraining straps secured.

**ALWAYS** position the infant carrier so that it is securely placed down inside the Car Seat Carrier Support frame.

**ALWAYS** position the infant carrier so that it is resting ON the seatback, but NOT on the top of the seatback.

**NEVER** position the carrier restraining straps on or near the child's neck as this may result in strangulation.



## **IMPORTANT NOTE**

**When using your stroller as an infant car seat carrier, the following are the compatible infant car seat models that the Caboose Stand-On Tandem will accommodate:**

- Graco® Snug Rider™ Series
- Graco® SafeSeat™
- Peg Perego® Primo Viaggio
- Peg Perego® Primo Viaggio SIP
- Evenflo® Embrace™
- Chicco® Key Fit Car Seat
- Britax® Companion™
- Combi® Centre Series
- Combi® Connection
- Safety 1st® Designer 22™
- Eddie Bauer® Infant Car Seat (models 22-625 and 22-626)
- Baby Trend® Latch-Loc and Flex-Loc
- Compass® Light and Portable Infant Car Seat

**For the most updated list of compatible infant car seats, please either check our website at [www.joovy.com](http://www.joovy.com) or call our Customer Service Department at (877) 456-5049.**

## **Folding the Stroller**

- Keep children away from stroller while folding.
- Remove any infant carrier that has been installed on the stroller. Note that the stroller can still be folded with a car seat carrier support in place.
- Position the stroller with the handle bar closest to you.
- Place each canopy into its closed position and push it all the way forward toward the front of the stroller as far as it will go.
- Make sure both rear wheel brakes are set to their locked positions.
- Lock both front wheels in place with the locking levers facing forward.
- To fold, unlatch the safety latch on EACH side of the stroller.
- Pull upward on the trigger mechanisms on both sides of the stroller. See Figure 26.
- While these mechanisms are in the upward position, push forward on the stroller using the handle bar.
- Once the stroller begins to fold, push the handle all the way forward and down until the stroller is completely folded. See Figure 27.



**Figure 26**



**Figure 27**

**CAUTION:** While folding the stroller, be careful to keep your fingers from being pinched by moving parts.

- Secure the stroller in the folded position by engaging the locking latch on the right side of the stroller over the extended rivet. See Figure 28.



**Figure 28**

## **Maintenance**

All of the fittings, snaps, locks, rivets, and other hardware and plastic parts on the stroller should be inspected periodically to insure that they are secured properly and not damaged or malfunctioning. The seat belts and safety harnesses, as well as all other straps and fabric items and their stitching should also be inspected periodically to insure that they are secured properly and not loose, torn or otherwise damaged. All moving parts, such as wheels, brakes, and hinges should also be checked periodically to insure they are operating properly.

Any missing, broken, or worn components should be replaced immediately, and the stroller should not be used until they are replaced. Only original manufacturer's components should be used. If needed, please contact Joovy at our toll-free phone number.

Fabric fading may occur if the stroller is left in direct sunlight for long periods of time. When not in use, store the stroller out of direct sun.

## **Cleaning**

The fabric material on this stroller can be cleaned using mild household soap or detergent and warm water on a sponge or clean cloth. Always allow the fabric to completely air dry before using the stroller.

The frame and wheels should always be kept clean and free of dirt and foreign matter, especially after operating the stroller in rain, snow, or other harsh environments. Use a sponge or cloth dampened with warm water and a mild household soap or detergent to clean the wheels after such use.

## **SATISFACTION GUARANTEED**

**We want you to be completely satisfied with your purchase of this product. Should you experience any difficulty in assembling or using this product, or if you have any questions, please contact our Customer Service Department at (877) 456-5049 between the hours of 8:30 am and 5:00 pm Central Time.**



Joovy • 2919 Canton Street • Dallas, TX 75226 • (877) 456-5049 • Fax: (214) 761-1774  
E-mail: [customerservice@joovy.com](mailto:customerservice@joovy.com) • Website: [www.joovy.com](http://www.joovy.com)  
©Joovy 2006 • Document Version 1.0



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>