



In Car Video

IVMS-5802 IVMS-6502

Operating and installation instructions



<http://www.blaupunkt.com>




BLAUPUNKT

Download from www.Somanuals.com. All Manuals Search And Download.

DEVICE OVERVIEW

Device overview

5.8" and 6.5" TFT-LCD screen

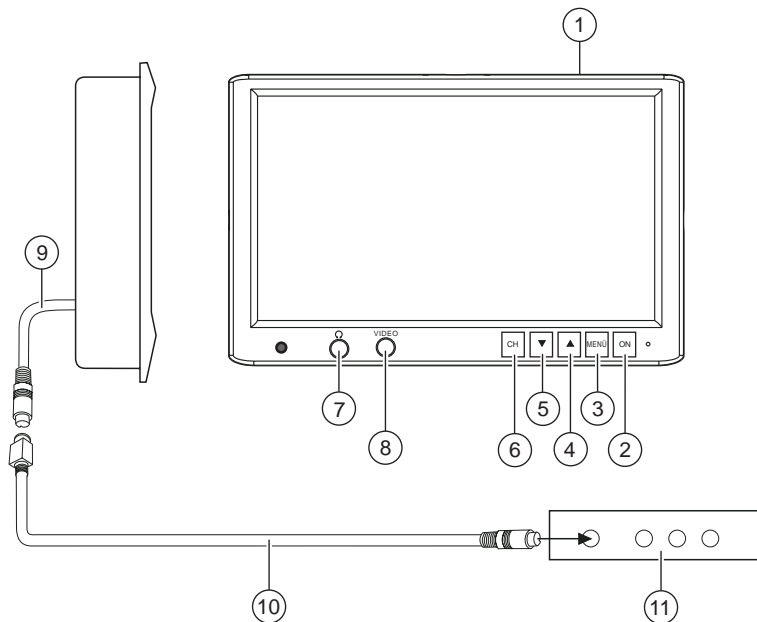

- | | | | |
|---|---|---|--------------------------|
| ① | 5.8"/ 6.5" TFT LCD screen for headrests | ⑦ | Headphone socket |
| ② | On/off switch | ⑧ | Video input (internal) |
| ③ | Key for screen menu display (OSD menu) | ⑨ | Connecting cable |
| ④ | Up menu | ⑩ | Interface cable |
| ⑤ | Down menu | ⑪ | AV signal converter unit |
| ⑥ | AV channel setting (AV1 - AV2 - ...) | | |

TABLE OF CONTENTS

| | | | |
|--|----|---------------------------------|-----|
| Device overview | 14 | Removal | 21 |
| 5.8" and 6.5" TFT-LCD screen | 14 | OSD menu | 22 |
| General information | 16 | Operation | 22 |
| Important notes | 16 | IR remote control | 23 |
| Safety notices | 16 | Functions | 23 |
| Accessories | 17 | Specifications | 24 |
| Accessories supplied | 17 | 5.8" screen | 24 |
| Available accessories | 17 | 6.5" screen | 25 |
| Fitting | 17 | Connection diagram | 109 |
| Monitor installation | 17 | | |
| Prepare the working area | 17 | | |
| Mark out the dimensions | 17 | | |
| Carefully cut open the headrest cover | 18 | | |
| Open the headrest and remove filling and other items | 18 | | |
| Lay the cable through the headrest . | 19 | | |
| Insert the mounting frame in the headrest | 19 | | |
| Inserting the monitor | 19 | | |
| Check and adjust the monitor then apply the Velcro strips | 20 | | |
| Example of a direct connection to a DVD player | 20 | | |
| Positive connection | 20 | | |
| Negative (ground) connection | 21 | | |

NOTES

General information

Thank you for choosing a Blaupunkt product. We hope you enjoy using this new piece of equipment.

Please read these operating instructions before using the equipment for the first time.


The Blaupunkt editors are constantly working on making the operating instructions clearer and easier to understand. However, if you still have any questions on how to operate the device, please contact your dealer or the telephone hotline for your country. You will find the telephone number printed at the back of this booklet.

We provide a manufacturer guarantee for our products bought within the European Union. You can view the guarantee conditions at www.blaupunkt.de or ask for them directly at:

Blaupunkt GmbH
Hotline
Robert Bosch Str. 200
D-31139 Hildesheim

Important notes

This device is not intended for fitting in the forward section of the passenger compartment where it could also be seen by the driver. Fitting this device in any part of the vehicle where it could interfere with or distract the driver's attention is dangerous and is not permitted. The manufacturer cannot accept responsibility for any damage caused as a result of improper fitting of this device.

 To avoid the risk of electrical shock, the device must be protected from water and moisture, and must not be opened. Dangerously high voltages are generated inside the device.

We wish to point out that the right to claim against warranty is invalidated by any changes or modifications to the device that have not been explicitly approved by the manufacturer.

Long-term operation or storage outside the specific temperature range can lead to a shortening of the useful life of the LC display.

Safety notices

Please observe the following safety notices during installation and whilst making the connections.

- Disconnect the negative and positive terminals of the battery.
- When doing so, please observe the safety notices provided by the vehicle manufacturer.
- Before drilling the holes necessary for mounting the equipment and for laying cables, please make sure that concealed cables, the fuel tank and fuel lines cannot be damaged in the process!

Accessories

Accessories supplied

- Connecting cable
- Extraction tool
- Operating instructions
- Mounting plate
- Adapter cable for a direct connection to an AV source
- IR remote control IVRC-06

Available accessories

- Monitor bracket 7608009300

The installation instructions are included with the bracket.

Note regarding VIDEO IN/AUX:

Only use original Blaupunkt accessory 7 607 001 510.

Or else use a mono plug.

Fitting

Monitor installation

Note:


It is recommended that the fitting is carried out at a specialist workshop.

Prepare the working area

- ⇒ Remove the headrest, and place it on a working surface that has been cleared and cleaned, where the further assembly procedures may be carried out.

Note:


Take appropriate action to ensure that the headrest is not damaged while fitting the monitor.

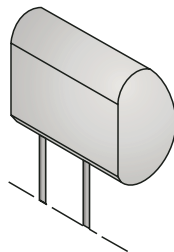

Mark out the dimensions

- ⇒ Feel the covering of the headrest carefully to ensure that there are no invisible parts that would prevent the monitor from being fitted.


Mark out the surface that needs to be cut out - its size must match that of the installation frame.

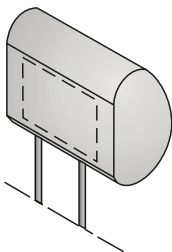

Carefully cut open the headrest cover

Use a knife with an adjustable cutting depth to cut out the planned area.

- ⇒ Make the first cut inside the marked area at a point about 0.5 cm from one of the corners, then make a diagonal cut to a point about 0.5 cm from the opposite corner.
- ⇒ Make a similar cut between the other two diagonally opposed corners.

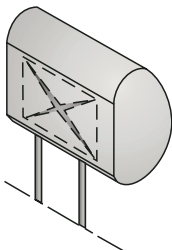


Open the headrest and remove filling and other items

- ⇒ Carefully lift the covering material away from the cut area.
- ⇒ Adjust the cutting depth of the knife to about 2.5 cm, and cut into the headrest following a line about 0.5 cm inside the marked edge.
- ⇒ Carefully lift the filling material at one corner, and cut deeper into the material with the knife.
- ⇒ Remove the filling material in small pieces.
- ⇒ As you do this, lift one piece of the filling material, and ensure that the cut is being made to an even depth.



To remove other pieces, use a Dremel saw or another suitable tool.

- ⇒ Insert the monitor to check that it will fit into the cut area, and make adjustments if necessary.

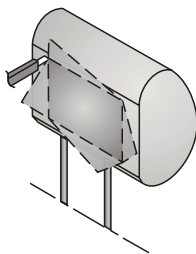


Lay the cable through the headrest

- ⇒ Now pass the supplied cables through the opening so that they emerge from the underneath of the headrest.
- ⇒ If possible, cover the cable with a cable tunnel.
- ⇒ Now connect the power supply, ground and video signal cables, to check that the monitor is working.

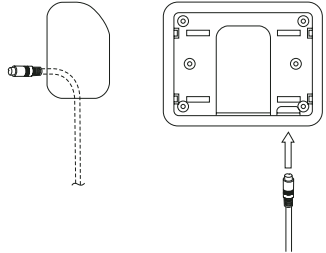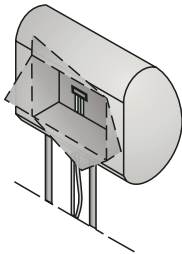

Inserting the monitor

- ⇒ Before connecting the monitor, pass the connecting cables through the holes provided in the mounting plate, as shown in the illustration.
- ⇒ Insert the monitor into the mounting plate, and attach it with appropriate fastenings.

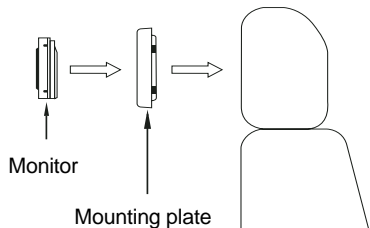

Insert the mounting frame in the headrest


- ⇒ Before connecting the monitor, pass the connecting cables through the holes provided in the mounting plate, as shown in the illustration.
- ⇒ Insert the mounting plate into the area that has been cut out, and fix it in place with appropriate fastenings.

FITTING

Check and adjust the monitor then apply the Velcro strips


- ⇒ Connect the monitor, place it temporarily in the cut-out, and place the headrest into position.
- ⇒ Check the various monitor settings such as brightness, headphone function, volume control and so on.
- ⇒ Then attach the Velcro strips to the rear of the monitor, and push the frame onto the headrest.

Take care not to press the screen itself, and apply pressure only in the region of the frame.

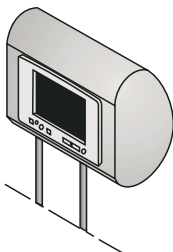

Example of a direct connection to a DVD player

Adapter cable for a direct connection to an AV source

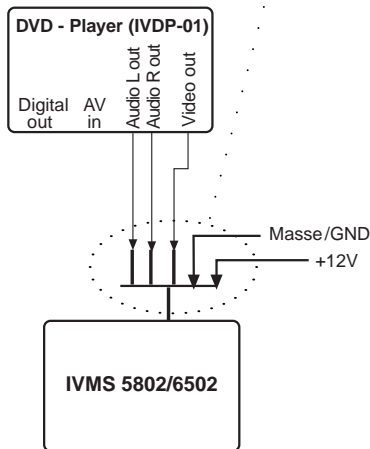

Positive connection

Connect the fuse holder to protect the positive cable (+12 V). The fuse holder should be connected to the positive terminal at a distance of max. 30 cm from the vehicle battery (if necessary, drill a hole in the bulkhead and use the appropriate cable grommets).


Negative (ground) connection

Attach the negative cable (earth/GND) directly to the vehicle body using a screw. Scratch the surface down to the bare metal at the point at which the ground is made.

- If the installation requires holes to be drilled or any other changes to be made to the vehicle, please contact a specialist workshop in your area.

Removal

- ⇒ To remove the screen, insert the extraction tool between the screen and the mounting plate.
- ⇒ Insert the extraction tool at the place where a slot has been provided between the screen and the mounting plate.

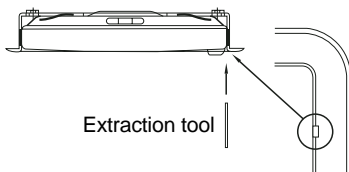


OSD MENU

OSD menu

Operation

- ⇒ Press the "MENU" button on the display or on the remote control to open the OSD menu.
- Use the arrow buttons **▲/▼** to select the options and after you press the MENU button you can use the arrow buttons **◀/▶** to change the settings.
- ⇒ Press the "EXIT" option to close the OSD menu again.

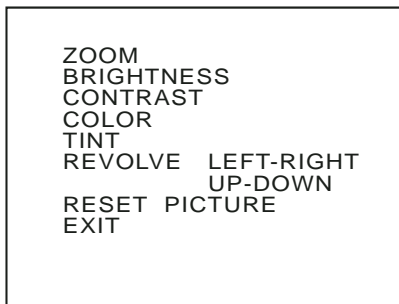

- ZOOM (picture size):
Change the picture height/width
 - FULL
 - NORMAL
 - WIDE
- BRIGHTNESS
To adjust the brightness
- CONTRAST:
To adjust the contrast
- COLOR:
To adjust the colour

- TINT:
To adjust the picture shade (only for NTSC)
- REVOLVE:
To revolve the screen display
 - LEFT - RIGHT
Horizontally mirrored
 - UP - DOWN
Vertically mirrored
- RESET PICTURE:
To reset the configured parameters to the factory default settings.
- EXIT:
To close the OSD menu

IR remote control

Functions


The supplied remote control is suitable for operating the following monitors: IVMS-5802 and IVMS-6502.

- ① **POWER**
On/off button for the monitor.
- ② **TV/VIDEO**
No function.
- ③ **VOL • arrow button** ▲
Increase the volume for the selected monitor.
VOL • arrow button ▼
Decrease the volume for the selected monitor.
- ④ **MUTE**
Mute the volume of the loudspeakers inside the monitor.
- ⑤ **CH • arrow button** ▲/▼
Channel selection if the monitor is connected to a signal controller IVSC-3302 or IVSC-5502.

Caution:

The way the **CH** ▲/▼ buttons function depends on the monitor selection (which is made using the signal controller's remote control).

- ⑥ **Menu**
See OSD menu, operation (page 22).

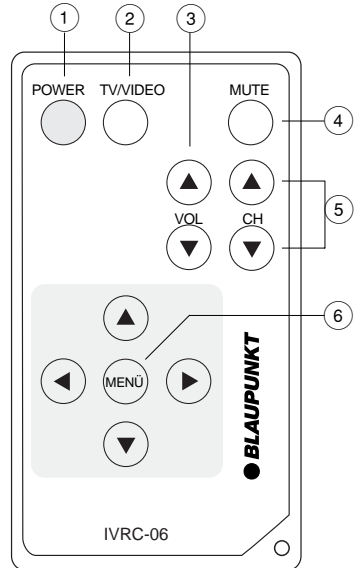

SPECIFICATIONS

Specifications

5.8" screen


| | |
|-----------------------------|--|
| System: | NTSC/PAL auto switch |
| Power supply / consumption: | 12 V direct current, $\pm 10\%$, <900 mA |
| Standby: | < 1 mA |
| Video input level: | 1 Vpp, 75 ohms |
| Audio input level: | 0 - 0.3 Vrms, 20 Hz - 20 kHz |
| Operating temperature: | -20° C to +60° C |
| Storage temperature: | -30° C to +80° C |
| Screen size (diagonal): | 5.8" (14.7 cm) |
| Contrast ratio: | 60 |
| Power consumption: | < 11 W |
| Brightness: | 300 cd/m ² |
| Display technology: | TFT active matrix system |
| Resolution (pixels): | 1200 (H) x 234 (W) = 280,800 pixels |
| Visible screen area: | 127.20 (W) x 71.84 (H) mm |
| Viewing angle: | From the left and right: 60°, From above: 60°, From below: 30° |
| Total monitor dimensions: | 165 (W) x 122 (H) x 26.7 (D) mm |
| Monitor weight: | < 400 g |

6.5" screen

| | |
|-----------------------------|--|
| System: | NTSC/PAL auto switch |
| Power supply / consumption: | 12 V direct current, $\pm 10\%$, <900 mA |
| Standby: | < 1 mA |
| Video input level: | 1 Vpp, 75 ohms |
| Audio input level: | 0 - 0.3 Vrms, 20 Hz - 20 kHz |
| Operating temperature: | -20° C to +60° C |
| Storage temperature: | -30° C to +80° C |
| Screen size (diagonal): | 6.5" (16.5 cm) |
| Contrast ratio: | 60 |
| Power consumption: | < 10 W |
| Brightness: | 280 cd/m ² |
| Display technology: | TFT active matrix system |
| Resolution (pixels): | 1200 (H) x 234 (W) = 280,800 pixels |
| Visible screen area: | 142.80 (W) x 87.70 (H) mm |
| Viewing angle: | From the left and right: 60°, From above: 60°, From below: 30° |
| Total monitor dimensions: | 176.0 (W) x 122 (H) x 26.7 (D) mm |
| Monitor weight: | < 400 g |

Subject to changes!

Beispielanschluss mit verschiedenen Komponenten /
Connection example with various components

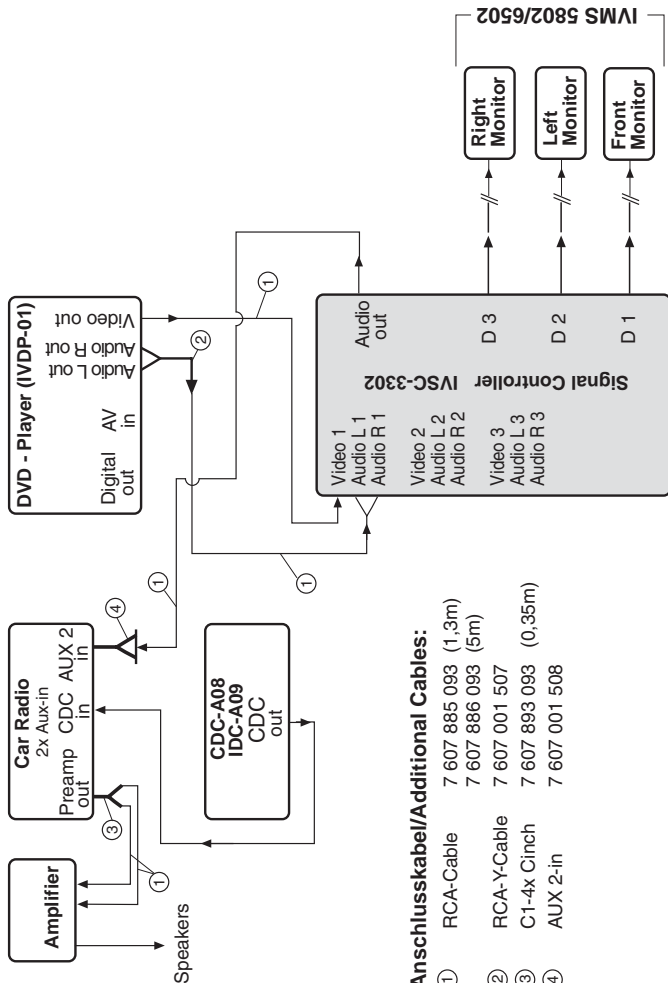

Anschlusskabel/Additional Cables:

- ① RCA-Cable 7 607 885 093 (1,3m)
7 607 886 093 (5m)
- ② RCA-Y-Cable 7 607 001 507
- ③ C1-4x Cinch 7 607 893 093 (0,35m)
- ④ AUX 2-in 7 607 001 508

Service-Nummern / Service numbers / Numéros du service après-vente / Numeri del servizio di assistenza / Servicenummers / Telefonnummer för service / Números de servicio / Número de serviço / Servicenumre

| Country: | Phone: | Fax: | WWW: |
|----------------------------|-----------------------|------------------|---|
| Germany | (D) 0180-5000225 | 05121-49 4002 | http://www.blaupunkt.com |
| Austria | (A) 01-610 390 | 01-610 393 91 | |
| Belgium | (B) 02-525 5454 | 02-525 5263 | |
| Denmark | (DK) 44 898 360 | 44-898 644 | |
| Finland | (FIN) 09-435 991 | 09-435 99236 | |
| France | (F) 01-4010 7007 | 01-4010 7320 | |
| Great Britain | (GB) 01-89583 8880 | 01-89583 8394 | |
| Greece | (GR) 210 57 85 350 | 210 57 69 473 | |
| Ireland | (IRL) 01-4149400 | 01-4598830 | |
| Italy | (I) 02-369 6331 | 02-369 6464 | |
| Luxembourg | (L) 40 4078 | 40 2085 | |
| Netherlands | (NL) 023-565 6348 | 023-565 6331 | |
| Norway | (N) 66-817 000 | 66-817 157 | |
| Portugal | (P) 01-2185 00144 | 01-2185 11111 | |
| Spain | (E) 902-120234 | 916-467952 | |
| Sweden | (S) 08-7501500 | 08-7501810 | |
| Switzerland | (CH) 01-8471644 | 01-8471650 | |
| Czech. Rep. | (CZ) 02-6130 0441 | 02-6130 0514 | |
| Hungary | (H) 01-333 9575 | 01-324 8756 | |
| Poland | (PL) 0800-118922 | 022-8771260 | |
| Turkey | (TR) 0212-3350677 | 0212-3460040 | |
| USA | (USA) 800-2662528 | 708-6817188 | |
| Brasil (Mercosur) | (BR) +55-19 3745 2769 | +55-19 3745 2773 | |
| Malaysia (Asia Pacific) | (MAL) +604-6382 474 | +604-6413 640 | |

Blaupunkt GmbH



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>