

Breville

Breville is a registered trademark of Breville Pty. Ltd.
ABN 98 000 092 928

Breville Customer Service Centre Australian Customers

✉ Breville Customer Service Centre
PO Box 22
Botany NSW 2019
AUSTRALIA

☎ Customer Service: 1300 139 798
Fax (02) 9384 9601
Email Customer Service: askus@breville.com.au

New Zealand Customers

✉ Breville Customer Service Centre
Private Bag 94411
Greenmount
Auckland, New Zealand

☎ Customer Service: 09 271 3980
Fax 0800 288 513
Email Customer Service: askus@breville.com.au



www.breville.com.au

© Copyright. Breville Pty. Ltd. 2007
Due to continual improvements in design or otherwise,
the product you purchase may differ slightly from the
one illustrated in this booklet.
Model BTA340 / BTA340C / BTA340S Issue 1/07

Breville

4 Slice Toaster

Instructions
BTA340
BTA340C
BTA340S



Inspiration. Every day.™

Contents

	Page
Breville Recommends Safety First	4
Know Your Breville 4 Slice Toaster	6
Operating Your Breville 4 Slice Toaster	7
Care and Cleaning	9

Congratulations

on the purchase of your new Breville 4 Slice Toaster

Breville recommends safety first

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

IMPORTANT SAFEGUARDS FOR YOUR BREVILLE 4 SLICE TOASTER

- Carefully read all instructions before operating and save for future reference.
- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water.
- Remove any packaging material or promotional labels before using the toaster for the first time.
- Do not place the toaster on or near a hot gas burner or electric element, or where it could touch a heated oven. Keep appliance clear of walls and other heat sensitive materials such as cloths and curtains. Minimum 200mm distance.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Never cover the toaster whilst it is plugged into the power outlet or while hot.
- Do not place cold toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- Do not use on metal surfaces, for example, a sink drain board.
- To protect against electric shock, do not immerse cord, plug or toaster in water or any other liquid.
- Do not move the toaster whilst in operation or when hot.
- Do not touch hot surfaces. Use side areas for lifting and carrying the appliance.
- Do not leave the toaster unattended when toasting.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- Do not allow breadcrumbs to accumulate in the crumb tray of the toaster.
- Do not operate the toaster without the crumb tray in position.
- Keep the appliance clean. Follow the cleaning instructions provided in this book (Page 8).

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Unwind the cord fully before use.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces, or become knotted.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. Do not use the appliance if power supply cord, plug and appliance are damaged in any way. Return the entire appliance to the nearest authorised Breville centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is intended for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.

This Breville Toaster is electronically controlled and the lever will not lock down into the toast position until the toaster is plugged into a 230/240 volt power point and switched on.

Note



**NEVER OPERATE TOASTER ON ITS SIDE.
NEVER ADD ANY FOOD SUBSTANCE TO THE BREAD, MUFFINS OR CRUMPETS AS THIS CAN LEAD TO ELECTROCUTION OR FIRE.
THIS TOASTER IS FOR TOASTING BREAD, CRUMPETS AND MUFFINS ONLY. PLACING OTHER ITEMS IN THE TOASTER CAN LEAD TO ELECTROCUTION OR FIRE.**

Know your Breville 4 Slice Toaster



Operating your Breville 4 Slice Toaster

Before first use, remove any packaging material or promotional labels attached to your toaster.

1. Insert the power plug into a 230/240 volt power outlet and then turn the power on.
2. Place 2 slices of bread or 2 crumpets or 2 halves of an English muffin or bagel only into each of the toasting slots. Ensure the bread slices or muffin/bagel halves are not too large or thick to fit the slots. If less than 4 slices are inserted, the usual browning setting needs to be reduced to avoid the toast burning.
3. Select the desired browning setting using the browning control dial. Colour settings range from '1' lightest to '6' darkest.

When using the toaster for the first time, we suggest toasting the bread on setting 3 or 4. Varying types of bread and personal preference may require a different browning setting, for example, raisin toast and white light-textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting. If toasting a single slice of bread in the 4-slice toaster, the setting will need to be reduced to achieve the desired colour.

Note

4. Press the high lift lever down until it locks into position. The toasting cycle will automatically commence.

If the toaster is not plugged in and switched on at the power outlet, the high lift lever will not lock into position.

Note

5. The 4 Slice toaster has a unique 'Lift and Look' feature which does not interrupt the toasting cycle. To check on the browning progression during the toasting cycle, simply use the high lift lever to raise and lower the toast.



6. The toaster turns off when the selected toast colour is achieved and automatically raises the toast. The toasting process can be stopped at any time by pressing the CANCEL button located on the control panel of the toaster.



DO NOT LEAVE UNATTENDED WHEN IN USE AS TOAST MAY JAM OR WEDGE IN THE BREAD CARRIAGE.
NEVER ATTEMPT TO EXTRACT TOAST, CRUMPETS OR MUFFINS OR ANY OTHER ITEM THAT HAS JAMMED OR WEDGED IN THE TOASTER WITH A KNIFE OR ANY OTHER OBJECT AS CONTACT WITH LIVE ELEMENTS MAY NOT ONLY DAMAGE THE ELEMENTS, BUT CAUSE ELECTROCUTION.

Operating your Breville 4 Slice Toaster continued

Lift and Look™ feature

The Breville 4 Slice toaster has a unique 'Lift and Look' feature which does not interrupt the cooking cycle. To check on the browning progression during the toasting cycle, simply use the high lift lever to raise and lower the toast.

High lift lever

To remove smaller items such as crumpets and muffins, lift the high lift lever approximately 2cm above the starting position.

In the unlikely event that the bread or muffins become jammed, switch the power off at the power outlet. Remove the power plug from the power outlet and then use the high lift lever to carefully ease the bread out of the toaster, ensuring that you do not damage the self-centring slots or the elements.

Defrost button - toasting frozen bread

To toast frozen bread, place the bread into the toasting slots, select the desired browning setting, lower the high lift lever until it locks into position then press the defrost button, this will extend cooking time.

Reheat button - reheating toast

This function allows you to reheat toast without additional toasting. To reheat, place toast into toasting slots, lower the high lift lever until it locks into position and press the reheat button.

Cancel button - to stop toasting

The toasting, defrosting and reheat cycles can be cancelled at any time by pressing the cancel button. The toaster will turn off and automatically raise the toast.

Care and cleaning

The crumb tray should be cleaned out regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.

1. Always switch the power off at the power outlet and then remove the plug from the outlet before cleaning the toaster.
2. To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty and replace it before using the toaster again.
3. To clean the interior, turn the toaster upside down over a bin and shake crumbs free.
4. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft, dry cloth.

Storage

Always switch the power off at the power outlet, then remove the plug from the outlet and allow to cool completely before storing. Follow the directions for cleaning and store in an upright position. Do not store anything on top.



DO NOT USE THE TOASTER WITHOUT THE SLIDE OUT CRUMB TRAY IN POSITION.
DO NOT ALLOW CRUMBS TO BUILD UP IN CRUMB TRAY. CRUMB TRAY SHOULD BE CLEANED OUT REGULARLY.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>