

# SV12 GPS Receiver

## User's Manual

CTI06-117



May 2006

**Prepared by:**  
Coleman Technologies, Inc.  
20 North Orange Avenue, Suite 300  
Orlando, Florida 32801  
(407) 481-8600

*cti*  
Coleman Technologies, Inc.

## Table of Contents

<b>1.0</b>	<b>PREFACE</b> .....	<b>1</b>
<b>2.0</b>	<b>SV12 GPS RECEIVER OVERVIEW</b> .....	<b>1</b>
2.1	<i>Interface Protocols</i> .....	2
2.1.1	<i>SV12 GPS Serial Port Interface</i> .....	3
2.2	<i>Antenna</i> .....	3
2.3	<i>Power</i> .....	4
2.4	<i>Hardware Setup</i> .....	4
<b>3.0</b>	<b>INTEGRATION OF THE SV12 GPS RECEIVER</b> .....	<b>5</b>
3.1	<i>Hardware Integration</i> .....	5
3.1.1	<i>Power Requirement</i> .....	5
3.1.2	<i>Pulse Per Second</i> .....	6
3.1.3	<i>Mounting</i> .....	6
3.2	<i>Software Interface</i> .....	7
3.2.1	<i>Start-up</i> .....	7
3.2.2	<i>Communicating with the SV12 GPS Receiver</i> .....	7
3.2.3	<i>Protocol Summary</i> .....	8
	<b>APPENDIX A – SPECIFICATIONS</b> .....	<b>A-1</b>

## **1.0 PREFACE**

The Global Positioning System (GPS) is a satellite based navigation system operated and maintained by the U.S. Government. The GPS consists of a constellation of 24 satellites providing world-wide, 24 hour, three dimensional (3-D) coverage. GPS applications include military, surveying, marine, land, aviation, and vehicle navigation. GPS is the most accurate technology available for vehicle navigation/location.

Since GPS is a satellite based system, it is immune to the limitations of land-based systems such as Loran. Loran is limited in coverage and can be adversely affected by weather. In addition, the accuracy of Loran is significantly worse than GPS. By computing the distance to GPS satellites orbiting the earth, a GPS receiver can calculate an accurate position. To determine a 2-D position calculation (latitude/longitude), 3 GPS satellites must be in range. A 3-D position calculation (which includes altitude), requires a minimum of 4 GPS satellites to be in range. GPS receivers can also provide precise time, speed and course measurements.

Differential GPS (DGPS) is a form of GPS navigation which provides even greater accuracy than standard GPS. Differential GPS requires error corrections transmitted from a GPS receiver placed in a known location, referred to as a reference station. The reference station calculates the error in the satellite range data and outputs corrections for use by other GPS receivers. These GPS receivers are designated as mobile units and can be dispersed as far as 100 KM from the reference station. Differential GPS eliminates virtually all the measurement error in the satellite ranges and enables a highly accurate position calculation. The SV12 GPS receiver is differential-ready for applications requiring DGPS accuracy.

The SV12 GPS Receiver is an upgrade to CTI's SV8 GPS Receiver (which was a replacement for the Trimble SVeeEight Plus GPS Receiver). The SV12 GPS Receiver is manufactured by Coleman Technologies, Inc., located at 20 North Orange Avenue, Suite 300; Orlando, FL 32801.

## **2.0 SV12 GPS RECEIVER OVERVIEW**

The SV12 GPS Receiver delivers an unmatched level of performance for your GPS applications. The device uses the Trimble's Lassen® iQ12-channel GPS module. The iQ GPS module has improved immunity to in-band jammers over its predecessors and is designed to track weak signals improving position availability in environments with obscured coverage.

The SV12 GPS Receiver includes a complete 12-channel parallel tracking GPS receiver designed to operate with the L1 frequency, Standard Position Service, Coarse Acquisition code, using Trimble custom integrated circuits. The receiver is housed in a rugged metal enclosure especially suited for plug and play applications. The SV12 GPS receiver

acquires a position fix with minimal delay after power cycling. The following information is necessary to help decrease the time to track satellites after power-up and is stored in RAM when backup power is provided:

- Almanac
- Ephemeris
- Real-time clock
- Last position

User settings, including port parameters and receiver processing options, can be stored in non-volatile electrically erasable (EEPROM) that does not require power.

The SV12 GPS Receiver has two independently configurable serial I/O communication ports. The dual data I/O port characteristics and other options are user programmable and can be stored in non-volatile memory.

**Warning** – When customizing port assignments or characteristics, confirm that your changes do not affect the ability to communicate with the receiver.

## 2.1 Interface Protocols

The SV12 GPS Receiver operates using either of three protocols – Trimble Standard Interface Protocol (TSIP), Trimble ASCII Interface Protocol (TAIP) and NMEA 0183 (Version 3.0). The SV12 GPS Receiver also supports RTCM SC-104 for DGPS. The factory default settings for the different factory default configurations are listed in Table 2.1-1 and Table 2.1-2.

**Table 2.1-1 TSIP and NMEA Receiver Interface Protocols**

Port	Setting
Port 1	NMEA 0183 out/RTCM SC-104 V2.1 in
Port 2	TSIP bi-directional

**Table 2.1-2 TAIP Receiver Interface Protocols**

Port	Setting
Port 1	NMEA 0183 out/ RTCM SC-104 V2.1 in
Port 2	TAIP bi-directional

### TSIP

TSIP is a binary packet protocol that allows the system designer maximum configuration control over the GPS receiver for optimum performance in any number of applications. TSIP supports over 40 commands and their associated response packets for use in configuring the SV12 GPS Receiver to meet user requirements.

## TAIP

TAIP is an easy-to-use ASCII protocol developed by Trimble for vehicle tracking. The user can set up polling schemes and mark GPS messages with unique identifiers. The TAIP messages and output rates are user selectable and can be configured to operate on either Port 1 or Port 2.

## NMEA 0183

NMEA 0183 is an industry standard protocol common to marine applications. NMEA provides direct compatibility with other NMEA-capable devices such as chart plotters, radars, etc. The SV12 GPS Receiver supports most NMEA messages for GPS navigation. NMEA messages and output rates can be user selected as required.

### 2.1.1 SV12 GPS Serial Port Interface

The GPS Receiver is a DCE (Data Communication Equipment) device. To connect to a host computer, or DTE (Data Terminal Equipment) device, use a straight through cable. To connect a Differential Radio (DCE device) to the receiver (DCE device) use a cross-over cable or null modem cable. See Table 2.1.1-1

**Table 2.1.1-1 Serial Port Pin-outs**

Port 1		Port 2	
Pin	Description	Pin	Description
1	NC	1	NC
2	TX	2	TX
3	RX	3	RX
4	NC	4	NC
5	GND	5	GND
6	NC	6	NC
7	NC	7	NC
8	NC	8	NC
9	PPS Out	9	PPS Out

The PPS signal is an open collector interface on pin 9 of Ports 1 and 2. The polarity of the PPS signal is an inverted, 10  $\mu$ s negative going pulse with the falling edge synchronized to UTC. One can use a 10 K pull-up resistor to pull-up the PPS.

## 2.2 Antenna

The GPS antenna receives the GPS satellite signal and passes them to the receiver. Because the GPS signals are spread spectrum signals in the 1575 MHz range and do not penetrate conductive or opaque surfaces, the GPS antenna must be located outdoors with a clear view of the sky. The SV12 GPS Receiver requires an active antenna. The received GPS signals are very low power, approximately 140 dB, at the surface of the

earth. Trimble's active antennas include a preamplifier that filters and amplifies the GPS signals before delivery to the receiver.

There are two GPS antennas offered by Coleman Technologies, Inc. (1) magnetic mount antenna and (2) bullet antenna. Equivalent antennas are available through 3<sup>rd</sup> party vendors, for example Tescos at [www.tesco.com](http://www.tesco.com). One needs to choose an active antenna which is either a 3v, 3.3v or 3/5v antenna.

**Warning** – When magnetic-mount or permanent-mount GPS antennas are installed on a metal surface for prolonged periods, care must be taken to insulate the antennas to prevent galvanic corrosion.

### 2.3 *Power*

The SV12 GPS Receiver is designed to be plug-and-play. The receiver requires +9 to +32 VDC. Power can be supplied to the SV12 GPS Receiver using the DC power cable.

The power cable is terminated at one end with a 3-pin plastic connector which mates with the power connector on the metal enclosure. The un-terminated end of the cable provides connection to a DC power supply. Connect the red power lead to a source of DC positive +9 to +32 VDC, and connect the black power lead to ground. This connection supplies power to both the receiver and the antenna. The combined power consumption of the receiver and antenna is 25mA at 12V. The yellow wire can be used for battery backup to keep the RAM memory alive and real-time clock functioning after main power is removed (quicker time to first fix). This circuit requires 3.0 to 12 VDC and draws 20  $\mu$ A at 3.3 VDC at 20° C

**Note** - For compliance with CE conducted emissions requirements when using the DC power cable, the receiver must be bonded to a ground plane.

### 2.4 *Hardware Setup*

The SV12 GPS Receiver supports TSIP, TAIP and NMEA protocols. Port 2 is usually used for TSIP or TAIP I/O and Port 1 is used to input RTCM SC-104 corrections and output NMEA messages.

To setup the SV12 GPS Receiver do the following:

1. For TSIP or TAIP protocols, connect one end of the 9-pin serial interface cable to Port 2 (or Port 1 to view NMEA data) of the receiver. Connect the other end of the cable to COM1 or COM2 on a PC. A 9-pin-to-25 pin adapter may be required for the serial interface connection to a PC, if the PC has a 25-pin communication port.

2. Connect the antenna cable to the receiver. Push the connector onto the MCX connector on the receiver. To remove the antenna cable, pull the antenna connector off of the MCX connector.
3. Place the antenna so that it has a clear view of the sky.
4. Using the DC power cable, connect to the 3-pin power connector on the receiver. Connect the terminated end of the power cable to the power connector on the receiver. Connect the red lead to the DC positive voltage (+9 to +32 VDC) and black lead to the DC ground. The yellow wire is used for battery backup.
5. Switch on the DC power source.

### **3.0 INTEGRATION OF THE SV12 GPS RECEIVER**

The integration of the SV12 GPS Receiver is provided below in two main sections: Hardware Integration and Software Interface.

#### ***3.1 Hardware Integration***

This section describes the instruction for physically connecting the receiver to the antenna, the host processor, and the power source. Additionally, mounting instructions are provided.

##### ***3.1.1 Power Requirement***

The SV12 GPS Receiver requires 9-32 VDC. The SV12 draws less current than its predecessor, the SV8 GPS Receiver.

The receiver does not require any special power up or down sequencing. Power is supplied through the 3-pin Conxall connector.

The SV12 GPS receiver provides an input for battery back-up (BBU) power to keep the receiver's RAM memory alive and to power the real-time clock when the receiver's prime power is turned off. RAM memory stores the GPS almanac, ephemeris, and last position.

User configuration data, including port parameters and receiver processing options, can be stored in non-volatile EEROM which does not require back-up power. This is done by issuing appropriate TSIP or TAIP commands. Though not required, using battery back-up (BBU) can reduce the time to first fix significantly. (~10 seconds typical when ephemeris is available). The BBU is attached using the yellow wire on the 3-wire power connector.

**Note** – 3.0 V is the minimum allowable voltage for battery backup. When the power output drops below 3.0 V, the real-time clock may not operate over the specified full temperature range and this can significantly extend the time to first fix.

Power requirements are listed in Table 3.1.1-1

**Table 3.1.1-1 Power Requirements**

<b>Signal</b>	<b>Voltage</b>	<b>Current</b>
Battery Backup	+3.0 to 12	0 $\mu$ A with prime power; 20 $\mu$ A @ 3.3 V, 25°C without prime power
Ground	0	-
VCC	+9 to 32	25mA typ @ 12V

### **3.1.2 Pulse Per Second**

A ten microsecond wide, open collector negative going pulse synchronized UTC is available on Pin 9 or ports 1 and 2. This pulse is issued once per second with the falling edge of the pulse synchronized with UTC. The falling edge of the pulse is typically less than 20 nanoseconds.

The timing accuracy is +/- 50 nanoseconds and is available only when the valid position fixes are being reported. Repeatability checks of 10 sets of 100 second samples taken over a period of 20 minutes showed an average variation of approximately 100 nanoseconds (not allowing for SA).

### **3.1.3 Mounting**

The SV12 GPS Receiver is packaged in an anodized aluminum casing. When mounting, consider vibrations. If the vibration is within the design specifications, then the receiver can be hard-mounted. If not, select a mount that dampens the vibration enough to bring the receiver back into specification.

For mounting, utilize metal screws through the four provided screw holes incorporated into the enclosure. Select a screw length which extends a safe distance beyond the mounting surface and secure these screws with nuts and lock washers. CTI recommends that you use four number 8 pin-head machine screws.



## **3.2 *Software Interface***

This section describes the SV12 GPS Receiver software interface, the start-up characteristics for the different interface protocols, a description of the receiver operating modes, and a brief description of the interface protocols.

### **3.2.1 *Start-up***

When connected to an external GPS, the SV12 GPS Receiver contains all the circuitry necessary to automatically acquire GPS satellite signals, track up to 12 GPS satellites, and compute location, speed, heading, and time. The receiver automatically begins to search for and track GPS satellite signals at power-up.

The performance of the GPS receiver at power-on is determined largely by the availability and accuracy of the satellite ephemeris data and the availability of a GPS system almanac.

The first time the receiver is powered-up, it is searching for satellites from a cold start (no almanac). While the receiver begins to compute position solutions within the first two minutes, the receiver must continuously track satellites for approximately 15 minutes to develop a complete almanac. The initialization process should not be interrupted. With a complete almanac and back-up power, the time to first fix can typically be shortened to less than 45 seconds. The receiver responds to commands almost immediately after power-up.

### **3.2.2 *Communicating with the SV12 GPS Receiver***

The SV12 GPS Receiver supports three message protocols: TSIP, TAIP, and NMEA. A summary of the protocols are discussed below.

Communications with the SV12 GPS Receiver is through two RS-232 serial ports. The port characteristics can be changed to accommodate your application requirements. Port parameters are stored in a non-volatile, electrically erasable ROM (EEROM) that does not require backup power. The following tables list the default characteristics for each port.

**Table 3.2.3-1 Default Serial Port Characteristics for the TSIP and NMEA Receiver**

Port	Input Protocol	Default Setup	Output Language	Default Setup
1	RTCM	Baud Rate: 4800 Data Bits: 8 Parity: None Stop Bits: 1 No Flow Control	NMEA	Baud Rate: 4800 Data Bits: 8 Parity: None Stop Bits: 1 No Flow Control
2	TSIP	Baud Rate: 9600 Data Bits: 8 Parity: Odd Stop Bits: 1 No Flow Control	TSIP	Baud Rate: 9600 Data Bits: 8 Parity: Odd Stop Bits: 1 No Flow Control

**Table 3.2.3-3 Default Serial Port Characteristics for the TAIP Receiver**

Port	Input Protocol	Default Setup	Output Language	Default Setup
1	RTCM	Baud Rate: 4800 Data Bits: 8 Parity: None Stop Bits: 1 No Flow Control	NMEA	Baud Rate: 4800 Data Bits: 8 Parity: None Stop Bits: 1 No Flow Control
2	TAIP	Baud Rate: 4800 Data Bits: 8 Parity: None Stop Bits: 1 No Flow Control	TAIP	Baud Rate: 4800 Data Bits: 8 Parity: None Stop Bits: 1 No Flow Control

Any standard serial communications program, such as HyperTerminal, can be used with TAIP or NMEA interface protocols. TSIP is a binary protocol and outputs raw binary serial data onto the screen which cannot be read. CTI recommends the use of the Trimble TSIP toolkit (TSIPCHAT) available upon request from CTI. The serial port drivers in the TSIPCHAT Toolkit match the SV12 GPS Receiver serial port characteristics.

**Warning** – When using the TSIP protocol to change port assignments or characteristics, confirm that your changes do not affect the ability to communicate with the receiver.

### 3.2.3 Protocol Summary

The SV12 GPS Receiver is shipped from the factory with the configurations listed in the following tables:

**Table 3.2.4-1 TSIP and NMEA Receiver Protocol Summary**

Setting	Default
NMEA 0183 out/RTCM SC-104 V2.1 In	Port 1: 4800 baud none-8-1
TSIP bi-directional	Port 2: 9600 baud odd-8-1

**Table 3.2.4-3 TAIP Receiver Protocol Summary**

<b>Setting</b>	<b>Default</b>
NMEA 0183 out/RTCM SC-104 V2.1 In	Port 1: 4800 baud none-8-1
TAIP bi-directional	Port 2: 4800 baud none-8-1

### **TSIP Data Output**

The Trimble Standard Interface Protocol (TSIP) is the native language for the SV12 GPS Receiver. TSIP is a binary language with a wide variety of commands and reports. TSIP reports can be output automatically, or they can be output as responses to queries. The format of the automatic reports can be easily configured. The receiver is factory configured for single precision Latitude-Longitude-Altitude. Report formats can be modified and position and velocity formats can be customized.

The TSIPCHAT program permits using a computer keyboard to send the Request Packets to the GPS receiver. Responses are displayed on a DOS computer screen in ASCII format.

### **TAIP Data Output**

The Trimble ASCII Interface Protocol (TAIP) is a Trimble-specified digital communications interface based on printable/readable ASCII characters over a serial data link. TAIP interface provides the means to configure the SV12 GPS Receiver to output various sentences in response to a query or on a scheduled basis. TAIP messages can be scheduled for output at a user specified rate starting on a given epoch from top of the hour. For communication robustness, the protocol optimally supports checksums of all messages. It also provides the user with the option of tagging all messages with the receiver's user specified identification number (ID). This greatly enhances the functional capability of the receiver in a network environment.

The receiver is factory configured by part number to the TAIP protocol, or it can be configured to TAIP with the TSIPCHAT program and the TSIP command 0xBC.

### **NMEA 0183 (Version 3.0) Data Output**

The National Marine Electronics Association (NMEA) protocol is an industry standard data protocol which was developed for the marine industry. The SV12 GPS Receiver adheres to the NMEA 0183 data specification as published by NMEA.

NMEA data is output in standard ASCII sentence formats. Message identifiers signify what data is contained in each sentence. Data fields are separated by commas within the NMEA sentence. In the SV12 GPS Receiver, NMEA is an output only protocol.

The receiver is shipped with NMEA protocol by part number from the factory. The NMEA settings can be changed using TSIPCHAT and command 0xBC. TSIP command 0x7A changes the NMEA output sentences and output rates. The new settings are saved to BBRAM (battery backup RAM) or they can be saved to non-volatile memory using TSIP command 0x8E-26.

**Note** – Although the SV12 GPS Receiver supports the seven NMEA sentences that contain GPS information, the factory default setting for the receiver only outputs the GGA and VTG data strings. To change the output interval or sentence output, use TSIP Command Packet 0x7A.

## Appendix A – Specifications

### TECHNICAL SPECIFICATIONS

<b>Prime Power</b>	+9 to +32 VDC input
<b>Power consumption (nominal)</b>	25 mA, 30 mW, at 12V, +25°C, with antenna
<b>Back-up power</b>	+3.0 to +12 VDC (20 µa @ +3.3V, +25°C)
<b>Serial ports (2)</b>	RS-232
<b>I/O Protocol options</b>	TSIP (Trimble Standard Interface Protocol) @ 9600 baud, 8-Odd-1 TAIP (Trimble ASCII Interface Protocol) @ 4800 baud, 8-None-1 NMEA 0183 v3.0 @ @4800 baud, 8-None-1 RTCM SC-104 @ 4800 baud, 8-None-1
<b>NMEA messages</b>	Standard: GGA and VTG Optional: User-selectable combination of; GGA, GLL, VTG, ZDA, GSV, GSA and RMC; user can store configuration in non- volatile memory

### PHYSICAL CHARACTERISTICS

<b>Dimensions</b>	
<b>Metal Enclosure</b>	4.03" D x 4.97" W x 1.1" H (102mm x 127mm x 28mm)
<b>Mounting flange</b>	4.03" D x 6.81" W x 1.1" H (102mm x 173mm x 2mm)
<b>Weight</b>	0.57 lb. (0.26kg) (board + enclosure + flange)
<b>Connectors</b>	
<b>Antenna</b>	MCX
<b>Serial data (2)</b>	DB9
<b>Power</b>	3-pin Conxall

### ENVIRONMENTAL SPECIFICATIONS

<b>Operating temperature</b>	-40°C to +85°C	
<b>Storage temperature</b>	-55°C to +100°C	
<b>Vibration</b>	0.008 g <sup>2</sup> /Hz	5Hz to 20Hz
	0.05 g <sup>2</sup> /Hz	20Hz to 100Hz
	3bD/octave	100Hz to 900Hz
<b>Operating humidity</b>	5% to 95% R.H., non-condensing, @ +60°C	
<b>Altitude</b>	-400m to +18,000m	

### PERFORMANCE SPECIFICATIONS

<b>General</b>	L1 frequency, C/A code (SPS), 12-channel continuous tracking receiver
<b>Update rate</b>	1 Hz (TSIP, NMEA, or TAIP)
<b>Accuracy</b>	Position - Horizontal: <5m (50%), <8m (90%)
	Position - Altitude: <10m (50%), <16m (90%)
	Velocity: 0.06 m/sec
<b>1 PPS (static)</b>	±50 nanoseconds
<b>DGPD accuracy</b>	Positoon: 2m CEP (50%)
	Velocity: 0.05 m/sec (1 sigma)
	Time: ±500 nanoseconds (nominal)
<b>Acquisition</b>	Cold start: <50 sec (50%) <84 sec 90%
	Warm start: <38 sec (50%) <42 sec 90%
	Hot start: <10 sec (50%) <13 sec 90%
	Cold start requires no initialization. Warm start implies last position, time and almanac are saved by back-up power. Hot start implies ephemeris also saved.
<b>Racquisition after signal loss</b>	<2 seconds (90%)
<b>Dynamics</b>	
<b>Accerlation</b>	4g (39.2 m/sec <sup>2</sup> )
<b>Motional Jerk</b>	20 m/sec <sup>2</sup>
<b>Operational Limits</b>	Altitude <18,000m or velocity <515 m/sec Either limit may be executed but not both

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>