

Link-a-dooos

Car Seat Dashboard

with Remote Control



Please keep instruction sheet for future reference, as it contains important information.

Requires one 9 volt (6LR61) and three "AA" (LR6) alkaline batteries (not included).

Adult assembly is required for battery installation.

 
Tool required for battery installation: Phillips Screwdriver (not included).

WARNING

To prevent strangulation, never place product in a crib or playpen where baby could become entangled. NEVER add strings or ties to the product.

Battery Installation

Hint: We recommend the use of **alkaline** batteries for longer battery life.

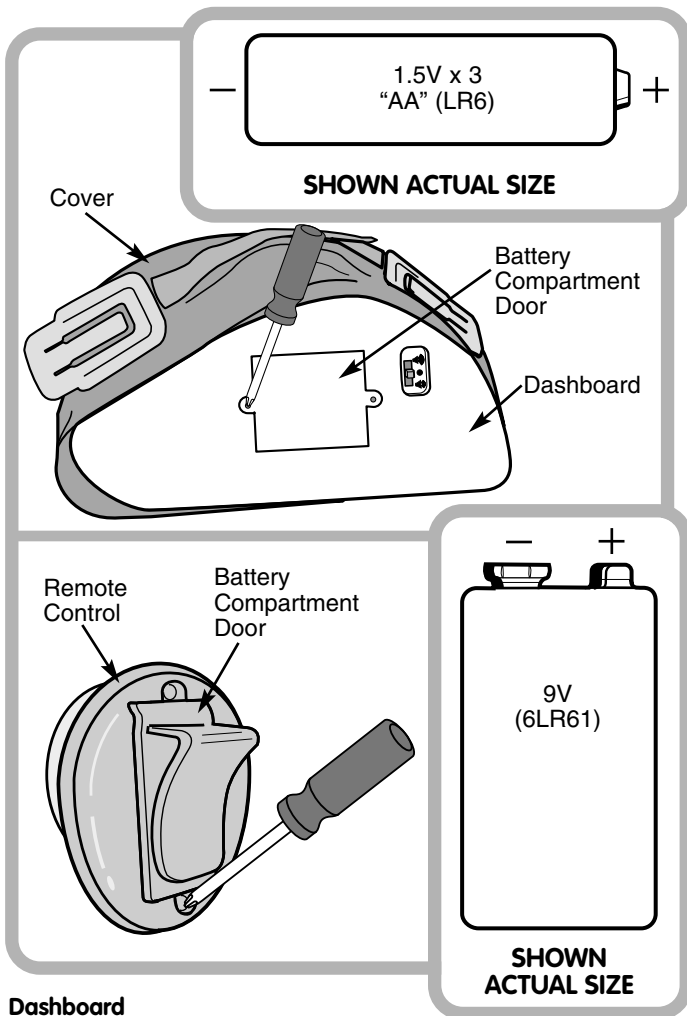

Dashboard

- Turn the dashboard face down. Open the fasteners on the cover to locate the battery compartment on the dashboard.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries.
- Close the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

Remote Control

 
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Snap the contacts of a 9V (6LR61) **alkaline** battery to the contacts inside the battery compartment.
- Close the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated on the battery compartment door.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Setup

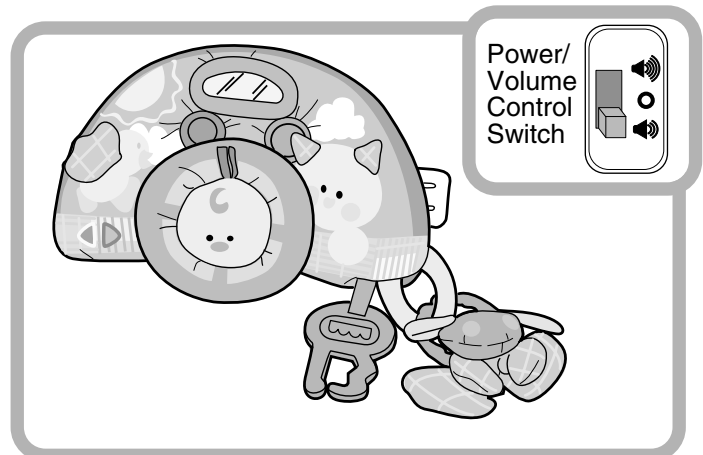

- Slide the power/volume control switch on to low volume . The system is now active for approximately two hours.
- Press the lion to hear a short song. Adjust the volume to a comfortable listening level for your child by either:
 - keeping the switch on low volume .
 - sliding the switch to high volume .
- Re-fasten the fasteners on the cover.

 
Hints:

- Although the system is active, unless the dashboard is playing music or sound effects and lights are twinkling, only a very small amount of battery power is being used.
- If the toy is not used for more than two hours, it turns off automatically. To reactivate the toy, simply press the lion.

Attaching the Dashboard to a Car Seat

IMPORTANT! This product is designed to attach to **most car seats**. If, after attaching this product to your car seat, you find that you cannot properly tighten your car seat's restraint system (as described in the car seat manufacturer's instructions), **DO NOT** use this product on the car seat.


Car Seat with Bolster

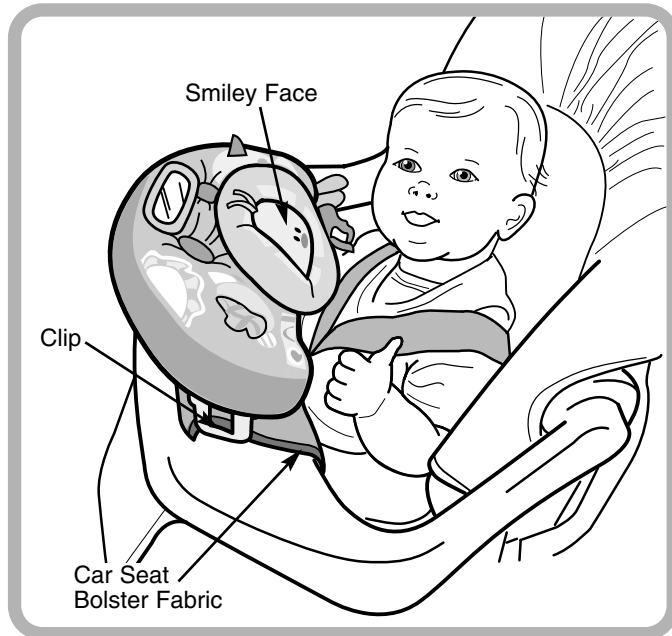

- Position the dashboard upright with the smiley face towards baby.
- Fasten the clips on the underside of the dashboard to the car seat bolster fabric, as shown.


Car Seat with 3-Point or 5-Point Restraint

 Hint: This toy does **not** fit tightly to your car seat restraint system, so it does not interfere with securing your child in the car seat.

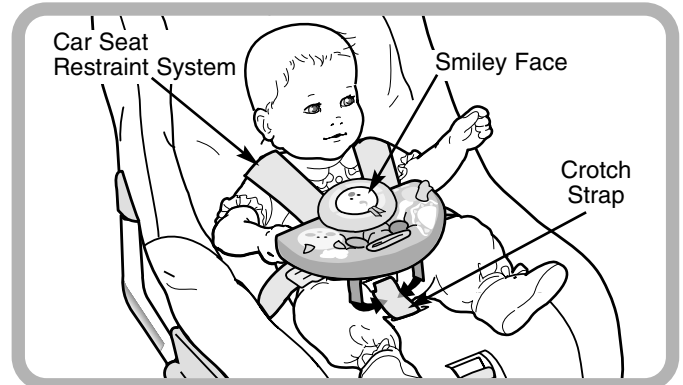


IMPORTANT! Before attaching the dashboard to your car seat's restraint system, **check to be sure the car seat restraint system is securing your child properly! Check all restraint system belts (shoulder, lap, crotch, etc.) by pulling on them. The straps should not pull more than one inch (two fingers) away from your child.**

 - Position the dashboard with the smiley face towards baby.
- Wrap the dashboard straps around the crotch strap (of the car seat restraint system) and fasten.

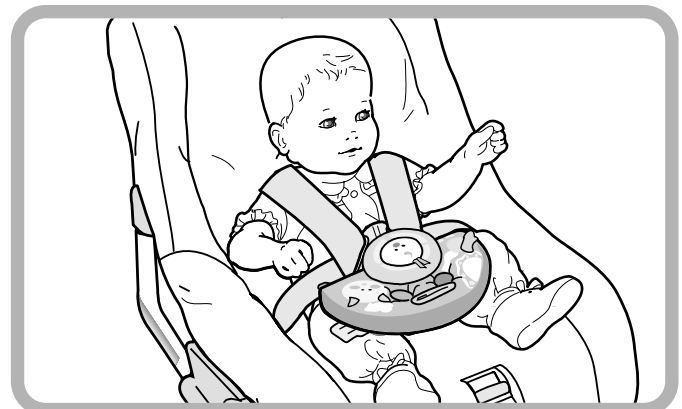

Hint: This toy is designed to be moveable on your child's lap.

 Attaching the Remote Control to a Vehicle Visor

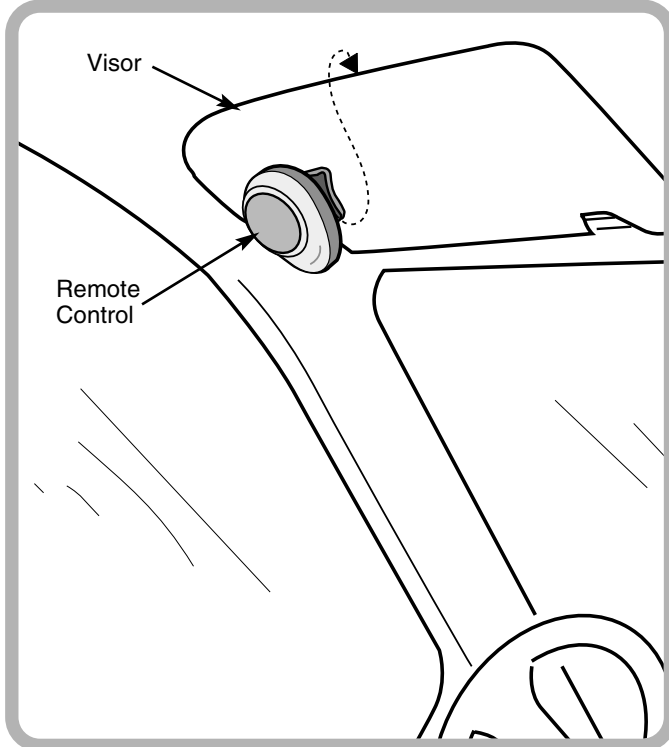

- Attach the remote control clip to the top of the vehicle visor, as shown.

Hint: The remote control does not need to be in direct line with dashboard.

Adult Use with Remote Control

The Car Seat Dashboard can be used in two ways: Adult activated by remote control or child activated by pressing on the lion.

 


- Slide the power/volume control switch to high or low volume to activate the system.
- Press the remote control button once for fun songs and a light display. Music and lights plays for approximately three minutes.
- To pause, press the remote control control button again.
- To switch to soothing songs, press the remote control button a third time. A musical selection and light display plays for approximately three minutes.
- To pause songs, press the remote control button again.
- To replay fun songs, press the remote control button again.

Hint: Each time the remote control button is pressed, the dashboard will cycle between fun songs - pause - soothing songs - pause, etc.

Child Use with Dashboard Only


Car Seat with Bolster

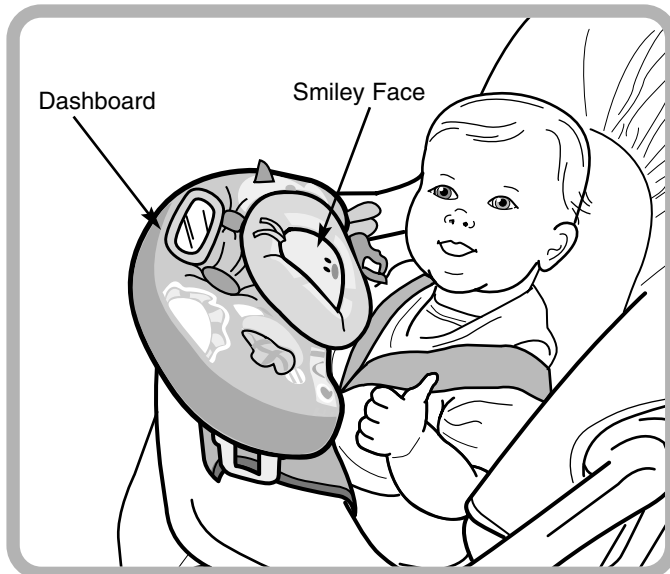

- Each time your child presses the smiley face, you'll hear a sound effect and a short tune along with twinkling lights.


Care

 Remove the Plastic Unit for Washing

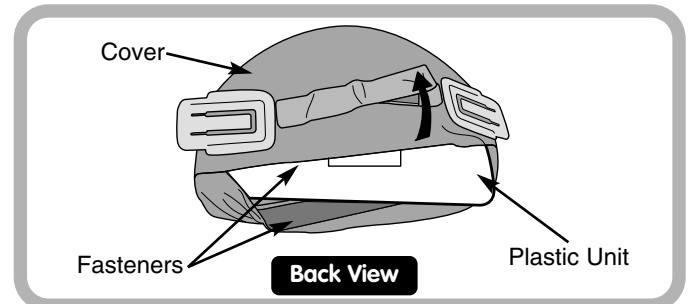


- Remove the plastic unit before washing the fabric dashboard cover.
 - Unfasten the fasteners on the back of the cover.
 - Remove the plastic unit from the cover.
- Re-fasten the fasteners on the cover before washing. The cover is machine washable. Wash the cover separately in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- Do not immerse the plastic unit.

 Replace the Plastic Unit for Use

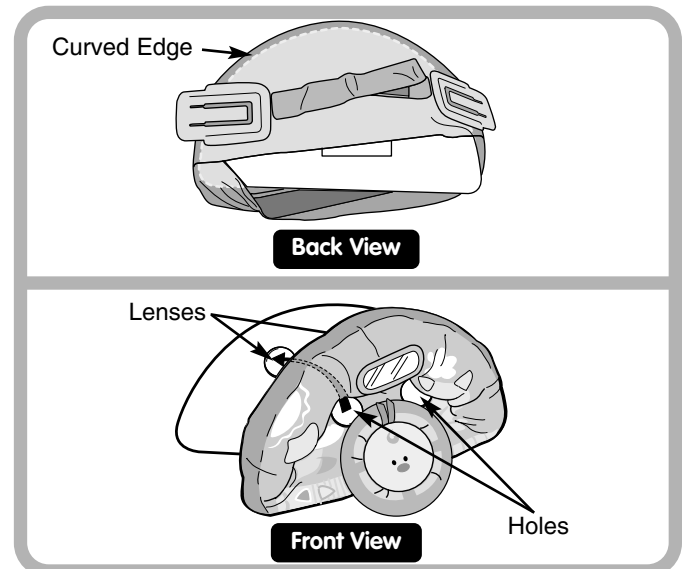

- Once cleaned and dried, unfasten the fasteners on the underside of the cover.
- Position the plastic unit so that the curved edge is toward the curved edge of the cover.
- Fit the plastic unit into the cover. Re-fasten the cover fasteners closed.
- Turn the dashboard upright. Fit the two lenses on the plastic unit through the two holes in the cover.

Hints

- *If you will not use this product for an extended period of time, we recommend turning power completely off. Simply slide the power/volume control switch on the back of the dashboard to off . Be sure to follow the set-up instructions, and turn power back on for future use.*
- *If sounds or lights from this toy become faint or stop, it's time for an adult to replace the batteries!*

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For countries outside the United States:

CANADA Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500302.

AUSTRALIA Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

FCC Note (United States Only)

Car Seat Dashboard

Model Number: C0128

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Car Seat Dashboard
Consumer Relations Department
636 Girard Avenue
East Aurora, New York 14052

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

www.fisher-price.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>