

**Instructions for use and installation**

Cooker Hood

**Istruzioni per l'uso e l'installazione**

Cappa

**Mode d'emploi et installation**

Hotte de Cuisine

**Bedienungsanleitung und Einrichtung**

Dunstabzugshaube

**Kullanım ve montaj talimatları**

Davlumbaz

**Uživatelská Pøíruèka**

Odsavaè par

**FDB 9078 SIL-K**

## INDEX

EN

RECOMMENDATIONS AND SUGGESTIONS .....	3
CHARACTERISTICS .....	4
INSTALLATION .....	6
USE .....	9
MAINTENANCE .....	10

## INDICE

IT

CONSIGLI E SUGGERIMENTI .....	14
CARATTERISTICHE .....	15
INSTALLAZIONE .....	17
USO .....	20
MANUTENZIONE .....	21

## SOMMAIRE

FR

CONSEILS ET SUGGESTIONS .....	25
CARACTERISTIQUES .....	26
INSTALLATION .....	28
UTILISATION .....	31
ENTRETIEN .....	32

## INHALTSVERZEICHNIS

DE

EMPFEHLUNGEN UND HINWEISE .....	36
CHARAKTERISTIKEN .....	37
MONTAGE .....	39
BEDIENUNG .....	42
WARTUNG .....	43

## İÇERİKLER

TR

TAVSIYELER VE ÖNERİLER .....	47
ÖZELLİKLER .....	48
MONTAJ .....	50
KULLANIM .....	53
BAKIM .....	54

## OBSAH

CZ

RADY A DOPORUČENÍ .....	58
HLAVNÍ PARAMETRY .....	59
INSTALACE .....	61
POUŽITÍ .....	64
ÚDRŽBA .....	65

# RECOMMENDATIONS AND SUGGESTIONS

⚠ The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.

## INSTALLATION

- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is 650 mm (some models can be installed at a lower height, please refer to the paragraphs on working dimensions and installation).
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing.

Connect the extractor to the exhaust flue through a pipe of minimum diameter 120 mm. The route of the flue must be as short as possible.


- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air.



## USE

- The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
- Never use the hood for purposes other than for which it has been designed.
- Never leave high naked flames under the hood when it is in operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
- Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
- Do not flambè under the range hood; risk of fire
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## MAINTENANCE


- Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
- Clean and/or replace the Filters after the specified time period (Fire hazard).
- Clean the hood using a damp cloth and a neutral liquid detergent.

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

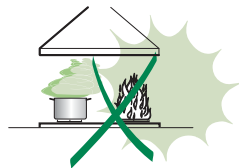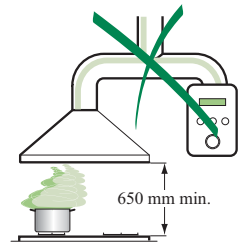

# CHARACTERISTICS

## Dimensions

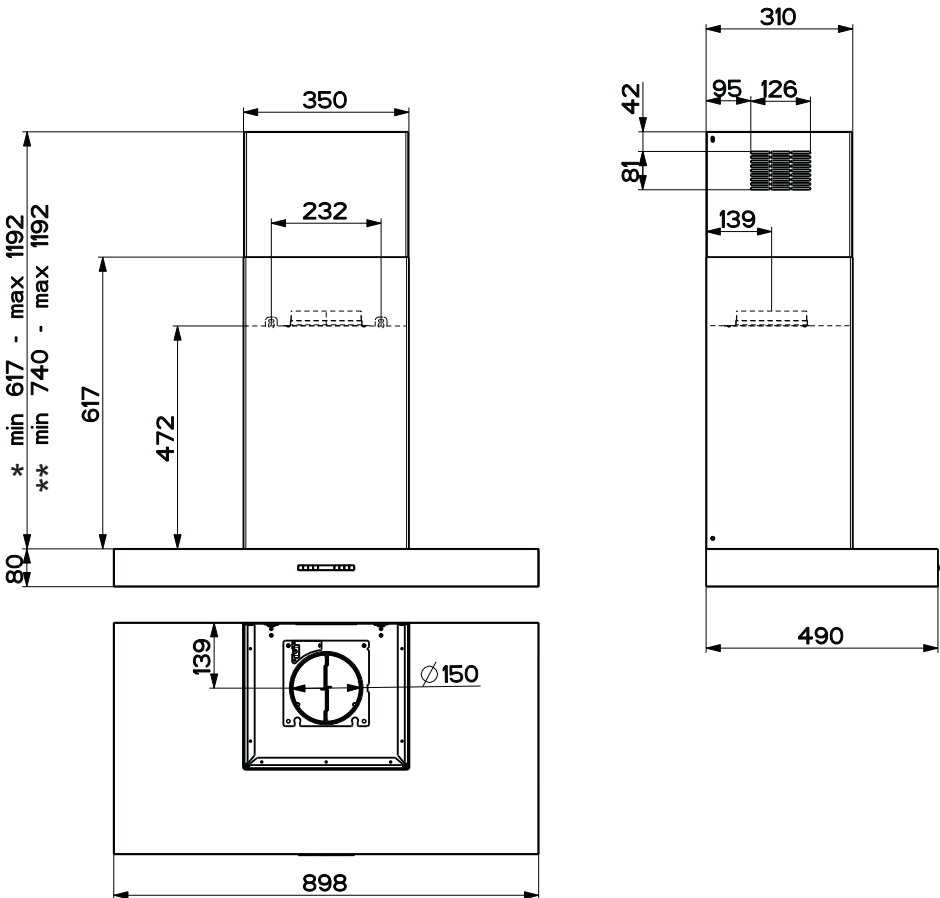


- \* Dimensions of the hood in ducting version.
- \*\* Dimensions of the hood in recycling version.

## Components

Ref.	Q.ty	Product Components
1	1	Hood Body, complete with: Controls, Light, Blower, Filters
2	1	Telescopic Chimney comprising:
2.1	1	Upper Section
2.2	1	Lower Section
9	1	Reducer Flange $\varnothing$ 150-120 mm
10	1	Flange $\varnothing$ 150 mm
15	1	Air Outlet Connection
30	1	Comfort Panels


Ref.	Q.ty	Installation Components
7.2.1	2	Upper Chimney Section Fixing Brackets
11	8	Wall Plugs
12a	8	Screws 4,2 x 44,4
12c	6	Screws 2,9 x 9,5

Q.ty	Documentation
1	Instruction Manual

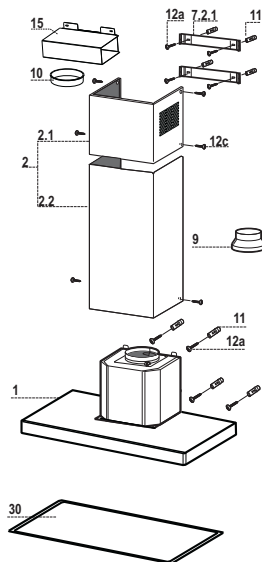

# INSTALLATION

## Drilling the Wall and Fixing the Brackets

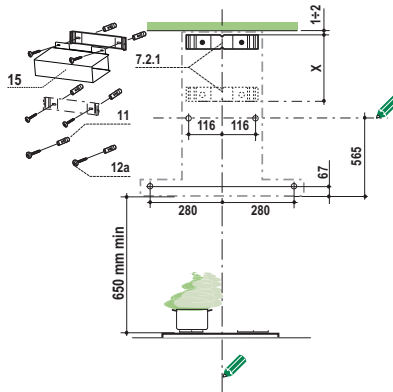

Draw the following on the Wall:


- a Vertical line up to the ceiling or top surface, at the centre of the area in which the Hood is to be fitted;
- a Horizontal line: 650 mm min. above the Cooker Top.
- Rest the Bracket **7.2.1** as indicated, 1-2 mm from the ceiling or surface above the hood, aligning its centre (grooves) with the vertical reference line.
- Mark the centres of the holes in the bracket.
- Rest the Bracket **7.2.1** as indicated, X mm under the first bracket (X = height of the Upper chimney provided), aligning its centre (grooves) with the vertical reference line.
- Mark the centres of the holes in the bracket.
- As shown in the drawing, mark a reference point 116 mm from the vertical reference line, and 565 mm above the horizontal reference line.
- As shown in the drawing, mark a reference point 280 mm from the vertical reference line, and 67 mm above the horizontal reference line.
- Repeat this operation on the other side.

**N.B.** Should installation of the lower bracket **7.2.1** interfere in any way with that of the hood canopy, the lower bracket **7.2.1** may be omitted.

- Drill the points marked using a  $\varnothing 8$  mm drill bit.
- Insert the plugs **11** into the holes.
- Fix the lower bracket **7.2.1**, if it is to be fitted, using the screws **12a** (4.2 x 44.4 ) provided.
- Fix the upper bracket **7.2.1** and the bracket supporting connection **15** together, using the 2 screws **12a** (4.2 x 44.4 ) provided.
- Tighten the 2 screws **12a** (4.2 x 44.4) provided in the hood canopy fixing bores, leaving a gap of 5-6 mm between the wall and the heads of the screws.

## Hood body installation

- Before hooking the hood body it is necessary to tighten 2 **Vr** screws placed in the fixing points of the body.
- Hook the hood body on the **12a** screws.
- Tighten completely **12a** support screws.
- The correct hood body position can be levelled with **Vr** screws.
- Fix the hood definitively by tightening the **12a** security screws.

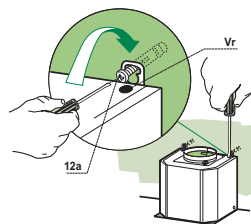


## Connections

### DUCTED VERSION AIR EXHAUST SYSTEM


When installing the ducted version, connect the hood to the chimney using either a flexible or rigid pipe  $\varnothing$  150 or 120 mm, the choice of which is left to the installer.

- To install a  $\varnothing$  120 mm air exhaust connection, insert the reducer flange **9** on the hood body outlet.
- Fix the pipe in position using sufficient pipe clamps (not supplied).
- Remove any activated charcoal filters.

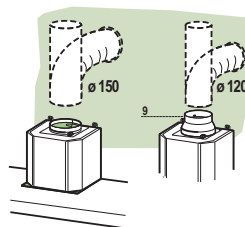


### AIR OUTLET - RECIRCULATION VERSION

- Connect the Flange  $\varnothing$ 150 **10** to the bottom end of the Connector **15**
- Join the Hood canopy outlet to the Flange on the bottom part of the Connector, using a rigid or flexible pipe  $\varnothing$ 150 mm, selection of which is at the discretion of the installation technician.
- Make sure that the Activated charcoal odour filter has been fitted.

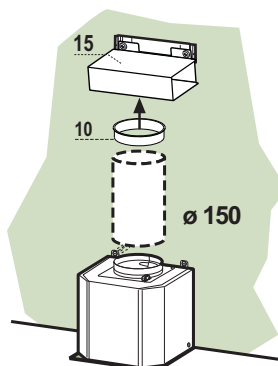

## ELECTRICAL CONNECTION

- Connect the hood to the mains through a two-pole switch having a contact gap of at least 3 mm.
- Remove the grease filters (see paragraph Maintenance) being sure that the connector of the feeding cable is correctly inserted in the socket placed on the side of the fan.

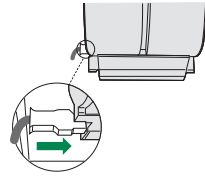

## Fitting the Chimney

### Upper chimney



- Open the two side pieces out slightly, hook them up behind the brackets **7.2.1** and bring them back together again until they are in contact.

**N.B.** The bottom bracket may be omitted.


- Fix the sides of the Brackets using 4 Screws **12c** (2.9 x 9.5), provided.
- Make sure that the Connector outlet is in correspondence with the Chimney openings.

### Lower chimney

- Open out the two Chimney side flaps, hook them up between the upper chimney and the wall and then close them up again until they touch.
- Fix the lower part to the Hood canopy at the sides, using 2 screws **12c** (2.9 x 9.5) provided.
- Fit the Comfort Panel on the body using the fixing pins provided, and hook up the safety catch.

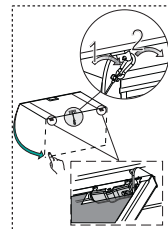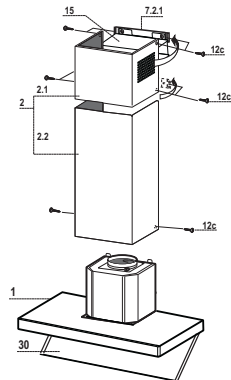



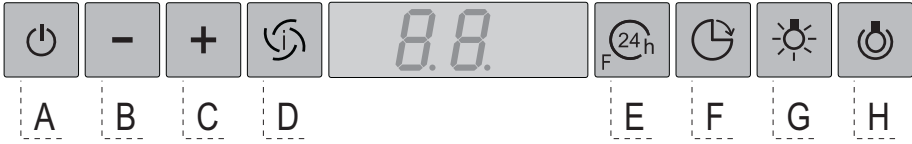

### Control board


Key	Function	Display
<b>A</b>	Switches the extractor motor on and off at the latest selected speed	Indicates the selected speed.
<b>B</b>	Decreases the suction speed.	
<b>C</b>	Increases the suction speed.	
<b>D</b>	By pressing this key it is possible to activate the intensive speed from any previously selected speed. The intensive speed can be activated even when the motor is OFF. This speed has been timed at 10 minutes. After that time the system activates automatically the latest selected speed. This function is suitable for cooking conditions when vapours and smells are of the utmost emission.	<b>HI</b> appears. The spot down on the right side flashes once a second.
<b>E</b>	By pressing this key it is possible to set up the motor to a suction speed at 100 m <sup>3</sup> /h lasting 10 minutes every hour. After this the motor switches off automatically. When the filter saturation is going on it is possible to reset the alarm by pressing this key for about 3 seconds. The indication is visible only when the motor is off.	Indicates the <b>24-function</b> . The spot down on the right side flashes and the motor is on. Once the process is finished the previous indication disappears: <b>FF</b> Indicates that the metal grease filters saturation alarm has been triggered, and the filters need to be washed. The alarm is triggered after 100 working hours. <b>EF</b> Indicates that the charcoal filter saturation alarm has been triggered, and the filter has to be replaced; the metal grease filters must also be washed. The charcoal filter is triggered after 200 working hours.
<b>F</b>	By pressing this key it is possible to set the delayed shutdown of the appliance to 30 minutes. This function is suitable for a complete elimination of the residual smells. It can be activated at any position, and it is deactivated by pressing the key again or by switching off the motor.	Indicates alternately the selected speed of the hood and the time left before the hood shutdown. The spot down on the right side flashes.
<b>G</b>	Turns the light on and off.	
<b>H</b>	Turns the light on and off at reduced intensity.	

# MAINTENANCE

## REMOTE CONTROL (OPTIONAL)


The appliance can be controlled using a remote control powered by a 1.5 V carbon-zinc alkaline batteries of the standard LR03-AAA type (not included).

- Do not place the remote control near to heat sources.
- Used batteries must be disposed of in the proper manner.

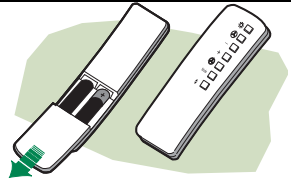

## Cleaning the Comfort Panels

- Pull the Comfort Panel to open it.
- Unhook the security chain by opening the spring catch.
- Disconnect the panel from the hood canopy by sliding the fixing pin lever.
- The comfort panel must never be washed in a dishwasher.
- Clean the outside by using a damp cloth and neutral liquid detergent.
- Clean the inside as well by using a damp cloth and neutral detergent; do not use wet cloths or sponges, or jets of water; do not use abrasive substances.
- When the above operation has been completed, hook the panel back and the spring catch to the hood canopy and close it by turning the knob in the opposite direction.

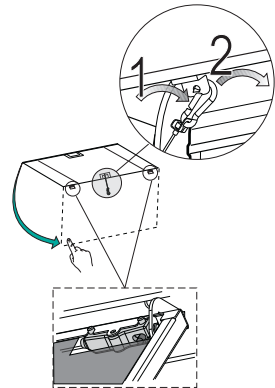

## Metal grease filters


The Filters can be washed in the dishwashing. They need to be washed when **FF**-sign appears on the display or in any case every 2 months, or even more frequently in case of particularly intensive use of the hood.

### Alarm reset

- Switch off the hood and the lights. If the 24h-function has been activated this has to be deactivated.
- Press the **E**-key till the display is unlit.

### Cleaning the filters

- Pull the comfort panels to open them.
- Remove the filters one by one pushing them towards the back side of the hood unit and simultaneously pulling downwards.
- Any kind of bending of the filters has to be avoided when washing them. Before fitting them again into the hood make sure that they are completely dry. (The colour of the filter surface may change throughout the time but this has no influence to the filter efficiency).
- When fitting the filters into the hood pay attention that they are mounted in correct position the handle facing outwards.
- Close the comfort panel.

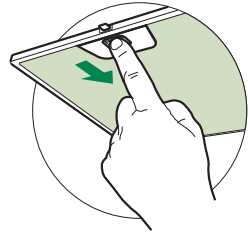

## Charcoal filter (recycling version)

- This filter cannot be washed or regenerated. It must be replaced when the **EF** appears on the display or at least once every 4 months.

### Activation of the alarm signal

- In the recycling version hoods the filter saturation alarm must be activated during the installation or later.
- Switch off the hood and the lights.
- Disconnect the hood from the mains supply.
- When restoring the connection press and hold **B**-key.
- When releasing the key two rotating rectangles appear on the display.
- **Within 3 seconds** press the **B**-key until a flashing confirmation appears on the display:
  - 2 flashes with **EF** - charcoal filter saturation alarm **ACTIVATED**
  - 1 flash with **EF** - charcoal filter saturation alarm **DEACTIVATED**.


### REPLACING THE CHARCOAL FILTER

#### Reset of the alarm signal

- Switch off the hood and the lighting. If the 24h-function has been activated this has to be deactivated.
- Press the E-key until the display is unlit.


#### Replacing of the filter

- Open the comfort panels by pulling them downwards.
- Remove the metal grease filters.
- Remove the saturated charcoal filter by releasing the fixing hooks.
- Fit the new filter and fasten it in its correct position.
- Put the metal grease filters in their seats.
- Close the comfort panels.

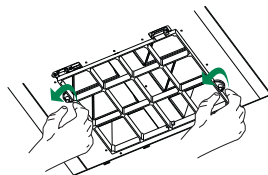

### CHANGING THE SOUNDPROOFING ELEMENT

- Open the Comfort panels by pulling them.
- Remove the Metal grease filters.
- Remove the Activated charcoal filter, using the hooks provided.
- Pull out the Soundproofing Element from below, pressing the side fins to disconnect it from the slot in the Hood Canopy.
- Clean it with a damp cloth and replace it, first making sure that it is completely dry.
- Replace the Activated charcoal filters.
- Replace the Metal grease filters.
- Close the Comfort panels.

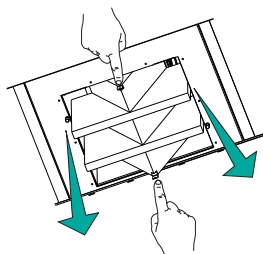

## Lighting unit

---

### REPLACING OF THE LED UNIT

#### LED

- To remove the lighting unit a screwdriver can be used in order to slightly press the side part of the unit.
- Remove the unit, remove the electrical connector and replace the unit with a new one. ("To purchase contact technical support")

**Warning:** This appliance is fitted with a white LED lamp classed as 1M according to EN 60825-1: 1994 + A1:2002 + A2:2001 standards; maximum optical power emitted @439nm: 7 $\mu$ W. Do not look directly at the light through optical devices (binoculars, magnifying glasses...).



Franke S.p.a.  
Via Pignolini,2  
37019 Peschiera del Garda (VR)  
[www.franke.it](http://www.franke.it)

436004404\_ver7

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>