

## Before Operating Your Washer

**Read your washer Owner's Guide.** It has important safety and warranty information. It also has many suggestions for best washing results.

**⚠ WARNING** To reduce the risk of fire, electric shock, or injury to persons, read the **IMPORTANT SAFETY INSTRUCTIONS** in your washer Owner's Guide before operating this appliance.

## Operating Steps

**Read Washing Procedures in your Owner's Guide.** It explains these operating steps in detail.

1. Sort laundry into loads that can be washed together.
2. Prepare items for washing.

3. Pretreat stains and heavy soil.
4. Add the measured amount of detergent to wash tub.
5. If desired, add diluted liquid bleach to Bleach Dispenser.
6. Add laundry load to wash tub.
7. If desired, add liquid fabric softener to the Fabric Softener Dispenser.
8. Set cycle selector and washer controls according to type, size, and soil level of each load.
9. Close lid and pull cycle selector knob to start washer.
10. Remove items at end of cycle. Wait about 1 minute for safety lid lock to release.

## Cycle Selection

**Always follow instructions on fabric care labels.**

The Regular, Perm Press and Knits & Delicates cycles provide a spray rinse during the first spin, followed by a deep rinse and final spin.

### Regular Cycle

Provides up to 15 minutes of wash agitation for most fabrics.


### Perm Press Cycle

Provides up to 12 minutes of wash agitation for cottons and blends with a no-iron finish.

### Knits & Delicates Cycle

Provides 8 minutes of wash/pause agitation for the gentle care of knit and delicate items. Always set the Knits & Delicates cycle to begin at the START position.

*(continued, reverse side)*

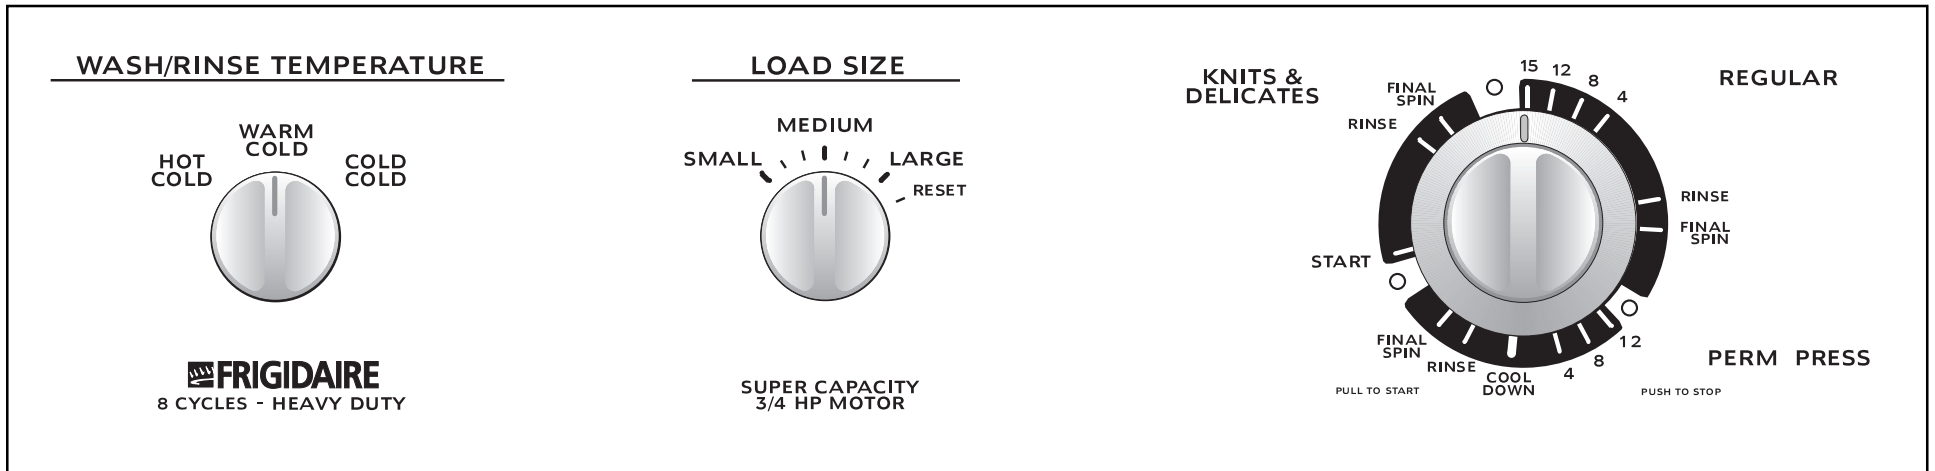

## Controls

Always follow instructions on fabric care labels.

**WASH/RINSE TEMPERATURE** sets the water temperatures for washing and rinsing. Select wash water temperature according to fiber content and soil level of the load, and type of detergent used. A cold water rinse saves energy and reduces wrinkling.

The following chart suggests wash/rinse temperatures for basic fabric types.

<u>Fabric Type</u>	<u>Wash/Rinse Temperature</u>
Heavily soiled white/colorfast cotton, perm press	Hot/Cold
Lightly soiled white/colorfast cotton, perm press	Warm/Cold
Noncolorfast fabrics, knits, delicates, washable woolsens	Cold/Cold

**LOAD SIZE** sets the amount of wash and rinse water for the wash load. Select a water level appropriate for the load size. There should be enough water for items to move freely.

- To increase water level after the wash cycle begins, turn the Load Size control to Reset and hold. When water begins to enter the tub, turn the control to the desired setting.

## Energy Saving Tips

- Wash full loads. Oversize loads use extra energy. Undersize loads waste energy.
- When small wash loads cannot be avoided, use lower water levels.
- Select the appropriate cycle and time for each load. Shorten wash times for lightly soiled loads.
- To reduce drying time, select a fast spin speed to remove more water from heavy items such as towels and jeans.
- Use warm water to wash most loads. Limit hot water washes to heavily soiled and white loads. Use cold water for lightly soiled items and rinsing.
- Operate the washer in early morning and late evening when utility demands are low.
- Follow proper laundry procedures to avoid rewashing.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>