



MODEL H8239 SAFETY LOCKING ON/OFF SWITCH INSTRUCTIONS

For questions or help with this product contact Tech Support at (570) 546-9663 or techsupport@grizzly.com

!WARNING

To reduce risk of serious burns, electrocution or death when installing this switch:

- Only use this switch to replace an existing machine switch that has the same physical configuration and equivalent electrical specifications/ratings.
- Installation must only be performed by an electrician or qualified service personnel, and all applicable electrical codes must be adhered to.
- Turn off and completely disconnect all power sources to the machine before installing the switch.
- Do not use this switch in wet or damp locations, or near explosive fumes or flammable liquids. It is not sealed or rated for these environments.
- Make sure there is a verified machine ground on the circuit this switch is installed.

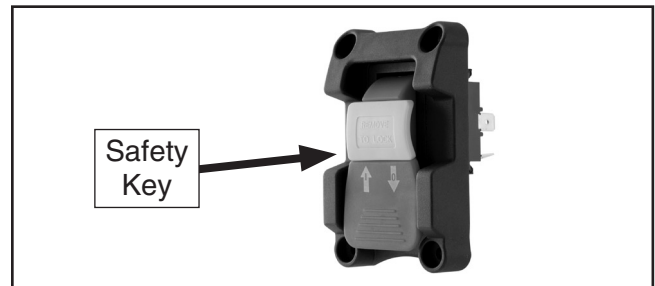


Figure 1. H8239 safety paddle switch.

Introduction

The Model H8239 features a large ON/OFF paddle with a removable safety key that can be used to disable the switch. This switch is designed to fit into $\frac{7}{8}$ " x $1\frac{5}{8}$ " rectangular hole or mounted over a $1\frac{1}{8}$ " x $2\frac{1}{4}$ " rectangular hole with four #5 screws.

Specifications

Rated Horsepower..... 2HP
Rated Voltage..... 125V/250V
Rated Current Amperage 20A

COPYRIGHT © APRIL, 2011 BY GRIZZLY INDUSTRIAL, INC.

WARNING: NO PORTION OF THIS INSTRUCTION SHEET MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.


#TS13931 PRINTED IN CHINA

Installation

When installing the H8239 switch, use the wiring diagram in **Figure 2** to ensure proper wire connections.

! WARNING

This switch is intended to be connected to stranded wire with insulated quick-disconnect crimp-type female wire terminals having a 1/4" tab.




All crimps must be "pull-checked" to ensure that wires are securely crimped and will not fall out with moderate tension or when exposed to normal machine vibration.

Operation

To turn the switch **ON**, make sure the safety key is properly inserted, then flip the paddle up.

To turn the switch **OFF**, flip the paddle down.

To disable the switch, turn the switch **OFF**, then pull the yellow key from the switch and store it in a well hidden or secure location.

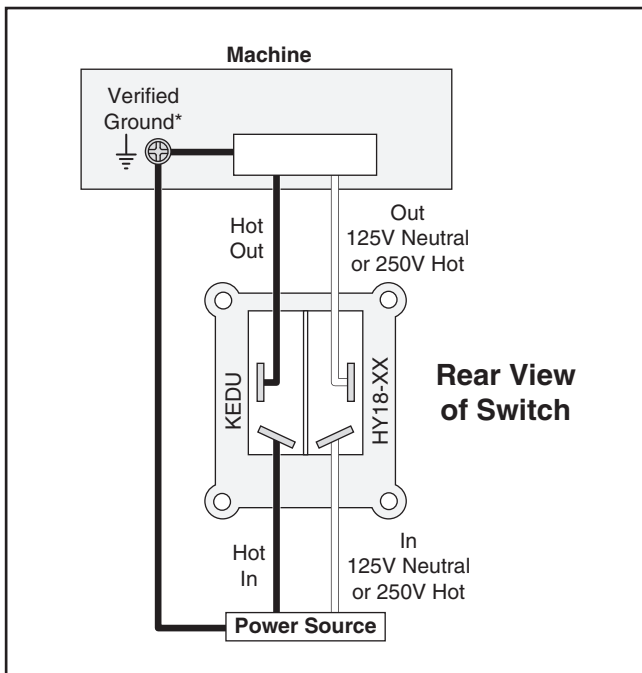

*The machine **MUST** be connected to a verified ground. In the event of certain malfunctions or breakdowns, grounding reduces the risk of electric shock by providing a path of least resistance for electric current.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>