 


Proctor-Silex®

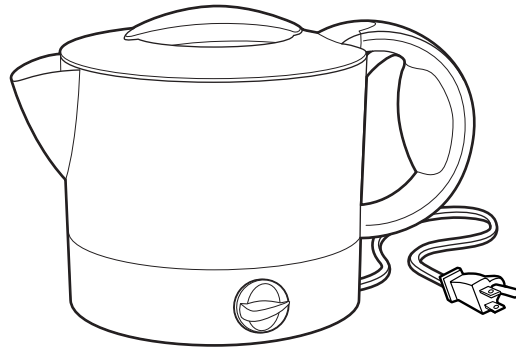

Hot Pot 2
USA: 1-800-851-8900

840074300

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces or hot liquids. Use handles or knobs. Care must be taken as burns can occur from touching hot parts or from spilled hot liquid.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plugs, or hot pot in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Hot pot must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
11. To protect against electric shock, unplug from outlet when filling, when not in use, and before cleaning.
12. To prevent burns, allow to cool before cleaning.
13. Do not allow hot pot to boil dry.
14. To avoid possible steam damage, turn spout away from walls or cabinets during use; use protective pad under hot pot to prevent damage to wood finishes.

15. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
16. Do not place on or near a hot gas or electric burner, or in a heated oven.
17. To disconnect, remove plug from wall outlet. Never pull on cord as this may damage the cord and eventually cause electric shock.
18. Scalding may occur if the lid is removed during the heating cycle.
19. Be sure the lid is securely snapped in place before turning hot pot on and during use. Allow to cool before removing lid. To remove lid lift straight up.
20. WARNING: To reduce risk of fire, do not heat flammable liquids or solids, like wax, lard, oil, gas, alcohol or the like.
21. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS!

CONSUMER SAFETY INFORMATION

This appliance is intended for household use only.

To avoid an electrical circuit overload, do not operate another high wattage appliance on the same circuit with the hot pot.

 
This appliance is equipped with a grounded-type 3-wire cord (3-prong plug). This plug will only fit into an electrical outlet made for a 3-prong plug. This is a safety feature. If the plug should fail to fit, contact an electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the grounding pin, part of the 3-prong plug.

This appliance has a short cord to reduce hazards of becoming entangled or tripping over a longer cord. A grounded-type 3 wire extension cord may be used if the electrical rating of the extension cord is equal to or greater than the rating of the hot pot. Use only an extension cord rated 15 amperes or greater. Care must be taken to arrange the extension cord so that it will not drape over countertop or tabletop where it can be pulled on by children or tripped over.

WARNING: To avoid burns and reduce the risk of personal injury, use extreme caution when carrying the hot pot containing hot liquids. Do not pour in the direction of people or over people.

Parts and Features

1. Cover
2. Control Knob

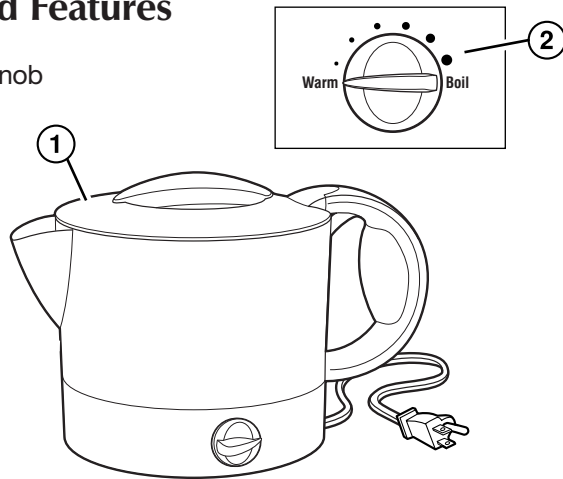

Using Your Hot Pot

BEFORE FIRST USE: Rinse out hot pot with warm, soapy water, then rinse with clean, hot water.

NOTES:

- The hot pot has a heat control that ranges from WARM to BOIL. The heat control can be set between warm and boil to achieve desired cooking temperature depending on liquid or food being used.

4

- The hot pot can be used for heating water, milk, soups, and liquid-based foods.
1. Remove cover by gripping the center of cover and lifting off of the hot pot.

 
2. Fill hot pot with liquid or food desired. Be careful not to exceed the 32 ounces MAX FILL line.

WARNING: If the hot pot is overfilled, there is a risk that hot liquid may spit out of the spout.


3. Place hot pot on a dry, level surface. Firmly attach cover when heating liquids. When heating creamy soups and liquid-based foods, cover may be removed to stir occasionally during heating.

WARNING: THE HOT POT AND ACCUMULATED STEAM WILL BE HOT. OPEN COVER CAREFULLY TO LET STEAM ESCAPE SAFELY.

4. Plug hot pot into the outlet. As soon as hot pot is plugged in, the unit is on. Set control knob to desired setting.

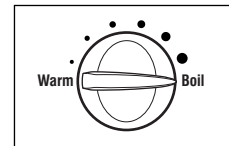

 5. When desired temperature is reached, the control knob may be reduced to the WARM setting to keep liquid or food warm for serving.

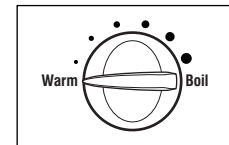

6. When pouring liquids out of spout, make sure cover is firmly attached. Cover may be removed to ladle out the food.

5

Heating Chart

Contents	Heating Times*
1 cup water	3 minutes
4 cups water	9 minutes
Liquid-based canned foods	2 to 6 minutes
Soups	3 to 4 minutes

* Times listed are for the BOIL setting.

Helpful Hints

- When heating soups, stews, and solid, liquid-based foods, stir occasionally.
- The hot pot is easier to clean soon after serving liquids or foods.

If Your Hot Pot Boils Dry

If your hot pot is accidentally plugged in without being filled with liquid or food, or is allowed to boil dry, the hot pot will cycle continuously, switching off, cooling down, and switching back on. You should:

1. Unplug the hot pot and wait about 15 minutes for the heater to cool down.
2. Refill the hot pot, then use as normal and check that the hot pot functions correctly.

Cleaning the Hot Pot

CAUTION: TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT IMMERSE HOT POT, ITS CORD, OR ITS PLUG IN WATER OR OTHER LIQUID.

1. With hot pot unplugged, empty out any remaining liquid or food.
2. Wash the inside of hot pot with warm, soapy water and rinse with warm water after each use. Do the same with the cover.
3. Do not clean the heating surface with an abrasive scouring pad or powder; doing so will damage the nonstick coating.
4. To clean the exterior of hot pot, wipe with a damp cloth. Do not use abrasive scouring pads or powders as they may scratch the smooth surface of hot pot.
5. To avoid scale/lime deposit build-up, empty water out of hot pot after each use.
 - NEVER IMMERSE THE HOT POT IN WATER OR OTHER LIQUIDS.
 - NEVER OVERFILL HOT POT. DO NOT ALLOW WATER OR LIQUID TO RUN OVER TOP OR DOWN SIDES.

Customer Service

If you have a question about your hot pot, call our toll-free customer service number. Before calling, please note the model, type, and series numbers and fill in that information below. These numbers can be found on the bottom of your hot pot. This information will help us answer your question much more quickly.

MODEL: _____ **TYPE:** _____ **SERIES:** _____

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of one hundred eighty (180) days from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBER

In the U.S. 1-800-851-8900

Web site address: www.proctorsilex.com

KEEP THIS NUMBER FOR FUTURE REFERENCE!

HAMILTON BEACH ♦ PROCTOR-SILEX, INC.
263 Yadkin Road, Southern Pines, NC 28387

PROCTOR-SILEX CANADA, INC.
Picton, Ontario K0K 2T0

840074300

Web site address: www.proctorsilex.com

4/01

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>