

**Use & Care for Citrus Juicer..... 2**  
USA: 1-800-851-8900

840104600

## IMPORTANT SAFEGUARDS

When using electrical appliances basic safety precautions should be observed, including the following:

1. Read all instructions.
2. To protect against risk of electric shock, do not immerse base, cord, or plug in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. **UNPLUG FROM OUTLET WHEN NOT IN USE**, before putting on or taking off parts and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by Hamilton Beach/Proctor-Silex, Inc. may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including stove.

## SAVE THESE INSTRUCTIONS

### CONSUMER SAFETY INFORMATION

**This appliance intended for household use only.**

 
This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the juicer. Care must be taken to arrange the extension cord so that it will not drape over the counter-top or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use another high wattage appliance on the same circuit with your juicer.

### Parts and Features




1. Lid
2. Reamer with pulp scrapers
3. Strainer
4. Pitcher with juice level indicator
5. Center shaft
6. Base with cord storage

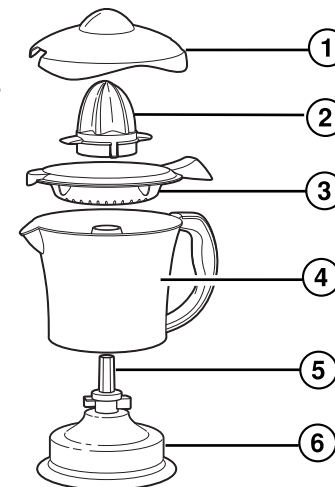

---

## How to Use

   1. Unplug from electrical outlet.
2. Place pitcher onto base. Hold base and turn pitcher clockwise to lock. The pitcher will stop when locked. **(Illustration A.)**
3. To juice, place strainer and reamer onto center shaft of juicer, aligning handle of strainer with the handle of the pitcher. **(Illustration B.)**
4. For juice with more pulp, separate reamer from strainer by pulling apart. Lock pitcher onto base following instructions in 2. Place reamer onto center shaft of juicer. **(Illustration C.)** If reamer is used without strainer, the juice will contain pulp and seeds. When serving, pour juice through a slotted spoon to remove the seeds.
5. Plug cord into 120 volt AC outlet.
6. Push down on reamer with halved fruit to start the juicing action. Lift the fruit up off the reamer and the juicer stops. This juicer is designed with an auto-reverse. It automatically reverses direction, from time to time, to make juicing easier.
7. When finished juicing, unplug from outlet, then remove reamer (and strainer if used).

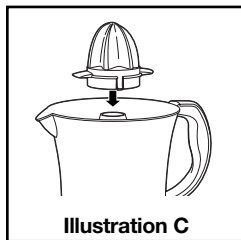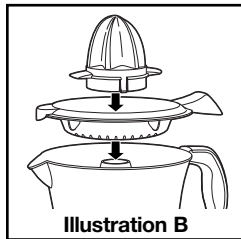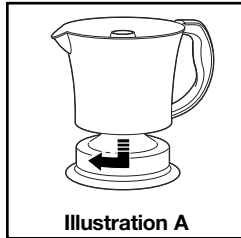

8. To unlock pitcher, hold base and turn pitcher counterclockwise. Place lid on pitcher.
9. Pour juice from pitcher. Store unused juice in pitcher in the refrigerator.

---


## Tips for Best Results

 - This juicer is designed to juice citrus fruit such as oranges, lemons, limes, and grapefruit.
- For maximum juice, fruit should be room temperature.
- Before juicing, roll fruit between countertop and palm of your hand. Slice fruit in half, cutting across sections.

---

## How To Clean

1. Unplug from electrical outlet.
2. Lift off lid, reamer (and strainer if used).
3. To unlock pitcher, hold base and turn pitcher counterclockwise.
4. Lift pitcher to remove.
5. The lid, reamer, strainer, and pitcher may be washed in hot, soapy water.
6. Wipe base with a damp cloth.
7. Wrap cord around cord storage **(Illustration D).** Reassemble for storage.

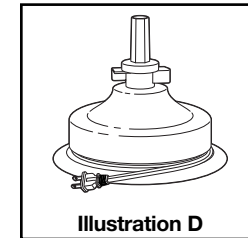

---

## Customer Service/Warranty

If you have a question about your appliance, call our toll-free customer service number. Before calling, please note the model, type, and series numbers and fill in that information below. These numbers can be found on the bottom of your appliance.

**MODEL:** \_\_\_\_\_ **TYPE:** \_\_\_\_\_ **SERIES:** \_\_\_\_\_

### LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of one hundred eighty (180) days from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

#### CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900

In the Canada 1-800-267-2826

Web site address: [www.proctorsilex.com](http://www.proctorsilex.com)

**KEEP THESE NUMBERS FOR FUTURE REFERENCE!**

HAMILTON BEACH PROCTOR-SILEX, INC.  
263 Yadkin Road, Southern Pines, NC 28387

PROCTOR-SILEX CANADA, INC.  
Picton, Ontario K0K 2T0

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>