

PERFECT CHILL™

WINE CHILLER

USE AND CARE MANUAL

MODEL 88065 – 21 Bottle Dual Temperature Zone Wine Chiller

SAFETY INFORMATION -----	2
WELCOME-----	2
IMPORTANT SAFETY INSTRUCTIONS-----	2
DISPOSAL OF OLD WINE CHILLER-----	3
GROUNDING-----	4
PRODUCT DIAGRAM-----	5
TEMPERATURE CONTROL PANEL-----	5
SPECIFICATIONS-----	5
OPERATING THE WINE CHILLER -----	6
SETTING UP THE WINE CHILLER-----	6
UNPACKING-----	6
ASSEMBLING THE DOOR-----	6
WOOD RACKS IN THE CHILLER-----	6
LOCATION OF THE CHILLER-----	6
INSTALLATION INSTRUCTIONS-----	7
ADJUSTING THE LEGS-----	7
TURNING ON THE POWER-----	7
INTERIOR LIGHT-----	7
PLACING THE WINE IN THE CHILLER-----	7
ADJUSTING THE TEMPERATURE-----	8
SETTING THE TEMPERATURE FOR THE TOP AND LOWER SECTIONS-----	8
IDEAL SETTING FOR DIFFERENT WINES-----	8
CARE AND CLEANING -----	9
CLEANING THE INTERIOR AND EXTERIOR-----	9
DEFROSTING THE WINE CHILLER-----	9
IN THE EVENT OF A POWER FAILURE-----	9
CLEANING THE DUST FILTER/SCREEN-----	9
PREPARING FOR VACATION-----	9
TRANSPORTING THE WINE CHILLER-----	9
TROUBLESHOOTING -----	10-11
CONSUMER SUPPORT -----	12
WARRANTY -----	12

WELCOME!

Congratulations, you have acquired a high quality Honeywell Wine Chiller. This unit is packed with many features that you will find convenient to use. An easy-to-use digital temperature adjuster can be used to find the perfect setting for your wine.

Follow the safety precautions and operating instructions provided in this easy-to-use manual. Please take the time to read it, and save these instructions for future use.

Please also remember to record the model number and the factory number which is placed on the back of the unit. Save your receipt by stapling it to this manual for convenient access.

Model number: **88065**

Factory number _____

Date of purchase _____

Store Location _____

!! IMPORTANT SAFETY INSTRUCTIONS !!

Please Read Before Using

When using electrical appliances, basic safety precautions must be followed, including the following:

WARNING - To reduce the risk of injury please follow these important guidelines:

- 1) This appliance must be grounded. Connect only to properly grounded outlet. See "IMPORTANT GROUNDING INSTRUCTIONS" on page 4.
- 2) Install or locate this appliance only in accordance with the provided installation instructions.
- 3) This chiller is specifically designed to chill beverages only. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or solvents in this appliance.

Note: This appliance is not designed for industrial or laboratory use.

- 4) **The wine chiller is not a refrigerator. Do not store perishable food in the unit.**

- 5) As with any appliance, close supervision is necessary when used by children.
- 6) Do not attempt to service the appliance. This appliance must be serviced only by a qualified technician.
- 7) Do not operate this appliance if the power cord or plug has been damaged.
- 8) Do not operate if the appliance has been damaged or dropped.
- 9) Do not use this product near water – for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
- 10) Do not immerse cord or plug in water.
- 11) Keep this appliance away from hot surfaces and open flames.
- 12) This appliance is intended for household use only. **Do not use this appliance outdoors.**
- 13) Unplug the appliance before cleaning or wiping up spilled liquids.
- 14) Do not allow children to climb, stand or hang on the outside of this appliance, or on the shelves inside the unit. This could tip the appliance over and seriously injure them.
- 15) **Save these Instructions!**

DISPOSAL INSTRUCTIONS

If you are getting rid of your old wine chiller, please follow these instructions to help prevent accidents.

BEFORE YOU THROW AWAY YOUR OLD WINE CHILLER:

- 1) Take off the doors and discard separately.
- 2) Leave the shelves in place so that children may not easily climb inside.

REFRIGERANT DISPOSAL (applies only to Compressor Cooling units):


Your old wine chiller may have used a regulated refrigerant in its cooling system. These refrigerants are believed to harm Stratospheric Ozone. If you are throwing away your old chiller, make sure the refrigerant is removed and recovered for proper disposal by an EPA-certified technician. If you intentionally release this refrigerant, you can be subject to fines and imprisonment under provisions of environmental legislation.

If the chiller door has a lock, please disable.

IMPORTANT GROUNDING INSTRUCTIONS

and use of extension cords

Three-pronged
(grounding) plug

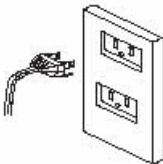

Properly polarized and
grounded outlet

The Wine Chiller must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded. If the outlet is a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet. **Do not under any circumstances cut or remove the third (ground) prong from the power cord.**


WARNING-Improper use of grounding can result in a risk of electric shock.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded and either:


1. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-prong grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked electrical rating of the extension cord shall be equal to or greater than the rating of the appliance, or
2. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

PRODUCT DIAGRAM

1. HINGE COVER
2. INTERNAL LIGHT
3. CONTROL PANEL
4. FAN COVER
5. SHELF
6. FOOT
7. DOOR FRAME
8. GLASS DOOR
9. DOOR HANDLE

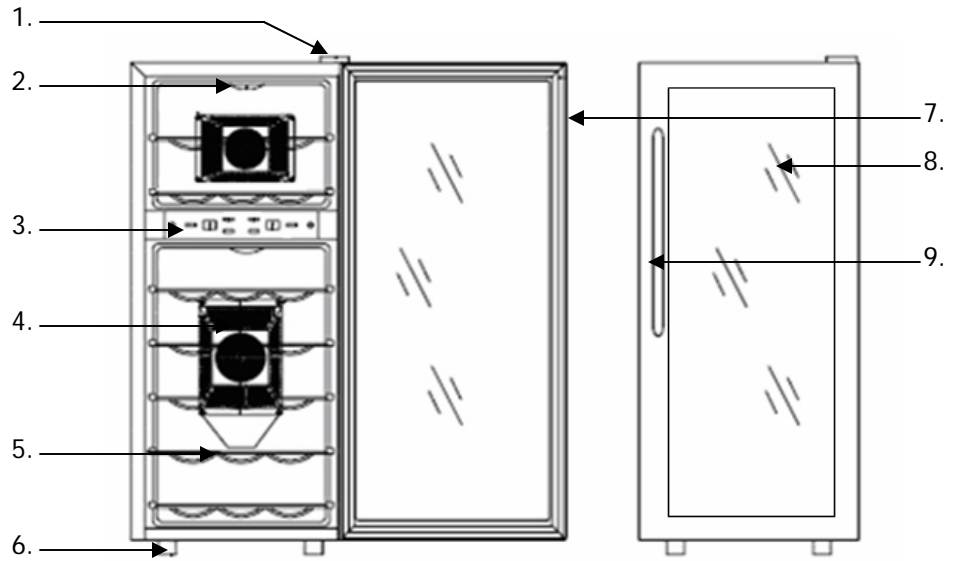

CONTROL PANEL ON THE FRONT OF THE DOOR OF THE CHILLER

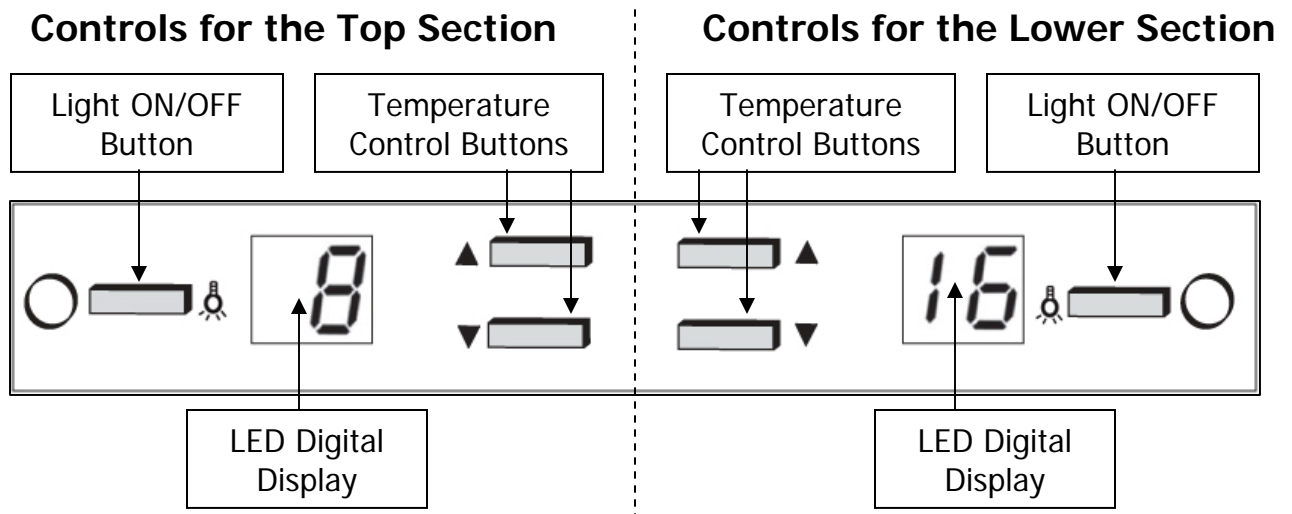

SPECIFICATIONS

Model-----	88065
Power Source-----	110V ~ 60Hz
Capacity-----	21 Wine Bottles
Temperature Range-----	Top Zone: 7°C (45°F) - 18°C (65°F) Bottom Zone: 10°C (50°F) - 18°C (65°F)
Chiller Dimensions-----	34.0 (L) x 51.5 (D) x 82.0 (H) cm 13.4 (L) X 20.3 (D) x 32.3 (H) inches
Chiller Weight-----	21 kgs / 46 lbs

SETTING UP THE WINE CHILLER

UNPACKING

Remove all packing materials and accessories. Examine the chiller for any damage such as dents or broken door. Do not install if chiller is damaged.

Allow the chiller to stand upright for approximately 2 hours before connecting the power source.

If discarding an old chiller, please see "Important Safety Instructions" on page 3.

ASSEMBLING THE DOOR


To save shipping space and avoid damage of the wine chiller during transportation, the door handle of this unit is shipped unassembled. Before setting up the chiller, please assemble the door handle as follows:

Locate the door handle and 2 screws attached inside the cabinet.

With the 2 screws attached, fasten the door handle onto the frame of the door panel as illustrated.

You may be required to pull away a section of the rubber seal to find the screw holes. Simply pull off the seal and place back into the grooves.

- | | | | |
|----|-------------|----|-------------|
| 1) | Screw | 3) | Rubber Seal |
| 2) | Door handle | 4) | Door Panel |

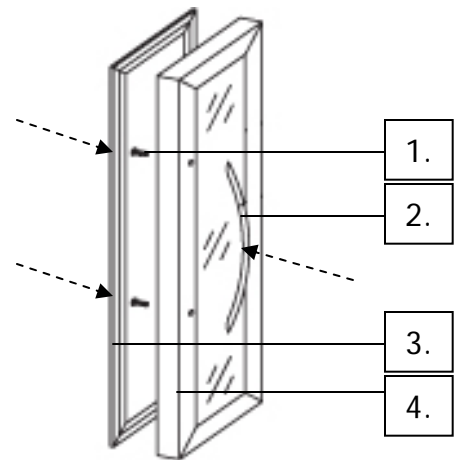

WOOD RACKS IN THE CHILLER

The wine chiller comes with wood racks. They are already in place in the chiller upon delivery. For your convenience, they easily slide in and out. If you remove the racks for any reason, make sure the wood attached edge always faces out when placing them back in the chiller.

LOCATION OF THE CHILLER

Find a suitable area for your wine chiller. Do not place the chiller outside, or any other place where the chiller will be exposed to water or other harsh weather conditions. The chiller must not be placed in environments where the ambient temperature drops below **18°C (65°F)** degrees or goes above **29°C (85°F)** degrees. The ideal ambient temperature is **22.2°C (72°F)**.

CAUTION: DO NOT PLACE THE WINE CHILLER IN A COLD LOCATION. IT WILL INCREASE THE RISK OF FREEZING.


SETTING UP THE WINE CHILLER

INSTALLATION INSTRUCTIONS

The wine chiller is a free standing appliance and can be installed next to counters and walls. It must not be placed under a counter.

For the chiller to function properly, it is important to have a clearance of at least 10 centimeters (4" inches) from the back of the chiller to the surface next to it. A clearance of at least 5 centimeters (2" inches) is required from each side of the chiller to the surface next to it.


Make sure the dust filter/screen is securely in place in the back of the unit.

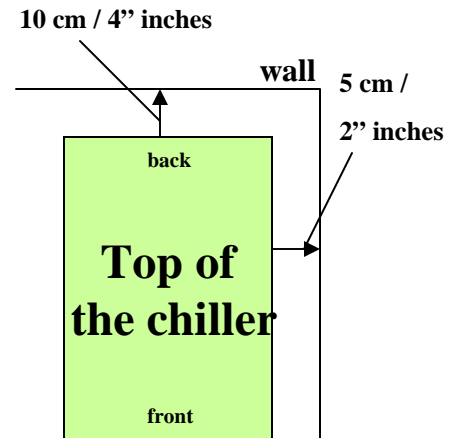

NOTE: THE SPACING IS NECESSARY FOR PROPER VENTILATION

ADJUSTING THE LEGS OF THE CHILLER

ADJUSTABLE LEG

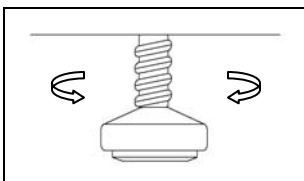


The wine chiller has adjustable legs on the front of the unit. These legs can be used to adjust the height and stabilize the unit. To lengthen the leg turn the leg counter-clockwise and to shorten the leg turn clockwise.

TURNING ON THE POWER

Unpack the power cord from the back of the wine chiller. Plug the chiller into a suitable 120V three prong power outlet. The chiller will immediately start running and the interiors light may initially turn on.

To turn the lights ON press the button with the light bulb symbol next to it. The button on the left side of the control panel controls the light located in the top section and the button on the right side of the control panel controls the light located in the lower section. To turn them OFF press the same button.

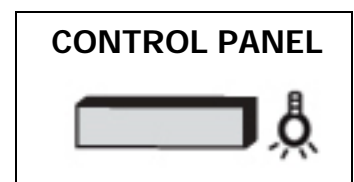

The interior light source of the wine chiller consists of LED lighting which is a long lasting and very energy efficient. LED lights will usually last for many years. It is not replaceable.

PLACING WINE IN THE CHILLER

Allow the wine chiller to cool for up to 1 – 2 hours before loading. After three hours of cooling the chiller will reach an approximate temperature of **13°C (55.4°F)** degrees.


When placing both white and red wine into the chiller, please keep in mind that the top section of the chiller can reach the coolest temperatures and the lower section of the chiller will reach warmer temperatures.

SETTING UP THE WINE CHILLER

ADJUSTING THE TEMPERATURE

The internal temperature range of the top section in the wine chiller is **7°C (45°F)** to **18°C (65°F)**, while the temperature range of the lower section is **10°C (50°F)** to **18°C (65°F)**. To adjust the temperatures please follow these instructions:

CONTROL PANEL ON THE FRONT OF THE CHILLER DOOR

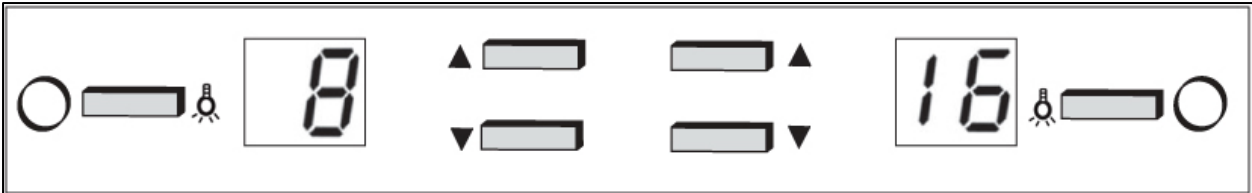

SETTING THE TEMPERATURE FOR THE TOP SECTION AND LOWER SECTION

The temperature of the top section (*left side of control panel*) of the wine chiller can be set anywhere between **7°C (45°F)** to **18°C (65°F)** by the temperature up ▲ button and temperature down ▼ button.

The temperature of the lower section (*right side of control panel*) of the wine chiller can be set anywhere between **10°C (50°F)** to **18°C (65°F)** by the temperature up ▲ button and temperature down ▼ button.

Press the up ▲ button to increase the temperature and the down ▼ button to decrease the temperature.

The temperature displayed on the control panel is the actual temperature inside the wine chiller. When setting the desired temperature, the set temperature will be displayed for 3 seconds. After which, the temperature display will return to displaying the actual internal temperature.

Seasonal Changes:

If the outside temperature is warmer, such as in the summer, the internal temperature of the wine chiller becomes warmer. Set the wine chiller to a lower temperature.

If the outside temperature is cooler, such as in the winter, the internal temperature becomes cooler and can freeze. Set the wine chiller to a higher temperature.

NOTE: PLEASE BE CAUTIOUS OF THE AMBIENT TEMPERATURE SURROUNDING THE WINE CHILLER

IDEAL SETTINGS FOR DIFFERENT WINES

Red wines.....	15°C – 18°C (59°F - 65°F)
Rosés.....	12°C (54°F)
White wines / Champagnes.....	7°C – 9°C (45°F - 48°F)
Other Sweet White wines.....	7°C (45°F)

CARE AND CLEANING

TO CLEAN THE INSIDE AND THE EXTERIOR OF THE WINE CHILLER

Always unplug the chiller before cleaning. Do not use a hard brush or sponge. Use appropriate **stainless steel cleaner** when cleaning the door frame of the chiller. When cleaning the body of the chiller, use light soapy water with a soft cloth. When cleaning the inside DO NOT use soap or any detergent products. Use only a dry, soft cloth or towel.

DEFROSTING THE WINE CHILLER

If frost builds up in and around the chiller, that means there is too much humidity near the unit. Unplug the chiller and once the frost melts, carefully wipe down the outside or inside of the chiller.

NOTE: DO NOT USE A HEATER OR A SHARP UTENSIL TO REMOVE THE FROST.

IN THE EVENT OF A POWER FAILURE

In the event of a power failure, do not open the wine chiller door too frequently to ensure the internal temperature remains the same. A slight and gradual increase in temperature should have no effect on the wine.

If the ambient temperature is very hot, remove the wine from the chiller and place in a cooler environment.

CLEANING THE DUST FILTER/SCREEN

It is recommended that the dust filter/screen be cleaned every 6 months. Build up of dirt, dust, and other debris can decrease the efficiency of the cooling system. To clean the filter/screen, use a vacuum cleaner or a compressed air container. When using a compressed air container, please follow the directions and safety regulations of that product.

PREPARING THE WINE CHILLER FOR VACATION

For long vacations or absences, remove all bottles from the wine chiller and unplug the power supply. Move the thermostat to the lowest temperature setting before cleaning the interior and leave the door open.

TRANSPORTING THE WINE CHILLER

For transporting the wine chiller, secure all loose items, such as shelves by taping them securely in place to prevent damage.

NOTE: BE SURE THE WINE CHILLER STAYS IN AN UPRIGHT POSITION DURING TRANSPORTING.

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
1) The wine chiller is not cooling.	1) No Power Supply	1) Make sure the wine chiller is plugged into a 3 prong outlet.
	1a) Low voltage	1a) Make sure the chiller is plugged into a proper 120V outlet.
	1b) Blown fuse	1b) Change fuse. It is recommended that a qualified electrician change the fuse on the chiller.
2) The wine chiller is not reaching the desired temperature.	2) The chiller is placed too close to a heat source.	2) Keep the chiller away from sunlight and other heat sources.
	2a) Poor ventilation	2a) Make sure the chiller is ventilated properly and make sure that loose debris and other objects are away from the fan.
	2b) The fan is not working properly.	2b) Make sure the power cable is properly connected. If the fan needs to be changed please contact a qualified technician.
	2c) The door is opened frequently, or for a long period of time, or was not properly shut.	2c) Make sure the door is properly closed tight and do not open the door frequently.
	2d) The temperature adjuster is set too high.	2d) Make sure the temperature adjuster is properly set. It may need to be set to a cooler temperature.

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSES	WHAT TO DO
<p>3) The wine chiller temperature is too cold</p>	<p>3) The temperature adjuster is set too low.</p> <p>3a) The ambient temperature is too low.</p>	<p>3) Adjust the temperature setting to a higher temperature</p> <p>3a) Make sure the chiller is in a location where the ambient temperature is between 18°C (65°F) and 29°C (85°F). Do not place the chiller in too cold of a location. It increases the risk of freezing.</p>
<p>4) There is too much frost or moisture forming in and around the chiller.</p>	<p>4) There is too much humidity or the ambient temperature is too low.</p>	<p>4) Wipe the surface dry. If frost builds up, unplug the chiller to defrost. Once defrosted, plug back in the chiller.</p>
<p>5) The wine chiller makes too much noise.</p>	<p>5) It is placed on a uneven or unlevelled surface.</p>	<p>5) Place the wine chiller on a leveled surface or adjust the legs accordingly.</p>

CONSUMER SUPPORT

Questions? How to contact:	Telephone:	1-800-579-7990 (Monday – Friday 8:30 AM – 5:30 PM PST)
	Email:	support@honeywell-compactappliances.com sales@honeywell-compactappliances.com
	Website:	www.honeywell-compactappliances.com

LIMITED 1-YEAR WARRANTY

What does this warranty cover?

- Any defect in materials or workmanship in the manufactured product
- Missing parts for a period of 90 days from the date of purchase

What does this warranty not cover?

- Service trips to your home to teach you how to use the product.
- Improper installation.
- Failure of the product if it is abused, misused, altered or used in any manner not in accordance with manufacturer's instructions.
- Products that are used for a commercial purpose.
- Replacement of house fuses or resetting of circuit breakers.
- Damage to the product caused by accident, fire, floods, power surges or acts of God.
- Any service to the product
- **Incidental or consequential damage caused by possible defects with this appliance, its installation or repair.**

For how long after the original purchase?

- One (1) year.

How do I make a return?

Return to the retailer from which it was purchased, along with a copy of the store receipt within the given period of time allowed for returns by the retailer (i.e. 90 days). After this period of time, contact TTI Appliances at 1 (800) 579-7990 for further instructions.

This warranty excludes any cost of shipping to and from TTI Appliances.

How does state or province law relate to this warranty?

-This warranty is extended to the original purchaser only for products purchased for household use within the country of purchase. **Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.**

-Exclusion of implied warranties: Except where prohibited or restricted by law, there are no warranties, whether express, oral or statutory which extend beyond the description on the face hereof, including specifically the implied warranties of merchantability or fitness for a particular purpose.

**Warrantor:
TTI Appliances
11100 Santa Monica Blvd. Suite 560
Los Angeles, CA 90025**

Please complete and return warranty registration card.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>