


Honeywell

TRADELINE®

Electronic Thermostat

OWNER'S GUIDE

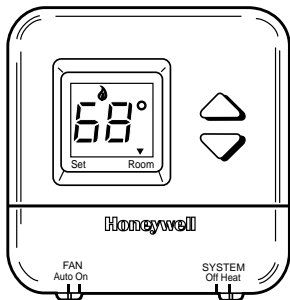

69-1492

Congratulations on the purchase of your new thermostat! Over 100 years of Honeywell engineering expertise went into the making of this thermostat in an effort to provide you with a more comfortable and convenient living environment.

- *Simple and easy to use.* The ▲ and ▼ keys make it easy for you to change your temperature setting.
- *Large digital display.* You can easily read the current room temperature at a glance.
- *No need for batteries.* Batteries are not required because your temperature settings are held permanently in memory.


Settings

Setting FAN and SYSTEM Switches

Fan and system settings are controlled by using FAN and SYSTEM switches located on the bottom of the thermostat case.

First set the FAN switch (not available on all models):


- Auto:** Normal setting for most homes. In heating, the fan may start a few minutes after the heating equipment comes on.
- On:** The fan runs continuously. Use for improved air circulation and air quality.

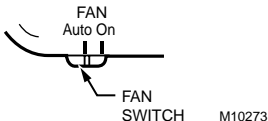

Then set the **SYSTEM** switch:

Off: Heating is off.

Heat: Normal setting for months when your home needs heating. Digital display shows a flame

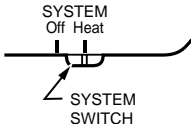


M10975

Displaying Temperature Setting

NOTE: Your temperature setting can be set anywhere from 40° to 99°F (5° to 37°C).

The temperature setting and the room temperature are shown separately on the digital display. The ▼ indicator points to **Set** when the temperature setting is displayed and to **Room** when the room temperature is displayed.

1. To display the temperature setting on the digital display, press either the ▲ or ▼ key once.

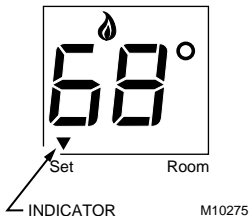

Changing Temperature Setting

1. To lower the temperature setting, press the ▼ key.



Set

Room

M10276

2. To raise the temperature setting, press the ▲ key.



Set

Room

M10982

When in the heating mode, lowering the temperature at night or during the day can lower your energy costs.

Troubleshooting Guide

Heating does not come on.

 
- Check that the SYSTEM switch on the thermostat is set to Heat.
- Check the system fuse or circuit breaker and replace or reset if necessary.
- Check for air movement at the register.
- Check power to the heating equipment.

Temperature setting is too warm or cool.

- Adjust the temperature by pressing either the ▲ or ▼ key.

If you have questions concerning this thermostat, call Honeywell Customer Assistance at 1-800-468-1502, Monday-Friday, 7:00 am-5:30 pm, Central time.

For service, contact your local heating and cooling contractor:



Honeywell

Home and Building Control

Honeywell

1985 Douglas Drive North

Golden Valley, MN 55422

Home and Building Control

Honeywell Limited - Honeywell Limitée

35 Dynamic Drive

Scarborough, Ontario

M2H 3N7

Copyright © 2000 Honeywell
All Rights Reserved
® U.S. Registered Trademark
69-1492 G.H. 9-00



Printed in U.S.A. on recycled paper containing at least 10% post-consumer paper fibers.

www.honeywell.com/yourhome/

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>