




by Honeywell

**MLS Digital Luminaire Controllers**  
**MLS2000DIS & MLS2000DIW for DSI ballasts**  
**MLS2000DALIS & MLS2000DALIW for DALI ballasts**

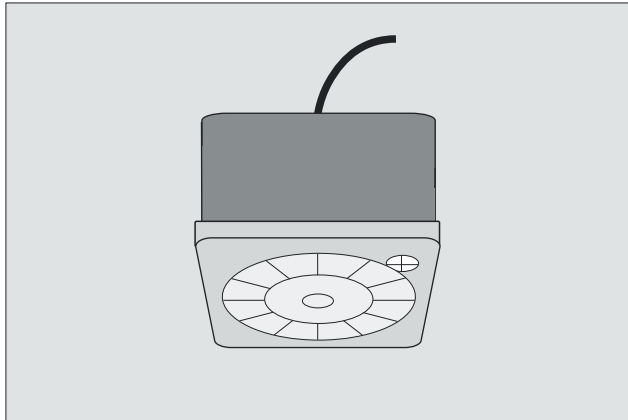


**Installation and Commissioning**  
**Instructions**

Note: QuickSet Pro required for commissioning


**MLS Digital Luminaire Controllers: MLS2000DIS / MLS2000DIW for DSI ballasts**  
**MLS2000DALIS / MLS2000DALIW for DALI ballasts**

Only suitably qualified personnel should install this equipment.

**Electrical Connections**

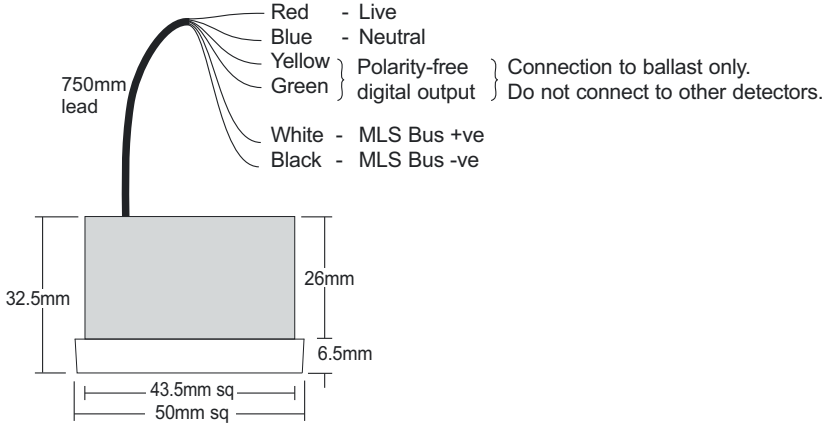

**Mounting Details**

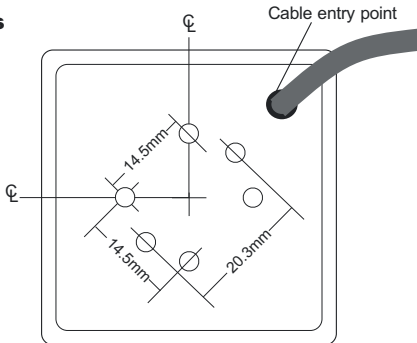

**Installation**

Snap-in to infill panel (max 0.7mm/ 22 SWG) or use any combination of fixing holes on rear. Use only No 4 type B ¼ inch self-tapping screws. Ensure that projection of screws into pilot holes does not exceed 4.5mm.

The recommended position for the detector is in the middle of the luminaire. Where this is not possible and the detector is fitted near one end of the lamps, please ensure that the detector is at the 'cold' end of the lamps.

In order to achieve satisfactory light-level regulating operation, a detector must observe a substantially greater proportion of artificial light from the luminaire(s) under its control than from neighbouring luminaires not under its control. This is particularly important when planning the installed layout of linear luminaires that have an integral detector positioned at one end.

**To Test with HC5A Hand-held Controller**

Once the MLS Digital Luminaire Controllers have been installed within the luminaires, the HC5A may be used to switch luminaires ON and OFF. Luminaires with regulating ballasts will also dim and brighten.

## Commissioning

Detectors are supplied factory pre-set which ensures the lighting will switch on automatically as soon as power is applied. Final commissioning of the detectors requires the use of the QuickSet Pro Programmer.

### Commissioning Detectors using the QuickSet Pro Programmer

It is important that the Programmer be held perpendicular between 0.5m and 2m from the sensor.

1. Switch on by pressing any button (and unlock with top left rectangular button).
2. Point the programmer at detector and press the DOWNLOAD button. The programmer will confirm the product's identity and call up the correct menu of parameters and their current settings.
3. Use a combination of UP, DOWN, FORWARD and BACK buttons to navigate the parameter menu, selecting options for each shown.
4. When options for all parameters have been selected, point the programmer at the detector and press the UPLOAD button. The luminaire(s) will switch off briefly during the programming process.
5. After a short period of inactivity (default 5 minutes), the programmer hibernates retaining the most recent settings.

### Factory Default Settings

These are the settings to which the units have been programmed before they leave the factory:

| Parameter           | Options                                      | Default      |
|---------------------|--|--------------|
| Power Up            | On / Off                                     | On           |
| Response            | Auto, Manual/Bus, Manual                     | Auto         |
| Off Delay           | 1 min - 96 hrs, 10-sec (walk-test), Disabled | 20 mins      |
| On Sensitivity      | 0-100  | 100          |
| Bus Connect         | Yes / No                                     | Yes          |
| Zones 1-4           | Address 1-100                                | -- (no zone) |
| Corridor 1-2: Begin | 1-100 Building Address Span                  | -- (no zone) |
| Corridor 1-2: End   | 1-100 Building Address Span                  | -- (no zone) |
| Global 1-2 Rx       | Yes / No                                     | No           |
| Start Lamps         | Max/ Min                                     | Max          |
| Entry Scene         | 1-6  | 1            |
| Bright Out          | Yes / No                                     | No           |
| Dimming             | Reg 50%-Reg100%                              | Reg 100%     |
| Lamp Max            | 10%-100%                                     | 100%         |
| Fade to Off         | Yes / No                                     | No           |
| When Vacant         | 10 Exit Scenes                               | Off          |
| Set-Point High      | 0-1023                                       | 1023         |
| Set-Point Low       | 0-1023                                       | 1023         |

#### Additional feature accessible under Utilities:


|                  |                              |      |
|------------------|------------------------------|------|
| 100 Hour Burn-In | See Application Note: AN4028 | 0 hr |
|------------------|------------------------------|------|

## Technical Data

MLS CABLE: 1.5mm<sup>2</sup> unscreened twisted pair : see Application Note AN4001

MOUNTING HEIGHT: 3.0m max

RANGE: Cone-shaped detection pattern, diameter (at floor level) = 2.4 x mounting height

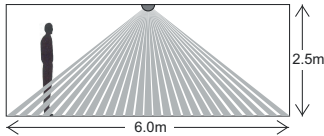

OPERATING VOLTAGE: 230V 50Hz (UK & Europe)

CAPACITY: Digital DSI - 4 ballasts max

DALI - 1 ballast max

WEIGHT: 51g (including 0.8m cable)

COLOUR: Silver (part numbers with suffix 'S') or White RAL9010 (part numbers with suffix 'W')

MATERIAL: Flame retardant PC/ABS

IP RATING: 4X

OPERATING TEMPERATURE: 0°C to 55°C

## Important Additional Notes

1. A means for disconnection must be incorporated in the fixed wiring in accordance with the current wiring regulations.
2. Although nominally 12V, the dimming output is not SELV and therefore should be treated with the same respect as mains with regard to wiring practice. The 0V line of the dimming output is almost at Neutral potential.
3. The dimming control output should be connected only to the control input of the ballasts - never to other detectors.
4. This equipment should be used to control only those ballasts powered from the same phase as the detector.
5. Do not connect mains to the MLS bus.
6. It is imperative that the MLS bus is wired with the correct type of cable; normally it should be 1.5mm<sup>2</sup> unscreened twisted pair. Please read Application Note AN4001 for more details.
7. Due to the fact that the photocell is on the ceiling looking down, it is not possible for measurements made with a lux meter on the working plane to remain constant when daylight illuminates the ceiling and the working plane to a differing extent. Therefore, products of this type should be regarded as capable of maintaining an APPROXIMATE light level only.
8. This equipment switches lights no more frequently than would a responsible human occupant. However, manufacturers of some particular lighting types (e.g. '2D' luminaires) may specify a maximum number of switching cycles in order to achieve a predicted lamp life. Please check with the manufacturer of the luminaires to ensure that they are compatible with automatic controls in this respect.
9. Some devices in this product range feature a silvered surface finish; this is intended for decorative purposes only. Care should be taken to avoid accidental separation of the silvered coating from the product. If the unit is built into a luminaire that is subsequently wrapped in film having adhesive properties, it is recommended that a layer of suitable packaging material be used to protect the silvered area.


## Honeywell Ex-Or

St. Mark's Court, North Street, Horsham,  
West Sussex, RH12 1BW UK

Tel: + 44 (0)1942 719229

Email: technicalsales.ex-or@honeywell.com

www.ex-or.com

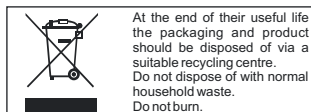

At the end of their useful life the packaging and product should be disposed of via a suitable recycling centre. Do not dispose of with normal household waste. Do not burn.



W4087J

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>